P.O. Box 1719 Corona, CA 92878 Support: 951-493-7100 www.aFefilters.com

Intake Kit Installation Instructions: 2005-Up Nissan Frontier 4.0L V6


Kit Part #	54-10492	Tools Required	Parts List:	2 Spacer nylon
	51-10492 Pro Dry S™	5/16" nut driver	1 Air Filter Replacement P/N (24-91034 or Pro Dry S™ 2	21 1 Gasket MAF sensor
Make:	Nissan	Slotted screwdriver	90047)	1 Trim seal 3/4" Bulb (26.5")
Model:	Frontier, Pathfinder, Xterra	10mm socket or wrench	1 Intake tube	1 Coupler 3.5"x4"
Engine:	4.0L V6	Ratchet and extension	1 Intake housing	2 Clamps #060
Year:	2005- Up		2 Screw M6x1x25	
			2 M6 washer	
			2 Washer wavy M6	
			2 M6 nut	
			2 Phillips screw #8-32	




Complete kit. Please verify all components are present prior to beginning installation.



Complete stock intake.

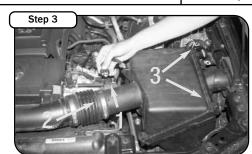

Disconnect the MAF sensor (1). Loosen the hose clamp on the air box(2), and unclip the upper portion of the air box(3).

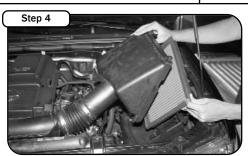

Remove the upper portion of the air box and the factory air filter




Remove the 10mm bolt on the side of the air box set aside for later use. Lift the lower air box up and out of the engine hav



Transfer the rubber vibration mounts located on the bottom of the air box over to the new housing.




Place the rubber trim seal along the edge of the housing. Lower the housing into the engine bay secure housing with the bolt removed in step 5.

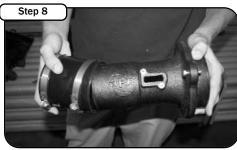

Place the coupler on to the intake tube. Do not tighten clamps at this time.



Slide the intake tube assembly into the housing . Secure the tube to the housing with the supplied M6 hardware. Tighten and secure the hose clamp.

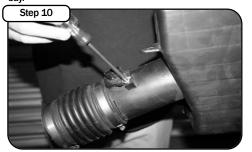

Carefully remove the MAF sensor from the OEM air box lid.



Transfer the MAF sensor to the aFe intake tube. Secure with the supplied gaskets,spacers,and screws. Make sure you pay attention to the direction of the arrow on the MAF sensor.



Install the pre oiled air filter. Do not use any grease or oil. Secure with the provided clamp.



Your installation is now complete . Make sure you tighten all clamps and check all electrical connections. Re check periodically