 
IN453 8/12/10

Tools required:

• 7/16" socket or nut driver

FOR STEP PAD







Tighten using 7/16 nut to step pad post. Just snug nuts do not over tighten.

FOR STEP TREAD



Wipe off surface where step tread will be placed.



Position step tread where you want it. Then holding step tread in place remove adhesive cover one row at a time and press firmly to hold in place.