

SECTION **LT**
LIGHTING SYSTEM

A
B
C

CONTENTS

D
E

PRECAUTIONS 5

Precautions for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" 5

Precautions for Battery Service 5

General precautions for service operations 6

Wiring Diagrams and Trouble Diagnosis 6

HEADLAMP (FOR USA) - XENON TYPE - 7

Component Parts and Harness Connector Location... 7

System Description 7

OUTLINE 7

COMBINATION SWITCH READING FUNCTION... 8

EXTERIOR LAMP BATTERY SAVER CONTROL... 8

VEHICLE SECURITY SYSTEM 8

XENON HEADLAMP (IF EQUIPPED) 8

CAN Communication System Description 9

CAN Communication Unit 9

TYPE 1 9

TYPE 2/TYPE 3 11

TYPE 4/TYPE 5 13

TYPE 6/TYPE 7 14

Schematic 16

Wiring Diagram — H/LAMP — 17

Terminals and Reference Value for BCM 21

How to Proceed With Trouble Diagnosis 21

Preliminary Check 22

INSPECTION FOR POWER SUPPLY AND GROUND CIRCUIT 22

CONSULT-II Function 23

CONSULT-II BASIC OPERATION 23

WORK SUPPORT 24

DATA MONITOR 24

ACTIVE TEST 25

SELF-DIAGNOSTIC RESULTS 25

Headlamp High Beam Does Not Illuminate (Both Sides) 26

Headlamp High Beam Does Not Illuminate (One Side) 27

High-Beam Indicator Lamp Does Not Illuminate ... 28

Headlamp Low Beam Does Not Illuminate (Both

Sides) 28

Headlamp Low Beam Does Not Illuminate (One Side) 29

Headlamps Do Not Turn OFF 30

Aiming Adjustment 30

PREPARATION BEFORE ADJUSTING 30

LOW BEAM AND HIGH BEAM 30

ADJUSTMENT USING AN ADJUSTMENT SCREEN (LIGHT/DARK BORDERLINE) 31

Bulb Replacement 31

HEADLAMP (UPPER) LOW BEAM 31

HEADLAMP (LOWER) HIGH BEAM 32

PARKING LAMP (CLEARANCE LAMP) 32

FRONT TURN SIGNAL LAMP 32

FRONT SIDE MARKER LAMP 32

Removal and Installation 33

REMOVAL 33

INSTALLATION 33

Disassembly and Assembly 34

DISASSEMBLY 34

ASSEMBLY 35

Servicing to Replace Headlamps When Damaged.. 35

INSTALLATION OF HEADLAMP BRACKET 35

HEADLAMP (FOR USA) - CONVENTIONAL TYPE -.. 36

Component Parts and Harness Connector Location.. 36

System Description 36

OUTLINE 36

COMBINATION SWITCH READING FUNCTION.. 37

EXTERIOR LAMP BATTERY SAVER CONTROL.. 37

VEHICLE SECURITY SYSTEM 37

CAN Communication System Description 37

CAN Communication Unit 38

TYPE 1 38

TYPE 2/TYPE 3 40

TYPE 4/TYPE 5 42

TYPE 6/TYPE 7 43

Schematic 45

Wiring Diagram — H/LAMP — 46

Terminals and Reference Value for BCM 50

How to Proceed With Trouble Diagnosis 50

F
G
H
I
J
LT
L
M

Preliminary Check	51	INSPECTION FOR POWER SUPPLY AND GROUND CIRCUIT	83
INSPECTION FOR POWER SUPPLY AND GROUND CIRCUIT	51	CONSULT-II Function	84
CONSULT-II Function	52	CONSULT-II BASIC OPERATION	84
CONSULT-II BASIC OPERATION	52	WORK SUPPORT	85
WORK SUPPORT	53	DATA MONITOR	85
DATA MONITOR	53	ACTIVE TEST	86
ACTIVE TEST	54	SELF-DIAGNOSTIC RESULTS	86
SELF-DIAGNOSTIC RESULTS	54	Daytime Light Control Does Not Operate Properly...	87
Headlamp High Beam Does Not Illuminate (Both Sides)	55	Headlamp High Beam Does Not Illuminate (Both Sides)	88
Headlamp High Beam Does Not Illuminate (One Side)	56	RH High Beam Does Not Illuminate But RH Low Beam Illuminates	90
High-Beam Indicator Lamp Does Not Illuminate	57	LH High Beam Does Not Illuminate But LH Low Beam Illuminate	90
Headlamp Low Beam Does Not Illuminate (Both Sides)	57	Headlamp Low Beam Does Not Illuminate (Both Sides)	91
Headlamp Low Beam Does Not Illuminate (One Side)	58	RH Low Beam Does Not Illuminate But RH High Beam Illuminates	93
Headlamps Do Not Turn OFF	59	LH Low Beam Does Not Illuminate But LH High Beam Illuminates	93
Aiming Adjustment	59	Aiming Adjustment	94
PREPARATION BEFORE ADJUSTING	59	PREPARATION BEFORE ADJUSTING	94
LOW BEAM AND HIGH BEAM	59	LOW BEAM AND HIGH BEAM	94
ADJUSTMENT USING AN ADJUSTMENT SCREEN (LIGHT/DARK BORDERLINE)	60	ADJUSTMENT USING AN ADJUSTMENT SCREEN (LIGHT/DARK BORDERLINE)	95
Bulb Replacement	60	Bulb Replacement	95
HEADLAMP (UPPER) LOW BEAM	60	HEADLAMP (UPPER) LOW BEAM	95
HEADLAMP (LOWER) HIGH BEAM	61	HEADLAMP (LOWER) HIGH BEAM	96
PARKING LAMPS (CLEARANCE LAMPS)	61	PARKING LAMP (CLEARANCE LAMP)	96
FRONT TURN SIGNAL LAMP	61	FRONT TURN SIGNAL LAMP	96
FRONT SIDE MARKER LAMP	61	FRONT SIDE MARKER LAMP	96
Removal and Installation	61	Removal and Installation	97
REMOVAL	61	REMOVAL	97
INSTALLATION	62	INSTALLATION	97
Disassembly and Assembly	62	Disassembly and Assembly	98
DISASSEMBLY	62	DISASSEMBLY	98
ASSEMBLY	62	ASSEMBLY	99
Servicing to Replace Headlamps When Damaged..	63	Servicing to Replace Headlamps When Damaged ...	99
INSTALLATION OF HEADLAMP BRACKET	63	INSTALLATION OF HEADLAMP BRACKET	99
HEADLAMP (FOR CANADA) - XENON TYPE -	64	HEADLAMP (FOR CANADA) - CONVENTIONAL TYPE -	100
Component Parts and Harness Connector Location..	64	Component Parts and Harness Connector Location	100
System Description	64	System Description	100
HEADLAMP OPERATION	65	HEADLAMP OPERATION	101
COMBINATION SWITCH READING FUNCTION..	66	COMBINATION SWITCH READING FUNCTION	102
EXTERIOR LAMP BATTERY SAVER CONTROL..	66	EXTERIOR LAMP BATTERY SAVER CONTROL	102
DAYTIME LIGHT OPERATION	66	DAYTIME LIGHT OPERATION	102
OPERATION	66	OPERATION	102
XENON HEADLAMP (IF EQUIPPED)	67	CAN Communication System Description	103
CAN Communication System Description	67	CAN Communication Unit	103
CAN Communication Unit	67	TYPE 1	103
TYPE 1	68	TYPE 2/TYPE3	105
TYPE 2/TYPE3	69	TYPE 4/TYPE5	107
TYPE 4/TYPE5	71	TYPE 6/TYPE7	108
TYPE 6/TYPE7	73	Schematic	110
Schematic	75	Wiring Diagram — DTRL —	111
Wiring Diagram — DTRL —	76	Terminals and Reference Value for Daytime Light Control Unit	82
Terminals and Reference Value for Daytime Light Control Unit	82	How to Proceed With Trouble Diagnosis	82
How to Proceed With Trouble Diagnosis	82	Preliminary Check	83
Preliminary Check	83		

How to Proceed With Trouble Diagnosis	117	Preliminary Check	149	
Preliminary Check	118	INSPECTION FOR POWER SUPPLY AND		A
INSPECTION FOR POWER SUPPLY AND		GROUND CIRCUIT	149	
GROUND CIRCUIT	118	CONSULT-II Function	150	B
CONSULT-II Function	119	CONSULT-II BASIC OPERATION	150	
CONSULT-II BASIC OPERATION	119	DATA MONITOR	151	C
WORK SUPPORT	120	ACTIVE TEST	151	
DATA MONITOR	120	Turn Signal Lamp Does Not Operate	152	D
ACTIVE TEST	121	Hazard Warning Lamps Do Not Operate But Turn		
SELF-DIAGNOSTIC RESULTS	121	Signal Lamps Operate	153	E
Daytime Light Control Does Not Operate Properly	122	Turn Signal Indicator Lamp Does Not Operate ...	154	
Headlamp High Beam Does Not Illuminate (Both		Bulb Replacement (Front Turn Signal Lamp)	155	F
Sides)	123	Bulb Replacement (Rear Turn Signal Lamp)	155	
RH High Beam Does Not Illuminate But RH Low		Removal and Installation of Front Turn Signal Lamp	155	G
Beam Illuminates	125	Removal and Installation of Rear Turn Signal Lamp	155	
LH High Beam Does Not Illuminate But LH Low		LIGHTING AND TURN SIGNAL SWITCH	156	
Beam Illuminates	125	Removal and Installation	156	
Headlamp Low Beam Does Not Illuminate (Both		REMOVAL	156	
Sides)	126	INSTALLATION	156	
RH Low Beam Does Not Illuminate But RH High		HAZARD SWITCH	157	
Beam Illuminates	127	Removal and Installation	157	
LH Low Beam Does Not Illuminate But LH High		REMOVAL	157	
Beam Illuminates	127	INSTALLATION	157	
Aiming Adjustment	128	COMBINATION SWITCH	158	
PREPARATION BEFORE ADJUSTING	129	Wiring Diagram—COMBSW—	158	H
LOW BEAM AND HIGH BEAM	129	Combination Switch Reading Function	159	
ADJUSTMENT USING AN ADJUSTMENT		CONSULT-II Function	161	I
SCREEN (LIGHT/DARK BORDERLINE)	129	CONSULT-II BASIC OPERATION	161	
Bulb Replacement	129	DATA MONITOR	162	J
HEADLAMP (UPPER) LOW BEAM	129	Combination Switch Inspection According to Self-		
HEADLAMP (LOWER) HIGH BEAM	130	Diagnostic Results	164	
PARKING LAMPS (CLEARANCE LAMPS)	130	Malfunctioning Operation of Lamps and Wipers ..	167	
FRONT TURN SIGNAL LAMP	130	Removal and Installation	169	
FRONT SIDE MARKER LAMP	130	Switch Circuit Inspection	169	
Removal and Installation	130	STOP LAMP	170	LT
REMOVAL	130	Wiring Diagram — STOP/L —	170	
INSTALLATION	131	High-Mounted Stop Lamp	172	
Disassembly and Assembly	131	BULB REPLACEMENT, REMOVAL AND		
DISASSEMBLY	131	INSTALLATION	172	L
ASSEMBLY	131	Stop Lamp	172	
Servicing to Replace Headlamps When Damaged	132	BULB REPLACEMENT	172	
INSTALLATION OF HEADLAMP BRACKET ...	132	REMOVAL AND INSTALLATION	172	M
TURN SIGNAL AND HAZARD WARNING LAMPS 133		BACK-UP LAMP	173	
System Description	133	Wiring Diagram — BACK/L —	173	
TURN SIGNAL OPERATION	133	Bulb Replacement	175	
HAZARD LAMP OPERATION	133	Removal and Installation	175	
REMOTE KEYLESS ENTRY SYSTEM OPERA-		PARKING, LICENSE PLATE AND TAIL LAMPS ..	176	
TION	134	System Description	176	
COMBINATION SWITCH READING FUNCTION	135	OPERATION BY LIGHTING SWITCH	176	
CAN Communication System Description	135	COMBINATION SWITCH READING FUNCTION	177	
CAN Communication Unit	135	EXTERIOR LAMP BATTERY SAVER CONTROL	177	
TYPE 1	136	CAN Communication System Description	177	
TYPE 2/TYPE 3	138	CAN Communication Unit	177	
TYPE 4/TYPE 5	139	TYPE 1	178	
TYPE 6/TYPE 7	141	TYPE 2/TYPE 3	179	
Schematic	143	TYPE 4/TYPE 5	181	
Wiring Diagram — TURN —	144	TYPE 6/TYPE 7	183	
Terminals and Reference Value for BCM	148	Schematic	185	
How to Proceed With Trouble Diagnosis	149	Wiring Diagram — TAIL/L —	186	

Terminals and Reference Value for BCM	190	POWER SUPPLY AND GROUND	205
How to Proceed With Trouble Diagnosis	190	SWITCH OPERATION	206
Preliminary Check	190	SPOT LAMP TIMER OPERATION	206
INSPECTION FOR POWER SUPPLY AND		INTERIOR LAMP BATTERY SAVER CONTROL	207
GROUND CIRCUIT	190	Component Parts and Harness Connector Location	207
CONSULT-II Function	191	Schematic	208
Parking, License Plate and Tail Lamps Do Not Illu-		Wiring Diagram — ROOM/L —	209
minate	191	Terminals and Reference Value for BCM	213
Parking, License Plate and Tail Lamps Do Not Turn		How to Proceed With Trouble Diagnosis	213
OFF (After Approx. 10 Minutes)	196	Preliminary Check	214
License Plate Lamp	196	INSPECTION FOR POWER SUPPLY AND	
BULB REPLACEMENT, REMOVAL AND		GROUND CIRCUIT	214
INSTALLATION	196	CONSULT-II Function	215
Front Parking (Clearance) Lamp	196	CONSULT-II BASIC OPERATION	215
BULB REPLACEMENT	196	WORK SUPPORT	216
REMOVAL AND INSTALLATION	196	DATA MONITOR	216
Tail Lamp	197	ACTIVE TEST	217
BULB REPLACEMENT	197	Spot Lamp Control Does Not Operate	217
REMOVAL AND INSTALLATION	197	Bulb Replacement	219
REAR COMBINATION LAMP	198	Removal and Installation	219
Bulb Replacement	198	REMOVAL	219
REAR FENDER SIDE (STOP & TAIL LAMP		INSTALLATION	219
BULB, REAR SIDE MARKER LAMP BULB)	198	ILLUMINATION	220
REAR BUMPER SIDE (BACK-UP LAMP BULB,		System Description	220
REAR TURN SIGNAL LAMP BULB)	198	ILLUMINATION OPERATION BY LIGHTING	
Removal and Installation	199	SWITCH	220
REMOVAL	199	EXTERIOR LAMP BATTERY SAVER CONTROL	220
INSTALLATION	199	CAN Communication System Description	221
VANITY MIRROR LAMP	200	CAN Communication Unit	221
Bulb Replacement	200	TYPE 1	221
LUGGAGE ROOM LAMP	201	TYPE 2/TYPE3	223
Wiring Diagram — INT/L —	201	TYPE 4/TYPE5	225
Bulb Replacement, Removal and Installation	202	TYPE 6/TYPE7	226
REAR FLOOR BOX LAMP	203	Schematic	228
Bulb Replacement, Removal and Installation	203	Wiring Diagram — ILL —	229
ASHTRAY ILLUMINATION	204	BULB SPECIFICATIONS	237
Bulb Replacement, Removal and Installation	204	Headlamp	237
INTERIOR ROOM LAMP	205	Exterior Lamp	237
System Description	205	Interior Lamp/Illumination	237

PRECAUTIONS

PRECAUTIONS

PFP:00011

Precautions for Supplemental Restraint System (SRS) “AIR BAG” and “SEAT BELT PRE-TENSIONER”

AKS003NJ

The Supplemental Restraint System such as “AIR BAG” and “SEAT BELT PRE-TENSIONER”, used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SRS and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SRS section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harness connectors.

Precautions for Battery Service

AKS003RF

This vehicle is equipped with the automatic window adjusting function. When a door is opened, the window automatically lowers slightly to avoid contact between the window and the side roof panel. After the door is closed, the window will automatically raise slightly.

On vehicles equipped with the automatic window adjusting function, lower both the driver and front passenger side windows before disconnecting the battery cables. This will prevent interference between the side window and the roof panel when either door is opened/closed.

CAUTION:


After the battery cables are disconnected, do not open/close the driver and/or front passenger door with the window in the full up position. The automatic window adjusting function will not work and the side roof panel may be damaged.

PRECAUTIONS

General precautions for service operations

AKS000SE

- Never work with wet hands.
- Xenon headlamp includes high voltage generating part. Be sure to disconnect battery negative cable (negative terminal) or power fuse before removing, installing, or touching the xenon headlamp (including lamp bulb).
- Turn the lighting switch OFF before disconnecting and connecting the connector.
- When turning the xenon headlamp on and while it is illuminated, never touch the harness, bulb, and socket of the headlamp.
- When checking the headlamp on/off operation, check it on vehicle and with the power connected to the vehicle-side connector.
- Do not touch the headlamp bulb glass surface with bare hands or allow oil or grease to get on it. Do not touch the headlamp bulb just after the headlamp is turned off, because it is very hot.
- Install the xenon headlamp bulb socket correctly. If it is installed improperly, high-voltage leak or corona discharge may occur that can melt the bulb, connector, and housing. Do not illuminate the xenon headlamp bulb out of the headlamp housing. Doing so can cause fire and harm your eyes.
- When the bulb has burned out, wrap it in a thick vinyl bag and discard. Do not break the bulb.
- Leaving the bulb removed from the headlamp housing for a long period of time can deteriorate the performance of the lens and reflector (dirt, clouding). Always prepare a new bulb and have it on hand when replacing the bulb.
- When adjusting the headlamp aiming, turn the aiming adjustment screw only in the tightening direction. (If it is necessary to loosen the screw, first fully loosen the screw, and then turn it in the tightening direction.)
- Do not use organic solvent (paint thinner or gasoline) to clean lamps and to remove old sealant.

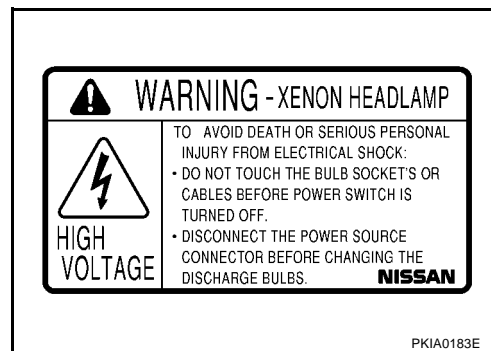

Wiring Diagrams and Trouble Diagnosis

AKS000SF

When you read wiring diagrams, refer to the following:

- Refer to [GI-15, "How to Read Wiring Diagrams"](#) in GI section.
- Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#) for power distribution in PG section.

When you perform trouble diagnosis, refer to the following:

- Refer to [GI-11, "HOW TO FOLLOW TEST GROUPS IN TROUBLE DIAGNOSES"](#) in GI section.
- Refer to [GI-27, "How to Perform Efficient Diagnosis for an Electrical Incident"](#) in GI section.


HEADLAMP (FOR USA) - XENON TYPE -

HEADLAMP (FOR USA) - XENON TYPE -

PDF:26010

Component Parts and Harness Connector Location

AKS002SL

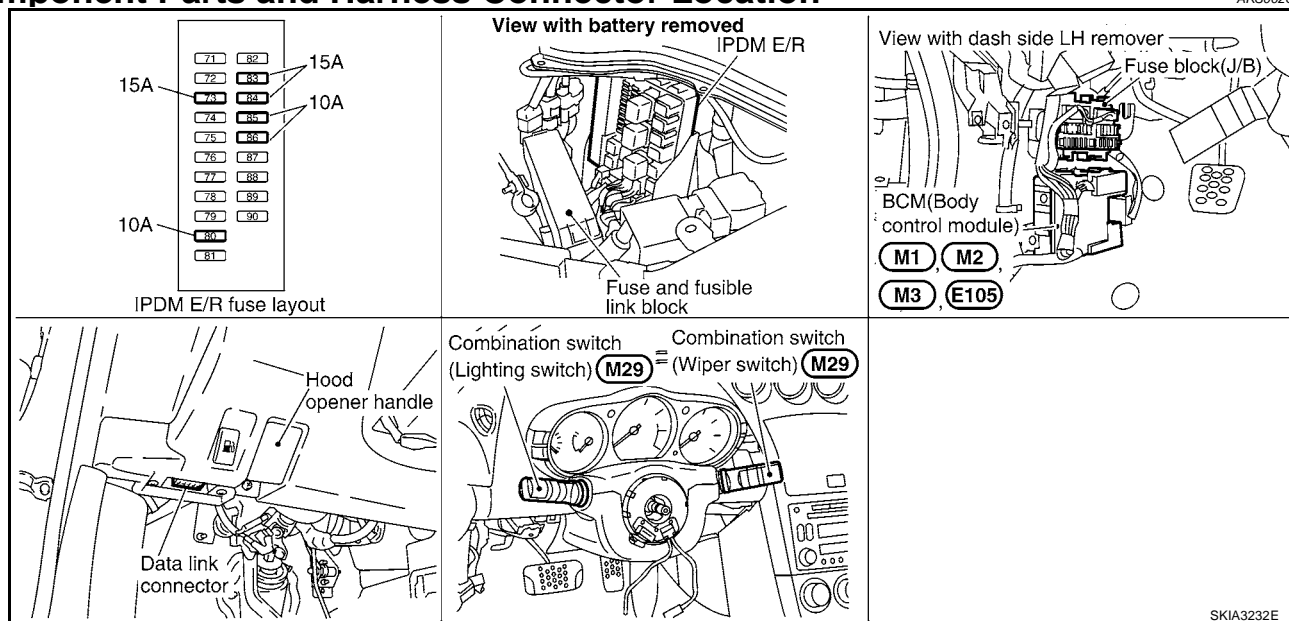

SKIA3232E

System Description

AKS002SM

Control of the headlamp system operation is dependent upon the position of the combination switch (lighting switch). When the lighting switch is placed in the 2ND position, the BCM receives input signal requesting the headlamps (and tail lamps) illuminate. This input signal is communicated to the IPDM E/R (intelligent power distribution module engine room) across the CAN communication lines. The central processing unit of the IPDM E/R controls the headlamp high and headlamp low relay coils. These relays, when energized, direct power to the respective headlamps, which then illuminate.

OUTLINE

Power is supplied at all times

- to headlamp high relay, located in the IPDM E/R (intelligent power distribution module engine room), and
- to headlamp low relay, located in the IPDM E/R (intelligent power distribution module engine room), and
- to BCM (body control module) terminal 7
- through 40A fusible link (letter F, located in the fuse and fusible link box).
- through 15A fuse [No.73 located in IPDM E/R (intelligent power distribution module engine room)]
- to CPU (central processing unit) in the IPDM E/R (intelligent power distribution module engine room).

With the ignition switch in the ON or START position, power is supplied

- to BCM (body control module) terminal 35
- through 10A fuse [No. 1, located in the fuse block (J/B)].
- to CPU (central processing unit) in the IPDM E/R (intelligent power distribution module engine room).
- through 10A fuse [No.80, located in IPDM E/R (intelligent power distribution module engine room)].

With the ignition switch in the ACC or ON position, power is supplied

- to BCM (body control module) terminal 36
- through 10A fuse [No. 6, located in the fuse block (J/B)].

Ground is supplied

- to BCM (body control module) terminal 8
- through grounds E17, E43 and F152.

Low Beam Operation

With the lighting switch in 2ND position, the BCM (body control module) receives input signal requesting by combination switch reading function (Refer to [LT-159, "Combination Switch Reading Function"](#)) the headlamps to illuminate. This input signal is communicated to the IPDM E/R (intelligent power distribution module

HEADLAMP (FOR USA) - XENON TYPE -

engine room) across the CAN communication lines. The CPU (central processing unit) in the IPDM E/R controls the headlamp low relay coil, which when energized, power is supplied.

- through 15A fuse [No. 83, located in the IPDM E/R (intelligent power distribution module engine room)]
- through terminal 27 of the IPDM E/R
- to terminal 7 of headlamp RH, and
- through 15A fuse [No. 84, located in the IPDM E/R (intelligent power distribution module engine room)]
- through terminal 21 of the IPDM E/R
- to terminal 7 of headlamp LH.

Ground is supplied

- to terminal 8 of each headlamp
- through grounds E17, E43 and F152, and

With power and ground supplied, low beam headlamps illuminate.

High Beam Operation/Flash-to-Pass Operation

With the lighting switch in 2ND position and placed in HIGH or PASS position, the BCM (body control module) receives input signal requesting the headlamp high beams to illuminate. This input signal is communicated to the IPDM E/R (intelligent power distribution module engine room) across the CAN communication lines. The CPU (central processing unit) in the IPDM E/R controls the headlamp high relay coil, which when energized, directs power

- to 10A fuse [No. 86, located in the IPDM E/R]
- through terminal 24 of the IPDM E/R
- to terminal 3 of headlamp RH, and
- to 10A fuse [No. 85, located in the IPDM E/R]
- through terminal 22 of the IPDM E/R
- to terminal 3 of headlamp LH.

Ground is supplied

- to terminal 4 of headlamp RH
- through grounds E17, E43 and F152, and
- to terminal 4 of headlamp LH
- through grounds E17, E43 and F152,

With power and ground supplied, the high beam headlamps illuminate.

Unified meter and A/C amp receives signal from the BCM across the CAN communication lines, and then combination meter indicator illuminates high beam.

COMBINATION SWITCH READING FUNCTION

Refer to [LT-159, "Combination Switch Reading Function"](#) .

EXTERIOR LAMP BATTERY SAVER CONTROL

When the combination switch (lighting switch) is in the 2ND position (ON), and the ignition switch is turned from ON or ACC to OFF, the battery saver control function is activated.

Under this condition, the headlamps remain illuminated for 5 minutes, then the headlamps are turned off.

Exterior lamp battery saver control mode can be changed by the function setting of CONSULT-II.

VEHICLE SECURITY SYSTEM

The vehicle security system will flash the high beams if the system is triggered. Refer to [BL-90, "VEHICLE SECURITY \(THEFT WARNING\) SYSTEM"](#) .

XENON HEADLAMP (IF EQUIPPED)

Xenon type headlamp is adopted to the low beam headlamps. Xenon bulbs do not use a filament. Instead, they produce light when a high voltage current is passed between two tungsten electrodes through a mixture of xenon (an inert gas) and certain other metal halides. In addition to added lighting power, electronic control of the power supply gives the headlamps stable quality and tone color.

Following are some of the many advantages of the xenon type headlamp.

- The light produced by the headlamps is a white color comparable to sunlight that is easy on the eyes.
- Light output is nearly double that of halogen headlamps, affording increased area of illumination.

HEADLAMP (FOR USA) - XENON TYPE -

- The light features a high relative spectral distribution at wavelengths to which the human eye is most sensitive. This means that even in the rain, more light is reflected back from the road surface toward the vehicle, for added visibility.
- Power consumption is approximately 25 percent less than halogen headlamps, reducing battery load.

CAN Communication System Description

AKS003MX

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

CAN Communication Unit

AKS003MY


Body type	Coupe						
Axle	2WD						
Engine	VQ35DE						
Transmission	A/T	M/T					
Brake control	TCS	ABS		TCS		VDC	
Low tire pressure warning system	Not Applicable	Not Applicable	Applicable	Not Applicable	Applicable	Not Applicable	Applicable
CAN communication unit							
ECM	×	×	×	×	×	×	×
TCM	×						
Data link connector	×	×	×	×	×	×	×
Unified meter and A/C amp.	×	×	×	×	×	×	×
BCM	×	×	×	×	×	×	×
Low tire pressure warning control unit			×		×		×
Steering angle sensor						×	×
ABS actuator and electric unit (control unit)	×	×	×	×	×		
VDC/TCS/ABS control unit						×	×
IPDM E/R	×	×	×	×	×	×	×
CAN communication type	LAN-7, "TYPE 1"	LAN-8, "TYPE 2/TYPE3"		LAN-10, "TYPE 4/TYPE5"		LAN-12, "TYPE 6/TYPE7"	

×: Applicable

TYPE 1

System diagram

- Type1

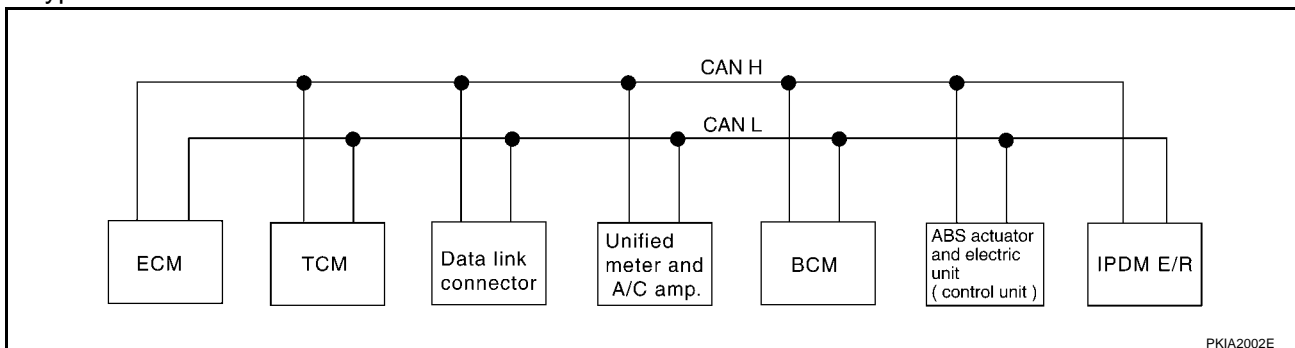

PKIA2002E

HEADLAMP (FOR USA) - XENON TYPE -

Input/output signal chart

T: Transmit R: Receive

Signals	ECM	TCM	Unified meter and A/C amp.	BCM	ABS actuator and electric unit (control unit)	IPDM E/R
Engine speed signal	T	R	R		R	
Engine torque signal	T	R				
Engine coolant temperature signal	T	R	R			
Accelerator pedal position signal	T	R			R	
Closed throttle position signal	T	R				
Wide open throttle position signal	T	R				
Battery voltage signal	T	R				
Stop lamp switch signal		R	T			
Fuel consumption monitor signal	T		R			
A/T self-diagnosis signal	R	T				
A/T CHECK indicator lamp signal		T	R			
A/T position indicator signal		T	R		R	
ABS operation signal		R			T	
A/T shift schedule change demand signal		R			T	
Air conditioner switch signal	R			T		
A/C compressor request signal	T					R
A/C compressor feedback signal	T		R			
Blower fan motor switch signal	R			T		
Cooling fan speed request signal	T					R
Position lights request signal			R	T		R
Low beam request signal				T		R
Low beam status signal	R					T
High beam request signal			R	T		R
High beam status signal	R					T
Vehicle speed signal			R		T	
	R	R	T	R		
Sleep request 1 signal			R	T		
Sleep request 2 signal				T		R
Wake up request 1 signal			R	T		
Door switch signal			R	T		R
Turn indicator signal			R	T		
Seat belt buckle switch signal			T	R		
Buzzer output signal			R	T		
Fuel level sensor signal	R		T			
Malfunction indicator lamp signal	T		R			
ASCD SET lamp signal	T		R			
ASCD operation signal	T	R				
ASCD CRUISE lamp signal	T		R			
Overdrive cancel signal	T	R				
Output shaft revolution signal	R	T				


HEADLAMP (FOR USA) - XENON TYPE -

Signals	ECM	TCM	Unified meter and A/C amp.	BCM	ABS actuator and electric unit (control unit)	IPDM E/R
Turbine revolution signal	R	T				
Front wiper request signal				T		R
Front wiper stop position signal				R		T
Rear window defogger switch signal				T		R
Rear window defogger control signal	R					T
Manual mode signal		R	T			
Not manual mode signal		R	T			
Manual mode shift up signal		R	T			
Manual mode shift down signal		R	T			
Manual mode indicator signal		T	R			
Hood switch signal				R		T
Theft warning horn request signal				T		R
Horn chirp signal				T		R
ABS warning lamp signal			R		T	
TCS OFF indicator lamp signal			R		T	
SLIP indicator lamp signal			R		T	
Brake (EBD) warning lamp signal			R		T	


TYPE 2/TYPE3

System diagram

- Type2

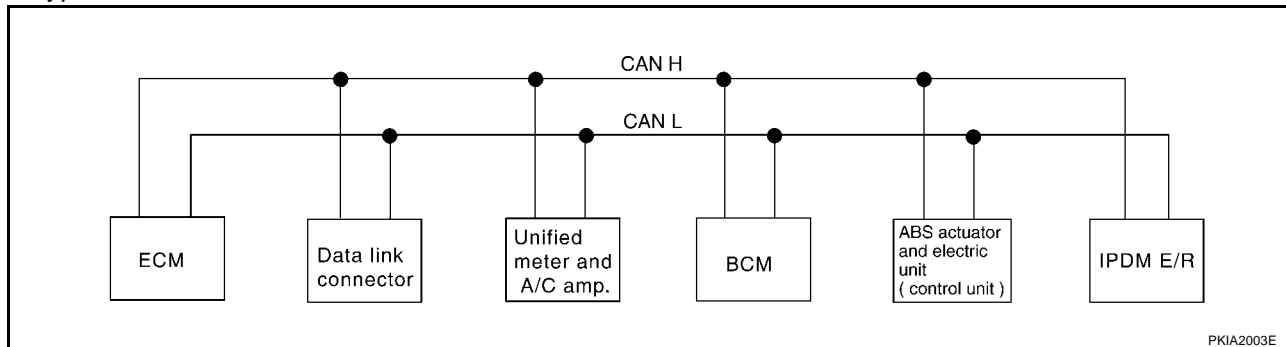

- Type3

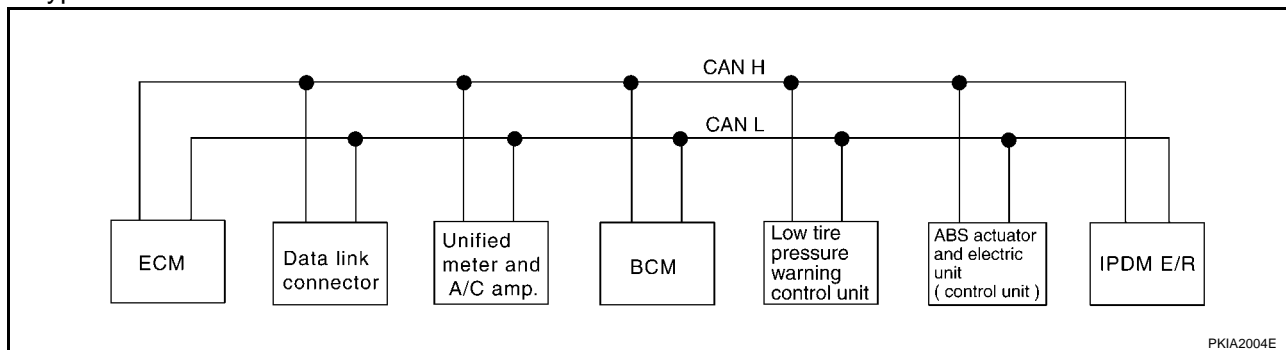

HEADLAMP (FOR USA) - XENON TYPE -

Input/output signal chart

T: Transmit R: Receive


Signals	ECM	Unified meter and A/C amp.	BCM	Low tire pressure warning control unit	ABS actuator and electric unit (control unit)	IPDM E/R
Engine speed signal	T	R			R	
Engine coolant temperature signal	T	R				
Accelerator pedal position signal	T				R	
Fuel consumption monitor signal	T	R				
Air conditioner switch signal	R		T			
A/C compressor request signal	T					R
A/C compressor feedback signal	T	R				
Blower fan motor switch signal	R		T			
Cooling fan speed request signal	T					R
Position lights request signal			R	T		R
Low beam request signal			T			R
Low beam status signal	R					T
High beam request signal		R	T			R
High beam status signal	R					T
Vehicle speed signal		R			T	
	R	T	R	R		
Sleep request 1 signal		R	T			
Sleep request 2 signal			T			R
Wake up request 1 signal		R	T			
Door switch signal		R	T			R
Turn indicator signal		R	T			
Seat belt buckle switch signal		T	R			
Buzzer output signal		R	T			
Fuel level sensor signal	R	T				
Malfunction indicator lamp signal	T	R				
ASCD SET lamp signal	T	R				
ASCD CRUISE lamp signal	T	R				
Front wiper request signal			T			R
Front wiper stop position signal			R			T
Rear window defogger switch signal			T			R
Rear window defogger control signal	R					T
Hood switch signal			R			T
Theft warning horn request signal			T			R
Horn chirp signal			T			R
Tire pressure signal		R		T		
ABS warning lamp signal		R			T	
Brake (EBD) warning lamp signal		R			T	

HEADLAMP (FOR USA) - XENON TYPE -


TYPE 4/TYPE5

System diagram

• Type4

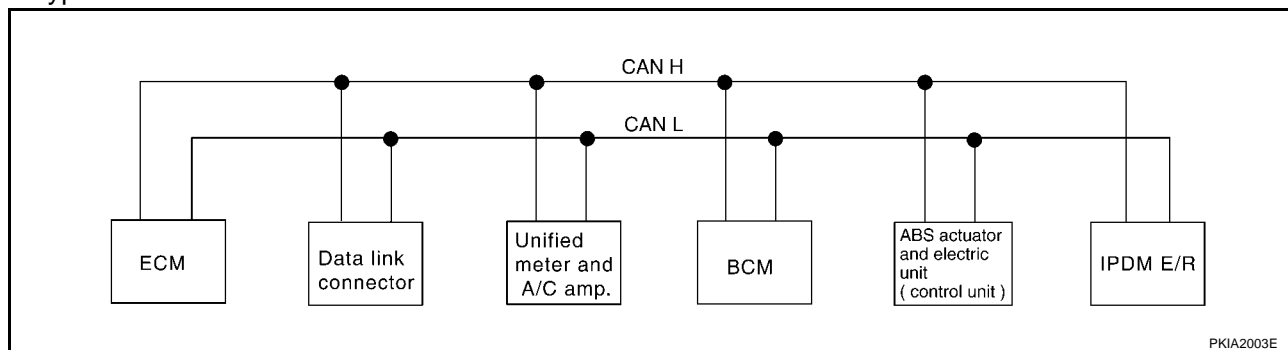

• Type5

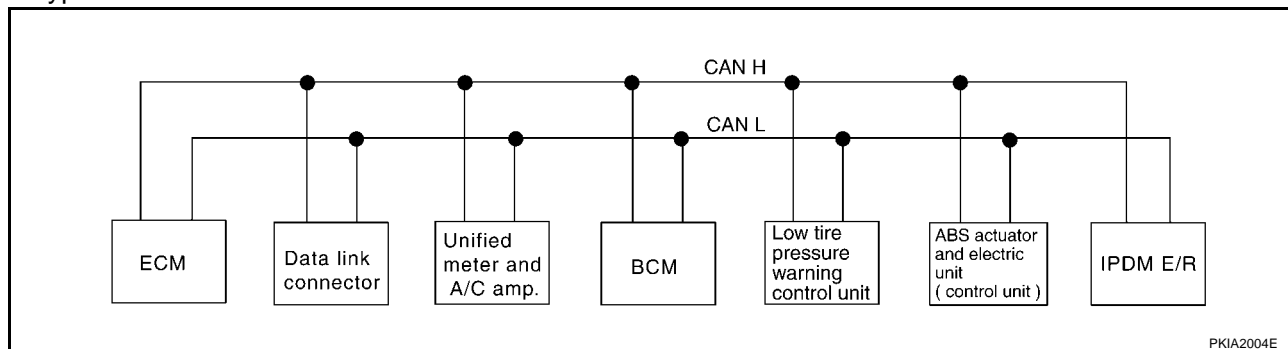

Input/output signal chart

T: Transmit R: Receive

Signals	ECM	Unified meter and A/C amp.	BCM	Low tire pressure warning control unit	ABS actuator and electric unit (control unit)	IPDM E/R
Engine speed signal	T	R			R	
Engine coolant temperature signal	T	R				
Accelerator pedal position signal	T				R	
Fuel consumption monitor signal	T	R				
Air conditioner switch signal	R		T			
A/C compressor request signal	T					R
A/C compressor feedback signal	T	R				
Blower fan motor switch signal	R		T			
Cooling fan speed request signal	T					R
Position lights request signal		R	T			R
Low beam request signal			T			R
Low beam status signal	R					T
High beam request signal		R	T			R
High beam status signal	R					T
Vehicle speed signal		R			T	
	R	T	R	R		
Sleep request 1 signal		R	T			
Sleep request 2 signal			T			R
Wake up request 1 signal		R	T			
Door switch signal		R	T			R


HEADLAMP (FOR USA) - XENON TYPE -

Signals	ECM	Unified meter and A/C amp.	BCM	Low tire pressure warning control unit	ABS actuator and electric unit (control unit)	IPDM E/R
Turn indicator signal		R	T			
Seat belt buckle switch signal		T	R			
Buzzer output signal		R	T			
Fuel level sensor signal	R	T				
Malfunction indicator lamp signal	T	R				
ASCD SET lamp signal	T	R				
ASCD CRUISE lamp signal	T	R				
Front wiper request signal			T			R
Front wiper stop position signal			R			T
Rear window defogger switch signal			T			R
Rear window defogger control signal	R					T
Hood switch signal			R			T
Theft warning horn request signal			T			R
Horn chirp signal			T			R
Tire pressure signal		R		T		
ABS warning lamp signal		R			T	
TCS OFF indicator lamp signal		R			T	
SLIP indicator lamp signal		R			T	
Brake (EBD) warning lamp signal		R			T	


TYPE 6/TYPE7

System diagram

• Type6

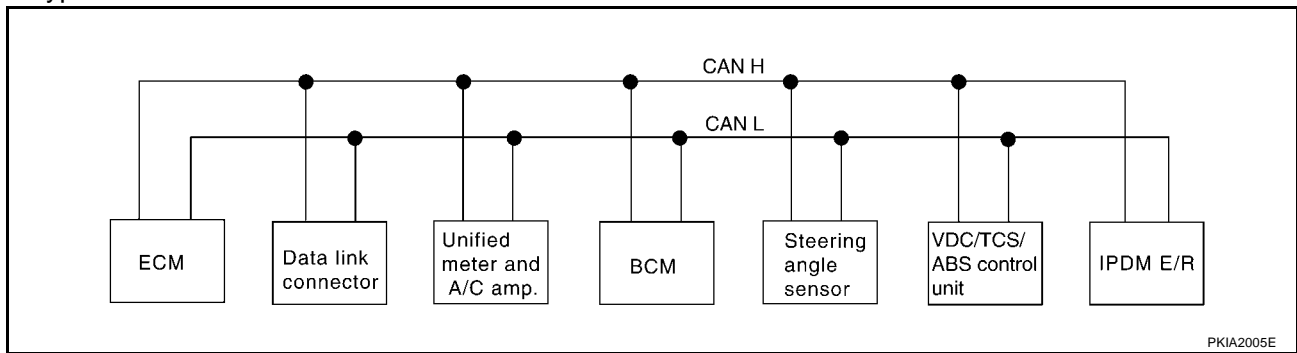

• Type7

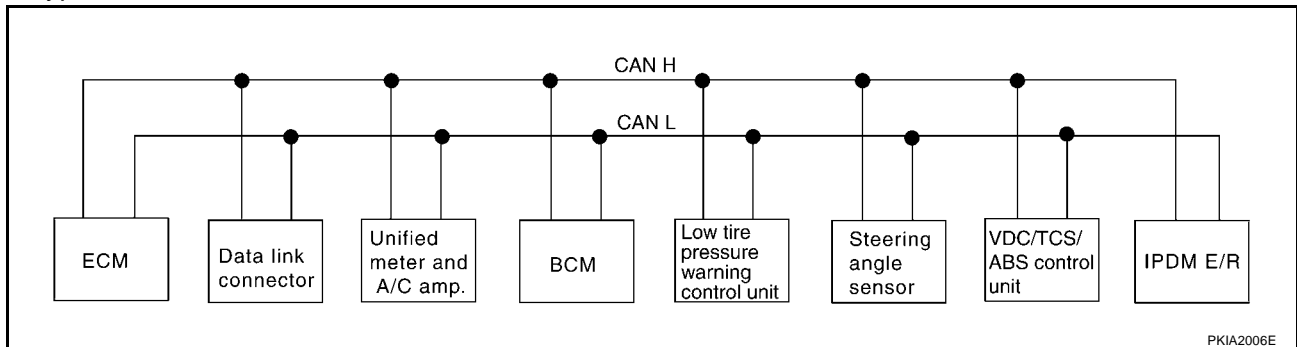

HEADLAMP (FOR USA) - XENON TYPE -

Input/output signal chart


T: Transmit R: Receive

Signals	ECM	Unified meter and A/C amp.	BCM	Low tire pressure warning control unit	Steering angle sensor	VDC/TCS/ABS control unit	IPDM E/R
Engine speed signal	T	R				R	
Engine coolant temperature signal	T	R					
Accelerator pedal position signal	T					R	
Fuel consumption monitor signal	T	R					
Air conditioner switch signal	R		T				
A/C compressor request signal	T						R
A/C compressor feedback signal	T	R					
Blower fan motor switch signal	R		T				
Cooling fan speed request signal	T						R
Position lights request signal		R	T				R
Low beam request signal			T				R
Low beam status signal	R						T
High beam request signal		R	T				R
High beam status signal	R						T
Vehicle speed signal		R				T	
	R	T	R	R			
Sleep request 1 signal		R	T				
Sleep request 2 signal			T				R
Wake up request 1 signal		R	T				
Door switch signal		R	T				R
Turn indicator signal		R	T				
Seat belt buckle switch signal		T	R				
Buzzer output signal		R	T				
Fuel level sensor signal	R	T					
Malfunction indicator signal	T	R					
ASCD SET lamp signal	T	R					
ASCD CRUISE lamp signal	T	R					
Front wiper request signal			T				R
Front wiper stop position signal			R				T
Rear window defogger switch signal			T				R
Rear window defogger control signal	R						T
Hood switch signal			R				T
Theft warning horn request signal			T				R
Horn chirp signal			T				R
Steering angle sensor signal					T	R	
Tire pressure signal		R		T			
ABS warning lamp signal		R				T	
VDC OFF indicator lamp signal		R				T	
SLIP indicator lamp signal		R				T	
Brake (EBD) warning lamp signal		R				T	

HEADLAMP (FOR USA) - XENON TYPE -

Schematic

AKS002SP

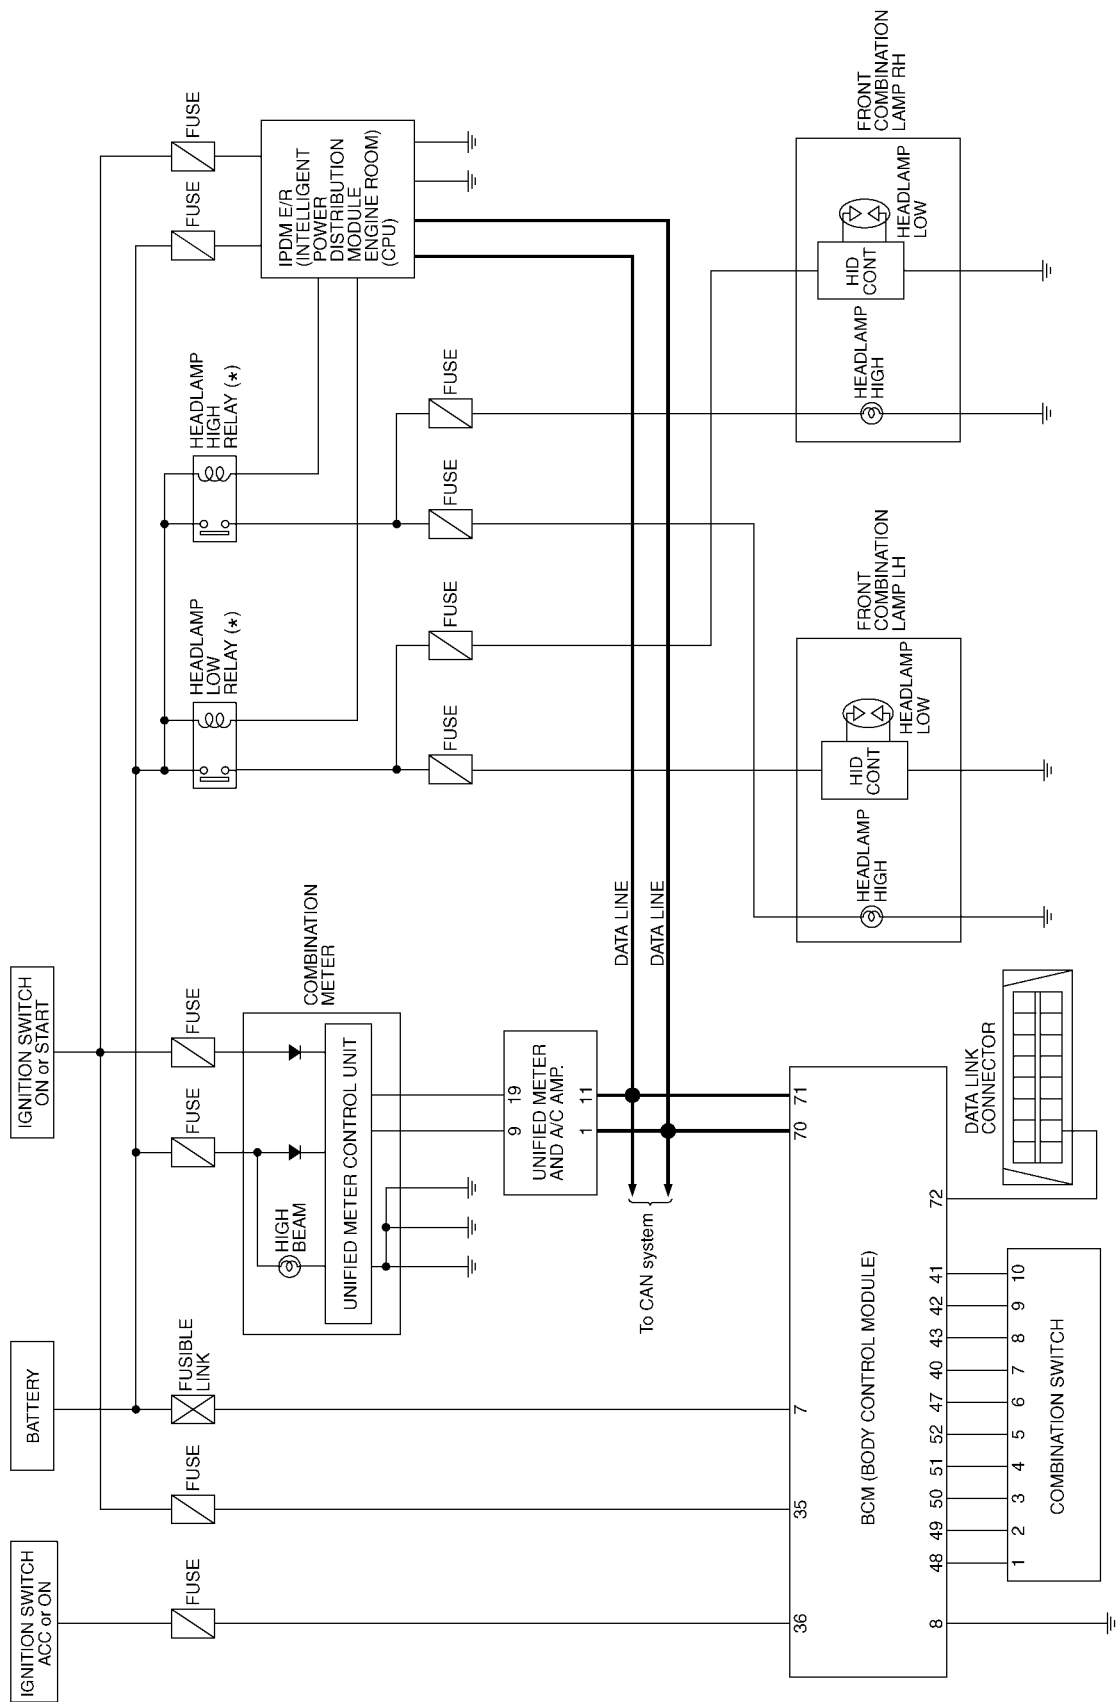

* : This relay is built into the IPDM E/R (Intelligent power distribution module engine room).

TKWT0425E



HEADLAMP (FOR USA) - XENON TYPE -

Wiring Diagram — H/LAMP —


AKS002SQ

LT-H/LAMP-01

DATA LINE

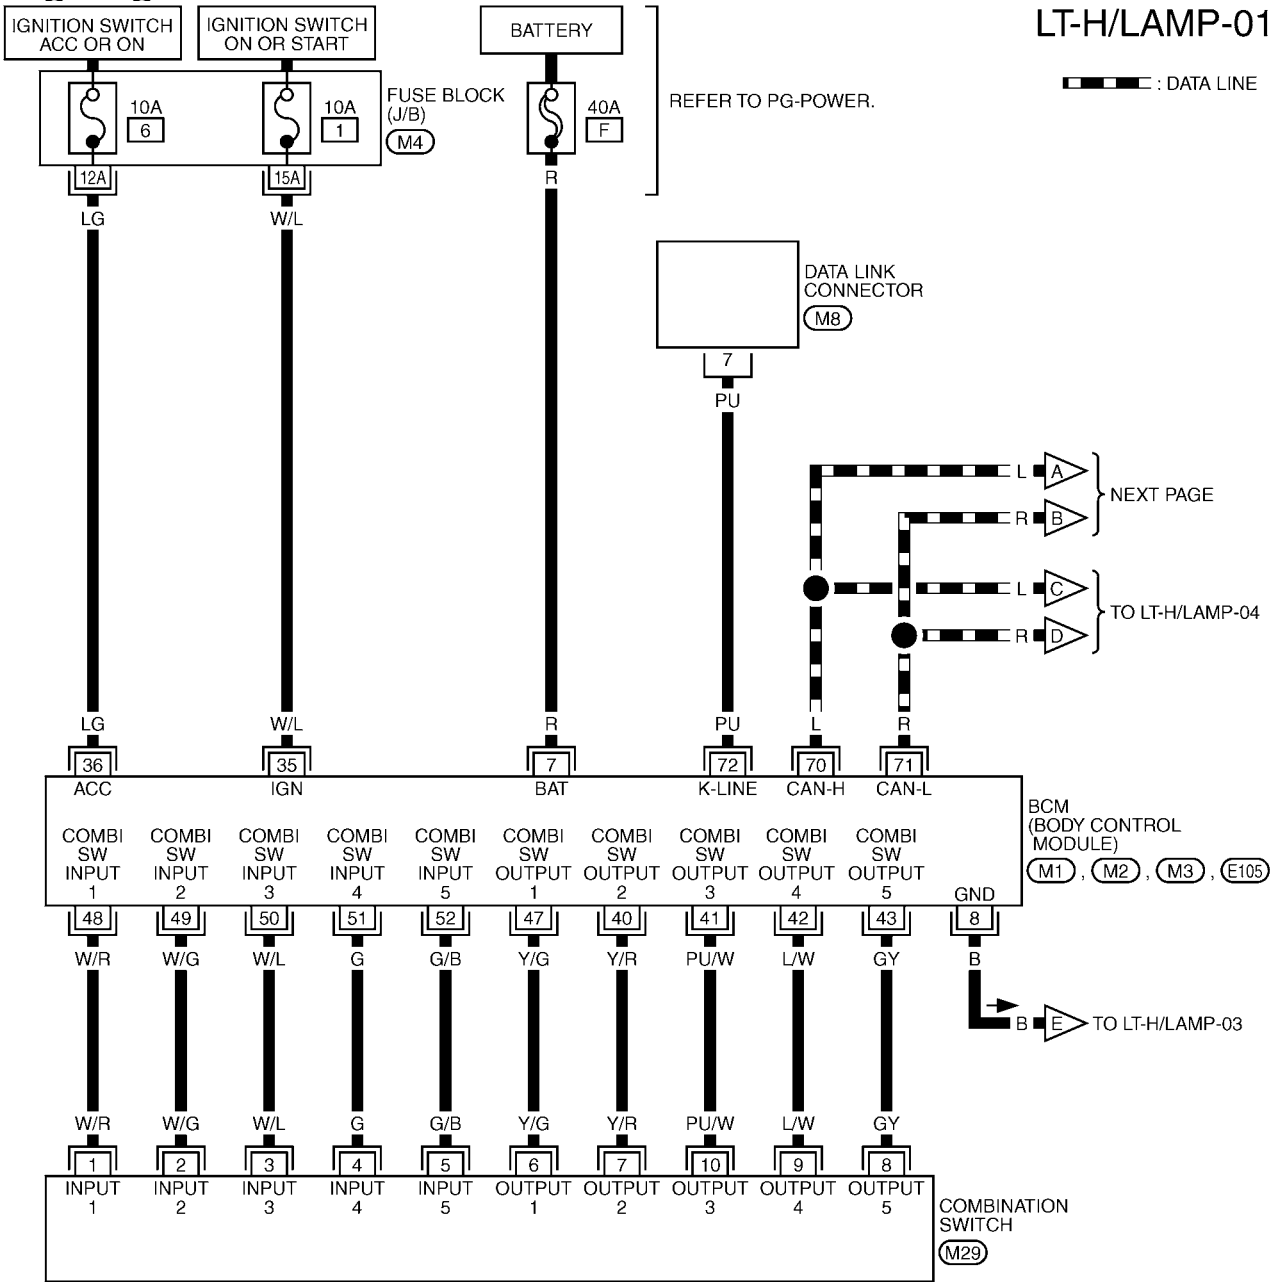

M8
W





M29
W

REFER TO THE FOLLOWING.
M4 - FUSE BLOCK-JUNCTION BOX (J/B)
M1, M2, M3, E105 - ELECTRICAL UNITS

HEADLAMP (FOR USA) - XENON TYPE -

LT-H/LAMP-02

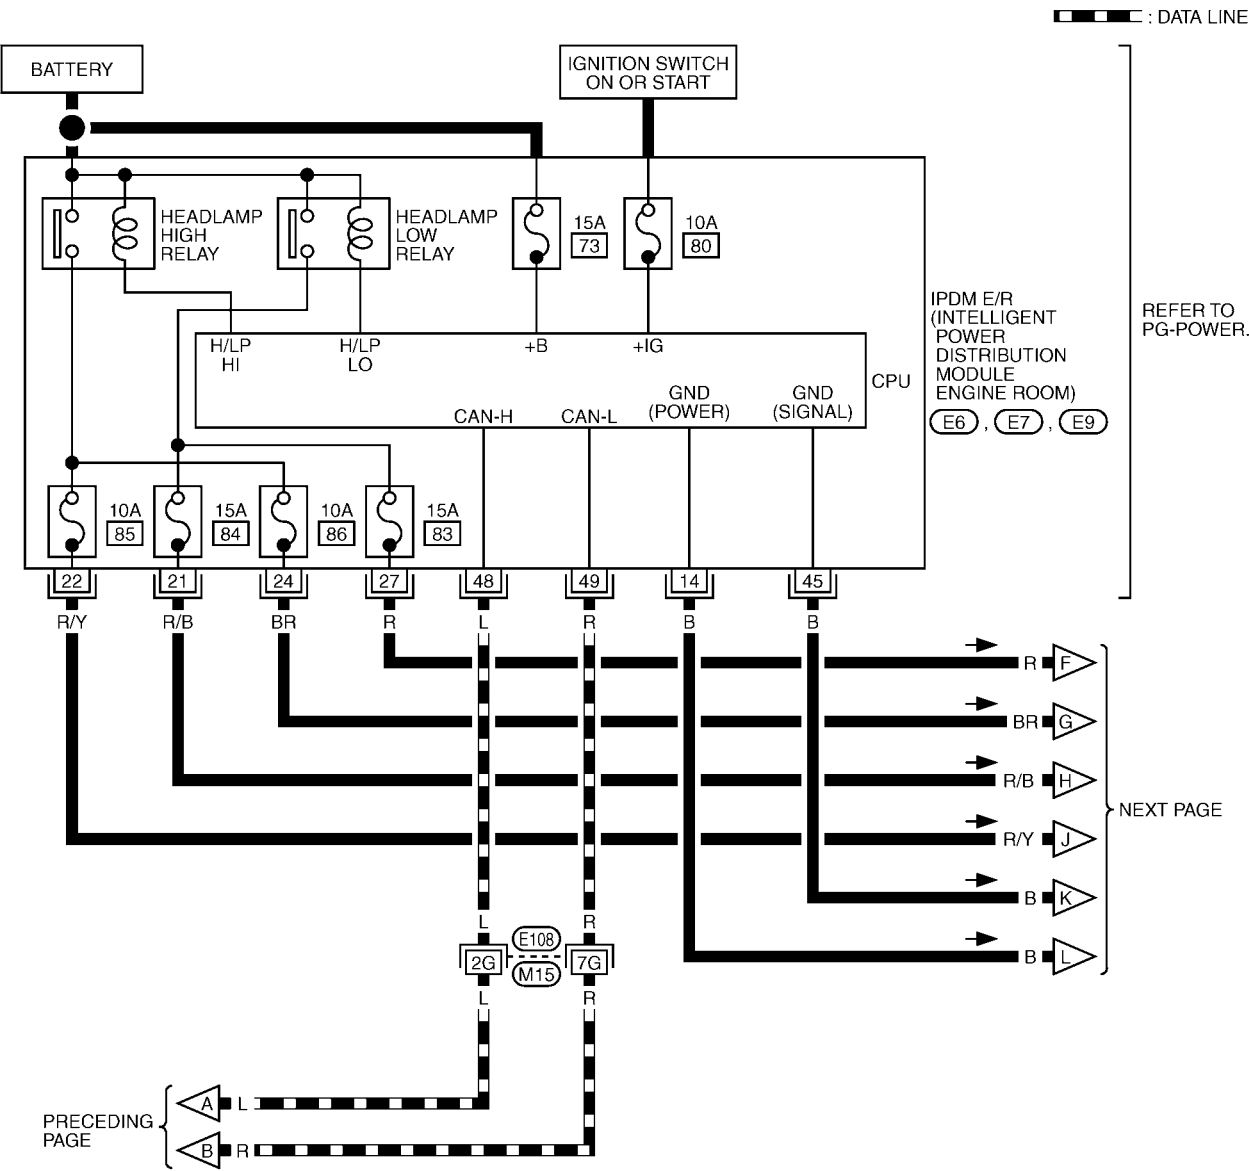

REFER TO THE FOLLOWING.

E108 -SUPER MULTIPLE JUNCTION (SMJ)


LT-H/LAMP-03



HEADLAMP (FOR USA) - XENON TYPE -

LT-H/LAMP-04

DATA LINE

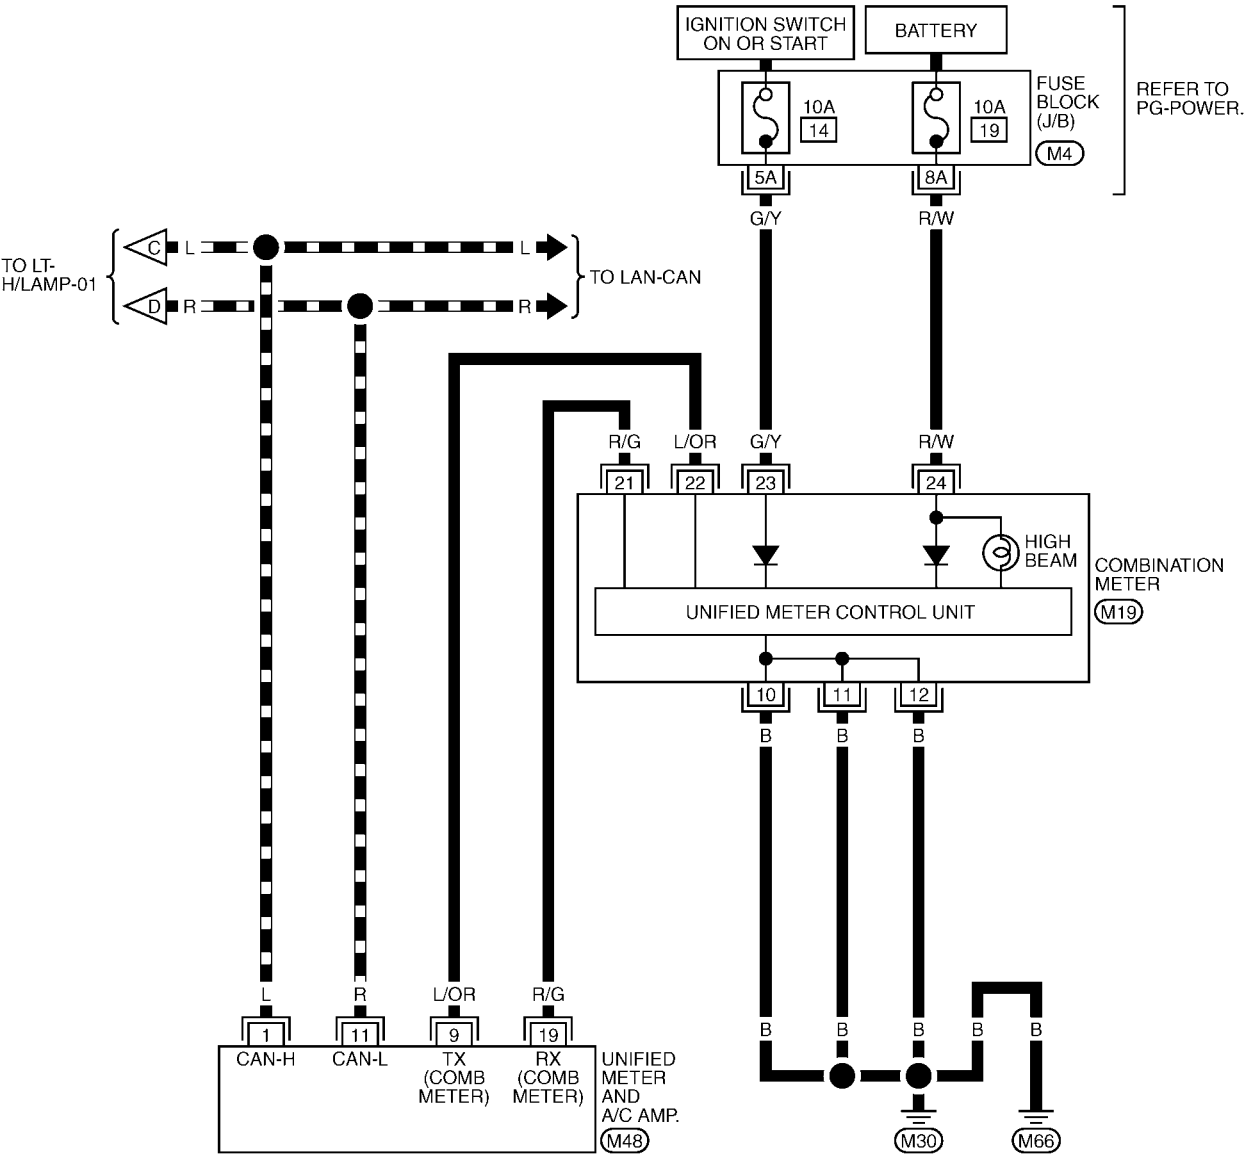

12	11	10	9	8	7	6	5	4	3	2	1
24	23	22	21	20	19	18	17	16	15	14	13

(M19)
W

1	2	3	4	5	6	7	8	9	10
11	12	13	14	15	16	17	18	19	20

(M48)
GY




REFER TO THE FOLLOWING.

(M4) -FUSE BLOCK-JUNCTION BOX (J/B)

HEADLAMP (FOR USA) - XENON TYPE -

Terminals and Reference Value for BCM

AKS002SR

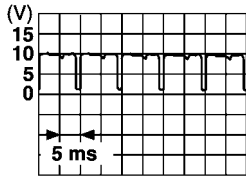Terminal No.	Wire color	Item	Measuring condition		Reference value
			Ignition switch	Operation or condition	
7	R	Battery power supply	OFF	—	Battery voltage
8	B	Ground	ON	—	Approx. 0
35	W/L	Ignition switch (ON)	ON	—	Battery voltage
36	LG	Ignition switch (ACC)	ACC	—	Battery voltage
40	Y/R	Combination switch output 2	ON	Lighting, turn, wiper OFF	 <p>SKIA1119J</p>
41	PU/W	Combination switch output 3			
42	L/W	Combination switch output 4			
43	GY	Combination switch output 5			
47	Y/G	Combination switch output 1			
48	W/R	Combination switch input 1	ON	Lighting, turn, wiper OFF	4.5V or more
49	W/G	Combination switch input 2			
50	W/L	Combination switch input 3			
51	G	Combination switch input 4			
52	G/B	Combination switch input 5			
70	L	CAN-H	—	—	—
71	R	CAN-L	—	—	—
72	PU	K-LINE	—	—	—

How to Proceed With Trouble Diagnosis

AKS002SS

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-7, "System Description"](#) .
3. Carry out the Preliminary Check. Refer to [LT-22, "Preliminary Check"](#) .
4. Check symptom and repair or replace the cause of malfunction.
5. Does the headlamp operate normally? If YES: GO TO 6. If NO: GO TO 4.
6. Inspection end.

HEADLAMP (FOR USA) - XENON TYPE -

Preliminary Check INSPECTION FOR POWER SUPPLY AND GROUND CIRCUIT

AKS002ST

1. CHECK FUSES

- Check for blown fuses.

UNIT	POWER SOURCE	FUSE No.
BCM	Battery	F
	Ignition switch ON or START position	1
	Ignition switch ACC or ON position	6
IPDM E/R	Battery	83
		84
		85
		86

Refer to [LT-17, "Wiring Diagram — H/LAMP —"](#) .

OK or NG


OK >> GO TO 2.

NG >> If fuse is blown, be sure to eliminate cause of malfunction before installing new fuse. Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#) .

2. POWER SUPPLY CIRCUIT CHECK FOR BCM

- Disconnect BCM connector.
- Check voltage between BCM harness connector and ground.

Terminals		Ignition switch position		
(+) (–)		OFF	ACC	ON
Connector	Terminal (Wire color)			
E105	7 (R)	Battery voltage	Battery voltage	Battery voltage
M1	35 (W/L)	0V	0V	Battery voltage
M1	36 (LG)	0V	Battery voltage	Battery voltage

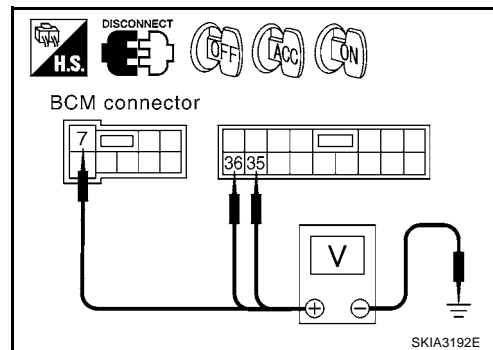

OK or NG


OK >> GO TO 3.

NG >> Check harness for open or short between BCM and fuse.

3. GROUND CIRCUIT CHECK FOR BCM

Check continuity between BCM harness connector and ground.

Terminals			Continuity
(+)		(–)	
Connector	Terminal (wire color)		
E105	8 (B)	Ground	Yes

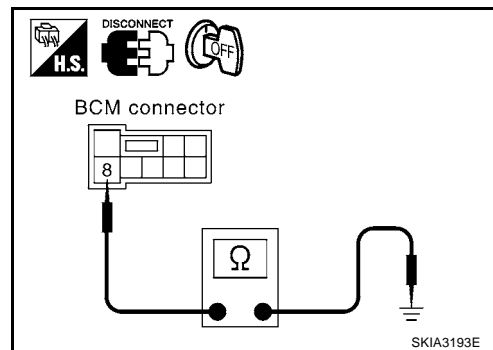

OK or NG

OK >> INSPECTION END.

NG >> Check harness ground circuit.

HEADLAMP (FOR USA) - XENON TYPE -

CONSULT-II Function

AKS002SU

- CONSULT-II executes the following functions by combining data reception and command transmission via the communication line from BCM. Work support, self-diagnosis, data monitor, and active test display.


BCM diagnosis part	Check item, diagnosis mode	Description
HEAD LAMP	Work support	Changes the setting for each function.
	Data monitor	Displays BCM input data in real time.
	Active test	Operation of electrical loads can be checked by sending drive signal to them.
BCM C/U	Self-diagnosis	BCM performs self-diagnosis of CAN communication and combination switch.

CONSULT-II BASIC OPERATION


CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carry out CAN communication.


- With the ignition switch OFF, connect CONSULT-II and CONSULT-II CONVERTER to the data link connector, then turn ignition switch ON.

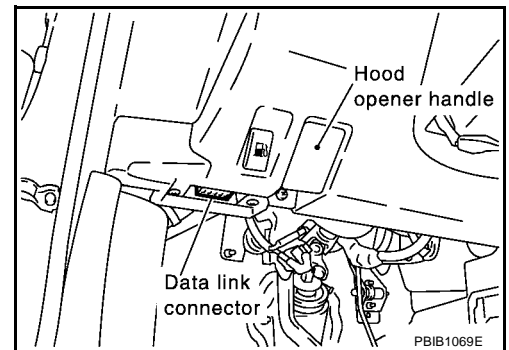

- Touch "START(NISSAN BASED VHCL)".

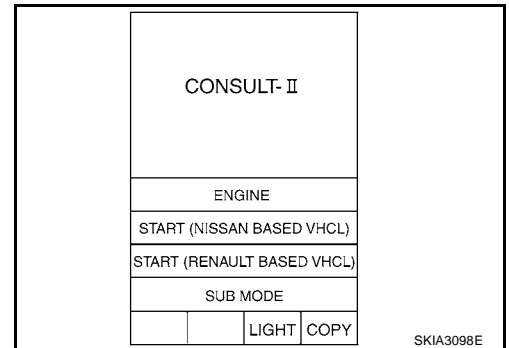


- Touch "BCM" on "SELECT SYSTEM" screen.
If "BCM" is not indicated, go to [GI-40, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#).

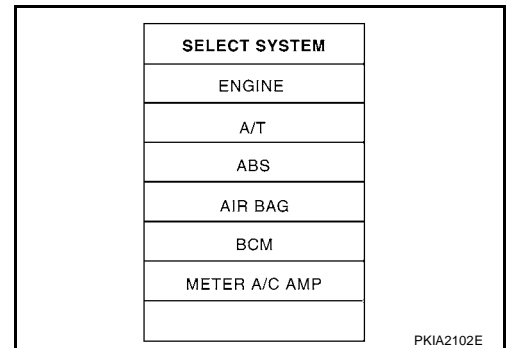

HEADLAMP (FOR USA) - XENON TYPE -

4. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.

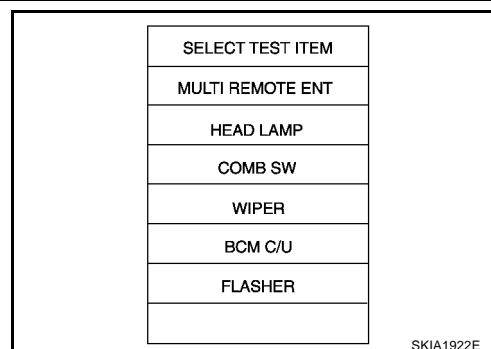

WORK SUPPORT

Operation Procedure

1. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.
2. Touch "WORK SUPPORT" on "SELECT DIAG MODE" screen.
3. Touch "BATTERY SAVER SET" on "SELECT WORK ITEM" screen.
4. Touch "START".
5. Touch "CHANGE SET".
6. The setting will be changed and "CUSTOMIZING COMPLETED" will be displayed.
7. Touch "END".

Display Item List

Item	Description	CONSULT-II	Factory setting
BATTERY SAVER SET	Exterior lamp battery saver control mode can be changed in this mode. Selects exterior lamp battery saver control mode between two ON/OFF.	ON	○
		OFF	—

DATA MONITOR

Operation Procedure

1. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.
2. Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.
3. Touch either "ALL SIGNALS" or "SELECTION FROM MENU" on the "DATA MONITOR" screen.

All signals	Monitors all the signals.
Selection from menu	Selects and monitors individual signal.

4. Touch "START".
5. When "SELECTION FROM MENU" is selected, touch individual items to be monitored. When "ALL SIGNALS" is selected, all the items will be monitored.
6. Touch "RECORD" while monitoring, then the status of the monitored item can be recorded. To stop recording, touch "STOP".

Display Item List

Monitor item	Contents
IGN ON SW "ON/OFF"	Displays "IGN position (ON)/OFF, ACC position (OFF)" judged from the ignition switch signal.
ACC ON SW "ON/OFF"	Displays "ACC (ON)/OFF, Ignition OFF (OFF)" status judged from ignition switch signal.
AUTO LIGHT SW ^{Note} "OFF"	—
TAIL LAMP SW "ON/OFF"	Displays status (lighting switch 1st or 2nd position: ON/Others: OFF) of lighting switch judged from lighting switch signal.
HEAD LAMP SW "ON/OFF"	Displays status (headlamp switch: ON/Others: OFF) of headlamp switch judged from lighting switch signal.
HI BEAM SW "ON/OFF"	Displays status (high beam switch: ON/Others: OFF) of high beam switch judged from lighting switch signal.

HEADLAMP (FOR USA) - XENON TYPE -

Monitor item		Contents
PASSING SW	"ON/OFF"	Displays status (flash-to-pass switch: ON/Others: OFF) of flash-to-pass switch judged from lighting switch signal.
FR FOG SW ^{Note}	"OFF"	—
DOOR SW - DR	"ON/OFF"	Displays status of the driver door as judged from the driver door switch signal. (Door is open: ON/Door is closed: OFF)
DOOR SW - AS	"ON/OFF"	Displays status of the passenger door as judged from the passenger door switch signal. (Door is open: ON/Door is closed: OFF)
DOOR SW - RR ^{Note}	"OFF"	—
HEAD LAMP SW 2	"ON/OFF"	Displays status (headlamp switch 2: ON/Others: OFF) of headlamp switch 2 judged from lighting switch signal.
OPTICAL SENSOR ^{Note}	[0V]	Display always indicates "0.00V"

NOTE:

This item is displayed, but cannot monitor it.

ACTIVE TEST

Operation Procedure

1. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.
2. Touch "ACTIVE TEST" on "SELECT DIAG MODE" screen.
3. Touch item to be tested and check operation of the selected item.
4. During the operation check, touching "BACK" deactivates the operation.

Display Item List

Test item	Description
TAIL LAMP	Allows tail lamp relay to operate by switching ON-OFF.
HEAD LAMP (LOW)	Allows headlamp relay to operate by switching ON-OFF.
HEAD LAMP (HI)	Allows headlamp relay to operate by switching ON-OFF.
FR FOG LAMP ^{Note}	—

NOTE:

This item is displayed, but cannot test it.

SELF-DIAGNOSTIC RESULTS

Operation Procedure

1. Touch "BCM C/U" on "SELECT TEST ITEM" screen.
2. Touch "SELF-DIAG RESULTS" on "SELECT DIAG MODE" screen.
3. Self-diagnostic results are displayed.

Display Item List

Items to be displayed	CONSULT-II display	Description
CAN communication	CAN communication [U1000]	Malfunction is detected in CAN communication.
CAN communication system	CAN communication system 1 to 6 [U1000]	Malfunction is detected in CAN system.
Combination switch	Diagnosis 1 - 5 systems open circuit	Malfunction is detected in combination switch system.

HEADLAMP (FOR USA) - XENON TYPE -

AKS002SV

Headlamp High Beam Does Not Illuminate (Both Sides)

1. HEAD LAMP AUTO ACTIVE TEST

1. Start auto active test. Refer to [PG-24, "Auto Active Test"](#).
2. Check whether headlamp HI operates.

OK or NG

- OK >> GO TO 4.
NG >> GO TO 2.

2. HEADLAMPS CIRCUIT CHECK

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector and front combination lamp LH or RH connector.
3. Check continuity between IPDM E/R harness connector E7 terminal 24(BR) and front combination lamp RH harness connector E24 terminal 3(BR).

Continuity should exist

4. Check continuity between IPDM E/R harness connector E7 terminal 22(R/Y) and front combination lamp LH harness connector E40 terminal 3(R/Y).

Continuity should exist

OK or NG

- OK >> GO TO 3.
NG >> Repair harness or connector.



3. HEADLAMP INPUT SIGNAL CHECK

1. Connect IPDM E/R connector.
2. Start auto active test. Refer to [PG-24, "Auto Active Test"](#). When headlamp HI is operating, check voltage between front combination lamp LH or RH and ground.

Terminals				Voltage
(+)			(-)	
Connector		Terminal (wire color)		
RH	E24	3 (BR)	Ground	Battery voltage
LH	E40	3 (R/Y)		

OK or NG

- OK >> Check headlamp bulbs.
NG >> Replace IPDM E/R.

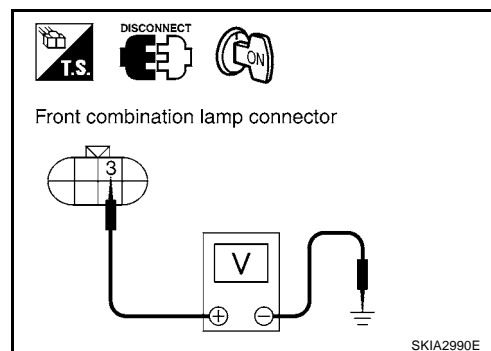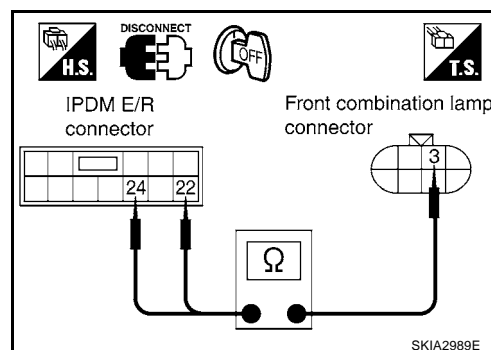

HEADLAMP (FOR USA) - XENON TYPE -

4. COMBINATION SWITCH CIRCUIT CHECK

Select BCM on CONSULT-II. Carry out "BCM C/U" self-diagnosis.

Displayed results of self-diagnosis

No malfunction detected>> GO TO 5.

CAN communications or CAN system>> Inspect the BCM CAN communications system. Refer to [BCS-18, "CAN Communication Inspection Using CONSULT-II \(Self-Diagnosis\)"](#).

OPEN DETECT 1 - 5>> Combination switch system malfunction. Refer to [LT-164, "Combination Switch Inspection According to Self-Diagnostic Results"](#).

SELF-DIAG RESULTS	
DTC RESULTS	TIME
NO DTC IS DETECTED. FURTHER TESTING MAY BE REQUIRED	

LKIA0073E

5. COMBINATION SWITCH INPUT SIGNAL CHECK

Select BCM on CONSULT-II. With "HEADLAMP" data monitor, check that "HI BEAM SW" turns ON-OFF linked with operation of lighting switch.

OK or NG

OK >> Replace BCM.

NG >> Replace lighting switch.

DATA MONITOR	
MONITOR	
IGN ON SW	ON
ACC ON SW	ON
AUTO LIGHT SW	OFF
TAIL LAMP SW	OFF
HEAD LAMP SW	OFF
HI BEAM SW	OFF
PASSING SW	OFF
FR FOG SW	OFF
DOOR SW-DR	OFF

LKIA0074E

Headlamp High Beam Does Not Illuminate (One Side)

AKS002SW

1. CHECK BULB

Inspect bulbs of lamps which do not illuminate.

OK or NG

OK >> GO TO 2.

NG >> Replace headlamp bulb.

2. HEAD LAMP LH OR RH CIRCUIT CHECK

1. Disconnect IPDM E/R connector and front combination lamp LH or RH connector.
2. Check continuity between IPDM E/R harness connector E7 terminal 24(BR) and front combination lamp RH harness connector E24 terminal 3(BR).

Continuity should exist


3. Check continuity between IPDM E/R harness connector E7 terminal 22(R/Y) and front combination lamp LH harness connector E40 terminal 3(R/Y).

Continuity should exist

OK or NG

OK >> Replace IPDM E/R.

NG >> Repair harness or connector.

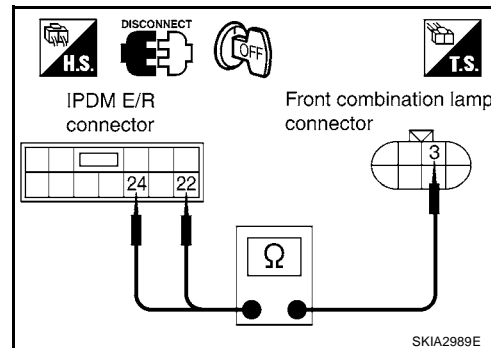

HEADLAMP (FOR USA) - XENON TYPE -

High-Beam Indicator Lamp Does Not Illuminate

AKS002SX

1. CHECK BULB

Inspect bulb of high-beam indicator lamp.

OK or NG

- OK >> Replace combination meter.
NG >> Replace indicator bulb.

Headlamp Low Beam Does Not Illuminate (Both Sides)

AKS002SY

1. HEADLAMP AUTO ACTIVE TEST

1. Start auto active test. Refer to [PG-24, "Auto Active Test"](#).
2. Check whether headlamp LO operates.

OK or NG

- OK >> GO TO 4.
NG >> GO TO 2.

2. HEADLAMPS CIRCUIT CHECK

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector and front combination lamp LH or RH connector.
3. Check continuity between IPDM E/R harness connector E7 terminal 27(R) and front combination lamp RH harness connector E24 terminal 7(R).

Continuity should exist

4. Check continuity between IPDM E/R harness connector E7 terminal 21(R/B) and front combination lamp LH harness connector E40 terminal 7(R/B).

Continuity should exist

OK or NG

- OK >> GO TO 3.
NG >> Repair harness or connector.



3. HEADLAMP INPUT SIGNAL CHECK

1. Connect IPDM E/R connector.
2. Start auto active test. Refer to [PG-24, "Auto Active Test"](#). When headlamp LO is operating, check voltage between front combination lamp LH or RH and ground.

Terminals				Voltage
(+)			(-)	
Connector		Terminal (wire color)		
RH	E24	7(R)	Ground	Battery voltage
LH	E40	7(R/B)		

OK or NG

- OK >> Inspect headlamp harness and connectors, ballasts (HID control unit), and xenon bulbs.
NG >> Replace IPDM E/R.

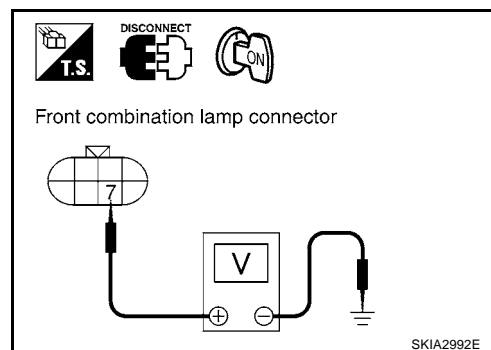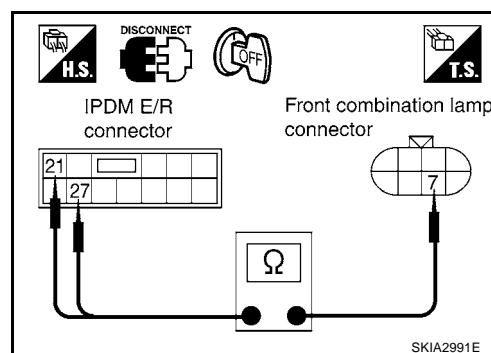

HEADLAMP (FOR USA) - XENON TYPE -

4. COMBINATION SWITCH CIRCUIT CHECK

Select BCM on CONSULT-II. Carry out "BCM C/U" self-diagnosis.

Displayed results of self-diagnosis

No malfunction detected>> GO TO 5.

CAN communications or CAN system>> Inspect the BCM CAN communications system. Refer to [BCS-18, "CAN Communication Inspection Using CONSULT-II \(Self-Diagnosis\)"](#).

OPEN DETECT 1 - 5>> Combination Switch System malfunction. Refer to [LT-164, "Combination Switch Inspection According to Self-Diagnostic Results"](#).

HEAD LAMP 1 SW or HEAD LAMP 2 SW>> Replace lighting switch.

SELF-DIAG RESULTS	
DTC RESULTS	TIME
NO DTC IS DETECTED. FURTHER TESTING MAY BE REQUIRED	

LK1A0073E

5. COMBINATION SWITCH INPUT SIGNAL CHECK

Select BCM on CONSULT-II. With "HEADLAMP" data monitor, check that "HEAD LAMP SW" and "HEAD LAMP SW 2" turn ON-OFF with operation of lighting switch.

OK or NG

OK >> Replace BCM.

NG >> ● Replace lighting switch.

- If one of "HEAD LAMP SW" and "HEAD LAMP SW 2" is NG, replace both BCM and lighting switch.

DATA MONITOR	
MONITOR	
HEAD LAMP SW	OFF
HIBEAM SW	OFF
PASSING SW	OFF
FR FOG SW	OFF
DOOR SW-DR	OFF
DOOR SW-AS	OFF
DOOR SW-RR	OFF
HEAD LAMP SW2	OFF
OPTICAL SENSOR	0.00V

SK1A3661E

Headlamp Low Beam Does Not Illuminate (One Side)

AKS002SZ

1. CHECK BULB

Inspect ballasts (HID control unit) and xenon bulb of lamp which does not illuminate.

OK or NG

OK >> GO TO 2.

NG >> ● (step1) Replace xenon bulb with other side bulb or new one. (If eclampsia illuminate correctly, replace the xenon bulb)

- (step2) Replace the ballasts (HID control unit) with other side ballasts or new one.(If eclampsia illuminate correctly, replace the ballasts)

2. HEAD LAMP LH OR RH CIRCUIT CHECK

1. Disconnect IPDM E/R connector and front combination lamp LH or RH connector.

2. Check continuity between IPDM E/R harness connector E7 terminal 27(R) and front combination lamp RH harness connector E24 terminal 7(R).

Continuity should exist


3. Check continuity between IPDM E/R harness connector E7 terminal 21(R/B) and front combination lamp LH harness connector E40 terminal 7(R/B).

Continuity should exist

OK or NG

OK >> Replace IPDM E/R.

NG >> Repair harness or connector.

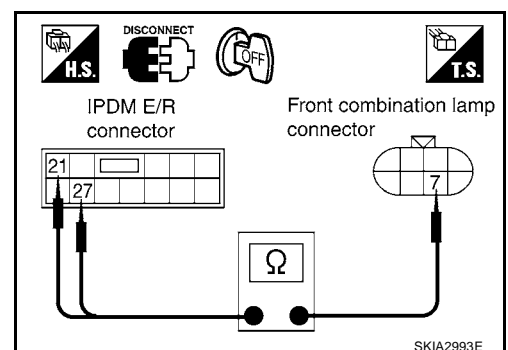

HEADLAMP (FOR USA) - XENON TYPE -

Headlamps Do Not Turn OFF

AKS002T0

1. CHECKING CAN COMMUNICATIONS BETWEEN BCM AND IPDM E/R

- IPDM E/R detects CAN communication malfunction and activates fail-safe operation. Refer to [BCS-18, "CAN Communication Inspection Using CONSULT-II \(Self-Diagnosis\)"](#) and inspect CAN system.


OK or NG

OK >> Replace IPDM E/R.

NG >> Repair malfunctioning part.

Aiming Adjustment

AKS002T1

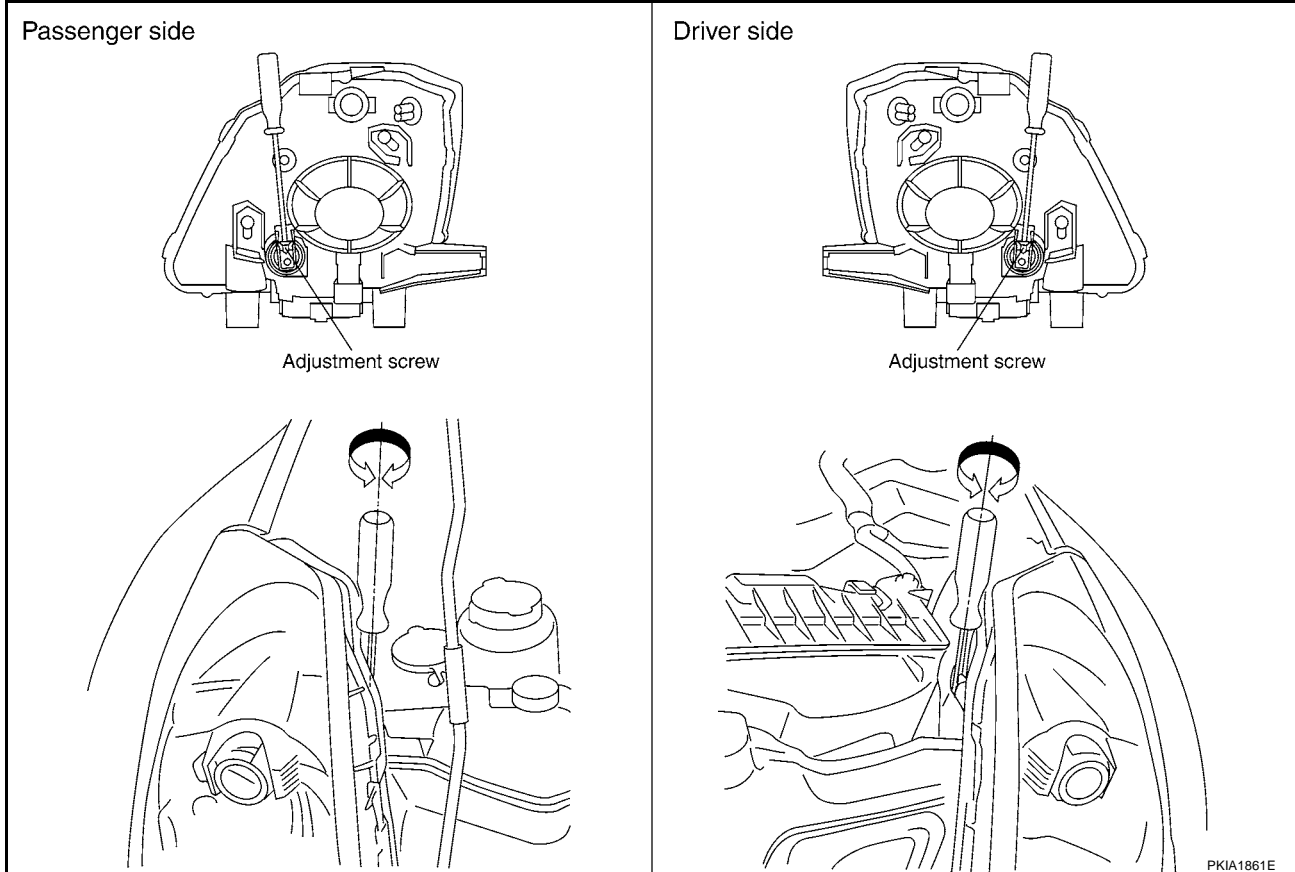

PREPARATION BEFORE ADJUSTING

For details, refer to the regulations in your own country.

Before performing aiming adjustment, check the following.


1. Keep all tires inflated to correct pressures.
2. Place vehicle on flat surface.
3. Set that there is no-load in vehicle other than the driver (or equivalent weight placed in driver's position). Coolant, engine oil filled up to correct level and full fuel tank.

LOW BEAM AND HIGH BEAM

1. Turn headlamp low beam on.
2. Use adjusting screws to perform aiming adjustment.

HEADLAMP (FOR USA) - XENON TYPE -

ADJUSTMENT USING AN ADJUSTMENT SCREEN (LIGHT/DARK BORDERLINE)

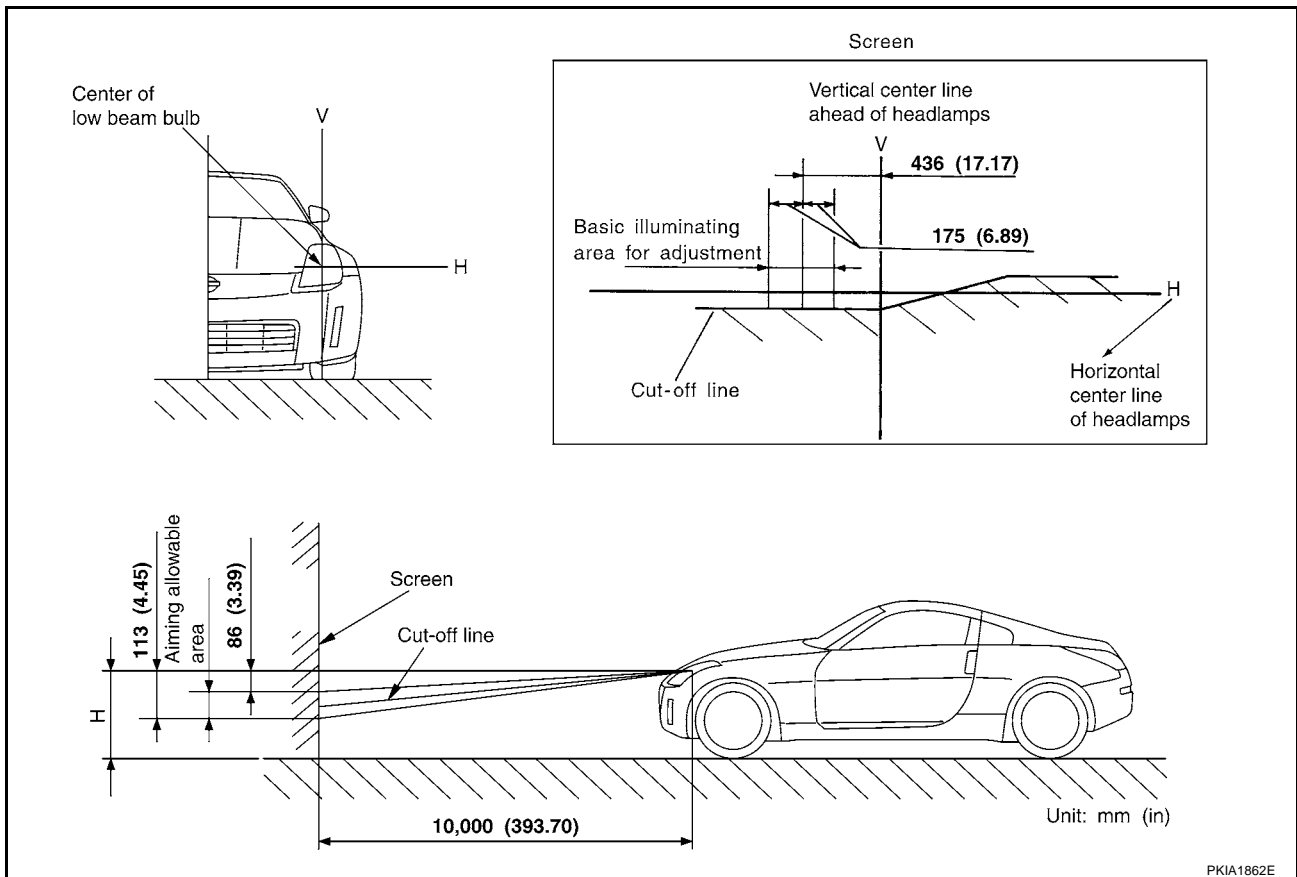

If the vehicle front body has been repaired and/or the headlamp assembly has been replaced, check aiming. Use the aiming chart shown in the figure.

- Basic illumination area for adjustment should be within the range shown on the aiming chart. Adjust headlamp accordingly.

Bulb Replacement HEADLAMP (UPPER) LOW BEAM

AKS002T2

LT


1. Turn lighting switch OFF.
2. Remove headlamp. Refer to [LT-33, "Removal and Installation"](#).
3. Turn plastic cap counterclockwise and unlock it.
4. Turn bulb socket counterclockwise and unlock it.
5. Unlock retaining spring and remove bulb from headlamp.
6. Install in reverse order of removal.

NOTE:

After installation, aiming adjustment. Refer to [LT-30, "Aiming Adjustment"](#).

Headlamp (upper) low beam
(Xenon)

: 12V - 35W (D2R)

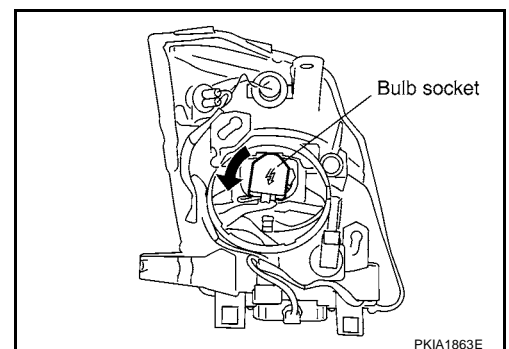

A

B

C

D

E

F

G

H

I

J

L

M

HEADLAMP (FOR USA) - XENON TYPE -

HEADLAMP (LOWER) HIGH BEAM

1. Turn lighting switch OFF.
2. Open the driver and front passenger window, and then disconnect the battery negative cable.

CAUTION:

After the battery cables are disconnected, do not open/close the driver and/or front passenger door with the window in the full up position. The automatic window adjusting function will not work and the side roof panel may be damaged.

3. Remove fender protector (front). Refer to [EI-21, "FENDER PROTECTOR"](#) in "EI" section.
4. Turn plastic cap counterclockwise and unlock it.
5. Disconnect bulb socket.
6. Unlock retaining spring and remove bulb from headlamp.
7. Install in reverse order of removal.

Headlamp (lower) high beam : 12V - 55W (H7)

PARKING LAMP (CLEARANCE LAMP)

1. Turn lighting switch OFF.
2. Remove fender protector (front). Refer to [EI-21, "FENDER PROTECTOR"](#) in "EI" section.
3. Turn bulb socket counterclockwise and unlock it.
4. Remove bulb from its socket.
5. Install in reverse order of removal.

Parking lamp (Clearance lamp) : 12V - 5W

FRONT TURN SIGNAL LAMP

1. Turn lighting switch OFF.
2. Remove fender protector (front). Refer to [EI-21, "FENDER PROTECTOR"](#) in "EI" section.
3. Turn bulb socket counterclockwise and unlock it.
4. Remove bulb from its socket.
5. Install in reverse order of removal.

Front turn signal lamp : 12V - 21W

FRONT SIDE MARKER LAMP

1. Turn lighting switch OFF.
2. Remove fender protector (front). Refer to [EI-21, "FENDER PROTECTOR"](#) in "EI" section.
3. Turn bulb socket counterclockwise and unlock it.
4. Remove bulb from its socket.
5. Install in reverse order of removal.

Front side marker lamp : 12V - 5W

CAUTION:

After installing bulb, be sure to install plastic cap and bulb socket securely to insure watertightness.

HEADLAMP (FOR USA) - XENON TYPE -

Removal and Installation

AKS003RN


REMOVAL

1. Open the driver and front passenger window, and then disconnect the battery negative cable.

CAUTION:

After the battery cables are disconnected, do not open/close the driver and/or front passenger door with the window in the full up position. The automatic window adjusting function will not work and the side roof panel may be damaged.

2. Remove front bumper. Refer to [EI-14, "FRONT BUMPER"](#) in "EI" section.
3. Remove headlamp mounting bolts.
4. Pull head lamp toward vehicle front, disconnect connector, and remove headlamp.

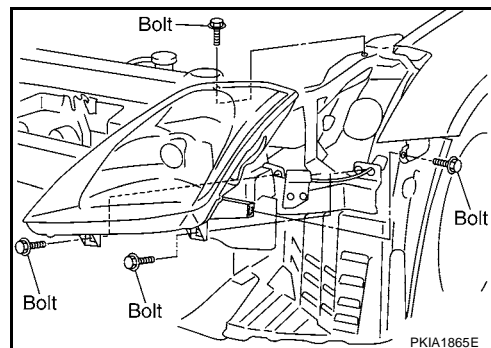

INSTALLATION

Installation in the reverse order if removal. Be careful of the following.

Headlamp mounting bolt:



:5.7-6.5N-m (0.59-0.66 kg-m, 51-57 in lb)


NOTE:

After installation, aiming adjustment. Refer to [LT-30, "Aiming Adjustment"](#)

HEADLAMP (FOR USA) - XENON TYPE -

Disassembly and Assembly

AKS002T4

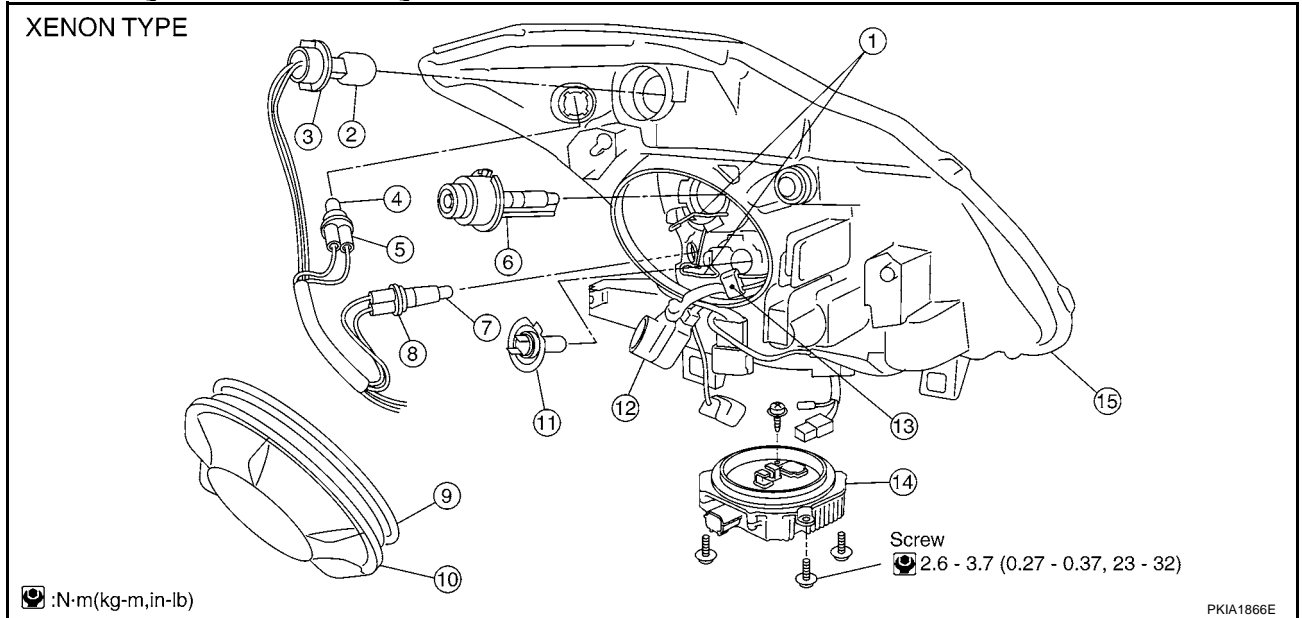

- | | | |
|---------------------------------------|--|---------------------------------------|
| 1. Retaining spring | 2. Front turn signal lamp bulb | 3. Front turn signal lamp bulb socket |
| 4. Side marker lamp bulb | 5. Side marker lamp bulb socket | 6. Xenon bulb |
| 7. Parking lamp (Clearance lamp) bulb | 8. Parking lamp (Clearance lamp) bulb socket | 9. Seal rubber |
| 10. Plastic cap | 11. Halogen bulb (high) | 12. Xenon bulb socket |
| 13. Halogen bulb socket | 14. HID C/U | 15. Headlamp housing assembly |

DISASSEMBLY

1. Turn plastic cap counterclockwise and unlock it.
2. Turn xenon bulb socket counterclockwise, and unlock it.
3. Unlock retaining spring, and remove xenon bulb (low).
4. Disconnect HID control unit connector, and remove HID control unit screws.
5. Disconnect the socket connected to the halogen bulb (high).
6. Unlock retaining spring, and remove halogen bulb (high).
7. Turn parking lamp bulb socket counterclockwise and unlock it.
8. Remove parking lamp bulb from its socket.
9. Turn front turn signal lamp bulb socket counterclockwise and unlock it.
10. Remove front turn signal lamp bulb from its socket.
11. Turn front side marker lamp bulb socket counterclockwise and unlock it.
12. Remove front side marker lamp bulb from its socket.

HEADLAMP (FOR USA) - XENON TYPE -

ASSEMBLY

Assemble in reverse order of disassembly. Be careful of the following:

HID control unit mounting screw:




:2.6-3.7 Nm (0.27-0.37 kg-m, 23-32 in-lb)

CAUTION:

- When HID control unit is removed, reinstall it securely and avoid any looseness.
- After installing bulb, be sure to install plastic cap and bulb socket securely to insure watertightness

Servicing to Replace Headlamps When Damaged


If only installation part as shown in the figure is damaged, and headlamp housing itself is not damaged, repair can be completed easily by installing correction brackets.

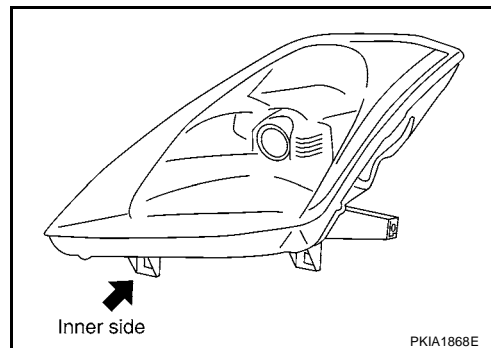

INSTALLATION OF HEADLAMP BRACKET

1. Remove headlamps. Refer to [LT-33, "Removal and Installation"](#).
2. Cut damaged section of installation part, then shape with sandpaper.
3. Attach each correction bracket to headlamp housing boss with 2 screws.

RH headlamp	Inner side	26040 CD000
LH headlamp	Inner side	26090 CD000

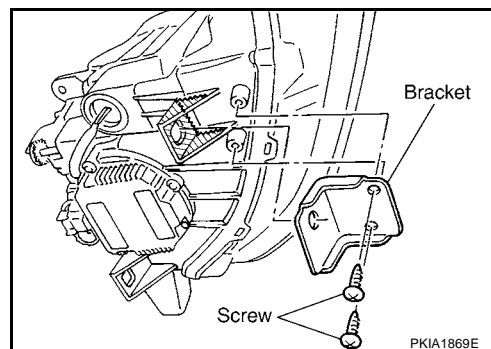


HEADLAMP (FOR USA) - CONVENTIONAL TYPE -

HEADLAMP (FOR USA) - CONVENTIONAL TYPE -

PFP:26010

Component Parts and Harness Connector Location

AKS002T7

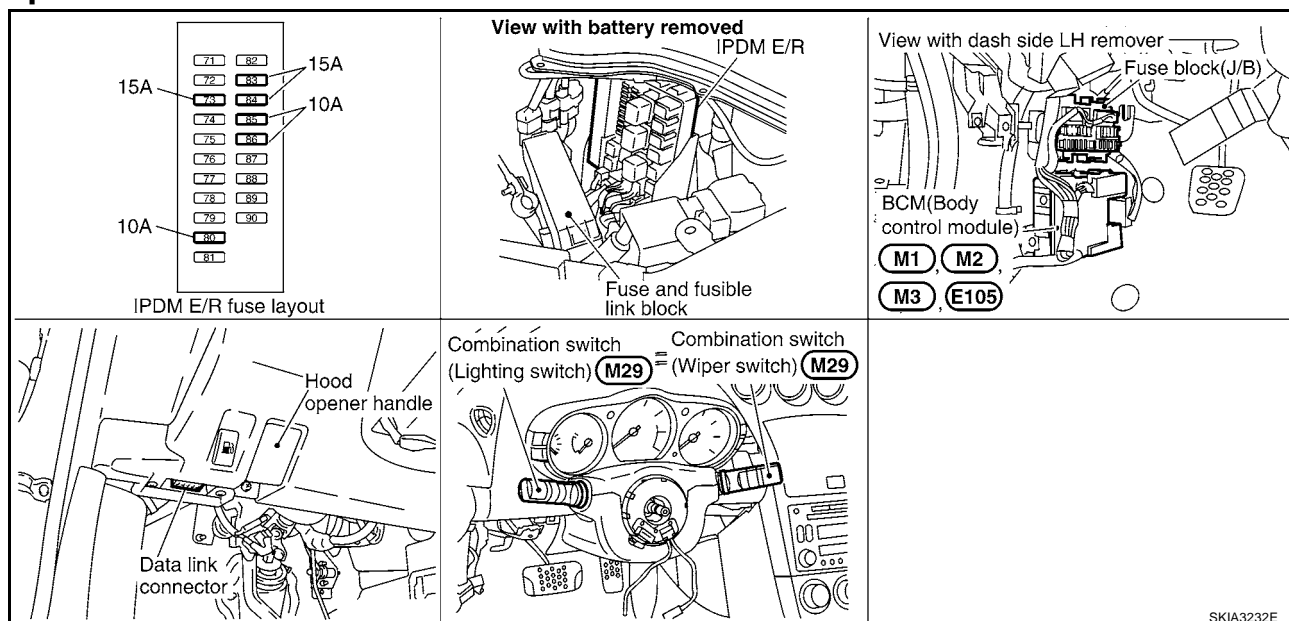

SKIA3232E

System Description

AKS002T8

Control of the headlamp system operation is dependent upon the position of the combination switch (lighting switch). When the lighting switch is placed in the 2ND position, the BCM receives input signal requesting the headlamps (and tail lamps) illuminate. This input signal is communicated to the IPDM E/R (intelligent power distribution module engine room) across the CAN communication lines. The central processing unit of the IPDM E/R controls the headlamp high and headlamp low relay coils. These relays, when energized, direct power to the respective headlamps, which then illuminate.

OUTLINE

Power is supplied at all times

- to headlamp high relay, located in the IPDM E/R (intelligent power distribution module engine room), and
- to headlamp low relay, located in the IPDM E/R (intelligent power distribution module engine room), and
- to BCM (body control module) terminal 7
- through 40A fusible link (letter F, located in the fuse and fusible link box).
- through 15A fuse [No.73 located in IPDM E/R (intelligent power distribution module engine room)].
- to CPU (central processing unit) in the IPDM E/R.

With the ignition switch in the ON or START position, power is supplied

- to BCM (body control module) terminal 35
- through 10A fuse [No. 1, located in the fuse block (J/B)].

With the ignition switch in the ACC or ON position, power is supplied

- to BCM (body control module) terminal 36
- through 10A fuse [No. 6, located in the fuse block (J/B)].
- to CPU (central processing unit) in the IPDM E/R.
- through 10A fuse [no.80, located in IPDM E/R (intelligent power distribution module engine room)].

Ground is supplied

- to BCM (body control module) terminal 8
- through grounds E17, E43, and F152.

HEADLAMP (FOR USA) - CONVENTIONAL TYPE -

Low Beam Operation

With the lighting switch in 2ND position, the BCM (body control module) receives input signal requesting by combination switch reading function (Refer to [LT-159, "Combination Switch Reading Function"](#)) the headlamps to illuminate. This input signal is communicated to the IPDM E/R (intelligent power distribution module engine room) across the CAN communication lines. The CPU (central processing unit) in the IPDM E/R controls the headlamp low relay coil, which when energized, power is supplied.

- through 15A fuse [No. 83, located in the IPDM E/R (intelligent power distribution module engine room)]
- to terminal 6 of headlamp RH, and
- through 15A fuse [No. 84, located in the IPDM E/R (intelligent power distribution module engine room)]
- to terminal 6 of headlamp LH.

Ground is supplied

- to terminal 3 of each headlamp and
- through grounds E17, E43 and F152.

High Beam Operation/Flash-to-Pass Operation

With the lighting switch in 2ND position and placed in HIGH or PASS position, the BCM (body control module) receives input signal requesting the headlamp high beams to illuminate. This input signal is communicated to the IPDM E/R (intelligent power distribution module engine room) across the CAN communication lines. The CPU (central processing unit) in the IPDM E/R controls the headlamp high relay coil, which when energized, directs power

- to 10A fuse [No. 86, located in the IPDM E/R]
- through terminal 24 of the IPDM E/R
- to terminal 2 of headlamp RH, and
- to 10A fuse [No. 85, located in the IPDM E/R]
- through terminal 22 of the IPDM E/R
- to terminal 2 of headlamp LH.

Ground is supplied

- to terminal 3 of headlamp RH
- through grounds E17, E43 and F152, and
- to terminal 3 of headlamp LH
- through grounds E17, E43 and F152.

With power and ground supplied, the high beam headlamps illuminate.

Unified meter and A/C amp receives signal from the BCM across the CAN communication lines, and then combination meter indicator illuminates high beam.

COMBINATION SWITCH READING FUNCTION

Refer to [LT-159, "Combination Switch Reading Function"](#) .

EXTERIOR LAMP BATTERY SAVER CONTROL

When the combination switch (lighting switch) is in the 2ND position (ON), and the ignition switch is turned from ON or ACC to OFF, the battery saver control function is activated.

Under this condition, the headlamps remain illuminated for 5 minutes, then the headlamps are turned off.

Exterior lamp battery saver control mode can be changed by the function setting of CONSULT-II.

VEHICLE SECURITY SYSTEM

The vehicle security system will flash the high beams if the system is triggered. Refer to [BL-90, "VEHICLE SECURITY \(THEFT WARNING\) SYSTEM"](#) .

CAN Communication System Description

AKS003MZ

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

HEADLAMP (FOR USA) - CONVENTIONAL TYPE -

CAN Communication Unit

AKS003N0


Body type	Coupe						
Axle	2WD						
Engine	VQ35DE						
Transmission	A/T	M/T					
Brake control	TCS	ABS		TCS		VDC	
Low tire pressure warning system	Not Applicable	Not Applicable	Applicable	Not Applicable	Applicable	Not Applicable	Applicable
CAN communication unit							
ECM	×	×	×	×	×	×	×
TCM	×						
Data link connector	×	×	×	×	×	×	×
Unified meter and A/C amp.	×	×	×	×	×	×	×
BCM	×	×	×	×	×	×	×
Low tire pressure warning control unit			×		×		×
Steering angle sensor						×	×
ABS actuator and electric unit (control unit)	×	×	×	×	×		
VDC/TCS/ABS control unit						×	×
IPDM E/R	×	×	×	×	×	×	×
CAN communication type	LAN-7, "TYPE 1"	LAN-8, "TYPE 2/ TYPE3"		LAN-10, "TYPE 4/ TYPE5"		LAN-12, "TYPE 6/ TYPE7"	

×: Applicable

TYPE 1

System diagram

- Type1

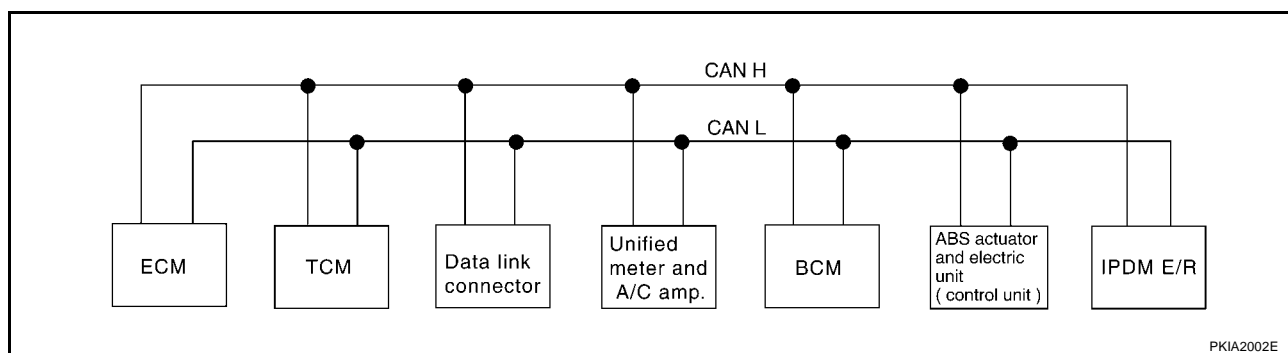

Input/output signal chart

T: Transmit R: Receive

Signals	ECM	TCM	Unified meter and A/C amp.	BCM	ABS actuator and electric unit (control unit)	IPDM E/R
Engine speed signal	T	R	R		R	
Engine torque signal	T	R				
Engine coolant temperature signal	T	R	R			
Accelerator pedal position signal	T	R			R	
Closed throttle position signal	T	R				
Wide open throttle position signal	T	R				

HEADLAMP (FOR USA) - CONVENTIONAL TYPE -

Signals	ECM	TCM	Unified meter and A/C amp.	BCM	ABS actuator and electric unit (control unit)	IPDM E/R	A
Battery voltage signal	T	R					B
Stop lamp switch signal		R	T				C
Fuel consumption monitor signal	T		R				D
A/T self-diagnosis signal	R	T					E
A/T CHECK indicator lamp signal		T	R				F
A/T position indicator signal		T	R		R		G
ABS operation signal		R			T		H
A/T shift schedule change demand signal		R			T		I
Air conditioner switch signal	R			T			J
A/C compressor request signal	T					R	LT
A/C compressor feedback signal	T		R				L
Blower fan motor switch signal	R			T			M
Cooling fan speed request signal	T					R	
Position lights request signal			R	T		R	
Low beam request signal				T		R	
Low beam status signal	R					T	
High beam request signal			R	T		R	
High beam status signal	R					T	
Vehicle speed signal			R		T		
	R	R	T	R			
Sleep request 1 signal			R	T			
Sleep request 2 signal				T		R	
Wake up request 1 signal			R	T			
Door switch signal			R	T		R	
Turn indicator signal			R	T			
Seat belt buckle switch signal			T	R			
Buzzer output signal			R	T			
Fuel level sensor signal	R		T				
Malfunction indicator lamp signal	T		R				
ASCD SET lamp signal	T		R				
ASCD operation signal	T	R					
ASCD CRUISE lamp signal	T		R				
Overdrive cancel signal	T	R					
Output shaft revolution signal	R	T					
Turbine revolution signal	R	T					
Front wiper request signal				T		R	
Front wiper stop position signal				R		T	
Rear window defogger switch signal				T		R	
Rear window defogger control sig- nal	R					T	
Manual mode signal		R	T				
Not manual mode signal		R	T				


HEADLAMP (FOR USA) - CONVENTIONAL TYPE -

Signals	ECM	TCM	Unified meter and A/C amp.	BCM	ABS actuator and electric unit (control unit)	IPDM E/R
Manual mode shift up signal		R	T			
Manual mode shift down signal		R	T			
Manual mode indicator signal		T	R			
Hood switch signal				R		T
Theft warning horn request signal				T		R
Horn chirp signal				T		R
ABS warning lamp signal			R		T	
TCS OFF indicator lamp signal			R		T	
SLIP indicator lamp signal			R		T	
Brake (EBD) warning lamp signal			R		T	


TYPE 2/TYPE3

System diagram

- Type2

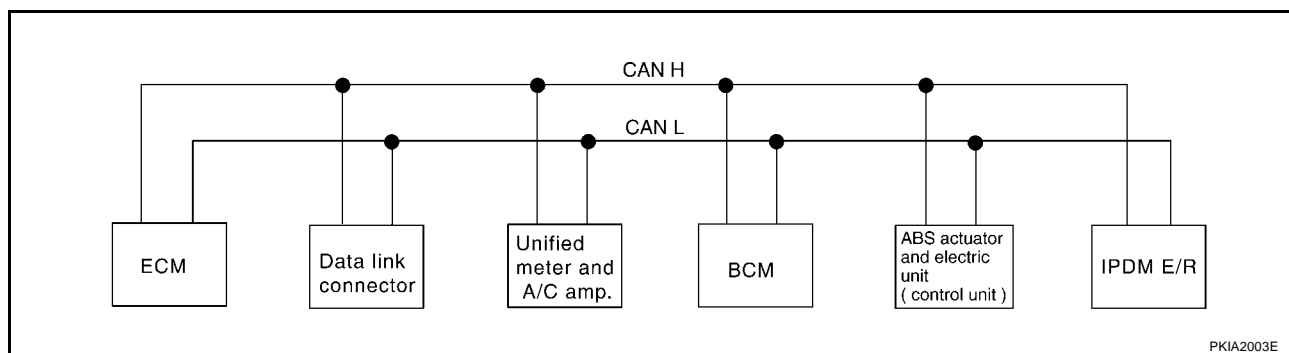

- Type3

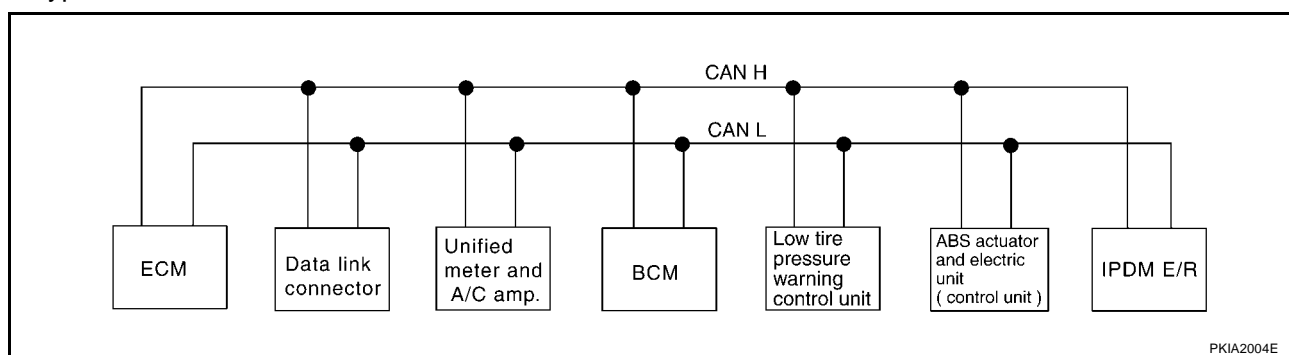

Input/output signal chart

T: Transmit R: Receive

Signals	ECM	Unified meter and A/C amp.	BCM	Low tire pressure warning control unit	ABS actuator and electric unit (control unit)	IPDM E/R
Engine speed signal	T	R			R	
Engine coolant temperature signal	T	R				
Accelerator pedal position signal	T				R	
Fuel consumption monitor signal	T	R				
Air conditioner switch signal	R		T			
A/C compressor request signal	T					R

HEADLAMP (FOR USA) - CONVENTIONAL TYPE -


Signals	ECM	Unified meter and A/C amp.	BCM	Low tire pressure warning control unit	ABS actuator and electric unit (control unit)	IPDM E/R	A
A/C compressor feedback signal	T	R					B
Blower fan motor switch signal	R		T				
Cooling fan speed request signal	T					R	C
Position lights request signal			R	T		R	
Low beam request signal			T			R	
Low beam status signal	R					T	D
High beam request signal		R	T			R	
High beam status signal	R					T	
Vehicle speed signal		R			T		E
	R	T	R	R			
Sleep request 1 signal		R	T				F
Sleep request 2 signal			T			R	
Wake up request 1 signal		R	T				
Door switch signal		R	T			R	G
Turn indicator signal		R	T				
Seat belt buckle switch signal		T	R				H
Buzzer output signal		R	T				
Fuel level sensor signal	R	T					
Malfunction indicator lamp signal	T	R					I
ASCD SET lamp signal	T	R					
ASCD CRUISE lamp signal	T	R					
Front wiper request signal			T			R	J
Front wiper stop position signal			R			T	
Rear window defogger switch signal			T			R	LT
Rear window defogger control signal	R					T	
Hood switch signal			R			T	L
Theft warning horn request signal			T			R	
Horn chirp signal			T			R	
Tire pressure signal		R		T			M
ABS warning lamp signal		R			T		
Brake (EBD) warning lamp signal		R			T		

HEADLAMP (FOR USA) - CONVENTIONAL TYPE -


TYPE 4/TYPE5

System diagram

- Type4

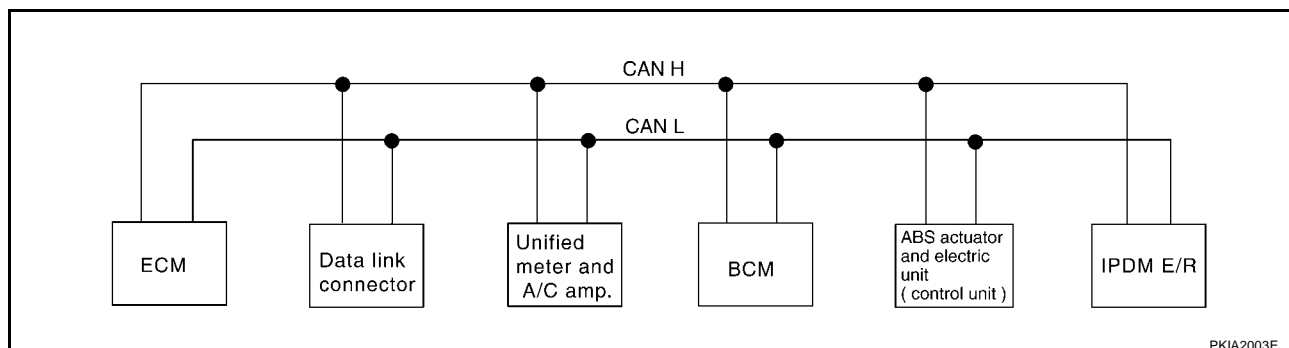

- Type5

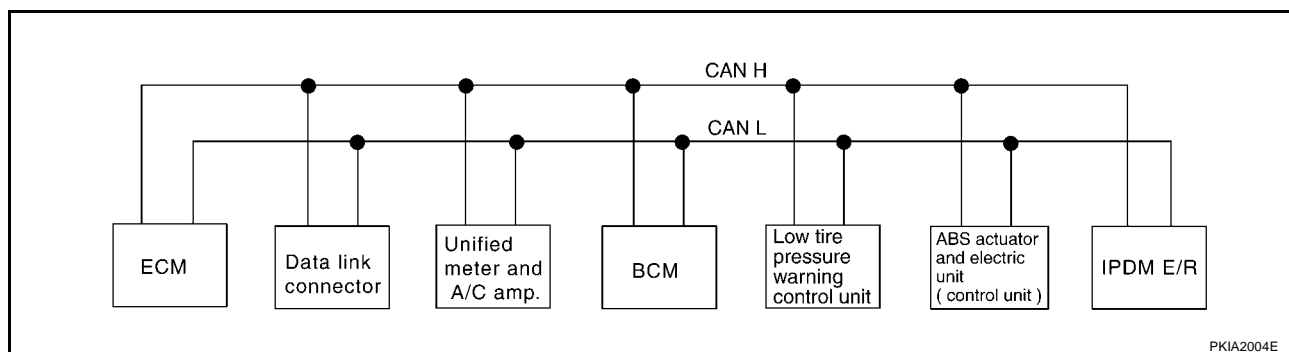

Input/output signal chart

T: Transmit R: Receive

Signals	ECM	Unified meter and A/C amp.	BCM	Low tire pressure warning control unit	ABS actuator and electric unit (control unit)	IPDM E/R
Engine speed signal	T	R			R	
Engine coolant temperature signal	T	R				
Accelerator pedal position signal	T				R	
Fuel consumption monitor signal	T	R				
Air conditioner switch signal	R		T			
A/C compressor request signal	T					R
A/C compressor feedback signal	T	R				
Blower fan motor switch signal	R		T			
Cooling fan speed request signal	T					R
Position lights request signal		R	T			R
Low beam request signal			T			R
Low beam status signal	R					T
High beam request signal		R	T			R
High beam status signal	R					T
Vehicle speed signal		R			T	
	R	T	R	R		
Sleep request 1 signal		R	T			
Sleep request 2 signal			T			R
Wake up request 1 signal		R	T			


HEADLAMP (FOR USA) - CONVENTIONAL TYPE -

Signals	ECM	Unified meter and A/C amp.	BCM	Low tire pressure warning control unit	ABS actuator and electric unit (control unit)	IPDM E/R
Door switch signal		R	T			R
Turn indicator signal		R	T			
Seat belt buckle switch signal		T	R			
Buzzer output signal		R	T			
Fuel level sensor signal	R	T				
Malfunction indicator lamp signal	T	R				
ASCD SET lamp signal	T	R				
ASCD CRUISE lamp signal	T	R				
Front wiper request signal			T			R
Front wiper stop position signal			R			T
Rear window defogger switch signal			T			R
Rear window defogger control signal	R					T
Hood switch signal			R			T
Theft warning horn request signal			T			R
Horn chirp signal			T			R
Tire pressure signal		R		T		
ABS warning lamp signal		R			T	
TCS OFF indicator lamp signal		R			T	
SLIP indicator lamp signal		R			T	
Brake (EBD) warning lamp signal		R			T	


TYPE 6/TYPE7

System diagram

- Type6

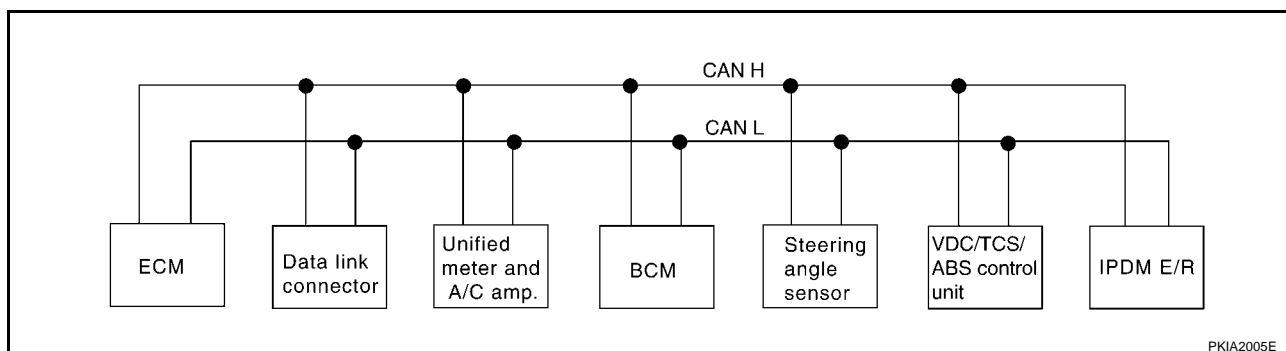

- Type7

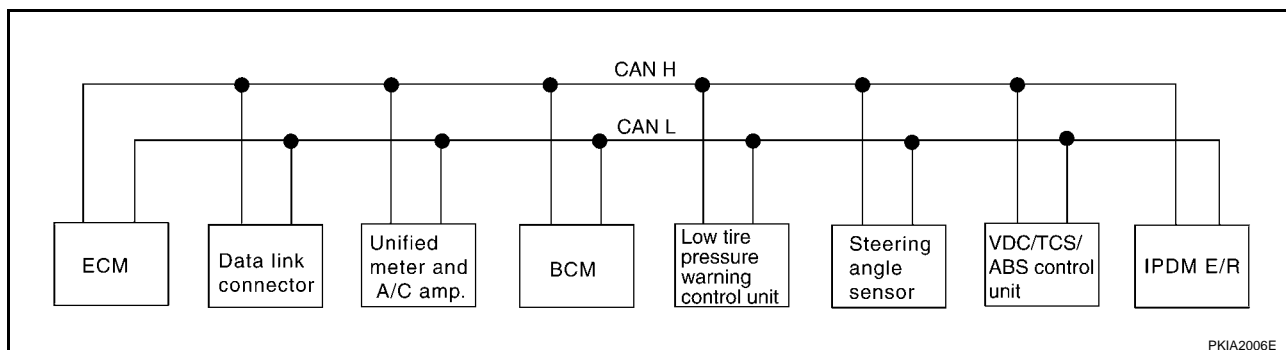

HEADLAMP (FOR USA) - CONVENTIONAL TYPE -

Input/output signal chart

T: Transmit R: Receive


Signals	ECM	Unified meter and A/C amp.	BCM	Low tire pressure warning control unit	Steering angle sensor	VDC/TCS/ABS control unit	IPDM E/R
Engine speed signal	T	R				R	
Engine coolant temperature signal	T	R					
Accelerator pedal position signal	T					R	
Fuel consumption monitor signal	T	R					
Air conditioner switch signal	R		T				
A/C compressor request signal	T						R
A/C compressor feedback signal	T	R					
Blower fan motor switch signal	R		T				
Cooling fan speed request signal	T						R
Position lights request signal		R	T				R
Low beam request signal			T				R
Low beam status signal	R						T
High beam request signal		R	T				R
High beam status signal	R						T
Vehicle speed signal		R				T	
	R	T	R	R			
Sleep request 1 signal		R	T				
Sleep request 2 signal			T				R
Wake up request 1 signal		R	T				
Door switch signal		R	T				R
Turn indicator signal		R	T				
Seat belt buckle switch signal		T	R				
Buzzer output signal		R	T				
Fuel level sensor signal	R	T					
Malfunction indicator signal	T	R					
ASCD SET lamp signal	T	R					
ASCD CRUISE lamp signal	T	R					
Front wiper request signal			T				R
Front wiper stop position signal			R				T
Rear window defogger switch signal			T				R
Rear window defogger control signal	R						T
Hood switch signal			R				T
Theft warning horn request signal			T				R
Horn chirp signal			T				R
Steering angle sensor signal					T	R	
Tire pressure signal		R		T			
ABS warning lamp signal		R				T	
VDC OFF indicator lamp signal		R				T	
SLIP indicator lamp signal		R				T	
Brake (EBD) warning lamp signal		R				T	

HEADLAMP (FOR USA) - CONVENTIONAL TYPE -

Schematic

AKS002TB

A
B
C
D
E
F
G
H
I
J
LT
L
M

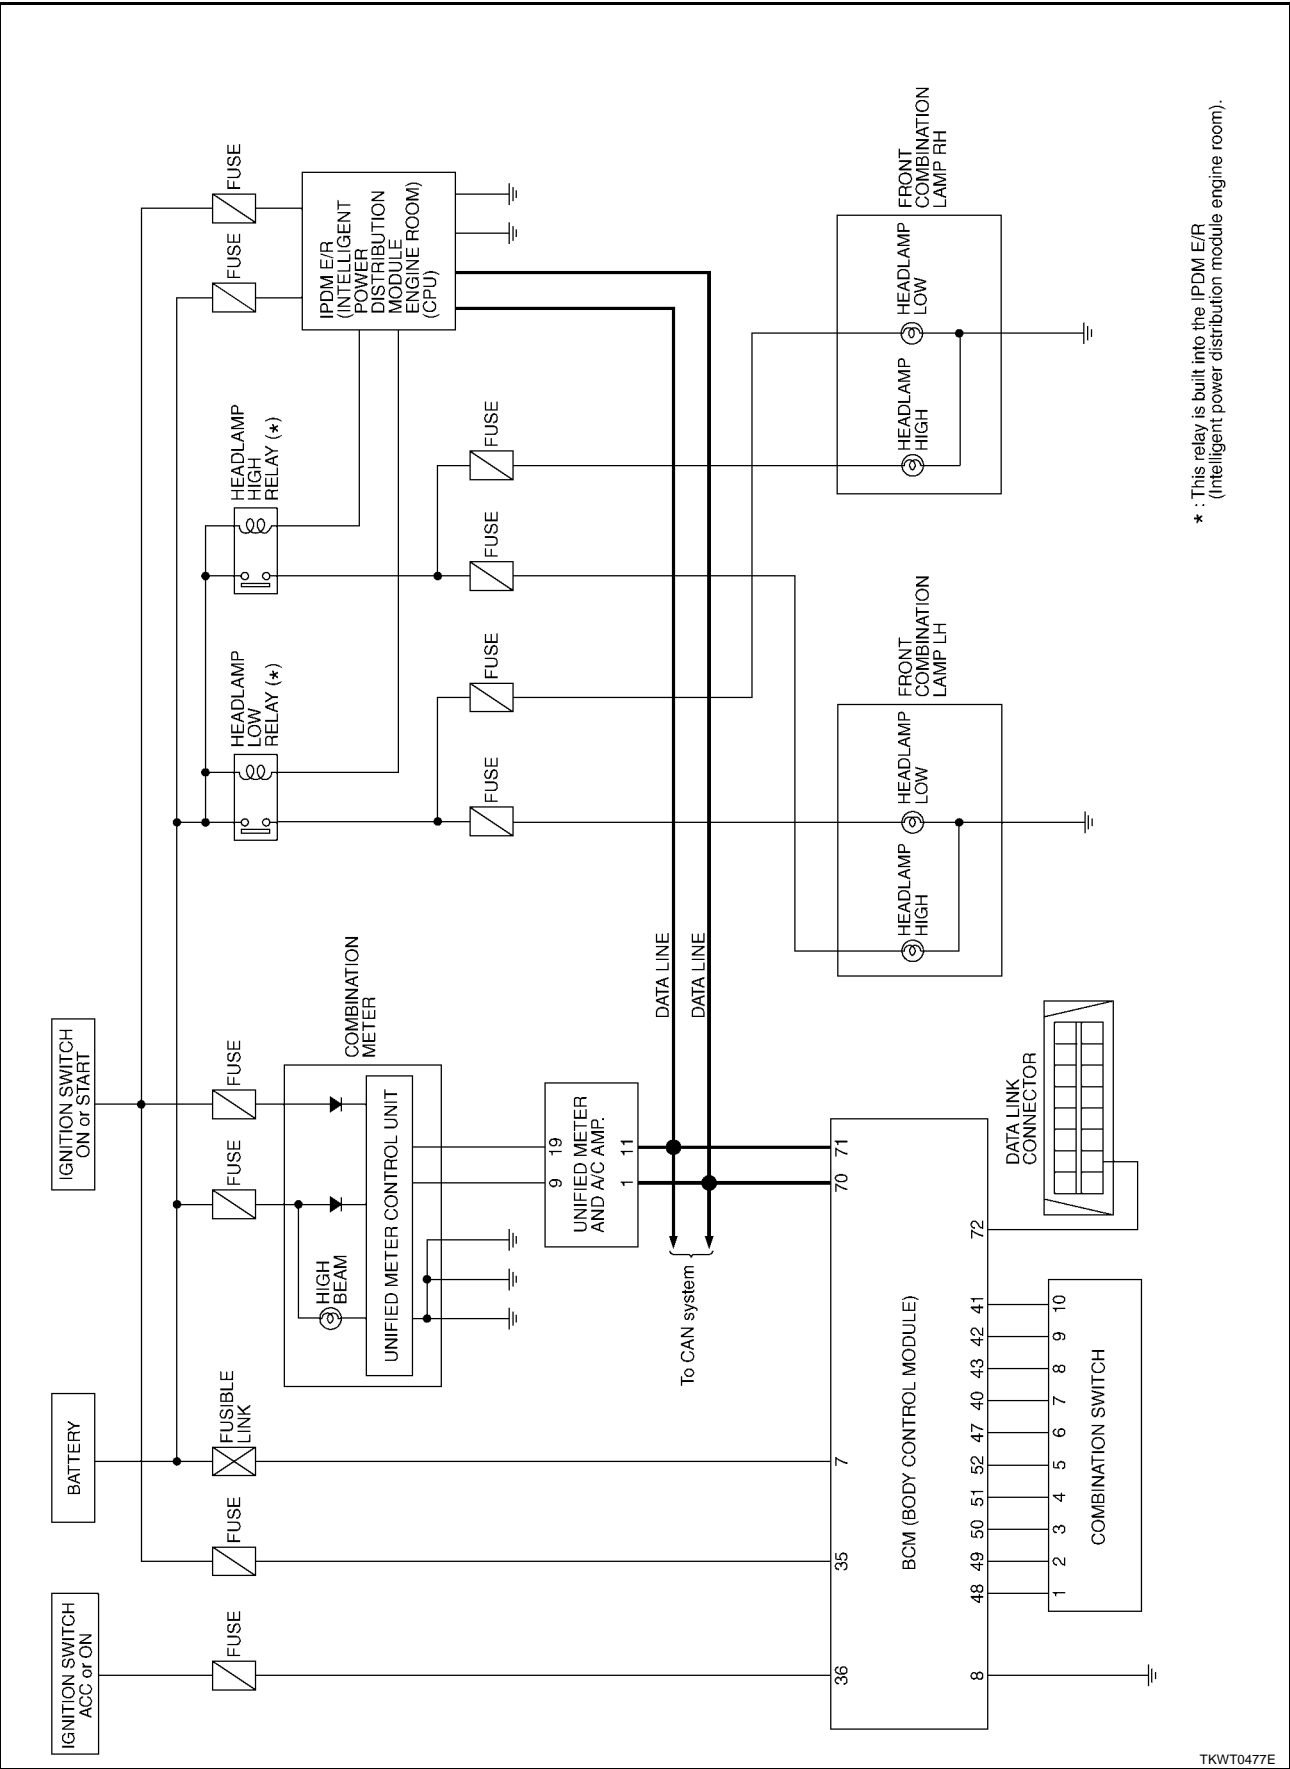

TKW0477E




HEADLAMP (FOR USA) - CONVENTIONAL TYPE -

Wiring Diagram — H/LAMP —

AKS0027C

LT-H/LAMP-05

DATA LINE

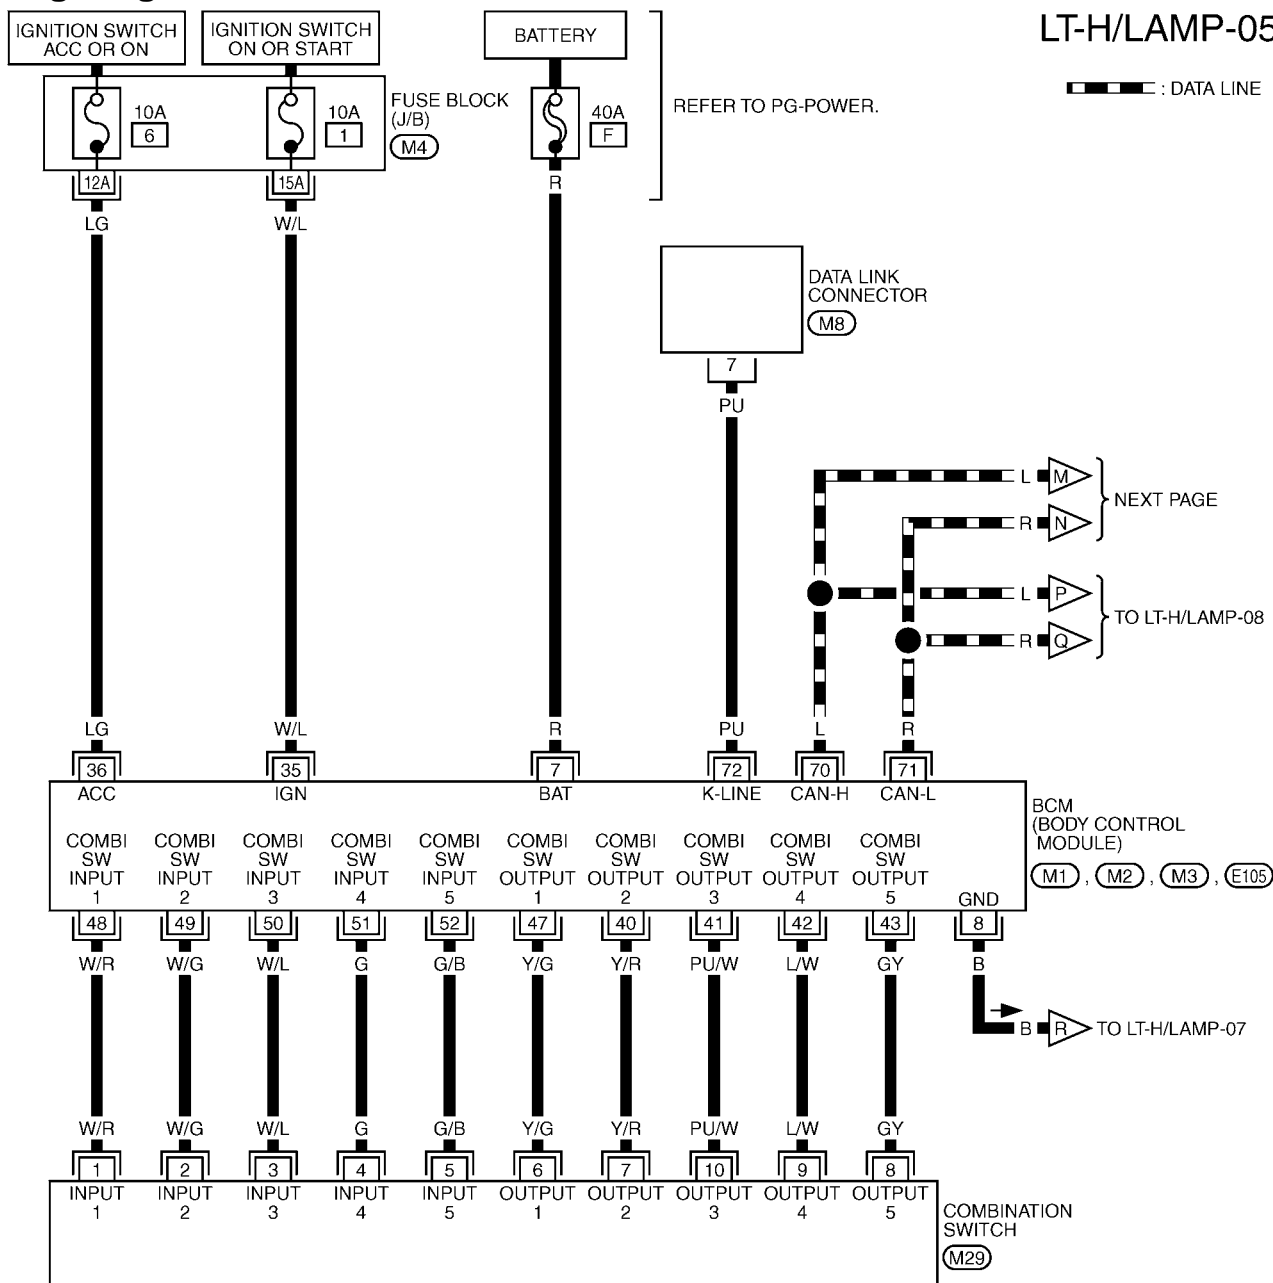

REFER TO THE FOLLOWING.



(M4) - FUSE BLOCK-JUNCTION BOX (J/B)

(M1), (M2), (M3), (E105) - ELECTRICAL UNITS

TKWT0430E

HEADLAMP (FOR USA) - CONVENTIONAL TYPE -

LT-H/LAMP-06


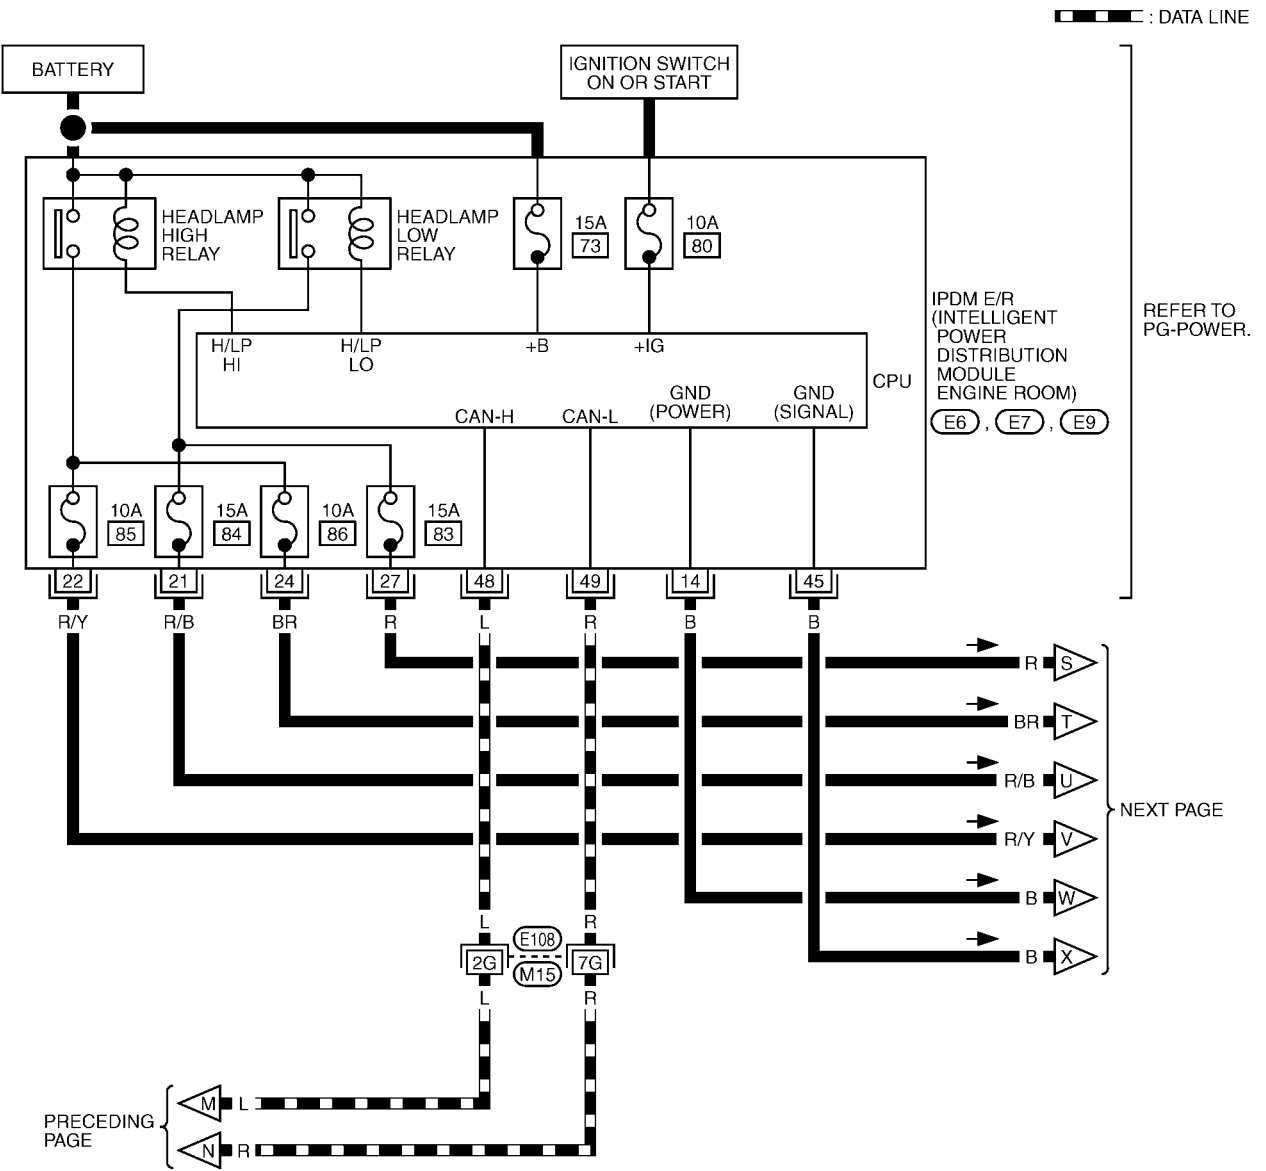


REFER TO THE FOLLOWING.

(E108) -SUPER MULTIPLE JUNCTION (SMJ)

HEADLAMP (FOR USA) - CONVENTIONAL TYPE -




LT-H/LAMP-07

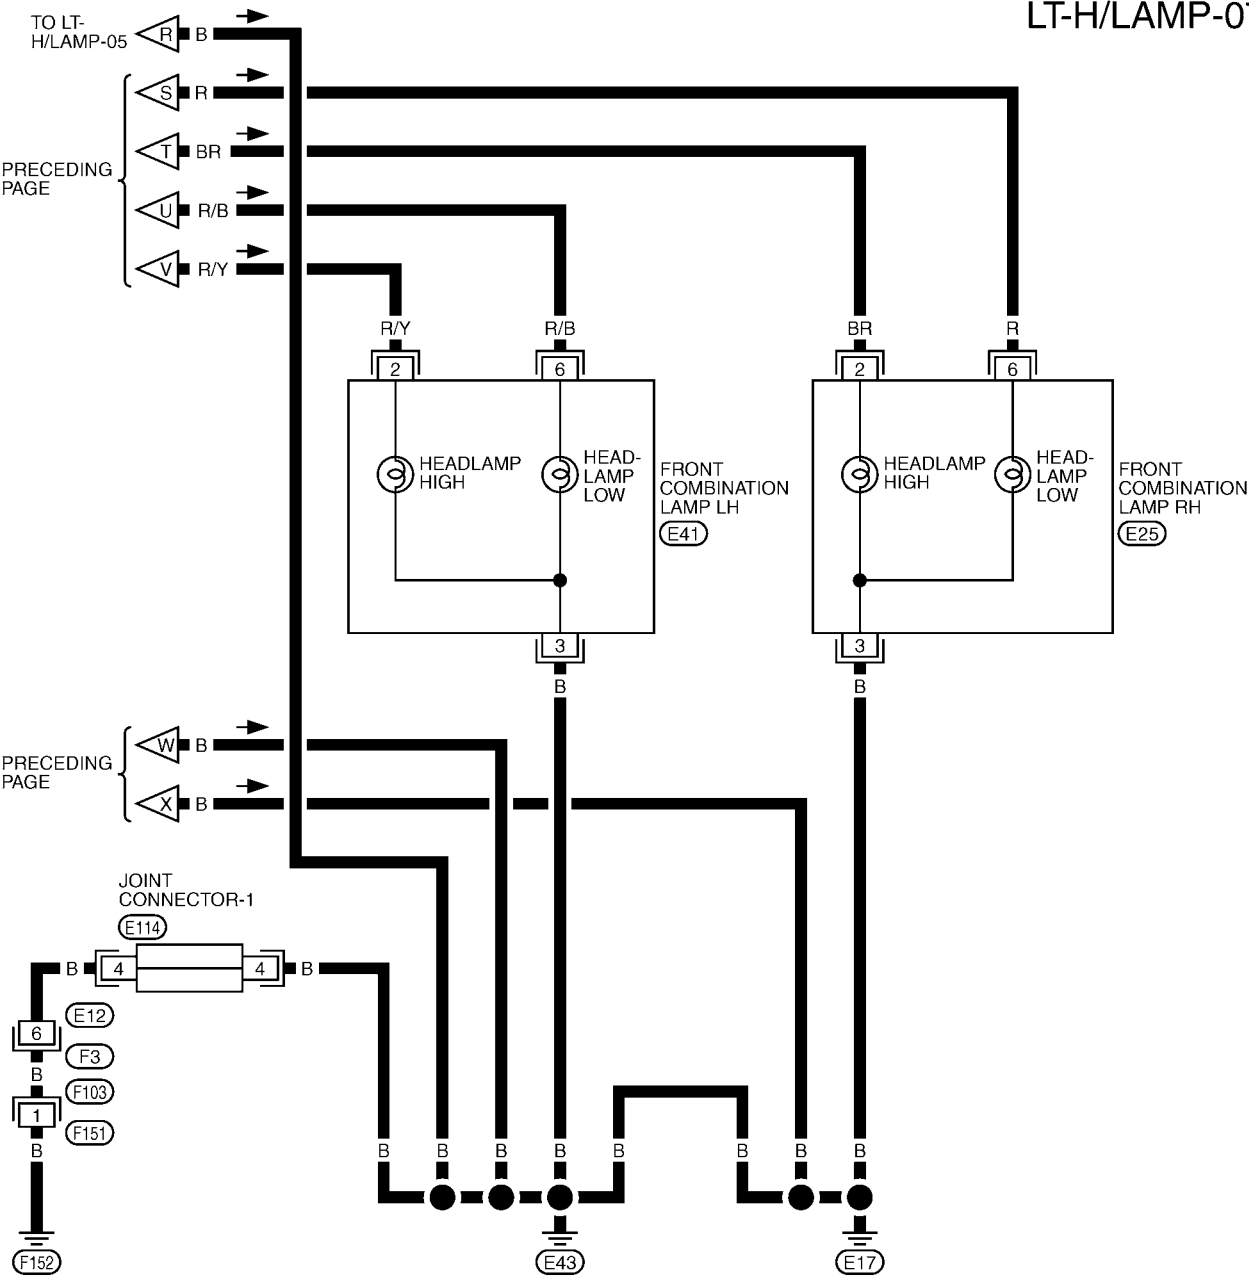

HEADLAMP (FOR USA) - CONVENTIONAL TYPE -

LT-H/LAMP-08

 : DATA LINE

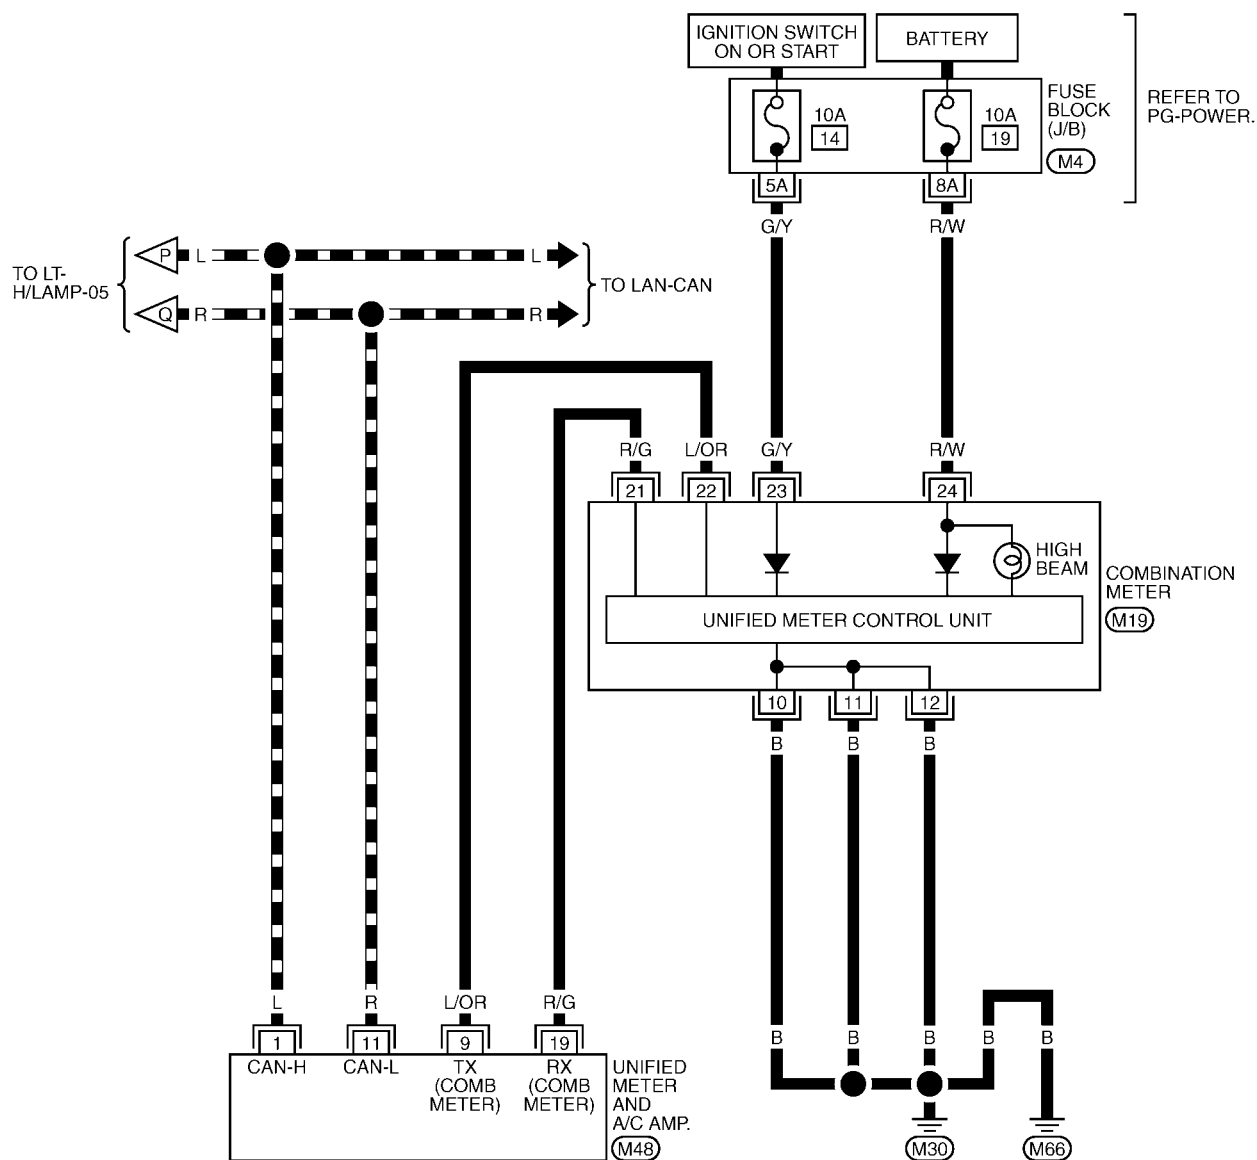


REFER TO THE FOLLOWING.

M4 -FUSE BLOCK-JUNCTION
BOX (J/B)

HEADLAMP (FOR USA) - CONVENTIONAL TYPE -

Terminals and Reference Value for BCM

AKS002TD

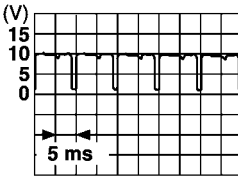Terminal No.	Wire color	Item	Measuring condition		Reference value
			Ignition switch	Operation or condition	
7	R	Battery power supply	OFF	—	Battery voltage
8	B	Ground	ON	—	Approx. 0
35	W/L	Ignition switch (ON)	ON	—	Battery voltage
36	LG	Ignition switch (ACC)	ACC	—	Battery voltage
40	Y/R	Combination switch output 2	ON	Lighting, turn, wiper OFF	
41	PU/W	Combination switch output 3			
42	L/W	Combination switch output 4			
43	GY	Combination switch output 5			
47	Y/G	Combination switch output 1			
48	W/R	Combination switch input 1	ON	Lighting, turn, wiper OFF	4.5V or more
49	W/G	Combination switch input 2			
50	W/L	Combination switch input 3			
51	G	Combination switch input 4			
52	G/B	Combination switch input 5			
70	L	CAN-H	—	—	—
71	R	CAN-L	—	—	—
72	PU	K-LINE	—	—	—

SKIA1119J

How to Proceed With Trouble Diagnosis

AKS002TE

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-36, "System Description"](#).
3. Carry out the Preliminary Check. Refer to [LT-51, "Preliminary Check"](#).
4. Check symptom and repair or replace the cause of malfunction.
5. Does the headlamp operate normally? If YES: GO TO 6. If NO: GO TO 4.
6. Inspection end.

HEADLAMP (FOR USA) - CONVENTIONAL TYPE -

Preliminary Check

INSPECTION FOR POWER SUPPLY AND GROUND CIRCUIT

AKS002TF

1. CHECK FUSES

- Check for blown fuses.

UNIT	POWER SOURCE	FUSE No.
BCM	Battery	F
	Ignition switch ON or START position	1
	Ignition switch ACC or ON position	6
IPDM E/R	Battery	83
		84
		85
		86

Refer to [LT-46, "Wiring Diagram — H/LAMP —"](#) .

OK or NG

OK >> GO TO 2.

NG >> If fuse is blown, be sure to eliminate cause of malfunction before installing new fuse. Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#) .

2. POWER SUPPLY CIRCUIT CHECK FOR BCM

- Disconnect BCM connector.
- Check voltage between BCM harness connector and ground.

Terminals		Ignition switch position		
(+) (Wire color)		(-)		
Connector	Terminal (Wire color)	OFF	ACC	ON
E105	7 (R)	Battery voltage	Battery voltage	Battery voltage
M1	35 (W/L)	0V	0V	Battery voltage
M1	36 (LG)	0V	Battery voltage	Battery voltage

OK or NG

OK >> GO TO 3.

NG >> Check harness for open or short between BCM and fuse.

3. GROUND CIRCUIT CHECK FOR BCM



Check continuity between BCM harness connector and ground.

Terminals			Continuity
(+)		(-)	
Connector	Terminal (wire color)		
E105	8 (B)	Ground	Yes

OK or NG

OK >> INSPECTION END.

NG >> Check harness ground circuit.

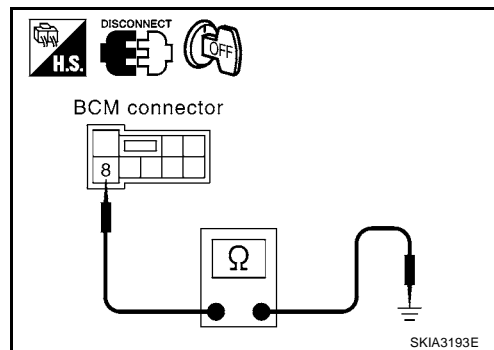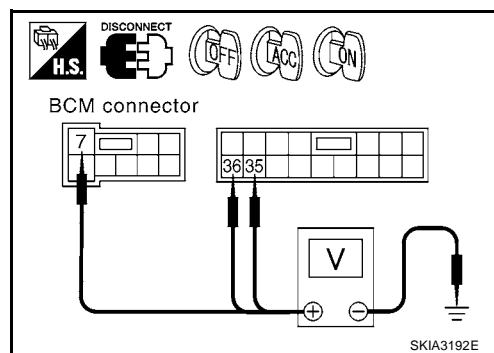

HEADLAMP (FOR USA) - CONVENTIONAL TYPE -

CONSULT-II Function

AKS002TG

- CONSULT-II executes the following functions by combining data reception and command transmission via the communication line from BCM. Work support, self-diagnosis, data monitor, and active test display.


BCM diagnosis part	Check item, diagnosis mode	Description
HEAD LAMP	Work support	Changes the setting for each function.
	Data monitor	Displays BCM input data in real time.
	Active test	Operation of electrical loads can be checked by sending drive signal to them.
BCM C/U	Self-diagnosis	BCM performs self-diagnosis of CAN communication and combination switch.

CONSULT-II BASIC OPERATION


CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carry out CAN communication.


- With the ignition switch OFF, connect CONSULT-II and CONSULT-II CONVERTER to the data link connector, then turn ignition switch ON.

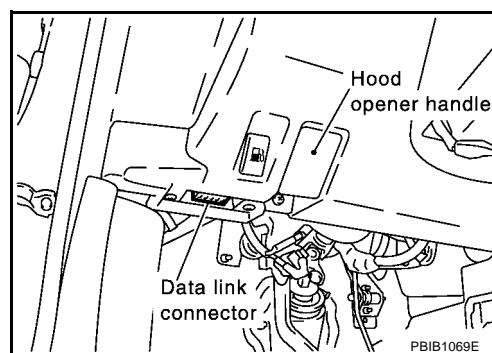

- Touch "START(NISSAN BASED VHCL)".

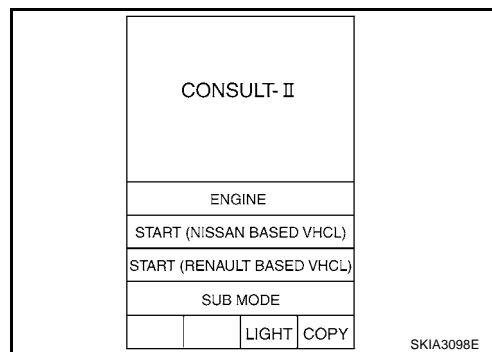


- Touch "BCM" on "SELECT SYSTEM" screen. If "BCM" is not indicated, go to [GI-40, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#).

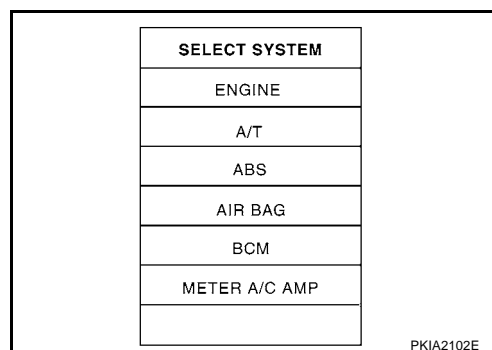

HEADLAMP (FOR USA) - CONVENTIONAL TYPE -

4. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.

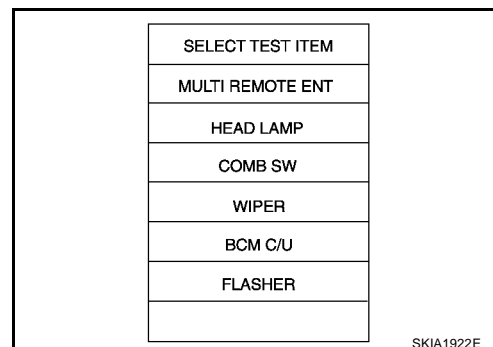

WORK SUPPORT

Operation Procedure

1. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.
2. Touch "WORK SUPPORT" on "SELECT DIAG MODE" screen.
3. Touch "BATTERY SAVER SET" on "SELECT WORK ITEM" screen.
4. Touch "START".
5. Touch "CHANGE SET".
6. The setting will be changed and "CUSTOMIZING COMPLETED" will be displayed.
7. Touch "END".

Display Item List

Item	Description	CONSULT-II	Factory setting
BATTERY SAVER SET	Exterior lamp battery saver control mode can be changed in this mode. Selects exterior lamp battery saver control mode between two ON/OFF.	ON	○
		OFF	—

DATA MONITOR

Operation Procedure

1. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.
2. Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.
3. Touch either "ALL SIGNALS" or "SELECTION FROM MENU" on the "DATA MONITOR" screen.

All signals	Monitors all the signals.
Selection from menu	Selects and monitors individual signal.

4. Touch "START".
5. When "SELECTION FROM MENU" is selected, touch individual items to be monitored. When "ALL SIGNALS" is selected, all the items will be monitored.
6. Touch "RECORD" while monitoring, then the status of the monitored item can be recorded. To stop recording, touch "STOP".

Display Item List

Monitor item		Contents
IGN ON SW	"ON/OFF"	Displays "IGN position (ON)/OFF, ACC position (OFF)" judged from the ignition switch signal.
ACC ON SW	"ON/OFF"	Displays "ACC (ON)/OFF, Ignition OFF (OFF)" status judged from ignition switch signal.
AUTO LIGHT SW ^{Note}	"OFF"	—
TAIL LAMP SW	"ON/OFF"	Displays status (lighting switch 1st or 2nd position: ON/Others: OFF) of lighting switch judged from lighting switch signal.
HEAD LAMP SW	"ON/OFF"	Displays status (headlamp switch: ON/Others: OFF) of headlamp switch judged from lighting switch signal.
HI BEAM SW	"ON/OFF"	Displays status (high beam switch: ON/Others: OFF) of high beam switch judged from lighting switch signal.

HEADLAMP (FOR USA) - CONVENTIONAL TYPE -

Monitor item		Contents
PASSING SW	"ON/OFF"	Displays status (flash-to-pass switch: ON/Others: OFF) of flash-to-pass switch judged from lighting switch signal.
FR FOG SW ^{Note}	"OFF"	—
DOOR SW - DR	"ON/OFF"	Displays status of the driver door as judged from the driver door switch signal. (Door is open: ON/Door is closed: OFF)
DOOR SW - AS	"ON/OFF"	Displays status of the passenger door as judged from the passenger door switch signal. (Door is open: ON/Door is closed: OFF)
DOOR SW - RR ^{Note}	"OFF"	—
HEAD LAMP SW 2	"ON/OFF"	Displays status (headlamp switch 2: ON/Others: OFF) of headlamp switch 2 judged from lighting switch signal.
OPTICAL SENSOR	[0V]	Display always indicates "0.00V"

NOTE:

This item is displayed, but cannot monitor it.

ACTIVE TEST

Operation Procedure

1. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.
2. Touch "ACTIVE TEST" on "SELECT DIAG MODE" screen.
3. Touch item to be tested and check operation of the selected item.
4. During the operation check, touching "BACK" deactivates the operation.

Display Item List

Test item	Description
TAIL LAMP	Allows tail lamp relay to operate by switching ON-OFF.
HEAD LAMP (LOW)	Allows headlamp relay to operate by switching ON-OFF.
HEAD LAMP (HI)	Allows headlamp relay to operate by switching ON-OFF.
FR FOG LAMP ^{Note}	—

NOTE:

This item is displayed, but cannot test it.

SELF-DIAGNOSTIC RESULTS

Operation Procedure

1. Touch "BCM C/U" on "SELECT ITEM" screen.
2. Touch "SELF-DIAG RESULTS" on "SELECT DIAG MODE" screen.
3. Self-diagnostic results are displayed.

Display Item List

Items to be displayed	CONSULT-II display	Description
CAN communication	CAN communication [U1000]	Malfunction is detected in CAN communication.
CAN communication system	CAN communication system 1 to 6 [U1000]	Malfunction is detected in CAN system.
Combination switch	Diagnosis 1 - 5 systems open circuit	Malfunction is detected in combination switch system.

HEADLAMP (FOR USA) - CONVENTIONAL TYPE -

Headlamp High Beam Does Not Illuminate (Both Sides)

AKS002TH

1. HEADLAMP AUTO ACTIVE TEST

1. Start auto active test. Refer to [PG-24, "Auto Active Test"](#).
2. Check whether headlamp HI operates.

OK or NG

- OK >> GO TO 4.
NG >> GO TO 2.

2. HEADLAMPS CIRCUIT CHECK

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector and front combination lamp LH or RH connector.
3. Check continuity between IPDM E/R harness connector E7 terminal 24(BR) and front combination lamp RH harness connector E25 terminal 2(BR).

Continuity should exist

4. Check continuity between IPDM E/R harness connector E7 terminal 22(R/Y) and front combination lamp LH harness connector E41 terminal 2(R/Y).

Continuity should exist

OK or NG

- OK >> GO TO 3.
NG >> Repair harness or connector.



3. HEADLAMP INPUT SIGNAL CHECK

1. Connect IPDM E/R connector.
2. Start auto active test. Refer to [PG-24, "Auto Active Test"](#). When headlamp HI is operating, check voltage between front combination lamp LH or RH and ground.

Terminals				Voltage
(+) Terminal			(-)	
Connector		Terminal (wire color)		
RH	E25	2 (BR)	Ground	Battery voltage
LH	E41	2 (R/Y)		

OK or NG

- OK >> Check headlamp bulbs.
NG >> Replace IPDM E/R.

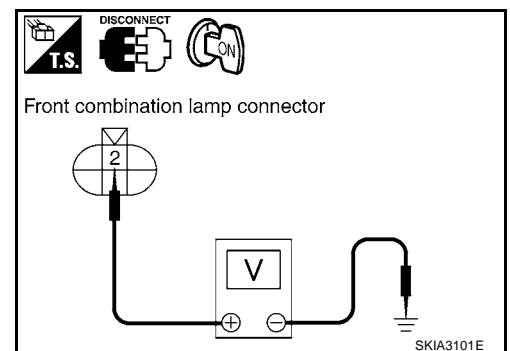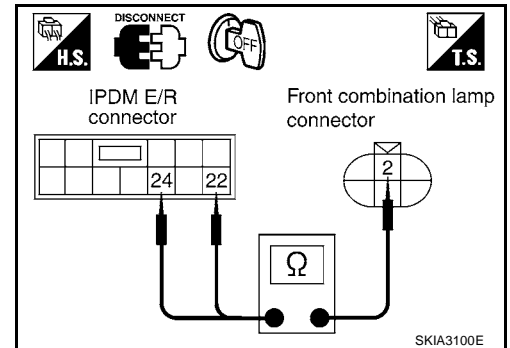

HEADLAMP (FOR USA) - CONVENTIONAL TYPE -

4. COMBINATION SWITCH CIRCUIT CHECK

Select BCM on CONSULT-II. Carry out "BCM C/U" self-diagnosis.

Displayed results of self-diagnosis

No malfunction detected>> GO TO 5.

CAN communications or CAN system>> Inspect the BCM CAN communications system. Refer to [BCS-18, "CAN Communication Inspection Using CONSULT-II \(Self-Diagnosis\)"](#).

OPEN DETECT 1 - 5>> Combination switch system malfunction. Refer to [LT-164, "Combination Switch Inspection According to Self-Diagnostic Results"](#).

SELF-DIAG RESULTS	
DTC RESULTS	TIME
NO DTC IS DETECTED. FURTHER TESTING MAY BE REQUIRED	

LKIA0073E

5. COMBINATION SWITCH INPUT SIGNAL CHECK

Select BCM on CONSULT-II. With "HEADLAMP" data monitor, check that "HI BEAM SW" turns ON-OFF linked with operation of lighting switch.

OK or NG

OK >> Replace BCM.

NG >> Replace lighting switch.

DATA MONITOR	
MONITOR	
IGN ON SW	ON
ACC ON SW	ON
AUTO LIGHT SW	OFF
TAIL LAMP SW	OFF
HEAD LAMP SW	OFF
HI BEAM SW	OFF
PASSING SW	OFF
FR FOG SW	OFF
DOOR SW-DR	OFF

LKIA0074E

Headlamp High Beam Does Not Illuminate (One Side)

AKS0027I

1. CHECK BULB

Inspect bulbs of lamps which do not illuminate.

OK or NG

OK >> GO TO 2.

NG >> Replace headlamp bulb.

2. HEAD LAMP LH OR RH CIRCUIT CHECK

1. Disconnect IPDM E/R connector and front combination lamp LH or RH connector.
2. Check continuity between IPDM E/R harness connector E7 terminal 24(BR) and front combination lamp RH harness connector E25 terminal 2(BR).

Continuity should exist


3. Check continuity between IPDM E/R harness connector E7 terminal 22(R/Y) and front combination lamp LH harness connector E41 terminal 2(R/Y).

Continuity should exist

OK or NG

OK >> Replace IPDM E/R.

NG >> Repair harness or connector.

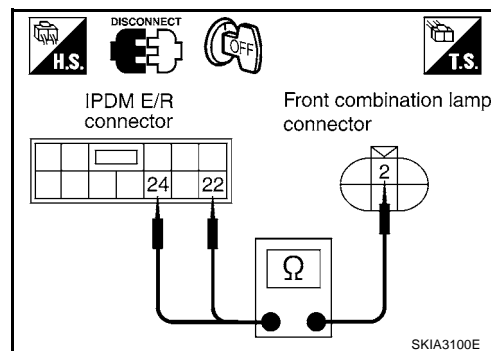

HEADLAMP (FOR USA) - CONVENTIONAL TYPE -

High-Beam Indicator Lamp Does Not Illuminate

AKS002TJ

1. CHECK BULB

Inspect bulb of high-beam indicator lamp.

OK or NG

- OK >> Replace combination meter.
NG >> Replace indicator bulb.

Headlamp Low Beam Does Not Illuminate (Both Sides)

AKS002TK

1. INSPECTION 1 BETWEEN IPDM E/R AND HEADLAMPS

1. Start auto active test. Refer to [PG-24, "Auto Active Test"](#).
2. Check whether headlamp LO operates.

OK or NG

- OK >> GO TO 4.
NG >> GO TO 2.

2. HEADLAMPS CIRCUIT CHECK

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector and front combination lamp LH or RH connector.
3. Check continuity between IPDM E/R harness connector E7 terminal 27(R) and front combination lamp RH harness connector E25 terminal 6(R).

Continuity should exist

4. Check continuity between IPDM E/R harness connector E7 terminal 21(R/B) and front combination lamp LH harness connector E41 terminal 6(R/B).

Continuity should exist

OK or NG

- OK >> GO TO 3.
NG >> Repair harness or connector.



3. HEADLAMP INPUT SIGNAL CHECK

1. Connect IPDM E/R connector.
2. Start auto active test. Refer to [PG-24, "Auto Active Test"](#). When headlamp LO is operating, check voltage between front combination lamp LH or RH and ground.

Terminals				Voltage
(+)			(-)	
Connector		Terminal (wire color)		
RH	E25	6(R)	Ground	Battery voltage
LH	E41	6(R/B)		

OK or NG

- OK >> Inspect headlamp bulbs.
NG >> Replace IPDM E/R.

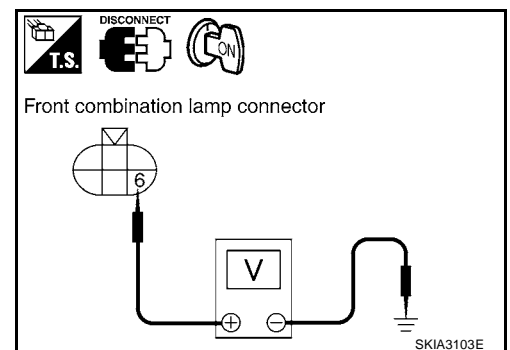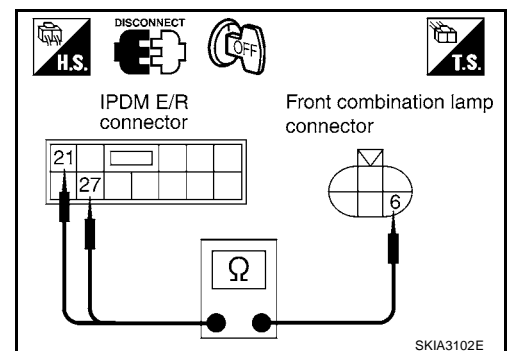

HEADLAMP (FOR USA) - CONVENTIONAL TYPE -

4. COMBINATION SWITCH CIRCUIT CHECK

Select BCM on CONSULT-II. Carry out "BCM C/U" self-diagnosis.

Displayed results of self-diagnosis

No malfunction detected>> GO TO 5.

CAN communications or CAN system>> Inspect the BCM CAN communications system. Refer to [BCS-18, "CAN Communication Inspection Using CONSULT-II \(Self-Diagnosis\)"](#).

OPEN DETECT 1 - 5>> Combination Switch System malfunction. Refer to [LT-164, "Combination Switch Inspection According to Self-Diagnostic Results"](#).

HEAD LAMP 1 SW or HEAD LAMP 2 SW>> Replace lighting switch.

SELF-DIAG RESULTS	
DTC RESULTS	TIME
NO DTC IS DETECTED. FURTHER TESTING MAY BE REQUIRED	

LKIA0073E

5. COMBINATION SWITCH INPUT SIGNAL CHECK

Select BCM on CONSULT-II. With "HEADLAMP" data monitor, check that "HEAD LAMP SW" and "HEAD LAMP SW 2" turn ON-OFF with operation of lighting switch.

OK or NG

OK >> Replace BCM.

NG >> ● Replace lighting switch.

- If one of "HEAD LAMP SW" and "HEAD LAMP SW 2" is NG, replace both BCM and lighting switch.

DATA MONITOR	
MONITOR	
HEAD LAMP SW	OFF
HIBEAM SW	OFF
PASSING SW	OFF
FR FOG SW	OFF
DOOR SW-DR	OFF
DOOR SW-AS	OFF
DOOR SW-RR	OFF
HEAD LAMP SW2	OFF
OPTICAL SENSOR	0.00V

SKIA3661E

Headlamp Low Beam Does Not Illuminate (One Side)

AKS002TL

1. CHECK BULB

Inspect bulb of lamp which does not illuminate.

OK or NG

OK >> GO TO 2.

NG >> Replace bulb of lamp.

2. HEAD LAMP LH OR RH CIRCUIT CHECK

1. Disconnect IPDM E/R connector and front combination lamp LH or RH connector.

2. Check continuity between IPDM E/R harness connector E7 terminal 27(R) and front combination lamp RH harness connector E25 terminal 6(R).

Continuity should exist


3. Check continuity between IPDM E/R harness connector E7 terminal 21(R/B) and front combination lamp LH harness connector E41 terminal 6(R/B).

Continuity should exist

OK or NG

OK >> Replace IPDM E/R.

NG >> Repair harness or connector.

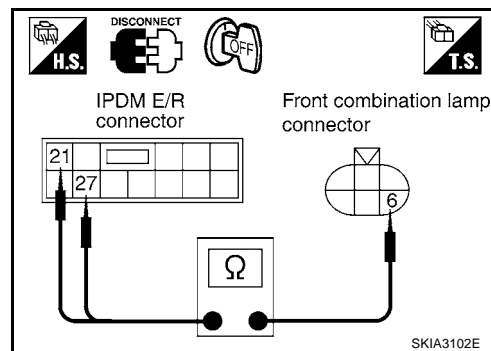

HEADLAMP (FOR USA) - CONVENTIONAL TYPE -

Headlamps Do Not Turn OFF

AKS002TM

1. CHECKING CAN COMMUNICATIONS BETWEEN BCM AND IPDM E/R


- IPDM E/R detects CAN communication malfunction and activates fail-safe operation. Refer to [BCS-18, "CAN Communication Inspection Using CONSULT-II \(Self-Diagnosis\)"](#) and inspect CAN system.

OK or NG

- OK >> Replace IPDM E/R.
NG >> Repair malfunctioning part.

Aiming Adjustment

AKS002TN

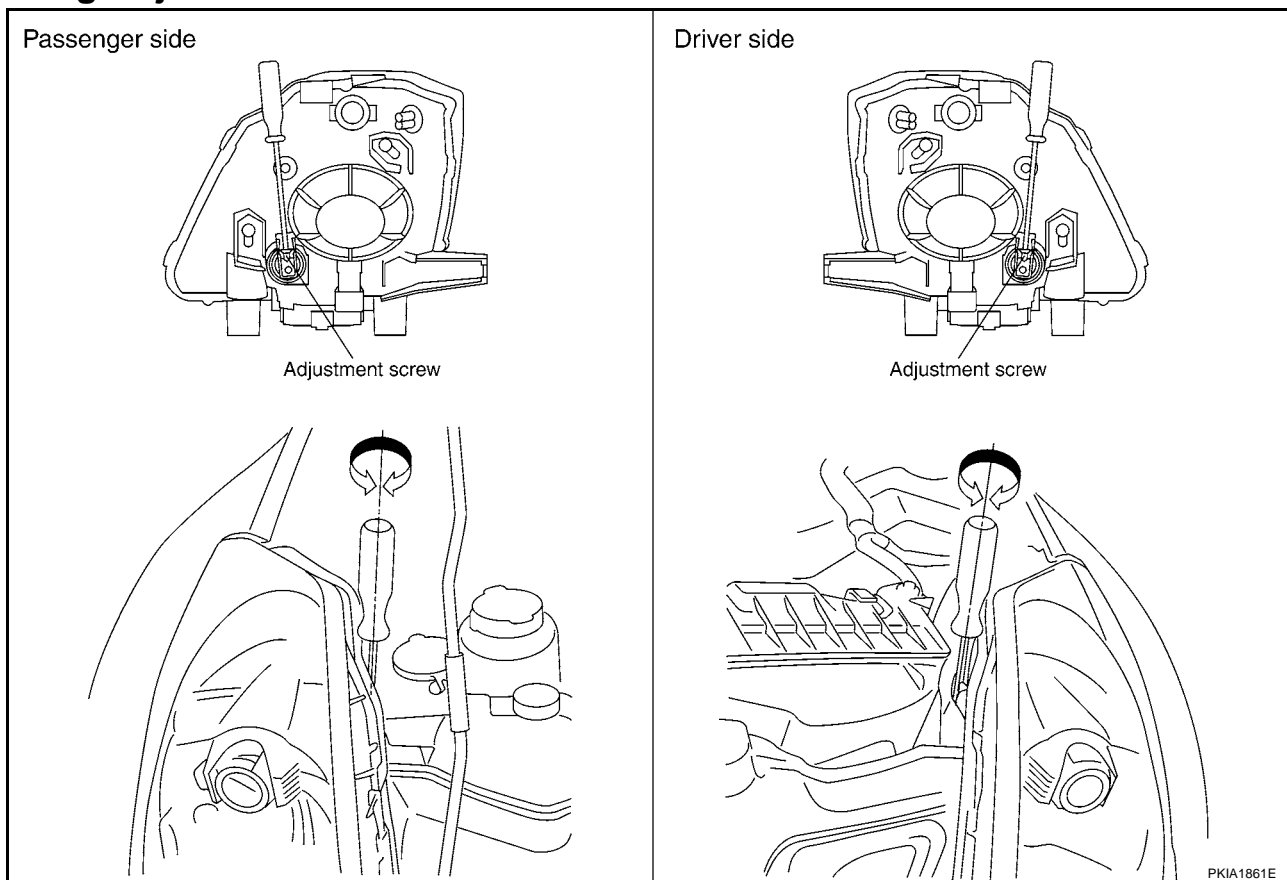

PREPARATION BEFORE ADJUSTING

For details, refer to the regulations in your own country.

Before performing aiming adjustment, check the following.


- Keep all tires inflated to correct pressures.
- Place vehicle on flat surface.
- Set that there is no-load in vehicle other than the driver (or equivalent weight placed in driver's position). Coolant, engine oil filled up to correct level and full fuel tank.

LOW BEAM AND HIGH BEAM

- Turn headlamp low beam on.
- Use adjusting screws to perform aiming adjustment.

HEADLAMP (FOR USA) - CONVENTIONAL TYPE -

ADJUSTMENT USING AN ADJUSTMENT SCREEN (LIGHT/DARK BORDERLINE)

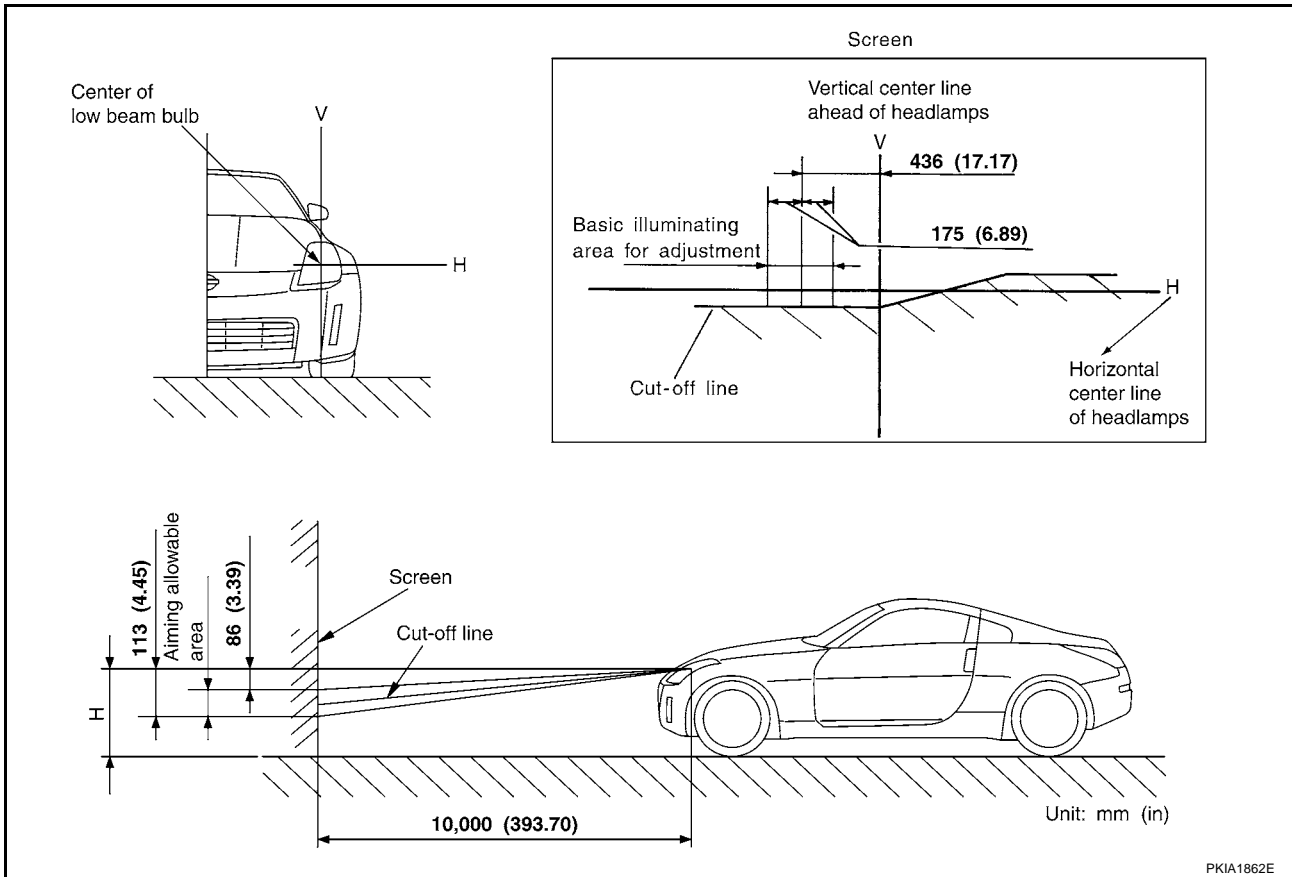

If the vehicle front body has been repaired and/or the headlamp assembly has been replaced, check aiming. Use the aiming chart shown in the figure.

- Basic illumination area for adjustment should be within the range shown on the aiming chart. Adjust headlamp accordingly.

Bulb Replacement HEADLAMP (UPPER) LOW BEAM

1. Turn lighting switch OFF.
2. Remove fender protector (front). Refer to [EI-21, "FENDER PROTECTOR"](#) in "EI" section.
3. Turn plastic cap counterclockwise and unlock it.
4. Disconnect bulb terminal.
5. Unlock retaining spring and remove bulb from headlamp.
6. Install in reverse order of removal.

Headlamp (upper) low beam
(Halogen)

: 12V - 55W (H7)

AKS00270

HEADLAMP (FOR USA) - CONVENTIONAL TYPE -

HEADLAMP (LOWER) HIGH BEAM

1. Turn lighting switch OFF.
2. Remove fender protector (front). Refer to [EI-21, "FENDER PROTECTOR"](#) in "EI" section.
3. Turn plastic cap counterclockwise and unlock it.
4. Disconnect bulb terminal.
5. Unlock retaining spring and remove bulb from headlamp.
6. Install in the reverse order of removal.

Headlamp (lower) high beam/Fog lamp : 12V - 55W (H1)

PARKING LAMPS (CLEARANCE LAMPS)

1. Turn lighting switch OFF.
2. Remove fender protector (front). Refer to [EI-21, "FENDER PROTECTOR"](#) in "EI" section.
3. Turn bulb socket counterclockwise and unlock it.
4. Remove bulb from its socket.
5. Install in the reverse order of removal.

Parking lamps (Clearance lamps) : 12V - 5W

FRONT TURN SIGNAL LAMP

1. Turn lighting switch OFF.
2. Remove fender protector (front). Refer to [EI-21, "FENDER PROTECTOR"](#) in "EI" section.
3. Turn bulb socket counterclockwise and unlock it.
4. Remove bulb from its socket.
5. Install in the reverse order of removal.

Front turn signal lamp : 12V - 21W

CAUTION:

After installing bulb, be sure to install plastic cap and bulb socket securely to insure watertightness.

FRONT SIDE MARKER LAMP

1. Turn lighting switch OFF.
2. Remove fender protector (front). Refer to [EI-21, "FENDER PROTECTOR"](#) in "EI" section.
3. Turn bulb socket counterclockwise and unlock it.
4. Remove bulb from its socket.
5. Install in the reverse order of removal.

Front side marker lamp : 12V - 5W


CAUTION:

After installing bulb, be sure to install plastic cap and socket securely to insure watertightness.

Removal and Installation

REMOVAL

1. Remove front bumper. Refer to [EI-14, "FRONT BUMPER"](#) in "EI" section.
2. Remove headlamp mounting bolts.
3. Pull headlamp toward vehicle front, disconnect connector, and remove headlamp.

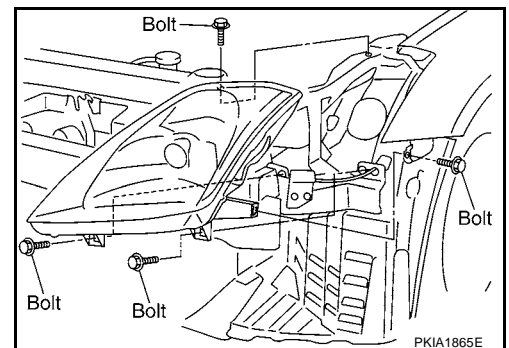

HEADLAMP (FOR USA) - CONVENTIONAL TYPE -

INSTALLATION

Install in the reverse order of removal. Be careful of the following:

Headlamp mounting bolt:




: 5.7 - 6.5 N·m (0.45 - 0.66 kg-m, 39 - 57 in-lb)

NOTE:

After installation, aiming adjustment. Refer to [LT-59, "Aiming Adjustment"](#).

Disassembly and Assembly

AKS002TQ

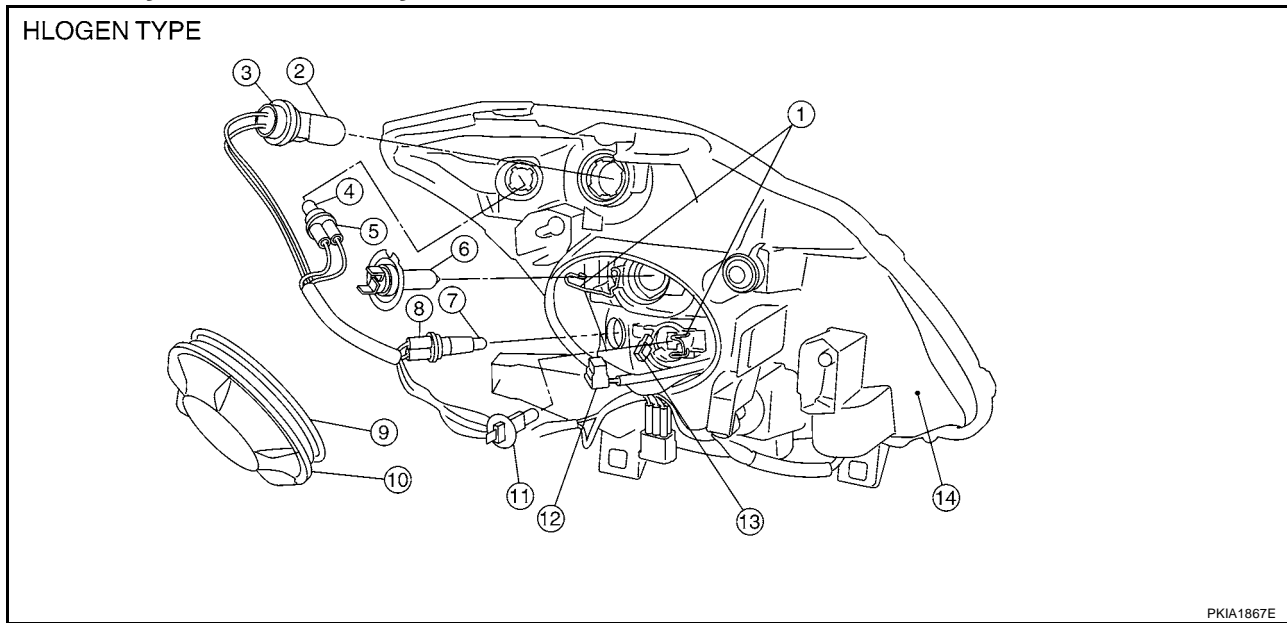

PKIA1867E

- | | | |
|--------------------------------|---------------------------------|---------------------------------------|
| 1. Retaining spring | 2. Front turn signal lamp bulb | 3. Front turn signal lamp bulb socket |
| 4. Side marker lamp bulb | 5. Side marker lamp bulb socket | 6. Halogen bulb (low) |
| 7. (unlabeled) | 8. Clearance lamp bulb socket | 9. Seal rubber |
| 10. Plastic cap | 11. Halogen bulb (high) | 12. Halogen bulb socket (low) |
| 13. Halogen bulb socket (high) | 14. Headlamp housing assembly | |

DISASSEMBLY

1. Turn plastic cap counterclockwise and unlock it.
2. Disconnect bulb socket (low).
3. Unlock retaining spring, and remove halogen bulb (low).
4. Disconnect the socket connected to the halogen bulb (high).
5. Unlock retaining spring, and remove halogen bulb (high).
6. Turn parking lamp bulb socket counterclockwise and unlock it.
7. Remove parking lamp bulb from its socket.
8. Turn front turn signal lamp bulb socket counterclockwise and unlock it.
9. Remove front turn signal lamp bulb from its socket.
10. Turn front side marker lamp bulb socket counterclockwise and unlock it.
11. Remove front side lamp marker lamp bulb from its socket.

ASSEMBLY

AKS002TR

Assemble in reverse order of disassembly. Be careful of the following:

CAUTION:


- After installing bulb, be sure to install plastic cap and bulb socket securely to insure watertightness.

HEADLAMP (FOR USA) - CONVENTIONAL TYPE -

Servicing to Replace Headlamps When Damaged

AKS002TS


If only installation part as shown in the figure is damaged, and headlamp housing itself is not damaged, repair can be completed easily by installing correction brackets.

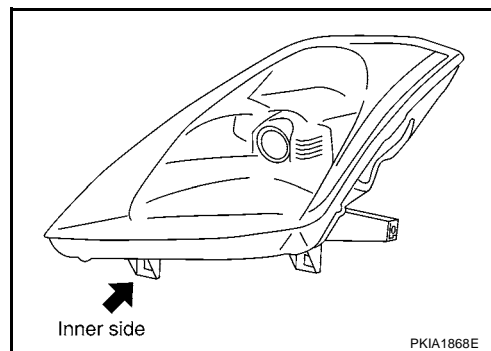

INSTALLATION OF HEADLAMP BRACKET

1. Remove headlamps. Refer to [LT-61, "Removal and Installation"](#).
2. Cut damaged section of installation part, then shape with sandpaper.
3. Attach each correction bracket to headlamp housing boss with 2 screws.

RH headlamp	Inner side	26040 CD000
LH headlamp	Inner side	26090 CD000

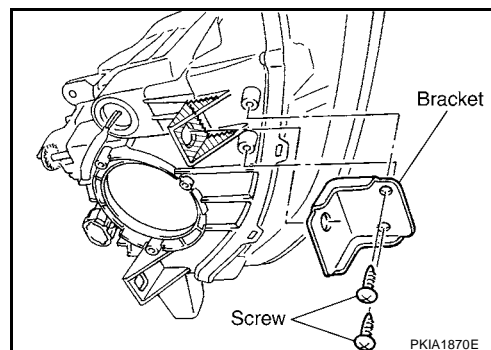

A
B
C
D
E
F
G
H
I
J
LT
L
M


HEADLAMP (FOR CANADA) - XENON TYPE -

HEADLAMP (FOR CANADA) - XENON TYPE -

PFP:26010

Component Parts and Harness Connector Location

AKS0030B

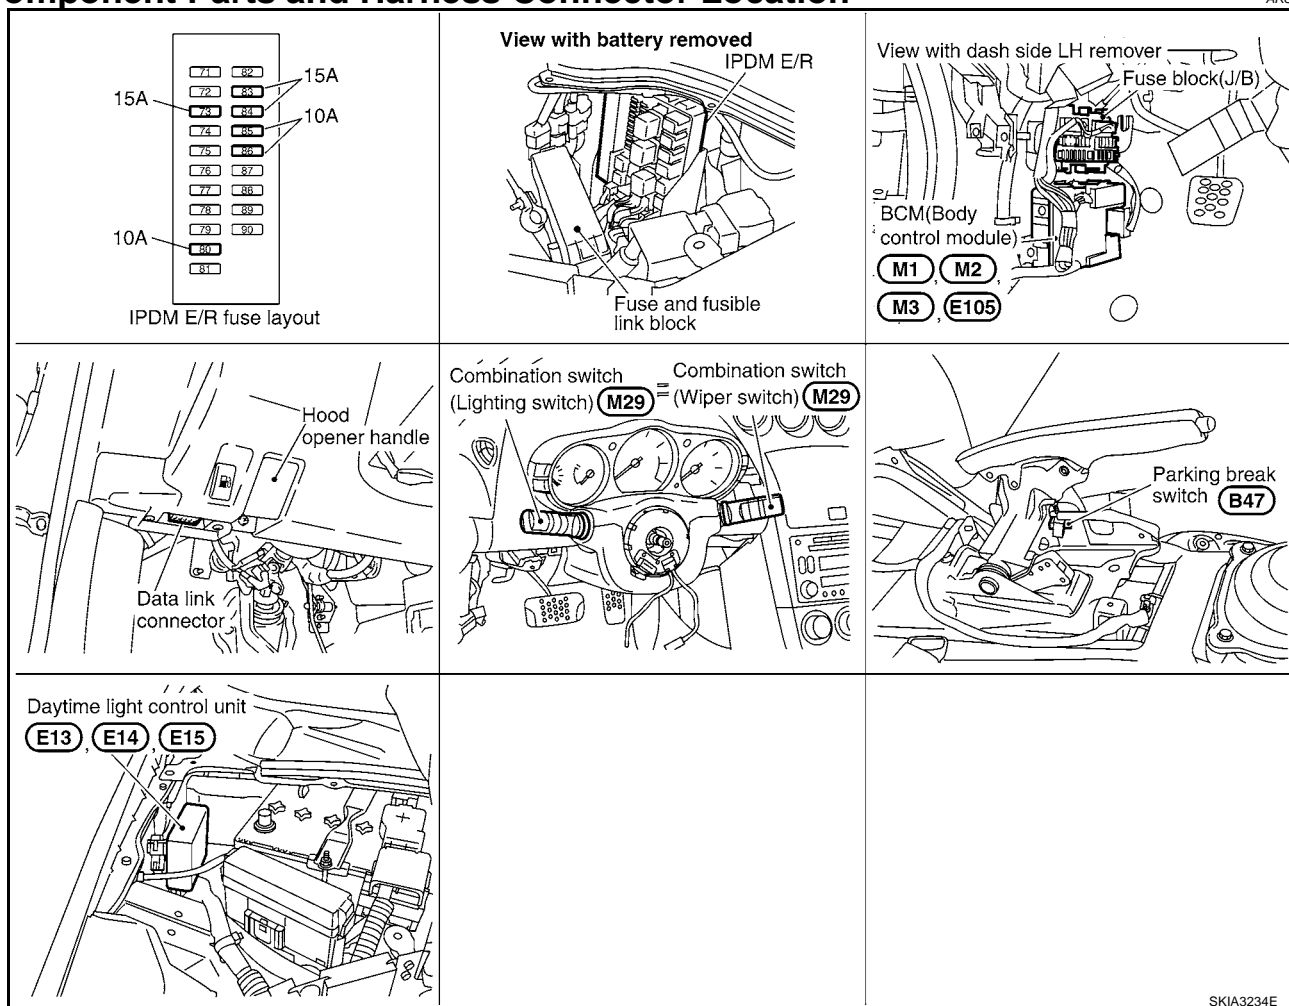

SKIA3234E

System Description

AKS0030C

The headlamp system for Canada vehicles is equipped with a daytime light control unit that activates the high beam headlamps at approximately half illumination whenever the engine is running. If the parking brake is applied before the engine is started the daytime lights will not be illuminated. The daytime lights will illuminate once the parking brake is released. Thereafter, the daytime lights will continue to operate when the parking brake is applied.

And battery saver system is controlled by the BCM.

Power is supplied at all times

- to headlamp high relay located in the IPDM E/R (intelligent power distribution module engine room).

Power is also supplied at all times

- to BCM (body control module) terminal 7
- through 40A fusible link [letter F, located in the fuse and fusible link box].

With the ignition switch in the ON or START position, power is supplied

- to daytime light control unit terminal 3
- through 10A fuse [No. 88, located in the IPDM E/R (intelligent power distribution module engine room)], and
- to BCM (body control module) terminal 35
- through 10A fuse [No. 1, located in the fuse block (J/B)].

With the ignition switch in the ACC or ON position, power is supplied

- to BCM (body control module) terminal 36
- through 10A fuse [No. 6, located in the fuse block (J/B)].

HEADLAMP (FOR CANADA) - XENON TYPE -

With the ignition switch in the START position, power is supplied

- to daytime light control unit terminal 2
- through 10A fuse [No. 9, located in the fuse block (J/B)].

Ground is supplied

- to daytime light control unit terminal 16
- through grounds E17, E43 and F152, and
- to BCM (body control module) terminal 8
- through grounds E17, E43 and F152.

HEADLAMP OPERATION

Low Beam Operation

With the lighting switch in 2ND position, the BCM (body control module) receives input signal requesting the headlamps to illuminate. This input signal is communicated to the IPDM E/R (intelligent power distribution module engine room) across the CAN communication lines. The CPU (central processing unit) in the IPDM E/R controls the headlamp low relay coil, which when energized, directs power

- Through 15A fuse [No. 83, located in the IPDM E/R (intelligent power distribution module engine room)].
- through terminal 27 of the IPDM E/R (intelligent power distribution module engine room)
- to terminal 7 of front combination lamp RH, and
- Through 15A fuse [No. 84, located in the IPDM E/R (intelligent power distribution module engine room)]
- through terminal 21 of the IPDM E/R (intelligent power distribution module engine room)
- to terminal 7 of front combination lamp LH.

Ground is supplied at all times

- to terminal 8 of front combination lamp RH
- through grounds E17, E43 and F152, and
- to terminal 8 of front combination lamp LH
- through grounds E17, E43 and F152.

With power and ground supplied, low beam headlamps illuminate.

High Beam Operation (When engine stopped)/Flash-to-Pass Operation

With the lighting switch in 2ND position and placed in HIGH or PASS position, the BCM (body control module) receives input signal requesting the headlamp high beams to illuminate. This input signal is communicated to the IPDM E/R (intelligent power distribution module engine room) across the CAN communication lines. The CPU (central processing unit) in the IPDM E/R controls the headlamp high relay coil turned on, which when energized, directs power

- to front combination lamp LH terminal 3
- through daytime light control unit terminal 7 and 4
- to IPDM E/R terminal 22
- through 10A fuse [No.85,located in IPDM E/R (intelligent power distribution module engine room)],and
- to front combination lamp RH terminal 3
- through daytime light control unit terminal 6 and 5
- to IPDM E/R terminal 24
- through 10A fuse [No.86,located in IPDM E/R (intelligent power distribution module engine room)]

Ground is supplied

- to front combination lamp LH terminal 4
- through of the daytime light control unit terminal 9 and 14 and
- through grounds F152, E17 and E43.
- to terminal 4 of front combination lamp RH
- through grounds E17, E43 and F152.

With power and ground supplied, the high beam headlamps illuminate.

Unified meter and A/C amp receives signal from the BCM across the CAN communication lines, and then combination meter indicator illuminates high beam.

HEADLAMP (FOR CANADA) - XENON TYPE -

COMBINATION SWITCH READING FUNCTION

Refer to [LT-159, "Combination Switch Reading Function"](#) .

EXTERIOR LAMP BATTERY SAVER CONTROL

When the combination switch (lighting switch) is in the 2ND position (ON), and the ignition switch is turned from ON or ACC to OFF, the battery saver control function is activated.

Under this condition, the headlamps remain illuminated for 5 minutes, then the headlamps are turned off.

Exterior lamp battery saver control mode can be changed by the function setting of CONSULT-II.

DAYTIME LIGHT OPERATION

With the engine running, the lighting switch in the OFF or 1ST position and parking brake released, power is supplied

- through daytime light control unit terminal 7
- to terminal 3 of front combination lamp LH
- through terminal 4 of front combination lamp LH
- to daytime light control unit terminal 9
- through daytime light control unit terminal 6
- to terminal 3 of RH front combination lamp.

Ground is supplied

- to terminal 4 of RH front combination lamp
- through grounds E17, E43 and F152, and
- to daytime light control unit terminals 14
- through grounds E17, E43 and F152.

Because the high beam headlamps are now wired in series, they operate at half illumination.

If the lighting switch is in the HIGH position, daytime light operation is canceled. On this occasion, power is supplied

- through terminal 21 of the IPDM E/R
- to daytime light control unit terminal 2

Daytime light control unit is canceled power supplying from terminal 7 to terminal 8 of front combination lamp RH (series power supplying is canceled). And then low beam is ON.

OPERATION

After starting the engine with the lighting switch in the "OFF" or 1ST position, the headlamp high beam automatically turns on. Lighting switch operations other than the above are the same as conventional light systems.

Engine		With engine stopped									With engine running								
Lighting switch		OFF			1ST			2ND			OFF			1ST			2ND		
		Hi	Lo	P	Hi	Lo	P	Hi	Lo	P	Hi	Lo	P	Hi	Lo	P	Hi	Lo	P
Head-lamp	High beam	—	—	—	—	—	×	×	—	×	●*	●*	×	●*	●*	×	×	—	×
	Low beam	—	—	—	—	—	×	×	×	×	—	—	×	—	—	×	×	×	×
Tail lamp		—	—	—	×	×	×	×	×	×	—	—	—	×	×	×	×	×	×
License and instrument illumination lamp		—	—	—	×	×	×	×	×	×	—	—	—	×	×	×	×	×	×

- Hi: "HIGH BEAM" position
- Lo: "LOW BEAM" position
- P: "FLASH TO PASS" position
- ×: Lamp "ON"
- —: Lamp "OFF"
- ●: Lamp dims. (Added functions)
- *: When starting the engine with the parking brake released, the daytime light will come ON.
When starting the engine with the parking brake pulled, the daytime light will not come ON.

HEADLAMP (FOR CANADA) - XENON TYPE -

XENON HEADLAMP (IF EQUIPPED)

Xenon type headlamp is adopted to the low beam headlamps. Xenon bulbs do not use a filament. Instead, they produce light when a high voltage current is passed between two tungsten electrodes through a mixture of xenon (an inert gas) and certain other metal halides. In addition to added lighting power, electronic control of the power supply gives the headlamps stable quality and tone color.

Following are some of the many advantages of the xenon type headlamp.

- The light produced by the headlamps is a white color comparable to sunlight that is easy on the eyes.
- Light output is nearly double that of halogen headlamps, affording increased area of illumination.
- The light features a high relative spectral distribution at wavelengths to which the human eye is most sensitive. This means that even in the rain, more light is reflected back from the road surface toward the vehicle, for added visibility.
- Power consumption is approximately 25 percent less than halogen headlamps, reducing battery load.

CAN Communication System Description

AKS003N1

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

CAN Communication Unit

AKS003N2

Body type	Coupe						
Axle	2WD						
Engine	VQ35DE						
Transmission	A/T	M/T					
Brake control	TCS	ABS		TCS		VDC	
Low tire pressure warning system	Not Applicable	Not Applicable	Applicable	Not Applicable	Applicable	Not Applicable	Applicable
CAN communication unit							
ECM	×	×	×	×	×	×	×
TCM	×						
Data link connector	×	×	×	×	×	×	×
Unified meter and A/C amp.	×	×	×	×	×	×	×
BCM	×	×	×	×	×	×	×
Low tire pressure warning control unit			×		×		×
Steering angle sensor						×	×
ABS actuator and electric unit (control unit)	×	×	×	×	×		
VDC/TCS/ABS control unit						×	×
IPDM E/R	×	×	×	×	×	×	×
CAN communication type	LAN-7, "TYPE 1"	LAN-8, "TYPE 2/TYPE3"		LAN-10, "TYPE 4/TYPE5"		LAN-12, "TYPE 6/TYPE7"	


×: Applicable

HEADLAMP (FOR CANADA) - XENON TYPE -

TYPE 1

System diagram

- Type1

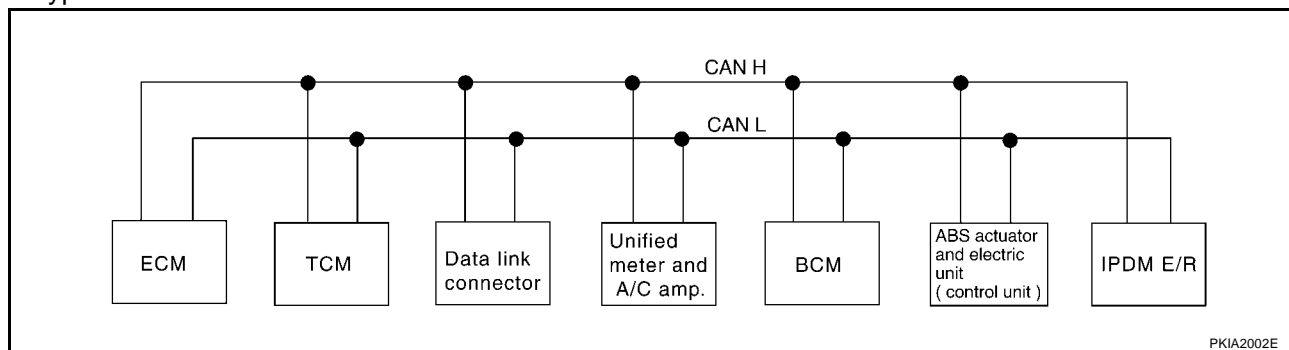

Input/output signal chart

T: Transmit R: Receive

Signals	ECM	TCM	Unified meter and A/C amp.	BCM	ABS actuator and electric unit (control unit)	IPDM E/R
Engine speed signal	T	R	R		R	
Engine torque signal	T	R				
Engine coolant temperature signal	T	R	R			
Accelerator pedal position signal	T	R			R	
Closed throttle position signal	T	R				
Wide open throttle position signal	T	R				
Battery voltage signal	T	R				
Stop lamp switch signal		R	T			
Fuel consumption monitor signal	T		R			
A/T self-diagnosis signal	R	T				
A/T CHECK indicator lamp signal		T	R			
A/T position indicator signal		T	R		R	
ABS operation signal		R			T	
A/T shift schedule change demand signal		R			T	
Air conditioner switch signal	R			T		
A/C compressor request signal	T					R
A/C compressor feedback signal	T		R			
Blower fan motor switch signal	R			T		
Cooling fan speed request signal	T					R
Position lights request signal			R	T		R
Low beam request signal				T		R
Low beam status signal	R					T
High beam request signal			R	T		R
High beam status signal	R					T
Vehicle speed signal			R		T	
	R	R	T	R		
Sleep request 1 signal			R	T		
Sleep request 2 signal				T		R
Wake up request 1 signal			R	T		


HEADLAMP (FOR CANADA) - XENON TYPE -

Signals	ECM	TCM	Unified meter and A/C amp.	BCM	ABS actuator and electric unit (control unit)	IPDM E/R
Door switch signal			R	T		R
Turn indicator signal			R	T		
Seat belt buckle switch signal			T	R		
Buzzer output signal			R	T		
Fuel level sensor signal	R		T			
Malfunction indicator lamp signal	T		R			
ASCD SET lamp signal	T		R			
ASCD operation signal	T	R				
ASCD CRUISE lamp signal	T		R			
Overdrive cancel signal	T	R				
Output shaft revolution signal	R	T				
Turbine revolution signal	R	T				
Front wiper request signal				T		R
Front wiper stop position signal				R		T
Rear window defogger switch signal				T		R
Rear window defogger control signal	R					T
Manual mode signal		R	T			
Not manual mode signal		R	T			
Manual mode shift up signal		R	T			
Manual mode shift down signal		R	T			
Manual mode indicator signal		T	R			
Hood switch signal				R		T
Theft warning horn request signal				T		R
Horn chirp signal				T		R
ABS warning lamp signal			R		T	
TCS OFF indicator lamp signal			R		T	
SLIP indicator lamp signal			R		T	
Brake (EBD) warning lamp signal			R		T	

TYPE 2/TYPE3


System diagram

- Type2

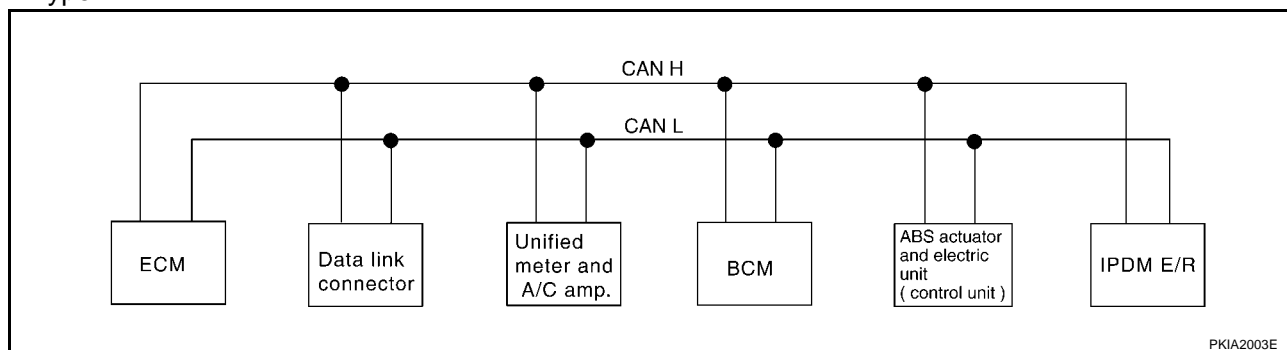

HEADLAMP (FOR CANADA) - XENON TYPE -

● Type3

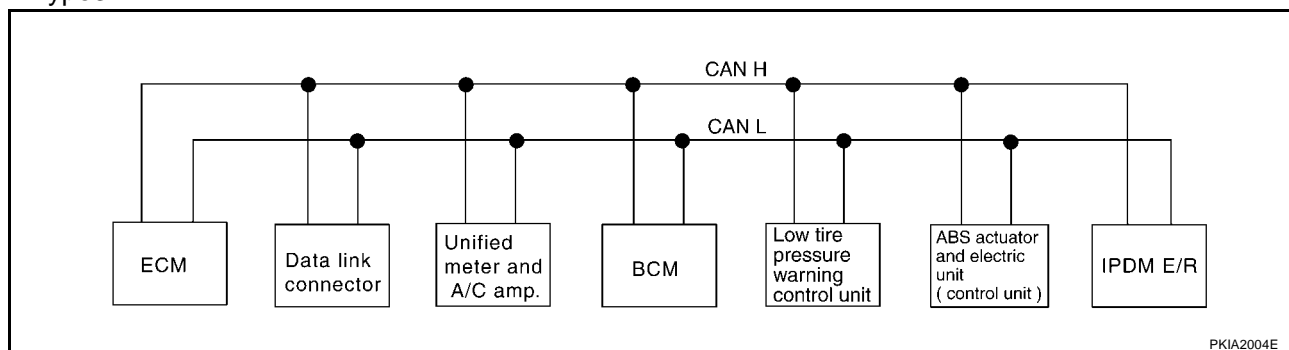

Input/output signal chart

T: Transmit R: Receive

Signals	ECM	Unified meter and A/C amp.	BCM	Low tire pressure warning control unit	ABS actuator and electric unit (control unit)	IPDM E/R
Engine speed signal	T	R			R	
Engine coolant temperature signal	T	R				
Accelerator pedal position signal	T				R	
Fuel consumption monitor signal	T	R				
Air conditioner switch signal	R		T			
A/C compressor request signal	T					R
A/C compressor feedback signal	T	R				
Blower fan motor switch signal	R		T			
Cooling fan speed request signal	T					R
Position lights request signal			R	T		R
Low beam request signal			T			R
Low beam status signal	R					T
High beam request signal		R	T			R
High beam status signal	R					T
Vehicle speed signal		R			T	
	R	T	R	R		
Sleep request 1 signal		R	T			
Sleep request 2 signal			T			R
Wake up request 1 signal		R	T			
Door switch signal		R	T			R
Turn indicator signal		R	T			
Seat belt buckle switch signal		T	R			
Buzzer output signal		R	T			
Fuel level sensor signal	R	T				
Malfunction indicator lamp signal	T	R				
ASCD SET lamp signal	T	R				
ASCD CRUISE lamp signal	T	R				
Front wiper request signal			T			R
Front wiper stop position signal			R			T
Rear window defogger switch signal			T			R


HEADLAMP (FOR CANADA) - XENON TYPE -

Signals	ECM	Unified meter and A/C amp.	BCM	Low tire pressure warning control unit	ABS actuator and electric unit (control unit)	IPDM E/R
Rear window defogger control signal	R					T
Hood switch signal			R			T
Theft warning horn request signal			T			R
Horn chirp signal			T			R
Tire pressure signal		R		T		
ABS warning lamp signal		R			T	
Brake (EBD) warning lamp signal		R			T	


TYPE 4/TYPE5

System diagram

• Type4

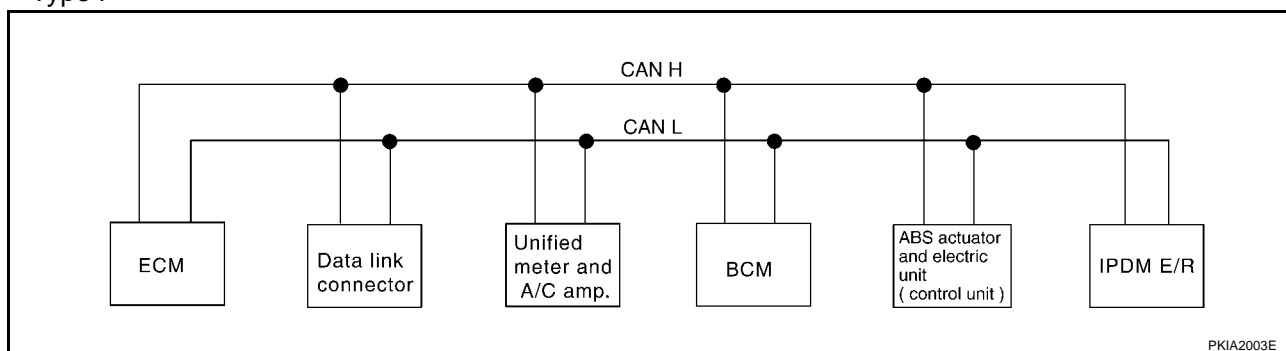

• Type5

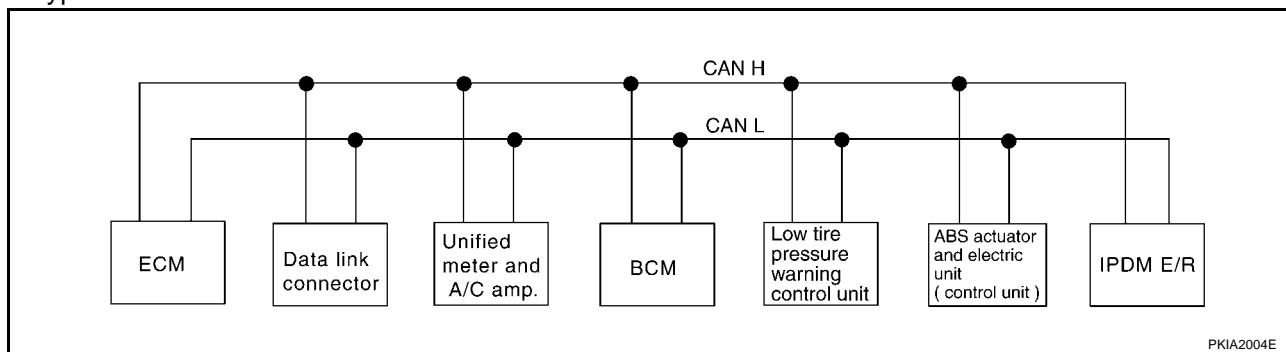

Input/output signal chart

T: Transmit R: Receive

Signals	ECM	Unified meter and A/C amp.	BCM	Low tire pressure warning control unit	ABS actuator and electric unit (control unit)	IPDM E/R
Engine speed signal	T	R			R	
Engine coolant temperature signal	T	R				
Accelerator pedal position signal	T				R	
Fuel consumption monitor signal	T	R				
Air conditioner switch signal	R		T			
A/C compressor request signal	T					R
A/C compressor feedback signal	T	R				
Blower fan motor switch signal	R		T			
Cooling fan speed request signal	T					R

HEADLAMP (FOR CANADA) - XENON TYPE -


Signals	ECM	Unified meter and A/C amp.	BCM	Low tire pressure warning control unit	ABS actuator and electric unit (control unit)	IPDM E/R
Position lights request signal		R	T			R
Low beam request signal			T			R
Low beam status signal	R					T
High beam request signal		R	T			R
High beam status signal	R					T
Vehicle speed signal		R			T	
	R	T	R	R		
Sleep request 1 signal		R	T			
Sleep request 2 signal			T			R
Wake up request 1 signal		R	T			
Door switch signal		R	T			R
Turn indicator signal		R	T			
Seat belt buckle switch signal		T	R			
Buzzer output signal		R	T			
Fuel level sensor signal	R	T				
Malfunction indicator lamp signal	T	R				
ASCD SET lamp signal	T	R				
ASCD CRUISE lamp signal	T	R				
Front wiper request signal			T			R
Front wiper stop position signal			R			T
Rear window defogger switch signal			T			R
Rear window defogger control signal	R					T
Hood switch signal			R			T
Theft warning horn request signal			T			R
Horn chirp signal			T			R
Tire pressure signal		R		T		
ABS warning lamp signal		R			T	
TCS OFF indicator lamp signal		R			T	
SLIP indicator lamp signal		R			T	
Brake (EBD) warning lamp signal		R			T	

HEADLAMP (FOR CANADA) - XENON TYPE -


TYPE 6/TYPE7

System diagram

• Type6

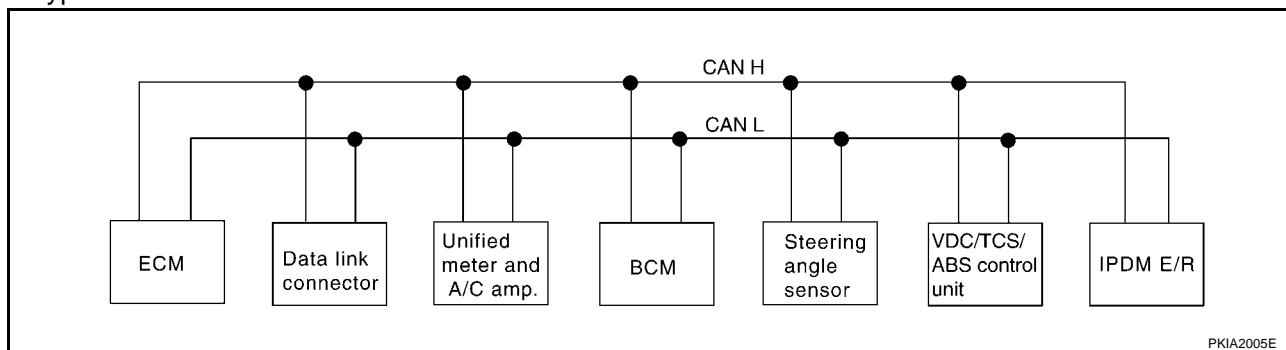

• Type7

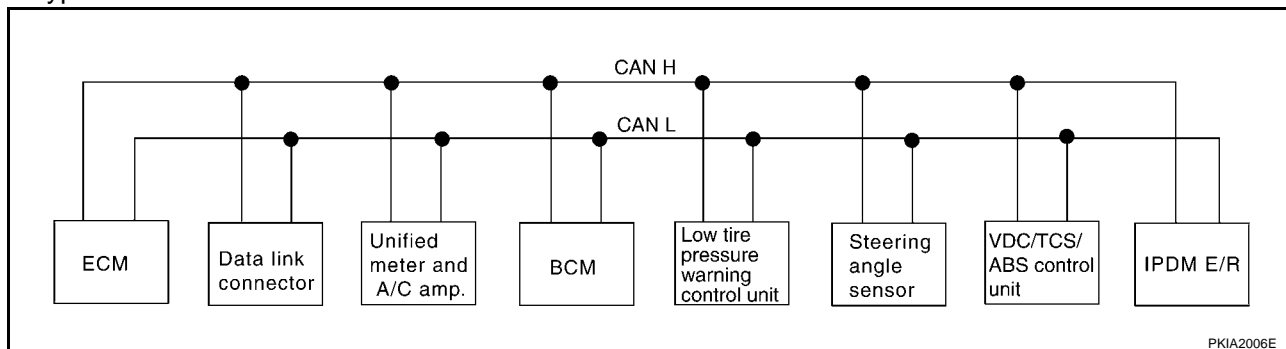

Input/output signal chart

T: Transmit R: Receive

Signals	ECM	Unified meter and A/C amp.	BCM	Low tire pressure warning control unit	Steering angle sensor	VDC/TCS/ABS control unit	IPDM E/R
Engine speed signal	T	R				R	
Engine coolant temperature signal	T	R					
Accelerator pedal position signal	T					R	
Fuel consumption monitor signal	T	R					
Air conditioner switch signal	R		T				
A/C compressor request signal	T						R
A/C compressor feedback signal	T	R					
Blower fan motor switch signal	R		T				
Cooling fan speed request signal	T						R
Position lights request signal		R	T				R
Low beam request signal			T				R
Low beam status signal	R						T
High beam request signal		R	T				R
High beam status signal	R						T
Vehicle speed signal		R				T	
	R	T	R	R			
Sleep request 1 signal		R	T				
Sleep request 2 signal			T				R
Wake up request 1 signal		R	T				
Door switch signal		R	T				R


HEADLAMP (FOR CANADA) - XENON TYPE -

Signals	ECM	Unified meter and A/C amp.	BCM	Low tire pressure warning control unit	Steering angle sensor	VDC/TCS/ABS control unit	IPDM E/R
Turn indicator signal		R	T				
Seat belt buckle switch signal		T	R				
Buzzer output signal		R	T				
Fuel level sensor signal	R	T					
Malfunction indicator signal	T	R					
ASCD SET lamp signal	T	R					
ASCD CRUISE lamp signal	T	R					
Front wiper request signal			T				R
Front wiper stop position signal			R				T
Rear window defogger switch signal			T				R
Rear window defogger control signal	R						T
Hood switch signal			R				T
Theft warning horn request signal			T				R
Horn chirp signal			T				R
Steering angle sensor signal					T	R	
Tire pressure signal		R		T			
ABS warning lamp signal		R				T	
VDC OFF indicator lamp signal		R				T	
SLIP indicator lamp signal		R				T	
Brake (EBD) warning lamp signal		R				T	

HEADLAMP (FOR CANADA) - XENON TYPE -

Schematic

AKS0030F

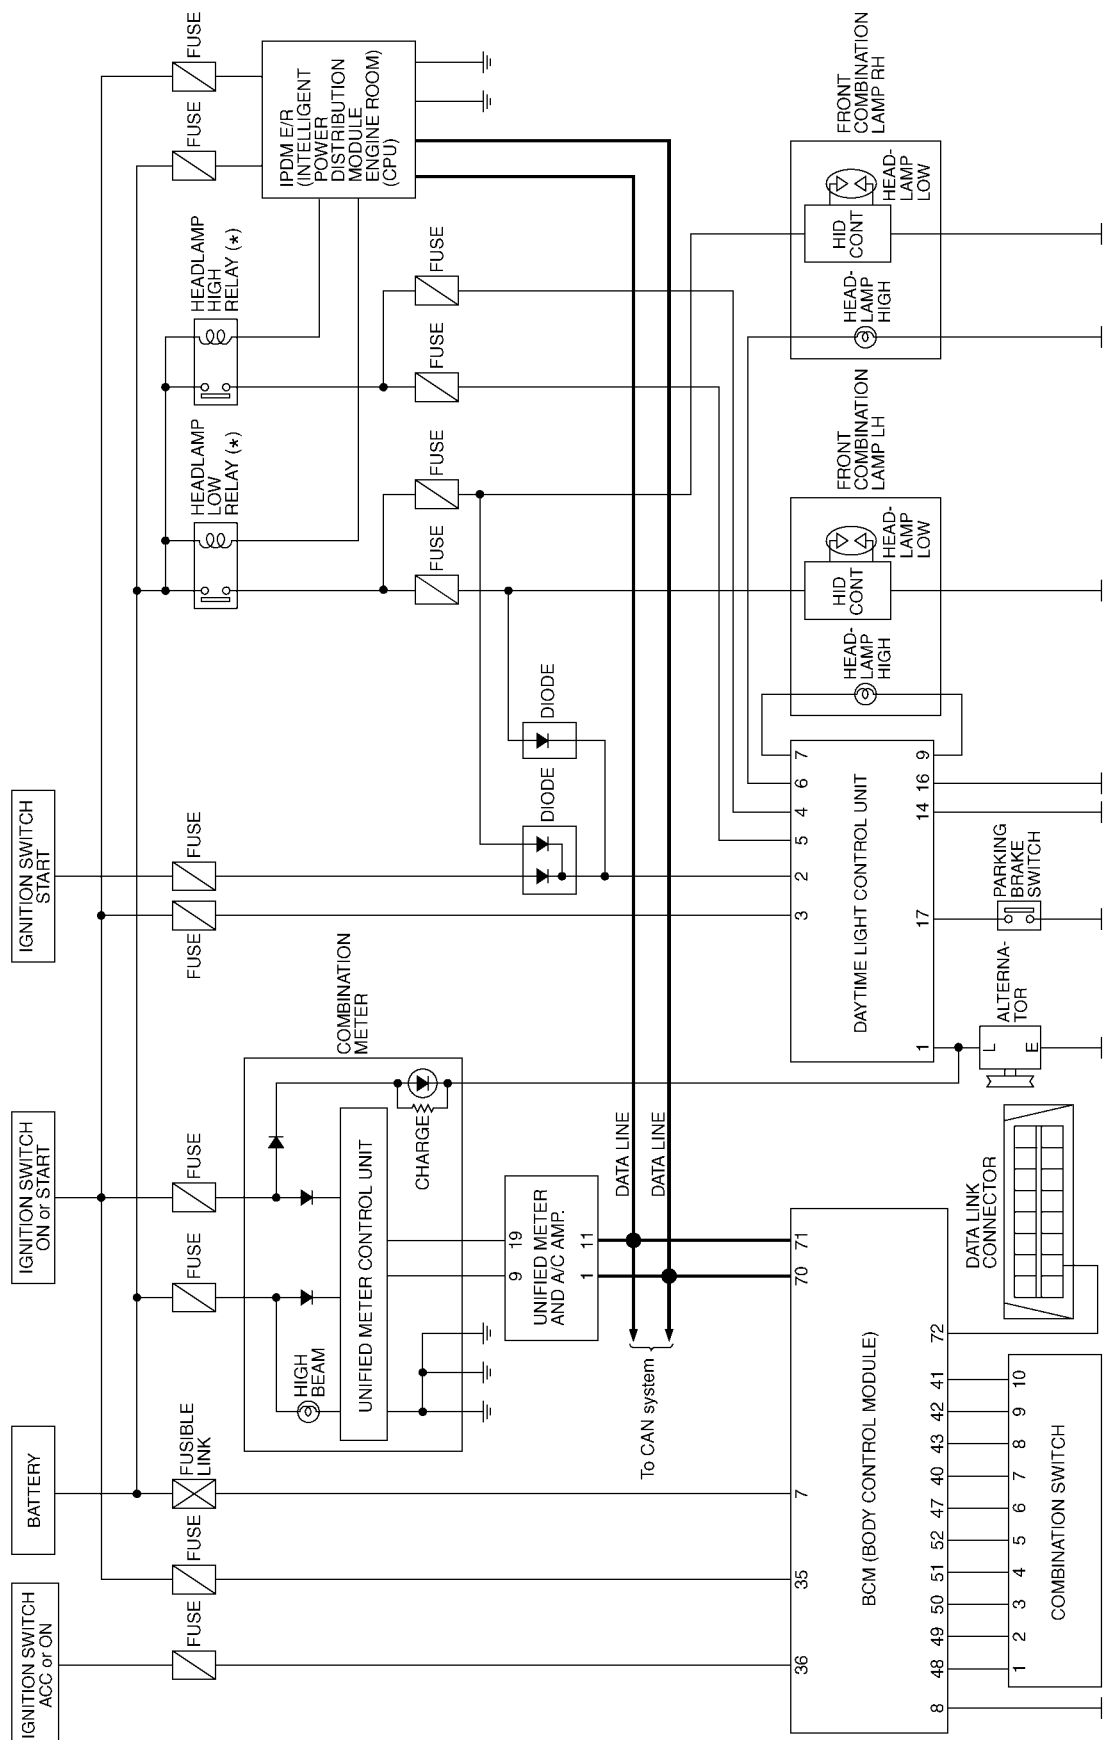

* : This relay is built into the IPDM E/R (Intelligent power distribution module engine room).

TKWT0434E



HEADLAMP (FOR CANADA) - XENON TYPE -

Wiring Diagram — DTRL —


AKS0030G

LT-DTRL-01

DATA LINE

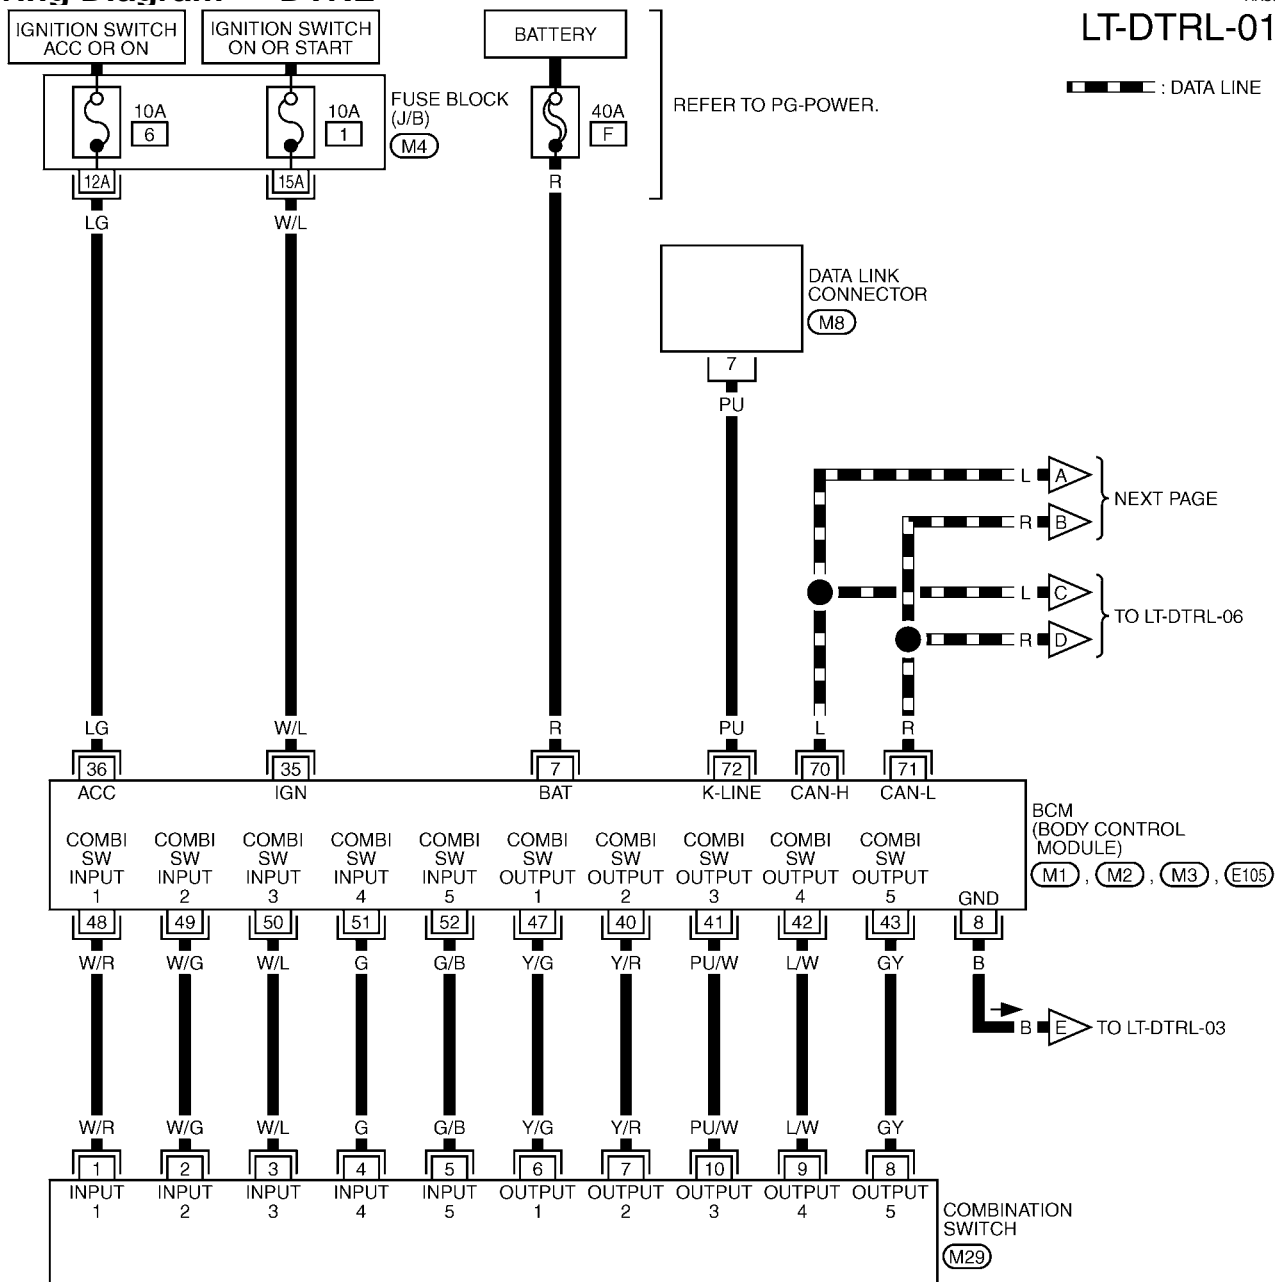

M8
W



M29
W

REFER TO THE FOLLOWING.

(M4) - FUSE BLOCK-JUNCTION BOX (J/B)


(M1), (M2), (M3), (E105)

- ELECTRICAL UNITS

HEADLAMP (FOR CANADA) - XENON TYPE -

LT-DTRL-02

DATA LINE

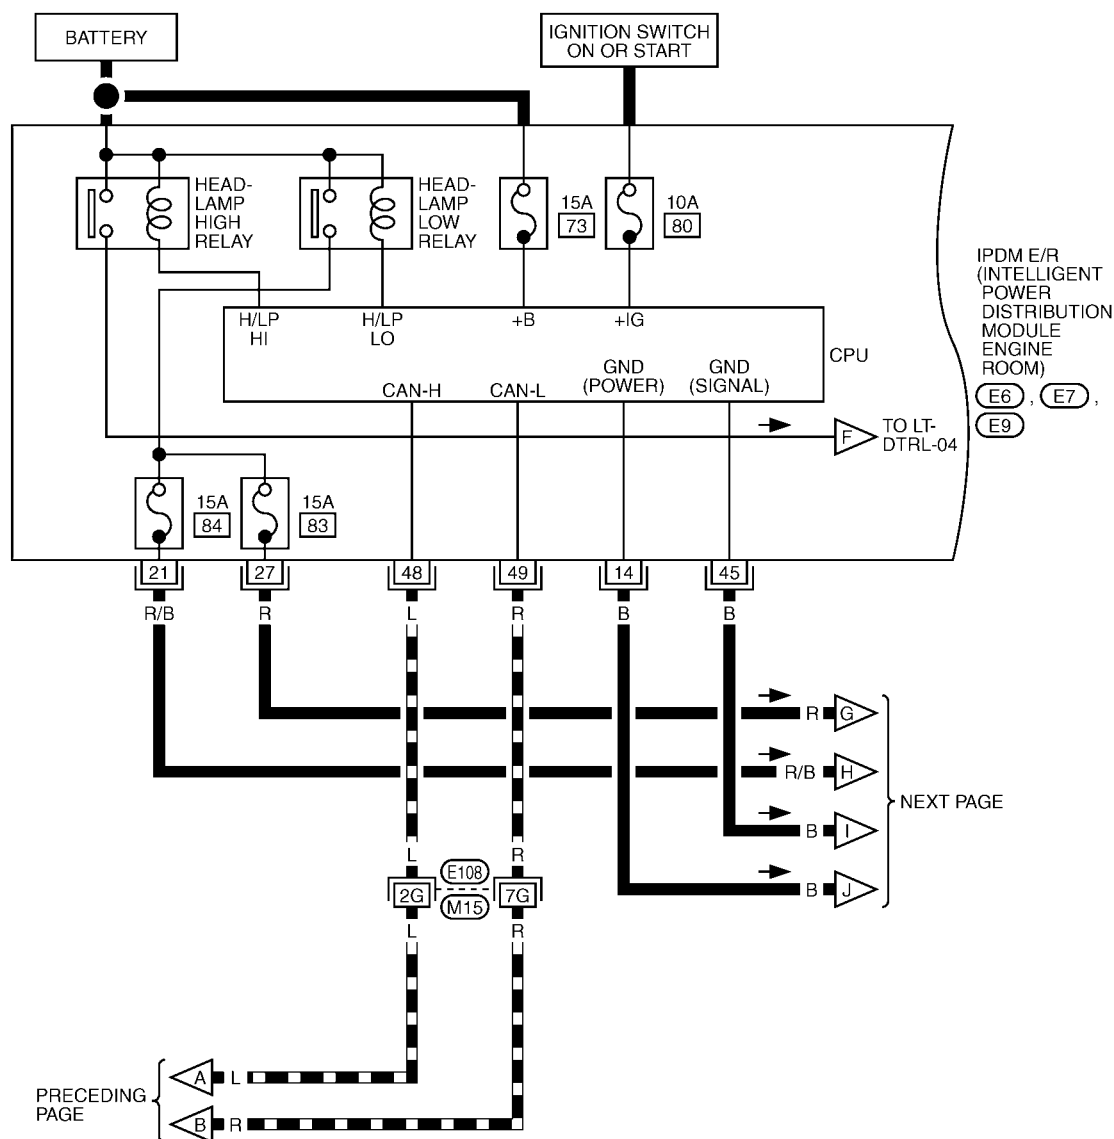


REFER TO PG-POWER.

IPDM E/R
(INTELLIGENT
POWER
DISTRIBUTION
MODULE
ENGINE
ROOM)
E6, E7,
E9

NEXT PAGE

PRECEDING
PAGE








REFER TO THE FOLLOWING.

E108 -SUPER MULTIPLE
JUNCTION (SMJ)

TKWT0436E

HEADLAMP (FOR CANADA) - XENON TYPE -


LT-DTRL-03

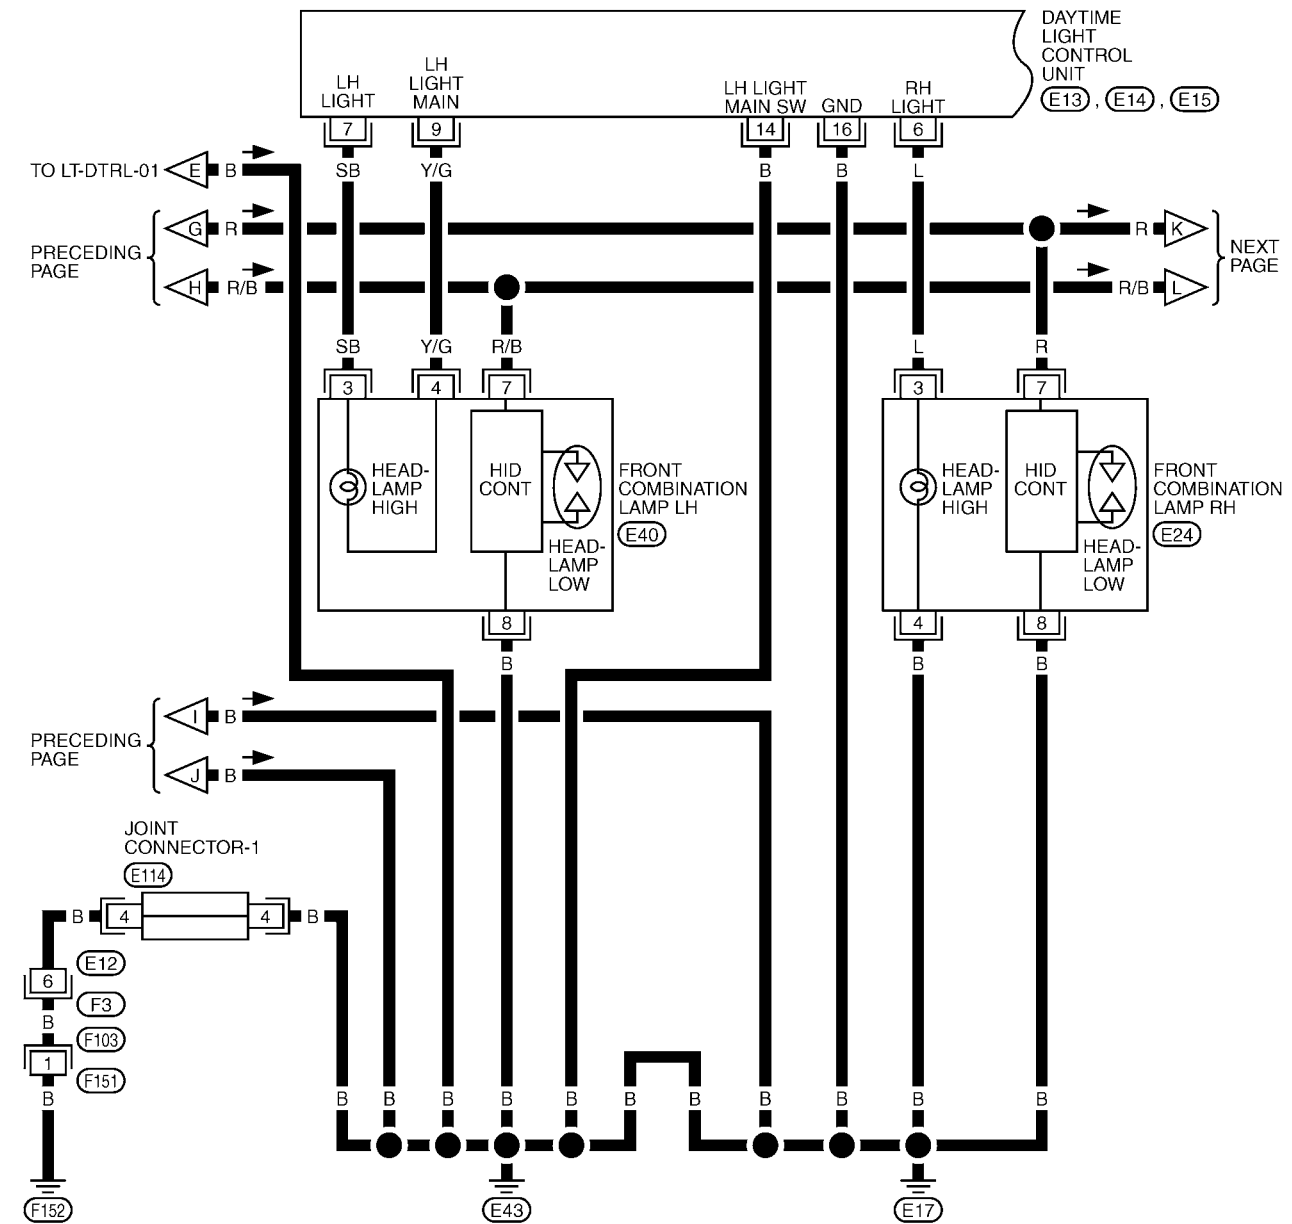

TKWT0437E


HEADLAMP (FOR CANADA) - XENON TYPE -

LT-DTRL-04

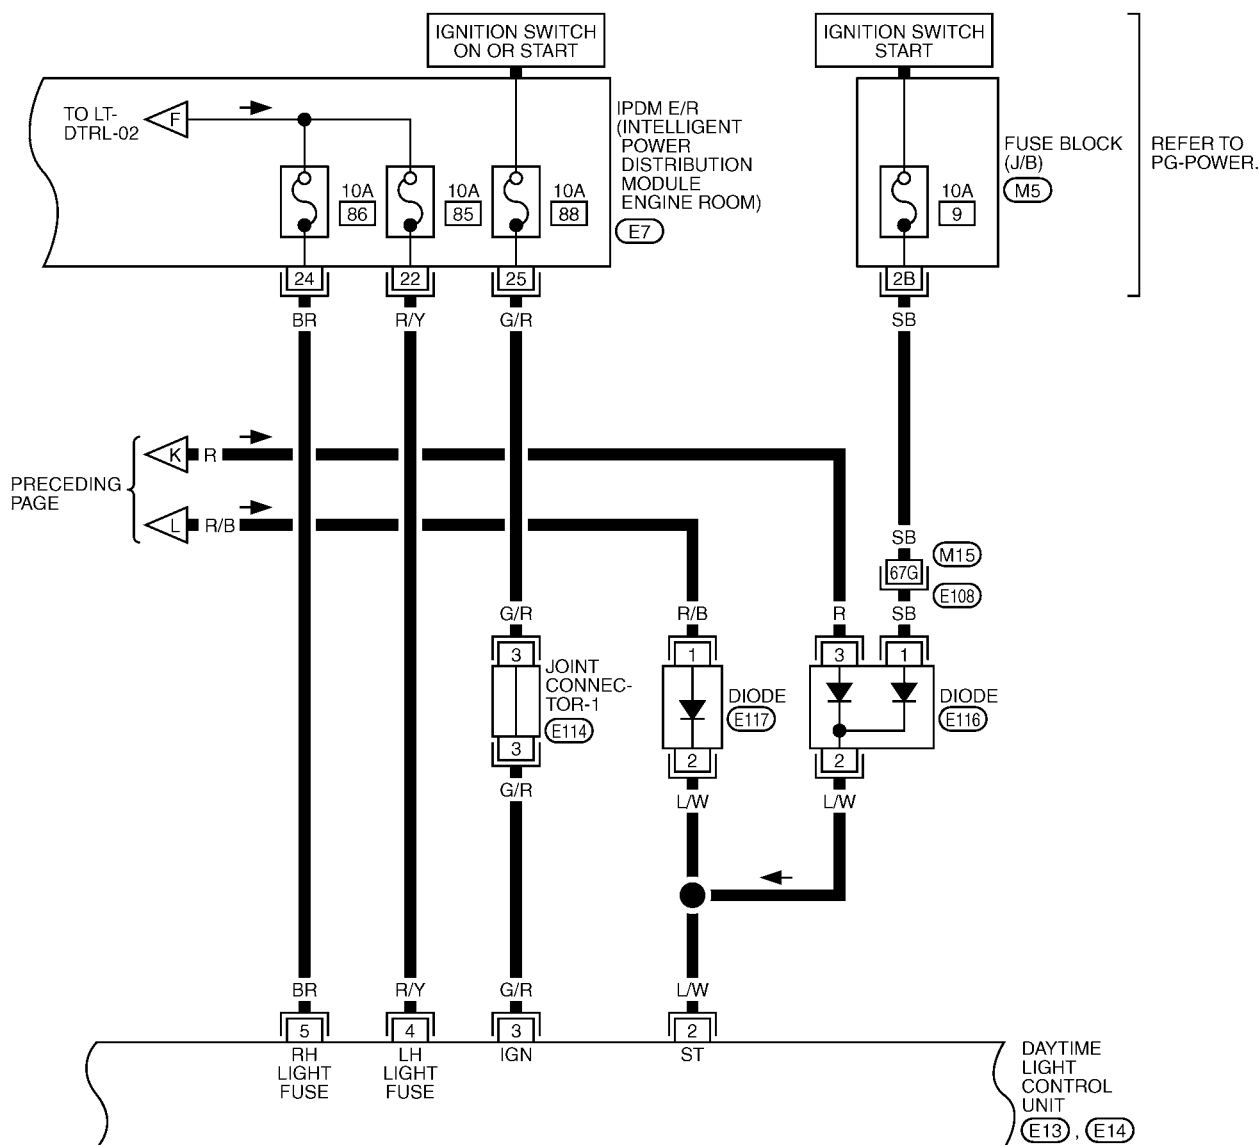

21	20	19	18	17
28	27	26	25	24
23	22			

(E7) W



1	1	1	2	2	2	2	3	3	3
4	4	4	4	4	4	4	4	4	4

(E114) BR

1	2	3
---	---	---

(E116)

1	2
---	---

(E117)

REFER TO THE FOLLOWING.





(E108) -SUPER MULTIPLE JUNCTION (SMJ)

(M5) -FUSE BLOCK-JUNCTION BOX (J/B)

TKWT0438E

HEADLAMP (FOR CANADA) - XENON TYPE -

LT-DTRL-05

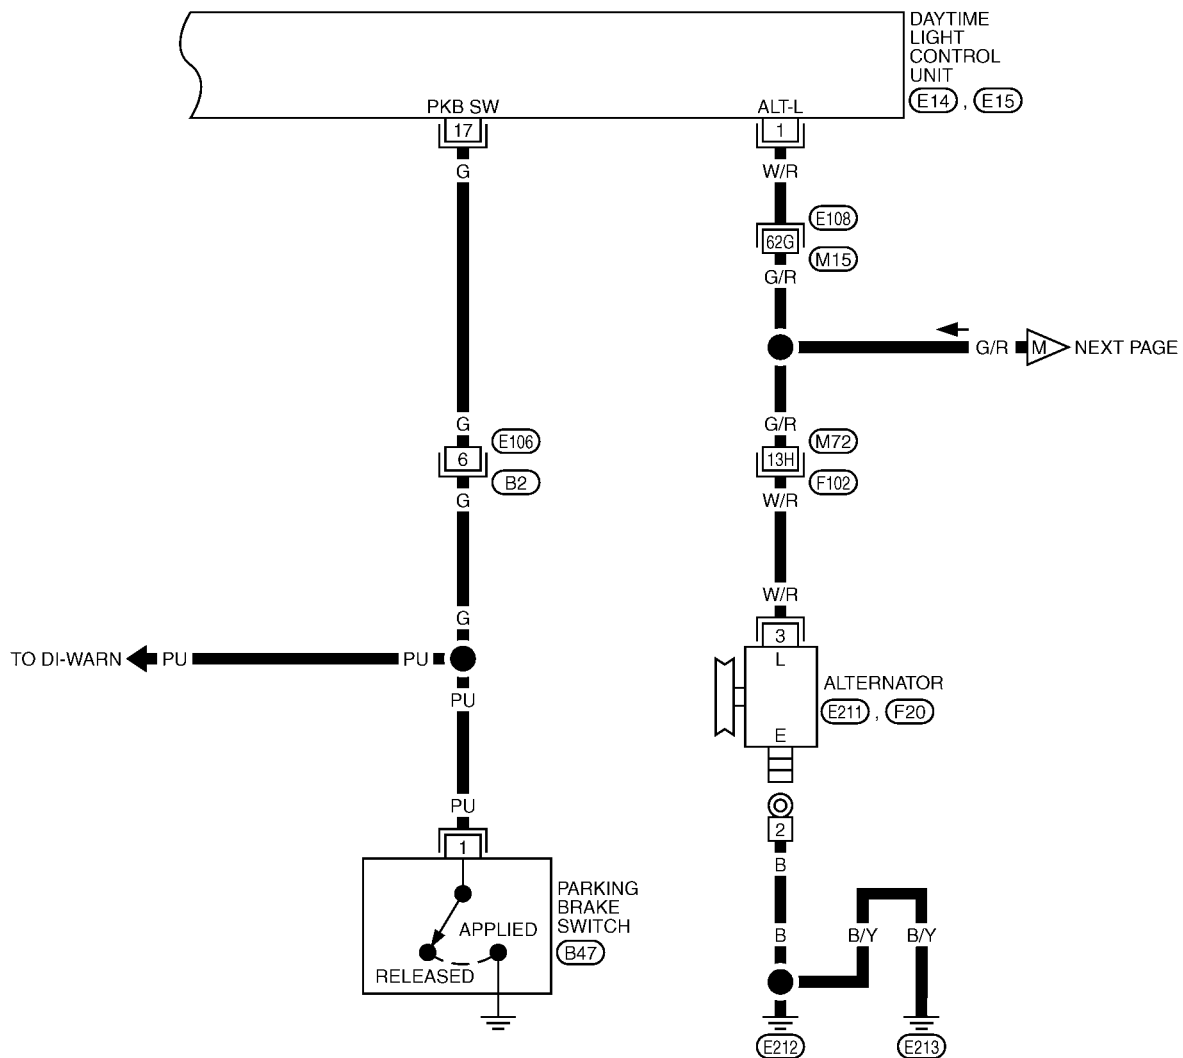


REFER TO THE FOLLOWING.
(E108), (F102) -SUPER MULTIPLE JUNCTION (SMJ)

TKWT0439E

HEADLAMP (FOR CANADA) - XENON TYPE -

LT-DTRL-06

DATA LINE

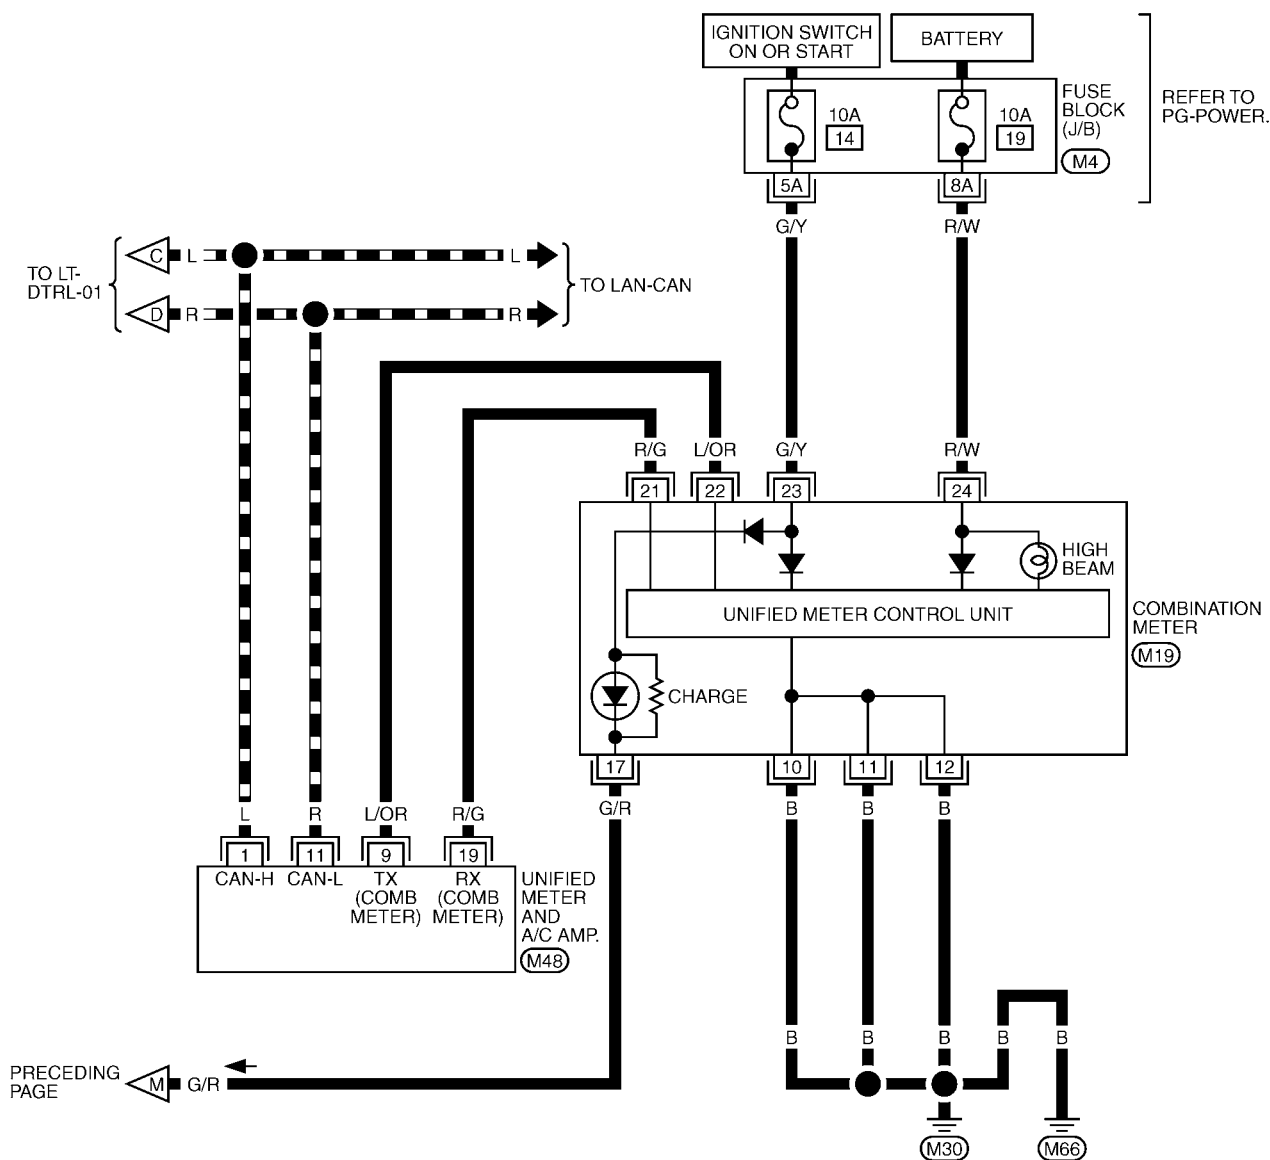

12	11	10	9	8	7	6	5	4	3	2	1
24	23	22	21	20	19	18	17	16	15	14	13

(M19)
W

1	2	3	4	5	6	7	8	9	10
11	12	13	14	15	16	17	18	19	20

(M48)
GY



REFER TO THE FOLLOWING.

(M4) -FUSE BLOCK-JUNCTION BOX (J/B)

TKWT0440E

HEADLAMP (FOR CANADA) - XENON TYPE -

Terminals and Reference Value for Daytime Light Control Unit

AKS0030H

Terminal No.	Wire color	Item	Condition	Reference value
1	W/R	Alternator	When turning ignition switch to "ON"	Less than 1V
			When engine is running	Battery voltage
			When turning ignition switch to "OFF"	Less than 1V
2	L/W	Start signal	When turning ignition switch to "START"	Battery voltage
			When turning ignition switch to "ON" from "START"	Less than 1V
			When turning ignition switch to "OFF"	Less than 1V
3	G/R	Ignition power supply	When turning ignition switch to "ON"	Battery voltage
4	R/Y	Lighting switch (LH hi beam)	When turning lighting switch to "HI BEAM"	Battery voltage
5	BR	Lighting switch (RH hi beam)	When turning lighting switch to "HI BEAM"	Battery voltage
6	L	RH hi beam	When lighting switch is turned to the 2ND position with "HI BEAM" or "FLASH TO PASS" position	Battery voltage
			When releasing parking brake with engine running and turning lighting switch to "OFF" (daytime light operation) CAUTION: Block wheels and ensure selector lever is in N or P position.	Battery voltage
7	SB	LH hi beam	When lighting switch is turned to the 2ND position with "HI BEAM" or "FLASH TO PASS" position	Battery voltage
			When releasing parking brake with engine running and turning lighting switch to "OFF" (daytime light operation) CAUTION: Block wheels and ensure selector lever is in N or P position.	Battery voltage
9	Y/G	LH hi beam (ground)	When turning lighting switch to the 2ND position with "HI BEAM" or "FLASH TO PASS" position	Less than 1V
			When releasing parking brake with engine running and turning lighting switch to "OFF" (daytime light operation) CAUTION: Block wheels and ensure selector lever is in N or P position.	Less than 1V
14	B	Ground	—	—
16	B	Ground	—	—
17	G	Parking brake switch	When parking brake is released	Battery voltage
			When parking brake is allied	Less than 1.7V

How to Proceed With Trouble Diagnosis

AKS0030I

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-64, "System Description"](#) .
3. Carry out the Preliminary Check. Refer to [LT-83, "Preliminary Check"](#) .
4. Check symptom and repair or replace the cause of malfunction.
5. Does the headlamp operate normally? If YES: GO TO 6. If NO: GO TO 4.
6. Inspection end.

HEADLAMP (FOR CANADA) - XENON TYPE -

Preliminary Check INSPECTION FOR POWER SUPPLY AND GROUND CIRCUIT

AKS0030J

1. CHECK FUSES

- Check for blown fuses.

UNIT	POWER SOURCE	FUSE No.
BCM	Battery	F
	Ignition switch ON or START position	1
	Ignition switch ACC or ON position	6
IPDM E/R	Battery	83
		84
		85
		86
		88
DAYTIME LIGHT CONTROL UNIT	Ignition switch START position	9
	Ignition switch ON or START position	88

Refer to [LT-76, "Wiring Diagram — DTRL —"](#) .

OK or NG

OK >> GO TO 2.

NG >> If fuse is blown, be sure to eliminate cause of malfunction before installing new fuse. Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#) .

2. POWER SUPPLY CIRCUIT CHECK FOR BCM

- Disconnect BCM connector.
- Check voltage between BCM harness connector and ground.

Terminals		Ignition switch position		
(+) (–)		OFF	ACC	ON
Connector	Terminal (Wire color)			
E105	7 (R)	Battery voltage	Battery voltage	Battery voltage
M1	35 (W/L)	0V	0V	Battery voltage
M1	36 (LG)	0V	Battery voltage	Battery voltage

OK or NG

OK >> GO TO 3.

NG >> Check harness for open or short between BCM and fuse.

3. GROUND CIRCUIT CHECK FOR BCM



Check continuity between BCM harness connector and ground.

Terminals			Continuity
(+)		(-)	
Connector	Terminal (wire color)		
E105	8 (B)	Ground	Yes

OK or NG

OK >> INSPECTION END.

NG >> Check harness ground circuit.

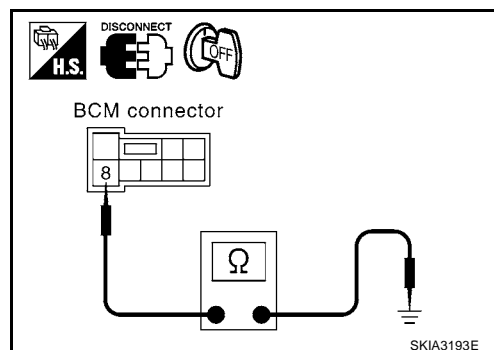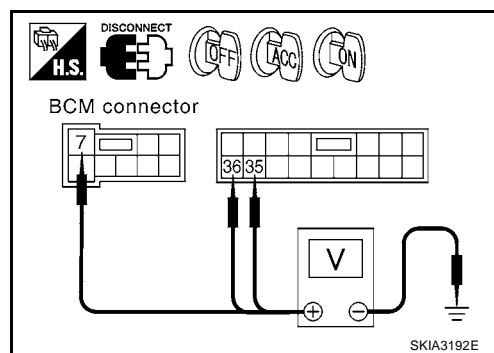

HEADLAMP (FOR CANADA) - XENON TYPE -

CONSULT-II Function

AKS0030K

- CONSULT-II executes the following functions by combining data reception and command transmission via the communication line from BCM. Work support, self-diagnosis, data monitor, and active test display.


BCM diagnosis part	Check item, diagnosis mode	Description
HEAD LAMP	Work support	Changes the setting for each function.
	Data monitor	Displays BCM input data in real time.
	Active test	Operation of electrical loads can be checked by sending drive signal to them.
BCM C/U	Self-diagnosis	BCM performs self-diagnosis of CAN communication and combination switch.

CONSULT-II BASIC OPERATION


CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carry out CAN communication.


- With the ignition switch OFF, connect CONSULT-II and CONSULT-II CONVERTER to the data link connector, then turn ignition switch ON.

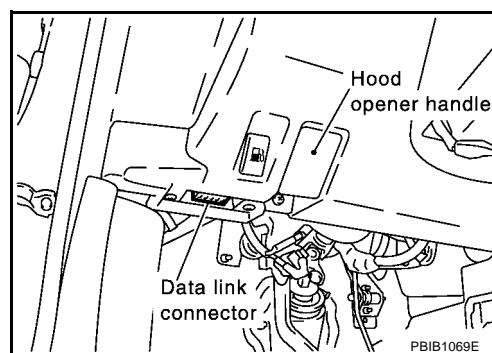

- Touch "START(NISSAN BASED VHCL)".

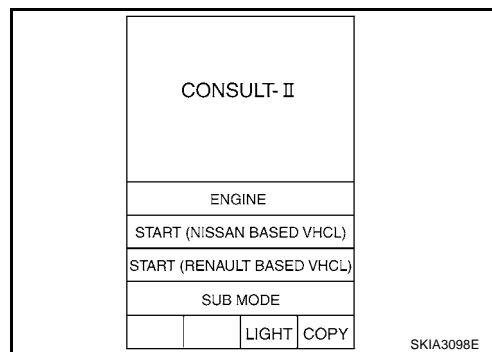


- Touch "BCM" on "SELECT SYSTEM" screen. If "BCM" is not indicated, go to [GI-40, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#).

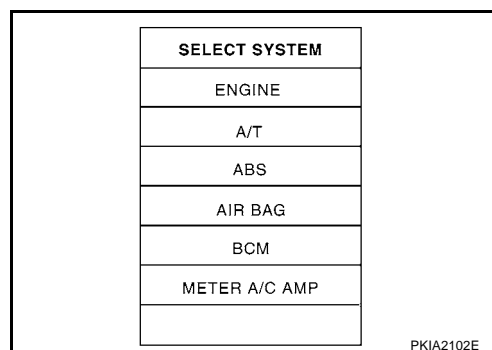

HEADLAMP (FOR CANADA) - XENON TYPE -

4. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.

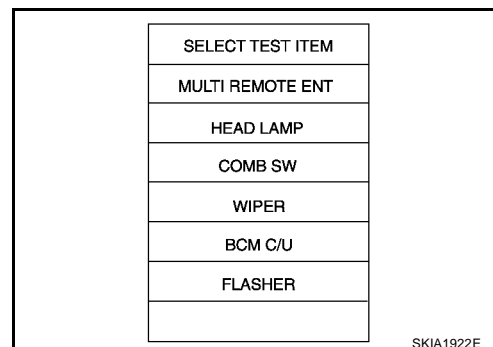

WORK SUPPORT

Operation Procedure

1. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.
2. Touch "WORK SUPPORT" on "SELECT DIAG MODE" screen.
3. Touch "BATTERY SAVER SET" on "SELECT WORK ITEM" screen.
4. Touch "START".
5. Touch "CHANGE SET".
6. The setting will be changed and "CUSTOMIZING COMPLETED" will be displayed.
7. Touch "END".

Display Item List

Item	Description	CONSULT-II	Factory setting
BATTERY SAVER SET	Exterior lamp battery saver control mode can be changed in this mode. Selects exterior lamp battery saver control mode between two ON/OFF.	ON	○
		OFF	—

DATA MONITOR

Operation Procedure

1. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.
2. Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.
3. Touch either "ALL SIGNALS" or "SELECTION FROM MENU" on the "DATA MONITOR" screen.

All signals	Monitors all the signals.
Selection from menu	Selects and monitors individual signal.

4. Touch "START".
5. When "SELECTION FROM MENU" is selected, touch individual items to be monitored. When "ALL SIGNALS" is selected, all the items will be monitored.
6. Touch "RECORD" while monitoring, then the status of the monitored item can be recorded. To stop recording, touch "STOP".

Display Item List

Monitor item		Contents
IGN ON SW	"ON/OFF"	Displays "IGN position (ON)/OFF, ACC position (OFF)" judged from the ignition switch signal.
ACC ON SW	"ON/OFF"	Displays "ACC (ON)/OFF, Ignition OFF (OFF)" status judged from ignition switch signal.
AUTO LIGHT SW ^{Note}	"OFF"	—
TAIL LAMP SW	"ON/OFF"	Displays status (lighting switch 1st position: ON/Others: OFF) of lighting switch judged from lighting switch signal.
HEAD LAMP SW	"ON/OFF"	Displays status (headlamp switch: ON/Others: OFF) of headlamp switch judged from lighting switch signal.
HI BEAM SW	"ON/OFF"	Displays status (high beam switch: ON/Others: OFF) of high beam switch judged from lighting switch signal.

HEADLAMP (FOR CANADA) - XENON TYPE -

Monitor item		Contents
PASSING SW	"ON/OFF"	Displays status (flash-to-pass switch: ON/Others: OFF) of flash-to-pass switch judged from lighting switch signal.
FR FOG SW ^{Nete}	"OFF"	—
DOOR SW - DR	"ON/OFF"	Displays status of the driver door as judged from the driver door switch signal. (Door is open: ON/Door is closed: OFF)
DOOR SW - AS	"ON/OFF"	Displays status of the passenger door as judged from the passenger door switch signal. (Door is open: ON/Door is closed: OFF)
DOOR SW - RR ^{Nete}	"OFF"	—
HEAD LAMP SW 2	"ON/OFF"	Displays status (headlamp switch 2: ON/Others: OFF) of headlamp switch 2 judged from lighting switch signal.
OPTICAL SENSOR ^{Nete}	[0V]	Display always indicates "0.00V"

NOTE:

This item is displayed, but cannot monitor it.

ACTIVE TEST

Operation Procedure

1. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.
2. Touch "ACTIVE TEST" on "SELECT DIAG MODE" screen.
3. Touch item to be tested and check operation of the selected item.
4. During the operation check, touching "BACK" deactivates the operation.

Display Item List

Test item	Description
TAIL LAMP	Allows tail lamp relay to operate by switching ON-OFF.
HEAD LAMP (LOW)	Allows headlamp relay to operate by switching ON-OFF.
HEAD LAMP (HI)	Allows headlamp relay to operate by switching ON-OFF.
FR FOG LAMP ^{Nete}	—

NOTE:

This item is displayed, but cannot test it.

SELF-DIAGNOSTIC RESULTS

Operation Procedure

1. Touch "BCM C/U" on "SELECT ITEM" screen.
2. Touch "SELF-DIAG RESULTS" on "SELECT DIAG MODE" screen.
3. Self-diagnostic results are displayed.

Display Item List

Items to be displayed	CONSULT-II display	Description
CAN communication	CAN communication [U1000]	Malfunction is detected in CAN communication.
CAN communication system	CAN communication system 1 to 6 [U1000]	Malfunction is detected in CAN system.
Combination switch	Diagnosis 1 - 5 systems open circuit	Malfunction is detected in combination switch system.

HEADLAMP (FOR CANADA) - XENON TYPE -

AKS0030L

Daytime Light Control Does Not Operate Properly

1. DAYTIME LIGHT CONTROL UNIT INSPECTION


1. Disconnect daytime light control unit connector.
2. Turn ignition switch ON.
3. Check voltage between daytime light control unit harness connector E13 terminal 3(G/R) and ground.

Battery voltage should exist

OK or NG

OK >> GO TO 2.

NG >> Repair or replace daytime light control unit power supply circuit harness.

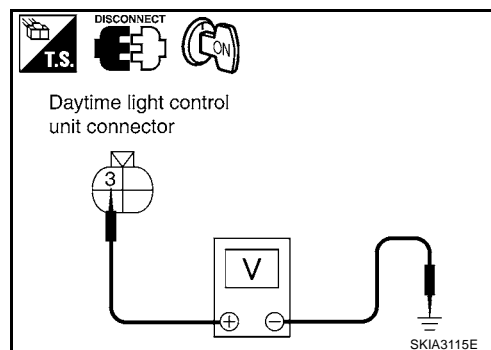

2. PARKING BRAKE SWITCH CIRCUIT CHECK


1. Turn ignition switch OFF.
2. Disconnect daytime light control unit connector and parking brake switch connector.
3. Check harness continuity between daytime light control unit harness connector E15 terminal 17(G) and parking brake switch harness connector B47 terminal 1(PU).

Continuity should exist

OK or NG

OK >> GO TO 3.

NG >> Repair harness or connector.

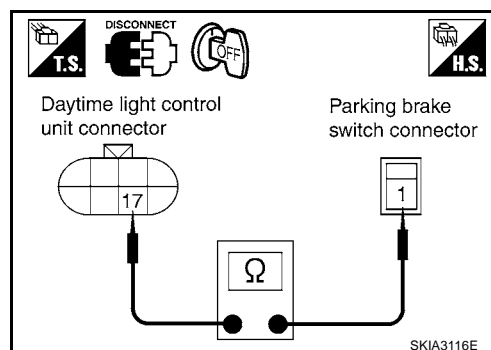

3. PARKING BRAKE SWITCH CHECK


1. Connect daytime light control unit connector and parking brake switch connector.
2. Turn ignition switch ON.
3. Check voltage between parking brake switch connector and ground, when parking brake is released.

Terminals			Condition	Voltage
(+) (Terminal wire color)		(-)		
Connector	Terminal (wire color)		Not released	Approx. 0(V)
B47	1(PU)	Ground	Released	Battery voltage

OK or NG

OK >> GO TO 4.

NG >> Repair parking brake switch.

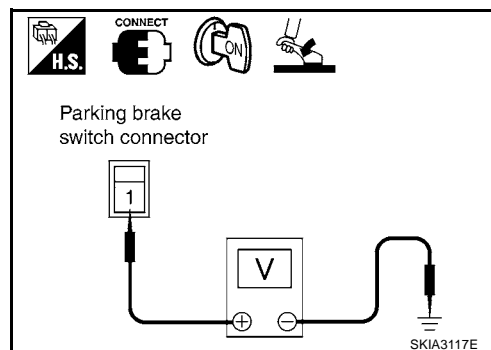

HEADLAMP (FOR CANADA) - XENON TYPE -


4. DAYTIME LIGHT CONTROL UNIT CIRCUIT CHECK

1. Turn ignition switch OFF.
2. Disconnect daytime light control unit connector and front combination lamp RH connector.
3. Check harness continuity between daytime light control unit harness connector E14 terminal 6(L) and front combination lamp RH harness connector E24 terminal 3(L).

Continuity should exist

OK or NG

- OK >> Replace daytime light control unit.
NG >> Repair harness or connector.

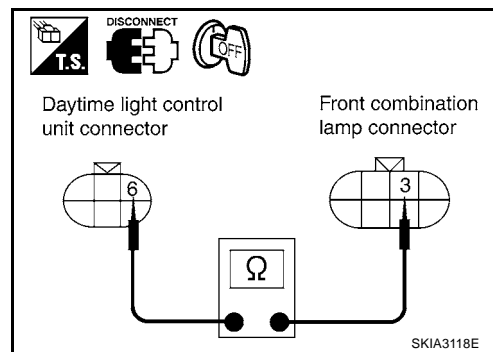

Headlamp High Beam Does Not Illuminate (Both Sides)

AKS0030M

1. HEADLAMP AUTO ACTIVE TEST

1. Start auto active test. Refer to [PG-24, "Auto Active Test"](#).
2. Check whether headlamp HI operates.

OK or NG

- OK >> GO TO 4.
NG >> GO TO 2.


2. DAYTIME LIGHT CONTROL UNIT INSPECTION

1. Disconnect daytime light control unit connector.
2. Start auto active test. Refer to [PG-24, "Auto Active Test"](#). When headlamp HI is operating, check voltage between daytime light control unit and ground.

Terminals			Voltage
(+)		(-)	
Connector	Terminal (wire color)		
E13	4 (R/Y)	Ground	Battery voltage
E14	5 (BR)		

OK or NG

- OK >> Replace daytime light control unit.
NG >> GO TO 3

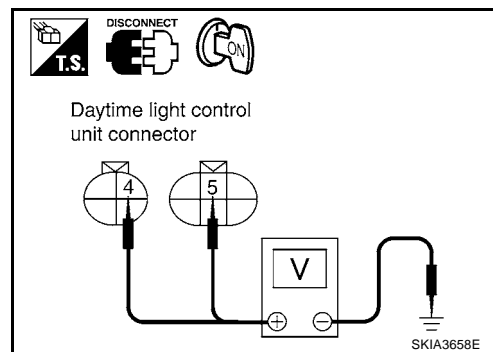

HEADLAMP (FOR CANADA) - XENON TYPE -


3. IPDM E/R CIRCUIT CHECK

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check harness continuity daytime light control unit harness connector E13 terminal 4(R/Y) and IPDM E/R harness connector E7terminal 22(R/Y).

Continuity should exist

4. Check harness continuity daytime light control unit harness connector E14 terminal 5(BR) and IPDM E/R harness connector E7terminal 24(BR).

Continuity should exist

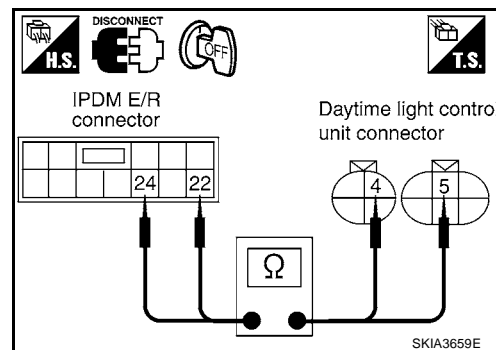

OK or NG

- OK >> Replace IPDM E/R.
NG >> Repair harness or connector.

4. COMBINATION SWITCH CIRCUIT CHECK

Select BCM on CONSULT-II. Carry out "BCM C/U" self-diagnosis.

Displayed results of self-diagnosis

No malfunction detected>> GO TO 5.

CAN communications or CAN system>> Inspect the BCM CAN communications system. Refer to [BCS-18, "CAN Communication Inspection Using CONSULT-II \(Self-Diagnosis\)"](#).

OPEN DETECT 1 - 5>> Combination switch system malfunction. Refer to [LT-164, "Combination Switch Inspection According to Self-Diagnostic Results"](#).

HEAD LAMP 1 SW or HEAD LAMP 2 SW>> Replace lighting switch.

SELF-DIAG RESULTS	
DTC RESULTS	TIME
NO DTC IS DETECTED. FURTHER TESTING MAY BE REQUIRED	

LKIA0073E

5. COMBINATION SWITCH INPUT SIGNAL CHECK

Select BCM on CONSULT-II. With "HEAD LAMP" data monitor, check that "HI BEAM SW" turns ON-OFF linked with operation of lighting switch.

OK or NG

- OK >> Replace BCM.
NG >> Replace lighting switch.

DATA MONITOR	
MONITOR	
IGN ON SW	ON
ACC ON SW	ON
AUTO LIGHT SW	OFF
TAIL LAMP SW	OFF
HEAD LAMP SW	OFF
HI BEAM SW	OFF
PASSING SW	OFF
FR FOG SW	OFF
DOOR SW-DR	OFF

LKIA0074E

HEADLAMP (FOR CANADA) - XENON TYPE -

RH High Beam Does Not Illuminate But RH Low Beam Illuminates

AKS0030N

1. DAYTIME LIGHT CONTROL CIRCUIT CHECK


1. Disconnect daytime light control unit connector and front combination lamp RH connector.
2. Check continuity between daytime light control unit harness connector E14 terminal 6(L) and front combination lamp RH harness connector E24 terminal 3(L).

Continuity should exist

OK or NG

OK >> GO TO 2.

NG >> Repair harness or connector.

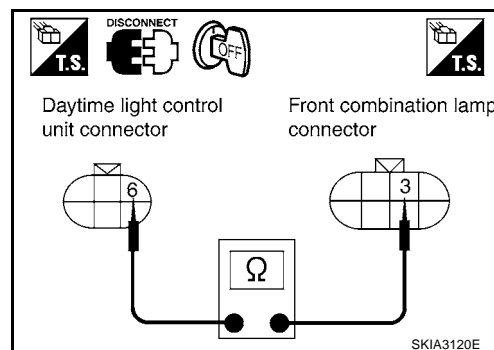

2. HEADLAMP INPUT SIGNAL CHECK


1. Connect daytime light control unit connector.
2. Start auto active test. Refer to [PG-24, "Auto Active Test"](#). When headlamp HI is operating, check voltage between front combination lamp RH harness connector E24 terminal 3(L) and ground.

Battery voltage should exist

OK or NG

OK >> Check headlamp bulbs.

NG >> Replace daytime light control unit.

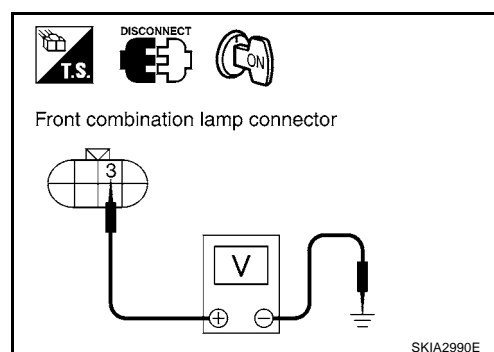

LH High Beam Does Not Illuminate But LH Low Beam Illuminate

AKS0030O

1. DAYTIME LIGHT CONTROL CIRCUIT CHECK


1. Disconnect daytime light control unit connector and front combination lamp LH connector.
2. Check continuity between daytime light control harness connector E13 terminal 7(SB) and front combination lamp LH harness connector E40 terminal 3(SB).

Continuity should exist

OK or NG

OK >> GO TO 2.

NG >> Repair harness or connector.

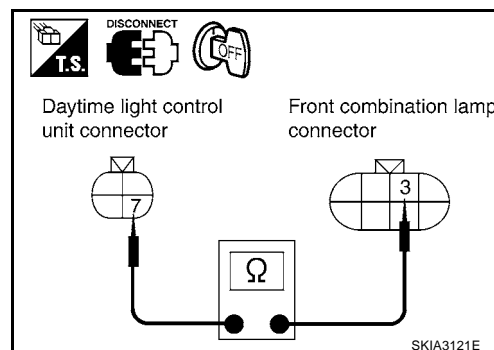

2. DAYTIME LIGHT CONTROL CIRCUIT CHECK


1. Disconnect daytime light control unit connector.
2. Check continuity between daytime light control harness connector E15 terminal 9(Y/G) and front combination lamp LH harness connector E40 terminal 4(Y/G).

Continuity should exist

OK or NG

OK >> GO TO 3.

NG >> Repair harness or connector.

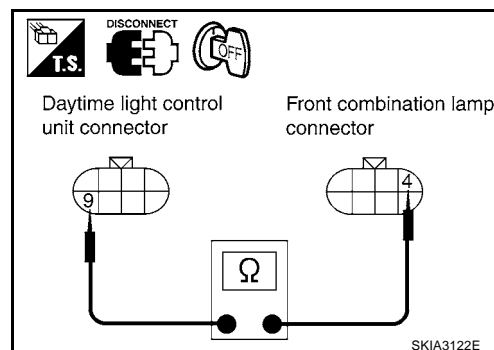

HEADLAMP (FOR CANADA) - XENON TYPE -


3. HEADLAMP INPUT SIGNAL CHECK

1. Connect daytime light control unit connector.
2. Start auto active test. Refer to [PG-24, "Auto Active Test"](#) . When headlamp HI is operating, check voltage between front combination lamp LH harness connector E40 terminal 3(SB) and ground.

Battery voltage should exist

OK or NG

- OK >> Check headlamp bulbs.
NG >> Replace daytime light control unit.

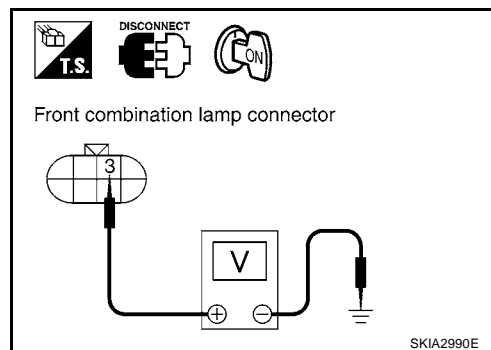

Headlamp Low Beam Does Not Illuminate (Both Sides)

AKS0030P

1. HEAD LAMP AUTO ACTIVE TEST

1. Start auto active test. Refer to [PG-24, "Auto Active Test"](#) .
2. Check whether headlamp LO operates.

OK or NG

- OK >> GO TO 4.
NG >> GO TO 2.

2. HEAD LAMP LH OR RH CIRCUIT CHECK

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector and front combination lamp LH or RH connector.
3. Check continuity between IPDM E/R harness connector E7 terminal 27(R) and front combination lamp RH harness connector E24 terminal 7(R).


Continuity should exist

4. Check continuity between IPDM E/R harness connector E7 terminal 21(R/B) and front combination lamp LH harness connector E40 terminal 7(R/B).

Continuity should exist

OK or NG

- OK >> GO TO 3.
NG >> Repair harness or connector.

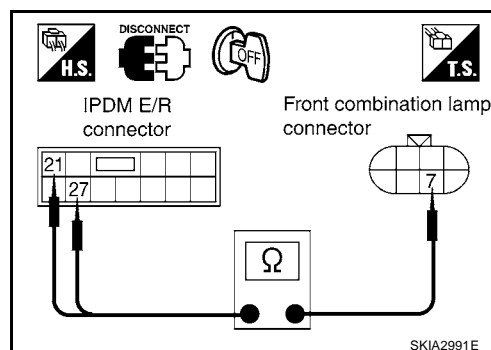


HEADLAMP (FOR CANADA) - XENON TYPE -

3. HEADLAMP INPUT SIGNAL CHECK

1. Connect IPDM E/R connector.
2. Start auto active test. Refer to [PG-24, "Auto Active Test"](#). When headlamp LO is operating, check voltage between front combination lamp LH or RH connector terminals and ground.

Terminals			Voltage	
(+)		(-)		
Connector	Terminal (wire color)			
RH	E24	7 (R)	Ground	Battery voltage
LH	E40	7 (R/B)		

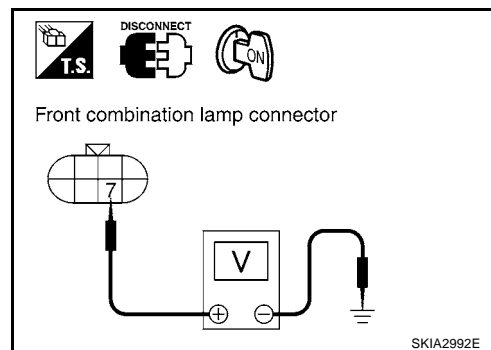

OK or NG

- OK >> Inspect headlamp harness and connectors, ballasts (HID control unit), and xenon bulbs.
NG >> Replace IPDM E/R.

4. COMBINATION SWITCH CIRCUIT CHECK

Select BCM on CONSULT-II. Carry out "BCM C/U" self-diagnosis.

Displayed results of self-diagnosis

No malfunction detected>> GO TO 5.

CAN communications or CAN system>> Inspect the BCM CAN communications system. Refer to [BCS-18, "CAN Communication Inspection Using CONSULT-II \(Self-Diagnosis\)"](#).

OPEN DETECT 1 - 5>> Combination Switch System malfunction. Refer to [LT-164, "Combination Switch Inspection According to Self-Diagnostic Results"](#).

HEAD LAMP 1 SW or HEAD LAMP 2 SW>> Replace lighting switch.

SELF-DIAG RESULTS	
DTC RESULTS	TIME
NO DTC IS DETECTED. FURTHER TESTING MAY BE REQUIRED	

LKIA0073E

5. COMBINATION SWITCH INPUT SIGNAL CHECK

Select BCM on CONSULT-II. With "HEAD LAMP" data monitor, check that "HEAD LAMP SW" and "HEAD LAMP SW 2" turn ON-OFF with operation of lighting switch.

OK or NG

- OK >> Replace BCM.
NG >> ● Replace lighting switch.
● If one of "HEAD LAMP SW" and "HEAD LAMP SW 2" is NG, replace both BCM and lighting switch.

DATA MONITOR	
MONITOR	
HEAD LAMP SW	OFF
HIBEAM SW	OFF
PASSING SW	OFF
FR FOG SW	OFF
DOOR SW-DR	OFF
DOOR SW-AS	OFF
DOOR SW-RR	OFF
HEAD LAMP SW2	OFF
OPTICAL SENSOR	0.00V

SKIA3661E

HEADLAMP (FOR CANADA) - XENON TYPE -

RH Low Beam Does Not Illuminate But RH High Beam Illuminates

AKS0030Q

1. CHECK BULB

- Inspect bulb of lamp which does not illuminate.
- Inspect ballasts (HID control unit) and xenon bulb of lamp which does not illuminate. (Xenon models)

OK or NG

OK >> GO TO 2.

NG >> ● (step1) Replace xenon bulb with other side bulb or new one. (If eclampsia illuminate correctly, replace the xenon bulb.)

- (step2) Replace the ballasts (HID control unit) with other side ballasts or new one. (If eclampsia illuminate correctly, replace the ballasts.)

2. HEADLAMPS CIRCUIT CHECK


1. Disconnect IPDM E/R connector and front combination lamp RH connector.
2. Check continuity between IPDM E/R harness connector E7 terminal 27(R) and front combination lamp RH harness connector E24 terminal 7(R).

Continuity should exist

OK or NG

OK >> Replace IPDM E/R.

NG >> Repair harness or connector.

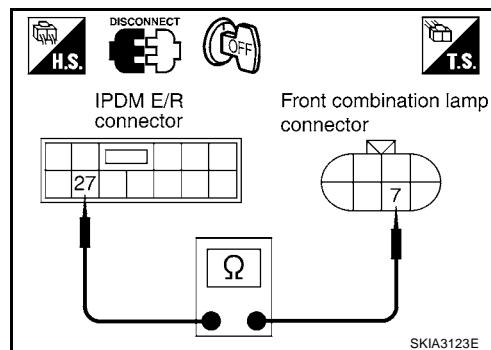

LH Low Beam Does Not Illuminate But LH High Beam Illuminates

AKS0030R

1. CHECK BULB

Inspect ballasts (HID control unit) and xenon bulb of lamp which does not illuminate.

OK or NG

OK >> GO TO 2.

NG >> ● (step1) Replace xenon bulb with other side bulb or new one. (If eclampsia illuminate correctly, replace the xenon bulb.)

- (step2) Replace the ballasts (HID control unit) with other side ballasts or new one. (If eclampsia illuminate correctly, replace the ballasts.)

2. HEADLAMPS CIRCUIT CHECK


1. Disconnect IPDM E/R connector and front combination lamp LH connector.
2. Check continuity between IPDM E/R harness connector E7 terminal 21(R/B) and front combination lamp LH harness connector E40 terminal 7(R/B).

Continuity should exist

OK or NG

OK >> Replace IPDM E/R.


NG >> Repair harness or connector.

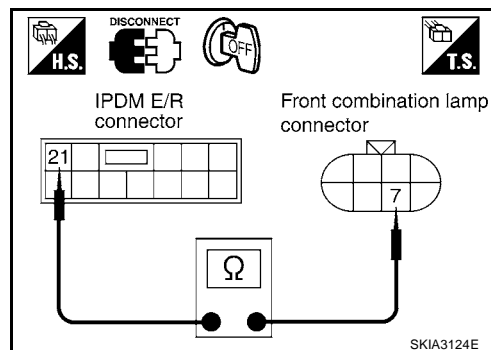

HEADLAMP (FOR CANADA) - XENON TYPE -

Aiming Adjustment

AKS003MI

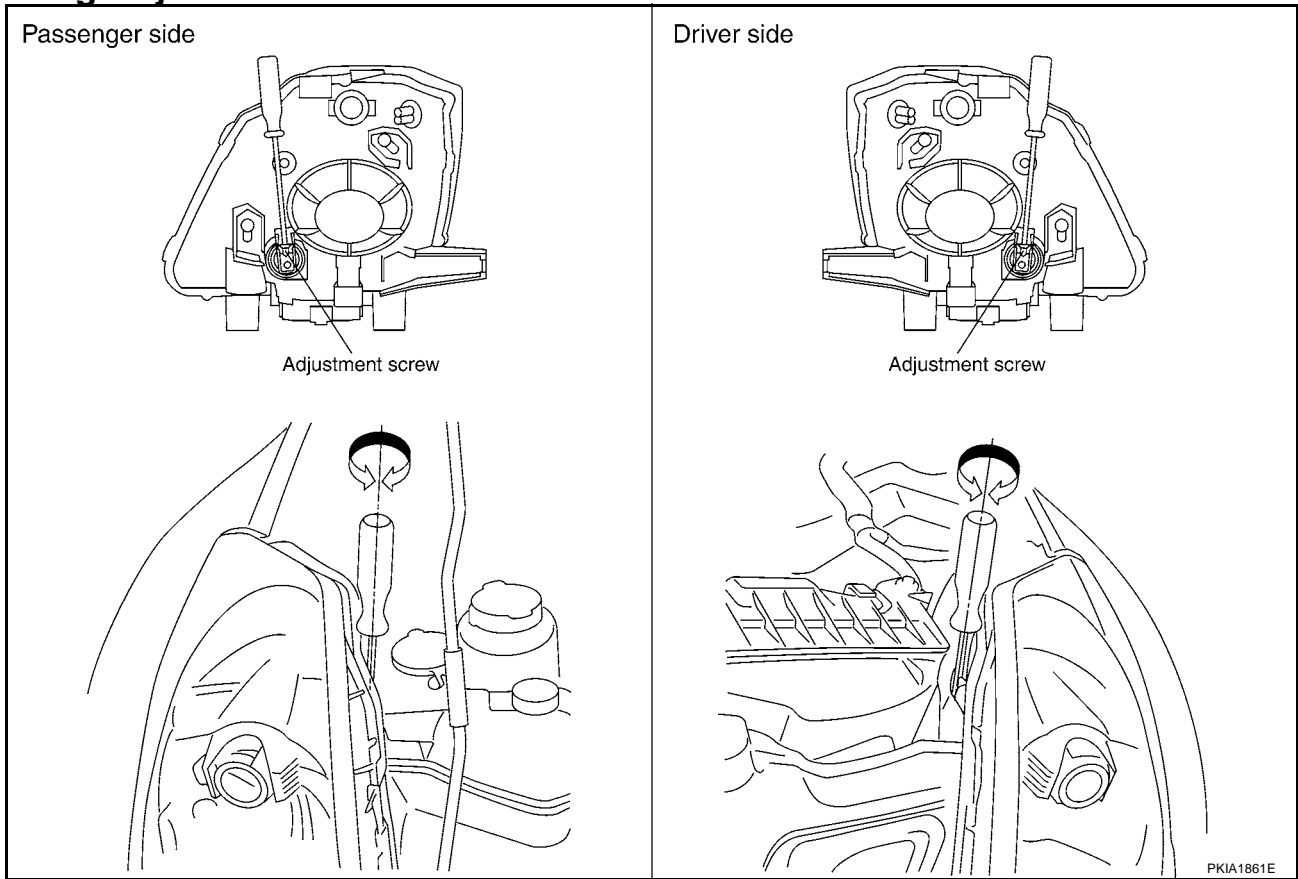

PREPARATION BEFORE ADJUSTING

For details, refer to the regulations in your own country.

Before performing aiming adjustment, check the following.


1. Keep all tires inflated to correct pressures.
2. Place vehicle on flat surface.
3. Set that there is no-load in vehicle other than the driver (or equivalent weight placed in driver's position). Coolant, engine oil filled up to correct level and full fuel tank.

LOW BEAM AND HIGH BEAM

1. Turn headlamp low beam on.
2. Use adjusting screws to perform aiming adjustment.

HEADLAMP (FOR CANADA) - XENON TYPE -

ADJUSTMENT USING AN ADJUSTMENT SCREEN (LIGHT/DARK BORDERLINE)

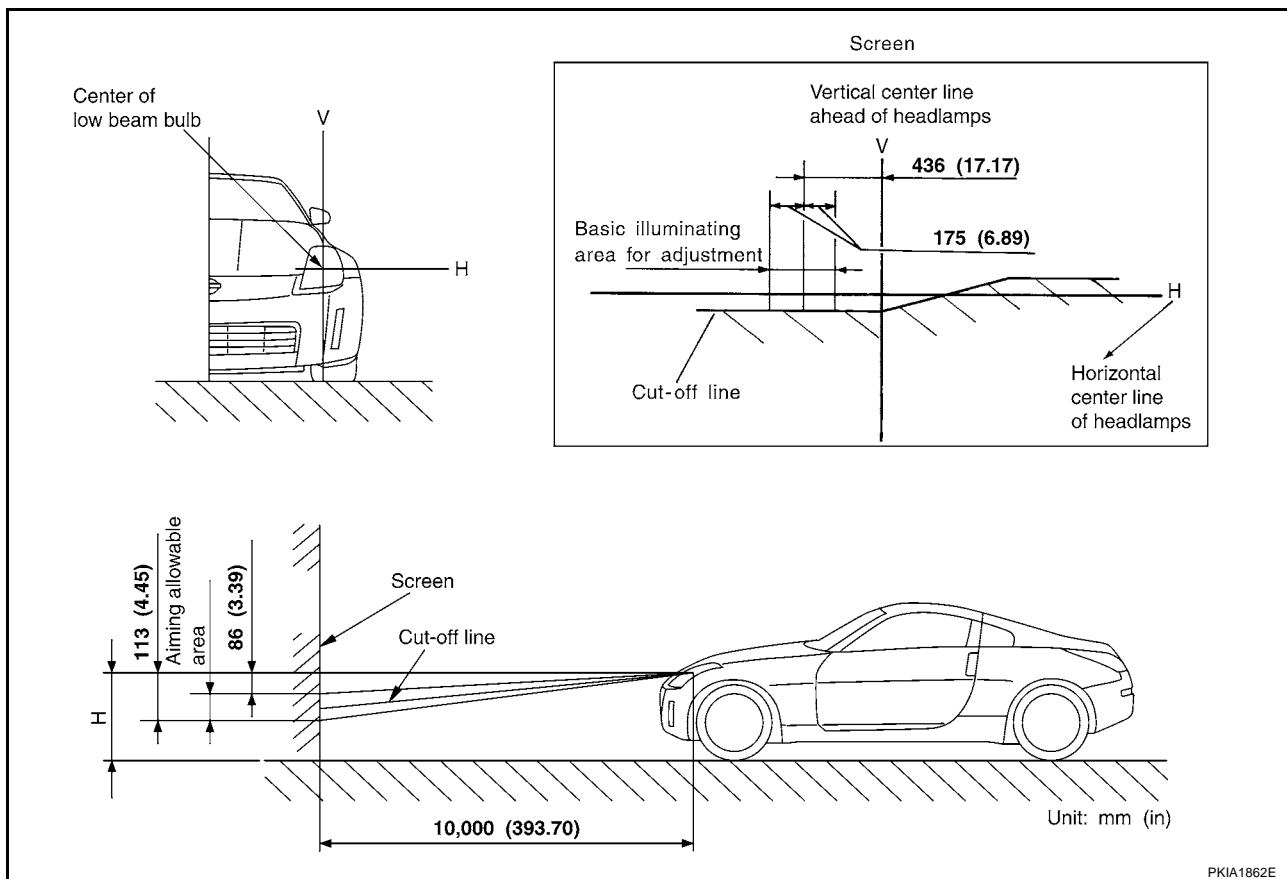

If the vehicle front body has been repaired and/or the headlamp assembly has been replaced, check aiming. Use the aiming chart shown in the figure.

- Basic illumination area for adjustment should be within the range shown on the aiming chart. Adjust headlamp accordingly.

Bulb Replacement HEADLAMP (UPPER) LOW BEAM


- Turn lighting switch OFF.
- Remove headlamp. Refer to [LT-97, "Removal and Installation"](#).
- Turn plastic cap counterclockwise and unlock it.
- Turn bulb socket counterclockwise and unlock it.
- Unlock retaining spring and remove bulb from headlamp.
- Install in reverse order of removal.

NOTE:

After installation, aiming adjustment. Refer to [LT-94, "Aiming Adjustment"](#).

Headlamp (upper) low beam
(Xenon)

: 12V - 35W (D2R)

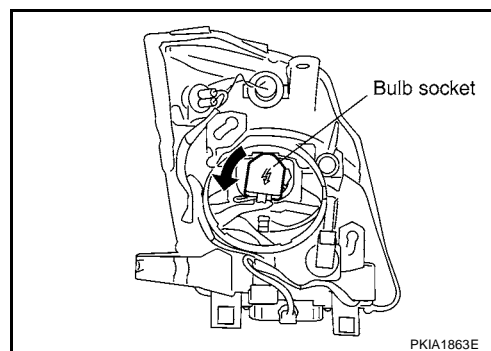

HEADLAMP (FOR CANADA) - XENON TYPE -

HEADLAMP (LOWER) HIGH BEAM

1. Turn lighting switch OFF.
2. Open the driver and front passenger window, and then disconnect the battery negative cable.

CAUTION:

After the battery cables are disconnected, do not open/close the driver and/or front passenger door with the window in the full up position. The automatic window adjusting function will not work and the side roof panel may be damaged.

3. Remove fender protector (front). Refer to [EI-21, "FENDER PROTECTOR"](#) in "EI" section.
4. Turn plastic cap counterclockwise and unlock it.
5. Disconnect bulb socket.
6. Unlock retaining spring and remove bulb from headlamp.
7. Install in reverse order of removal.

Headlamp (lower) high beam : 12V - 55W (H7)

PARKING LAMP (CLEARANCE LAMP)

1. Turn lighting switch OFF.
2. Remove fender protector (front). Refer to [EI-21, "FENDER PROTECTOR"](#) in "EI" section.
3. Turn bulb socket counterclockwise and unlock it.
4. Remove bulb from its socket.
5. Install in reverse order of removal.

Parking lamp (Clearance lamp) : 12V - 5W

FRONT TURN SIGNAL LAMP

1. Turn lighting switch OFF.
2. Remove fender protector (front). Refer to [EI-21, "FENDER PROTECTOR"](#) in "EI" section.
3. Turn bulb socket counterclockwise and unlock it.
4. Remove bulb from its socket.
5. Install in reverse order of removal.

Front turn signal lamp : 12V - 21W

FRONT SIDE MARKER LAMP

1. Turn lighting switch OFF.
2. Remove fender protector (front). Refer to [EI-21, "FENDER PROTECTOR"](#) in "EI" section.
3. Turn bulb socket counterclockwise and unlock it.
4. Remove bulb from its socket.
5. Install in reverse order of removal.

Front side marker lamp : 12V - 5W

CAUTION:

After installing bulb, be sure to install plastic cap and bulb socket securely to insure watertightness.

HEADLAMP (FOR CANADA) - XENON TYPE -

Removal and Installation

AKS003RO


REMOVAL

1. Open the driver and front passenger window, and then disconnect the battery negative cable.

CAUTION:

After the battery cables are disconnected, do not open/close the driver and/or front passenger door with the window in the full up position. The automatic window adjusting function will not work and the side roof panel may be damaged.

2. Remove front bumper. Refer to [EI-14, "FRONT BUMPER"](#) in "EI" section.
3. Remove headlamp mounting bolts.
4. Pull head lamp toward vehicle front, disconnect connector, and remove headlamp.

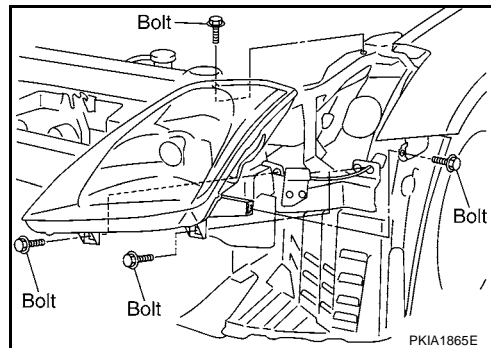

INSTALLATION

Installation in the reverse order if removal. Be careful of the following.

Headlamp mounting bolt:



:5.7-6.5N-m (0.59-0.66 kg-m, 51-57 in lb)


NOTE:

After installation, aiming adjustment. Refer to [LT-94, "Aiming Adjustment"](#) .

HEADLAMP (FOR CANADA) - XENON TYPE -

Disassembly and Assembly

AKS003ML

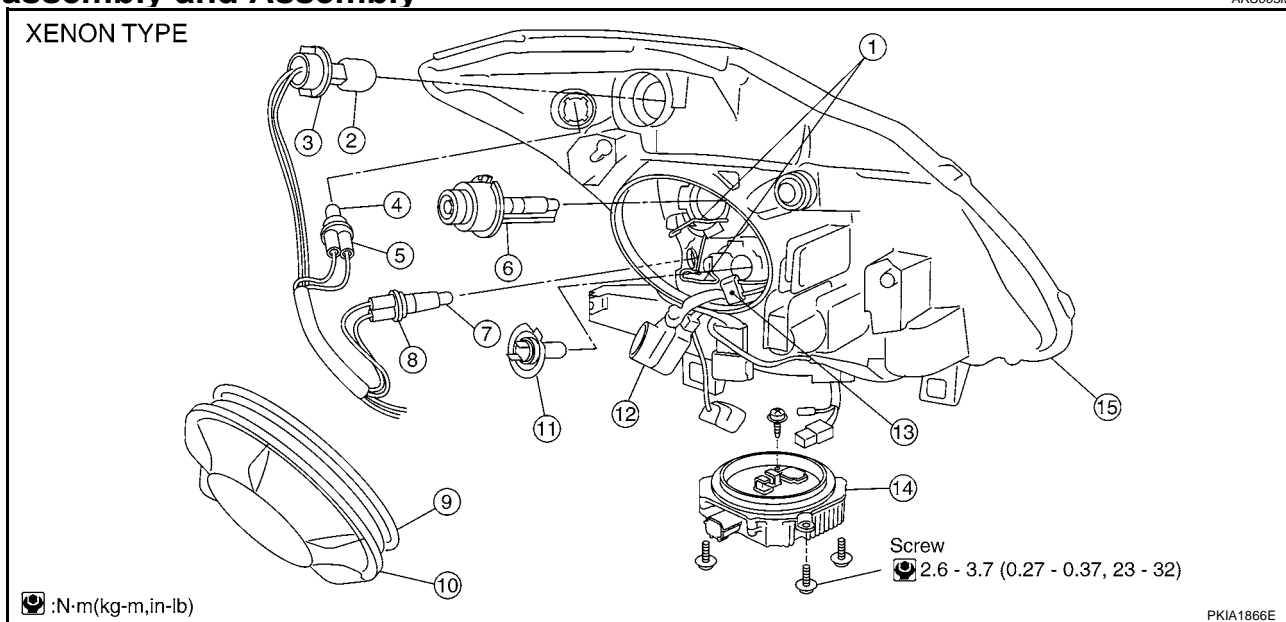

- | | | |
|---------------------------------------|--|---------------------------------------|
| 1. Retaining spring | 2. Front turn signal lamp bulb | 3. Front turn signal lamp bulb socket |
| 4. Side marker lamp bulb | 5. Side marker lamp bulb socket | 6. Xenon bulb |
| 7. Parking lamp (Clearance lamp) bulb | 8. Parking lamp (Clearance lamp) bulb socket | 9. Seal rubber |
| 10. Plastic cap | 11. Halogen bulb (high) | 12. Xenon bulb socket |
| 13. Halogen bulb socket | 14. HID C/U | 15. Headlamp housing assembly |

DISASSEMBLY

1. Turn plastic cap counterclockwise and unlock it.
2. Turn xenon bulb socket counterclockwise, and unlock it.
3. Unlock retaining spring, and remove xenon bulb (low).
4. Disconnect HID control unit connector, and remove HID control unit screws.
5. Disconnect the socket connected to the halogen bulb (high).
6. Unlock retaining spring, and remove halogen bulb (high).
7. Turn parking lamp bulb socket counterclockwise and unlock it.
8. Remove parking lamp bulb from its socket.
9. Turn front turn signal lamp bulb socket counterclockwise and unlock it.
10. Remove front turn signal lamp bulb from its socket.
11. Turn front side marker lamp bulb socket counterclockwise and unlock it.
12. Remove front side marker lamp bulb from its socket.

HEADLAMP (FOR CANADA) - XENON TYPE -

ASSEMBLY

Assemble in reverse order of disassembly. Be careful of the following:

HID control unit mounting screw:




:2.6-3.7 Nm (0.27-0.37 kg-m, 23-32 in-lb)

CAUTION:

- When HID control unit is removed, reinstall it securely and avoid any looseness.
- After installing bulb, be sure to install plastic cap and bulb socket securely to insure watertightness

Serving to Replace Headlamps When Damaged

If only installation part as shown in the figure is damaged, and headlamp housing itself is not damaged, repair can be completed easily by installing correction brackets.

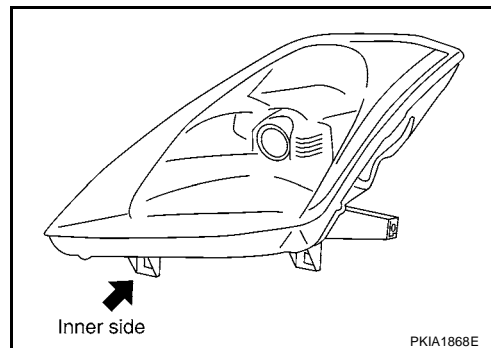

INSTALLATION OF HEADLAMP BRACKET

1. Remove headlamps. Refer to [LT-97, "Removal and Installation"](#).
2. Cut damaged section of installation part, then shape with sandpaper.
3. Attach each correction bracket to headlamp housing boss with 2 screws.

RH headlamp


Inner side

26040 CD000

LH headlamp

Inner side

26090 CD000

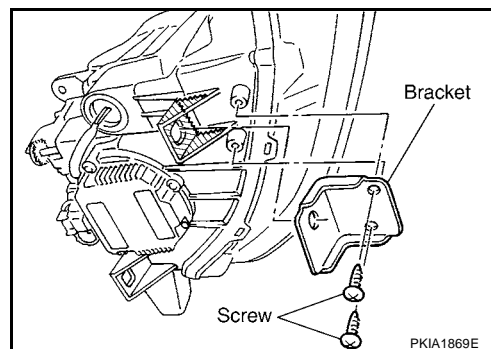


HEADLAMP (FOR CANADA) - CONVENTIONAL TYPE -

HEADLAMP (FOR CANADA) - CONVENTIONAL TYPE -

PFP:26010

Component Parts and Harness Connector Location

AKS0031D

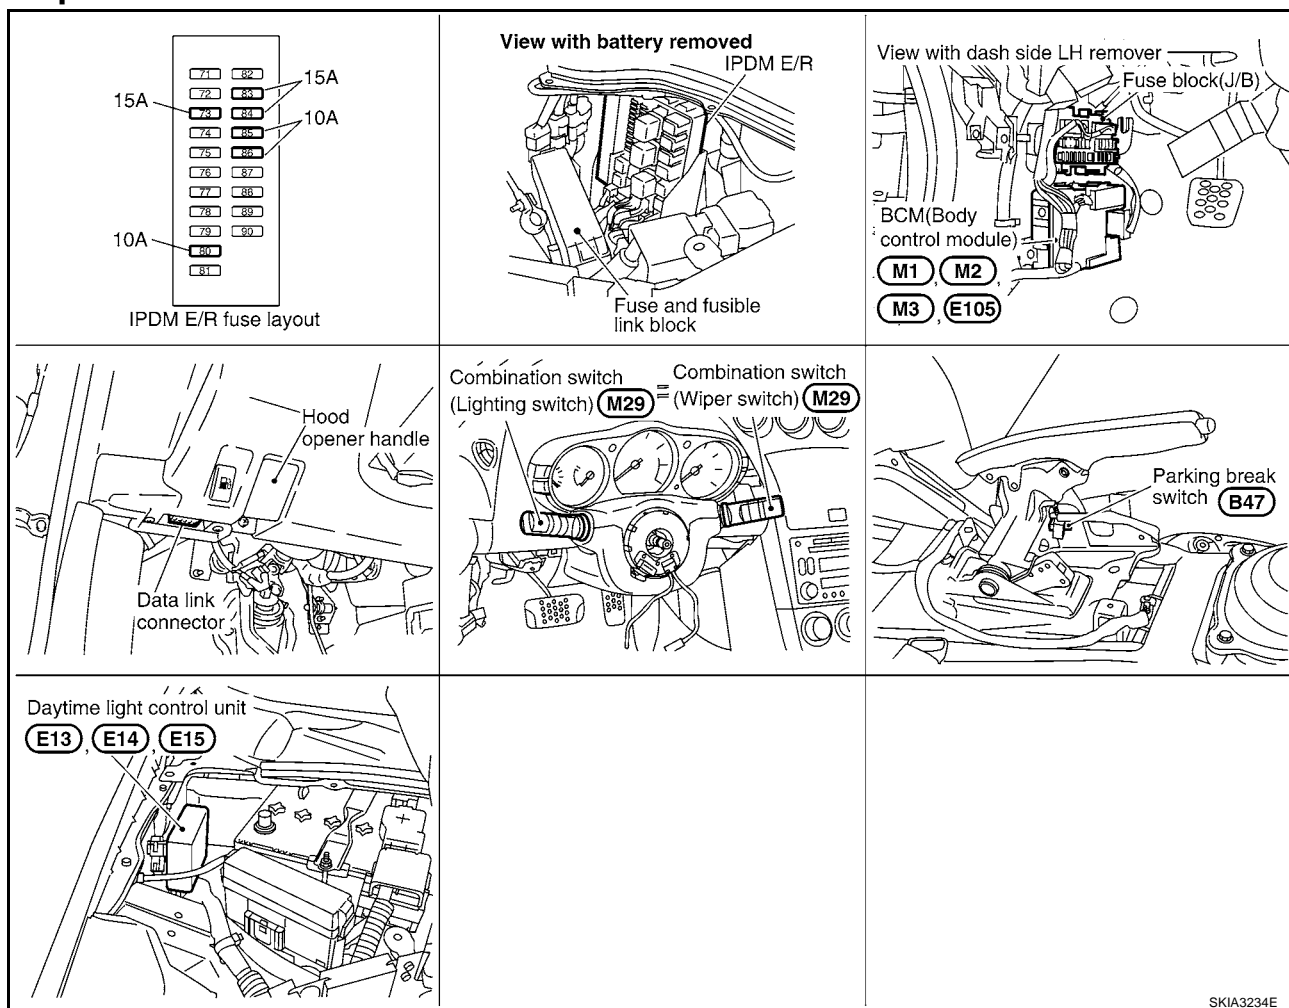

SKIA3234E

System Description

AKS0031E

The headlamp system for Canada vehicles is equipped with a daytime light control unit that activates the high beam headlamps at approximately half illumination whenever the engine is running. If the parking brake is applied before the engine is started the daytime lights will not be illuminated. The daytime lights will illuminate once the parking brake is released. Thereafter, the daytime lights will continue to operate when the parking brake is applied.

And battery saver system is controlled by the BCM.

Power is supplied at all times

- to headlamp high relay located in the IPDM E/R (intelligent power distribution module engine room).

Power is also supplied at all times

- to BCM (body control module) terminal 7
- through 40A fusible link [letter F, located in the fuse and fusible link box].

With the ignition switch in the ON or START position, power is supplied

- to daytime light control unit terminal 3
- through 10A fuse [No. 88, located in the IPDM E/R (intelligent power distribution module engine room)], and
- to BCM (body control module) terminal 35
- through 10A fuse [No. 1, located in the fuse block (J/B)].

With the ignition switch in the ACC or ON position, power is supplied

- to BCM (body control module) terminal 36
- through 10A fuse [No. 6, located in the fuse block (J/B)].

HEADLAMP (FOR CANADA) - CONVENTIONAL TYPE -

With the ignition switch in the START position, power is supplied

- to daytime light control unit terminal 2
- through 10A fuse [No. 9, located in the fuse block (J/B)].

Ground is supplied

- to daytime light control unit terminal 16
- through grounds E17, E43 and F152, and
- to BCM (body control module) terminal 8
- through grounds E17, E43 and F152.

HEADLAMP OPERATION

Low Beam Operation

With the lighting switch in 2ND position, the BCM (body control module) receives input signal requesting the headlamps to illuminate. This input signal is communicated to the IPDM E/R (intelligent power distribution module engine room) across the CAN communication lines. The CPU (central processing unit) in the IPDM E/R controls the headlamp low relay coil, which when energized, directs power

- to 15A fuse [No. 83, located in the IPDM E/R (intelligent power distribution module engine room)]
- through terminal 27 of the IPDM E/R
- to terminal 6 of front combination lamp RH, and
- to 15A fuse [No. 84, located in the IPDM E/R (intelligent power distribution module engine room)]
- through terminal 21 of the IPDM E/R (intelligent power distribution module engine room)
- to terminal 11 of the daytime light control unit
- through terminal 12 of the daytime light control unit
- to terminal 6 of front combination lamp LH.

Ground is supplied at all times

- to terminal 3 of front combination lamp RH
- through grounds E17, E43 and F152, and
- to terminal 3 of front combination lamp LH
- through terminal 9 of the daytime light control unit
- to terminals 14 of the daytime light control unit
- through grounds E17, E43 and F152.

With power and ground supplied, low beam headlamps illuminate.

High Beam Operation (When engine stopped)/Flash-to-Pass Operation

With the lighting switch in 2ND position and placed in HIGH or PASS position, the BCM (body control module) receives input signal requesting the headlamp high beams to illuminate. This input signal is communicated to the IPDM E/R (intelligent power distribution module engine room) across the CAN communication lines. The CPU (central processing unit) in the IPDM E/R controls the headlamp high relay coil turned on, which when energized, directs power

- to front combination lamp LH terminal 2
- through daytime light control unit terminal 7 and 4
- to IPDM E/R terminal 22
- through 10 A fuse [No.85,located in IPDM E/R (intelligent power distribution module engine room)],and
- to front combination lamp RH terminal 2
- through daytime light control unit terminal 6 and 5
- to IPDM E/R terminal 24
- through 10 A fuse [No.86,located in IPDM E/R (intelligent power distribution module engine room)]

Ground is supplied

- to front combination lamp LH terminal 3
- through of the daytime light control unit terminal 9 and 14
- through grounds E17, E43 and F152.
- to terminal 3 of front combination lamp RH
- through grounds E17, E43 and F152

HEADLAMP (FOR CANADA) - CONVENTIONAL TYPE -

With power and ground supplied, the high beam headlamps illuminate.

Unified meter and A/C amp receives signal from the BCM across the CAN communication lines, and then combination meter indicator illuminates high beam.

COMBINATION SWITCH READING FUNCTION

Refer to [LT-159, "Combination Switch Reading Function"](#) .

EXTERIOR LAMP BATTERY SAVER CONTROL

With the combination switch (lighting switch) is in the 2ND position (ON), and the ignition switch is turned from ON or ACC to OFF, the battery saver control function is activated.

Under this condition, the headlamps remain illuminated for 5 minutes, then the headlamps are turned off.

Exterior lamp battery saver control mode can be changed by the function setting of CONSULT-II.

DAYTIME LIGHT OPERATION

With the engine running, the lighting switch in the OFF or 1ST position and parking brake released, power is supplied

- through daytime light control unit terminal 7
- to terminal 2 of LH front combination lamp
- through terminal 3 of LH front combination lamp
- to daytime light control unit terminal 9
- through daytime light control unit terminal 6
- to terminal 2 of RH front combination lamp.

Ground is supplied

- to terminal 3 of RH front combination lamp
- through grounds E17, E43 and F152, and
- to daytime light control unit terminal 14
- through grounds E17, E43 and F152.

Because the high beam headlamps are now wired in series, they operate at half illumination.

If the lighting switch is in the HIGH position, daytime light operation is canceled. On this occasion, power is supplied

- through terminal 21 of the IPDM E/R
- to daytime light control unit terminal 2

Daytime light control unit is canceled power supplying from terminal 2 to terminal 3 of front combination lamp RH (series power supplying is canceled). And then low beam is ON.

OPERATION

After starting the engine with the lighting switch in the "OFF" or 1ST position, the headlamp high beam automatically turns on. Lighting switch operations other than the above are the same as conventional light systems.

Engine		With engine stopped									With engine running								
Lighting switch		OFF			1ST			2ND			OFF			1ST			2ND		
		Hi	Lo	P	Hi	Lo	P	Hi	Lo	P	Hi	Lo	P	Hi	Lo	P	Hi	Lo	P
Head-lamp	High beam	—	—	—	—	—	×	×	—	×	●*	●*	×	●*	●*	×	×	—	×
	Low beam	—	—	—	—	—	×	×	×	×	—	—	×	—	—	×	×	×	×
Tail lamp		—	—	—	×	×	×	×	×	×	—	—	—	×	×	×	×	×	×
License and instrument illumination lamp		—	—	—	×	×	×	×	×	×	—	—	—	×	×	×	×	×	×

- Hi: "HIGH BEAM" position
- Lo: "LOW BEAM" position
- P: "FLASH TO PASS" position
- ×: Lamp "ON"
- —: Lamp "OFF"

HEADLAMP (FOR CANADA) - CONVENTIONAL TYPE -

- ●: Lamp dims. (Added functions)
- *: When starting the engine with the parking brake released, the daytime light will come ON.
When starting the engine with the parking brake pulled, the daytime light will not come ON.

CAN Communication System Description

AKS003N3

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

CAN Communication Unit

AKS003N4


Body type	Coupe						
Axle	2WD						
Engine	VQ35DE						
Transmission	A/T	M/T					
Brake control	TCS	ABS		TCS		VDC	
Low tire pressure warning system	Not Applicable	Not Applicable	Applicable	Not Applicable	Applicable	Not Applicable	Applicable
CAN communication unit							
ECM	×	×	×	×	×	×	×
TCM	×						
Data link connector	×	×	×	×	×	×	×
Unified meter and A/C amp.	×	×	×	×	×	×	×
BCM	×	×	×	×	×	×	×
Low tire pressure warning control unit			×		×		×
Steering angle sensor						×	×
ABS actuator and electric unit (control unit)	×	×	×	×	×		
VDC/TCS/ABS control unit						×	×
IPDM E/R	×	×	×	×	×	×	×
CAN communication type	LAN-7, "TYPE 1"	LAN-8, "TYPE 2/TYPE3"		LAN-10, "TYPE 4/TYPE5"		LAN-12, "TYPE 6/TYPE7"	

×: Applicable

TYPE 1

System diagram

- Type1

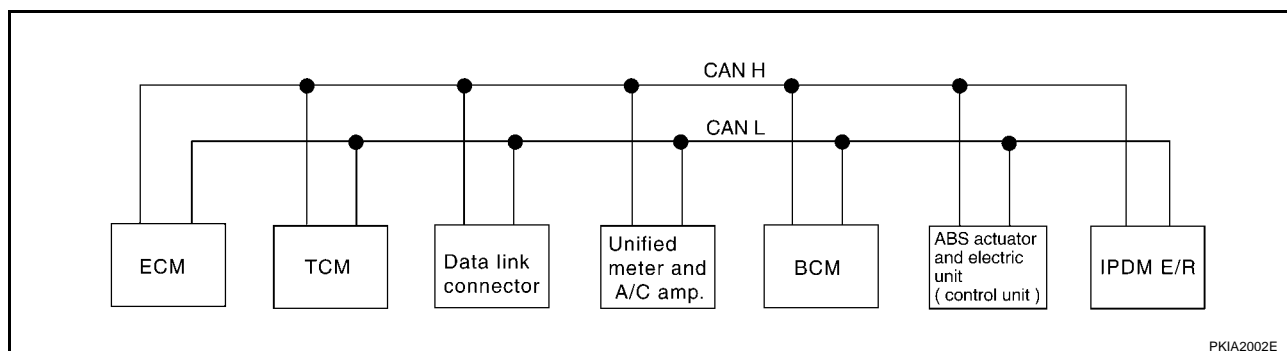

PKIA2002E

HEADLAMP (FOR CANADA) - CONVENTIONAL TYPE -

Input/output signal chart

T: Transmit R: Receive

Signals	ECM	TCM	Unified meter and A/C amp.	BCM	ABS actuator and electric unit (control unit)	IPDM E/R
Engine speed signal	T	R	R		R	
Engine torque signal	T	R				
Engine coolant temperature signal	T	R	R			
Accelerator pedal position signal	T	R			R	
Closed throttle position signal	T	R				
Wide open throttle position signal	T	R				
Battery voltage signal	T	R				
Stop lamp switch signal		R	T			
Fuel consumption monitor signal	T		R			
A/T self-diagnosis signal	R	T				
A/T CHECK indicator lamp signal		T	R			
A/T position indicator signal		T	R		R	
ABS operation signal		R			T	
A/T shift schedule change demand signal		R			T	
Air conditioner switch signal	R			T		
A/C compressor request signal	T					R
A/C compressor feedback signal	T		R			
Blower fan motor switch signal	R			T		
Cooling fan speed request signal	T					R
Position lights request signal			R	T		R
Low beam request signal				T		R
Low beam status signal	R					T
High beam request signal			R	T		R
High beam status signal	R					T
Vehicle speed signal			R		T	
	R	R	T	R		
Sleep request 1 signal			R	T		
Sleep request 2 signal				T		R
Wake up request 1 signal			R	T		
Door switch signal			R	T		R
Turn indicator signal			R	T		
Seat belt buckle switch signal			T	R		
Buzzer output signal			R	T		
Fuel level sensor signal	R		T			
Malfunction indicator lamp signal	T		R			
ASCD SET lamp signal	T		R			
ASCD operation signal	T	R				
ASCD CRUISE lamp signal	T		R			
Overdrive cancel signal	T	R				
Output shaft revolution signal	R	T				


HEADLAMP (FOR CANADA) - CONVENTIONAL TYPE -

Signals	ECM	TCM	Unified meter and A/C amp.	BCM	ABS actuator and electric unit (control unit)	IPDM E/R
Turbine revolution signal	R	T				
Front wiper request signal				T		R
Front wiper stop position signal				R		T
Rear window defogger switch signal				T		R
Rear window defogger control signal	R					T
Manual mode signal		R	T			
Not manual mode signal		R	T			
Manual mode shift up signal		R	T			
Manual mode shift down signal		R	T			
Manual mode indicator signal		T	R			
Hood switch signal				R		T
Theft warning horn request signal				T		R
Horn chirp signal				T		R
ABS warning lamp signal			R		T	
TCS OFF indicator lamp signal			R		T	
SLIP indicator lamp signal			R		T	
Brake (EBD) warning lamp signal			R		T	


TYPE 2/TYPE3

System diagram

- Type2

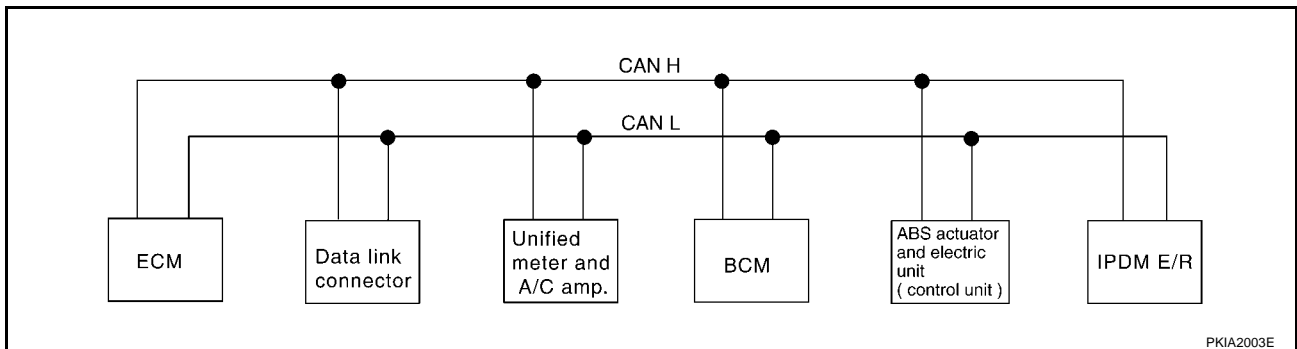

- Type3

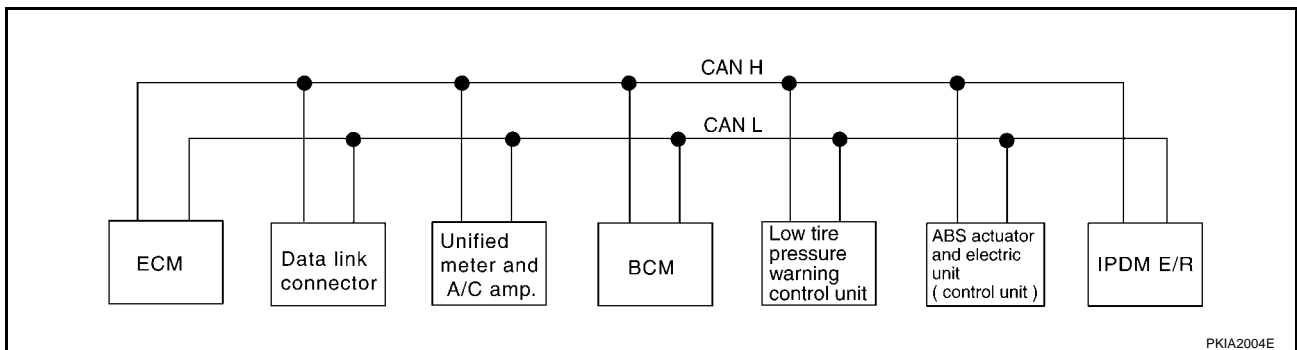

HEADLAMP (FOR CANADA) - CONVENTIONAL TYPE -

Input/output signal chart

T: Transmit R: Receive


Signals	ECM	Unified meter and A/C amp.	BCM	Low tire pressure warning control unit	ABS actuator and electric unit (control unit)	IPDM E/R
Engine speed signal	T	R			R	
Engine coolant temperature signal	T	R				
Accelerator pedal position signal	T				R	
Fuel consumption monitor signal	T	R				
Air conditioner switch signal	R		T			
A/C compressor request signal	T					R
A/C compressor feedback signal	T	R				
Blower fan motor switch signal	R		T			
Cooling fan speed request signal	T					R
Position lights request signal			R	T		R
Low beam request signal			T			R
Low beam status signal	R					T
High beam request signal		R	T			R
High beam status signal	R					T
Vehicle speed signal		R			T	
	R	T	R	R		
Sleep request 1 signal		R	T			
Sleep request 2 signal			T			R
Wake up request 1 signal		R	T			
Door switch signal		R	T			R
Turn indicator signal		R	T			
Seat belt buckle switch signal		T	R			
Buzzer output signal		R	T			
Fuel level sensor signal	R	T				
Malfunction indicator lamp signal	T	R				
ASCD SET lamp signal	T	R				
ASCD CRUISE lamp signal	T	R				
Front wiper request signal			T			R
Front wiper stop position signal			R			T
Rear window defogger switch signal			T			R
Rear window defogger control signal	R					T
Hood switch signal			R			T
Theft warning horn request signal			T			R
Horn chirp signal			T			R
Tire pressure signal		R		T		
ABS warning lamp signal		R			T	
Brake (EBD) warning lamp signal		R			T	

HEADLAMP (FOR CANADA) - CONVENTIONAL TYPE -


TYPE 4/TYPE5

System diagram

- Type4

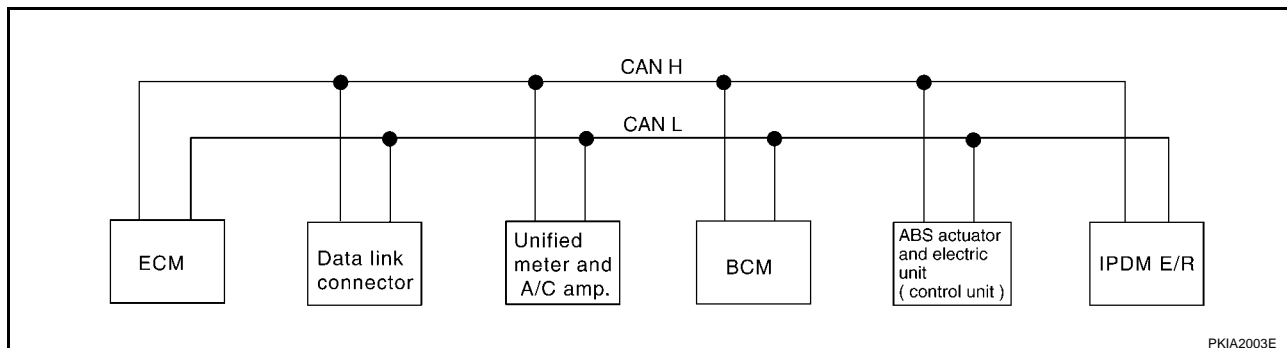

- Type5

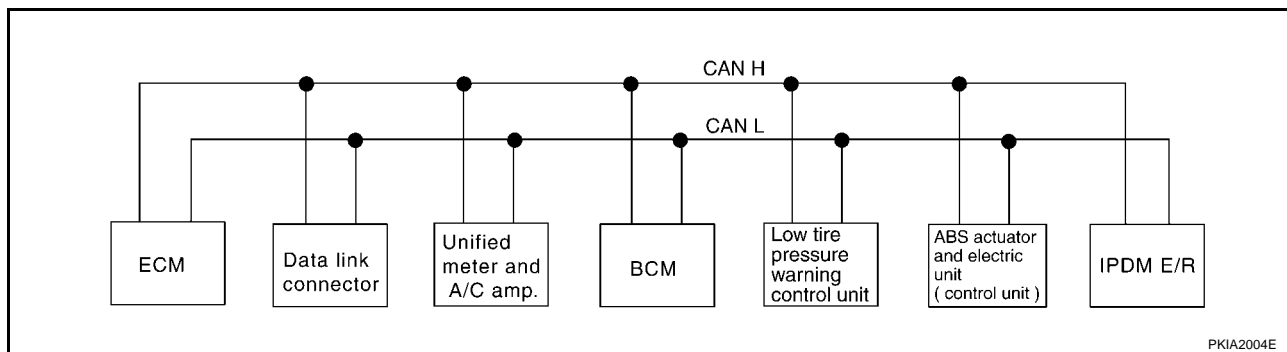

Input/output signal chart

T: Transmit R: Receive

Signals	ECM	Unified meter and A/C amp.	BCM	Low tire pressure warning control unit	ABS actuator and electric unit (control unit)	IPDM E/R
Engine speed signal	T	R			R	
Engine coolant temperature signal	T	R				
Accelerator pedal position signal	T				R	
Fuel consumption monitor signal	T	R				
Air conditioner switch signal	R		T			
A/C compressor request signal	T					R
A/C compressor feedback signal	T	R				
Blower fan motor switch signal	R		T			
Cooling fan speed request signal	T					R
Position lights request signal		R	T			R
Low beam request signal			T			R
Low beam status signal	R					T
High beam request signal		R	T			R
High beam status signal	R					T
Vehicle speed signal		R			T	
	R	T	R	R		
Sleep request 1 signal		R	T			
Sleep request 2 signal			T			R
Wake up request 1 signal		R	T			


HEADLAMP (FOR CANADA) - CONVENTIONAL TYPE -

Signals	ECM	Unified meter and A/C amp.	BCM	Low tire pressure warning control unit	ABS actuator and electric unit (control unit)	IPDM E/R
Door switch signal		R	T			R
Turn indicator signal		R	T			
Seat belt buckle switch signal		T	R			
Buzzer output signal		R	T			
Fuel level sensor signal	R	T				
Malfunction indicator lamp signal	T	R				
ASCD SET lamp signal	T	R				
ASCD CRUISE lamp signal	T	R				
Front wiper request signal			T			R
Front wiper stop position signal			R			T
Rear window defogger switch signal			T			R
Rear window defogger control signal	R					T
Hood switch signal			R			T
Theft warning horn request signal			T			R
Horn chirp signal			T			R
Tire pressure signal		R		T		
ABS warning lamp signal		R			T	
TCS OFF indicator lamp signal		R			T	
SLIP indicator lamp signal		R			T	
Brake (EBD) warning lamp signal		R			T	


TYPE 6/TYPE7

System diagram

- Type6

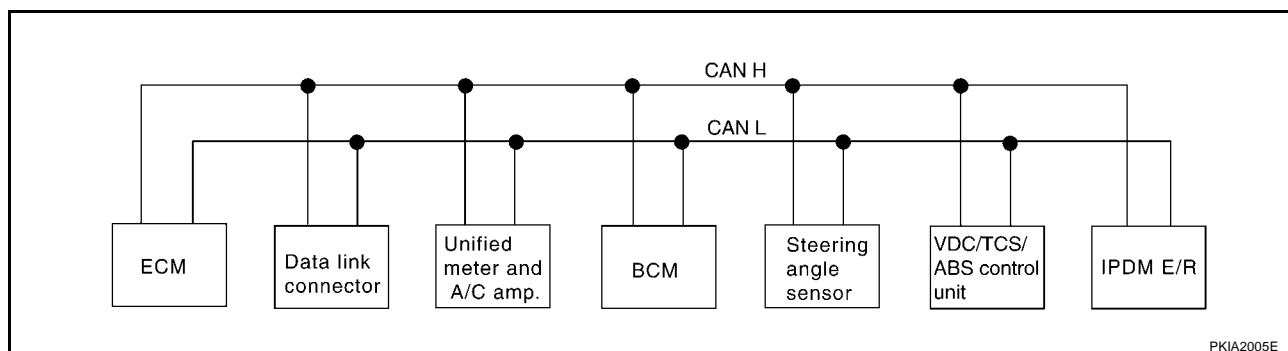

- Type7

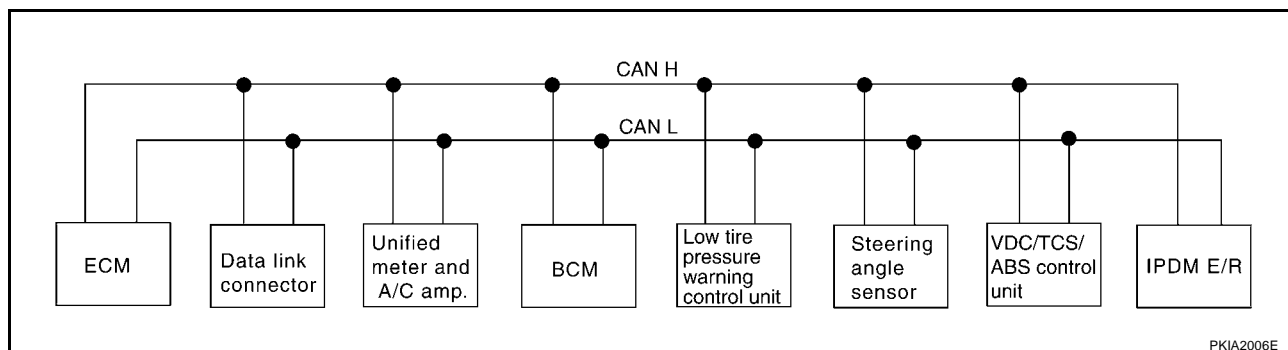

HEADLAMP (FOR CANADA) - CONVENTIONAL TYPE -

Input/output signal chart


T: Transmit R: Receive

Signals	ECM	Unified meter and A/C amp.	BCM	Low tire pressure warning control unit	Steering angle sensor	VDC/TCS/ABS control unit	IPDM E/R
Engine speed signal	T	R				R	
Engine coolant temperature signal	T	R					
Accelerator pedal position signal	T					R	
Fuel consumption monitor signal	T	R					
Air conditioner switch signal	R		T				
A/C compressor request signal	T						R
A/C compressor feedback signal	T	R					
Blower fan motor switch signal	R		T				
Cooling fan speed request signal	T						R
Position lights request signal		R	T				R
Low beam request signal			T				R
Low beam status signal	R						T
High beam request signal		R	T				R
High beam status signal	R						T
Vehicle speed signal		R				T	
	R	T	R	R			
Sleep request 1 signal		R	T				
Sleep request 2 signal			T				R
Wake up request 1 signal		R	T				
Door switch signal		R	T				R
Turn indicator signal		R	T				
Seat belt buckle switch signal		T	R				
Buzzer output signal		R	T				
Fuel level sensor signal	R	T					
Malfunction indicator signal	T	R					
ASCD SET lamp signal	T	R					
ASCD CRUISE lamp signal	T	R					
Front wiper request signal			T				R
Front wiper stop position signal			R				T
Rear window defogger switch signal			T				R
Rear window defogger control signal	R						T
Hood switch signal			R				T
Theft warning horn request signal			T				R
Horn chirp signal			T				R
Steering angle sensor signal					T	R	
Tire pressure signal		R		T			
ABS warning lamp signal		R				T	
VDC OFF indicator lamp signal		R				T	
SLIP indicator lamp signal		R				T	
Brake (EBD) warning lamp signal		R				T	

HEADLAMP (FOR CANADA) - CONVENTIONAL TYPE -

Schematic

AKS0031H

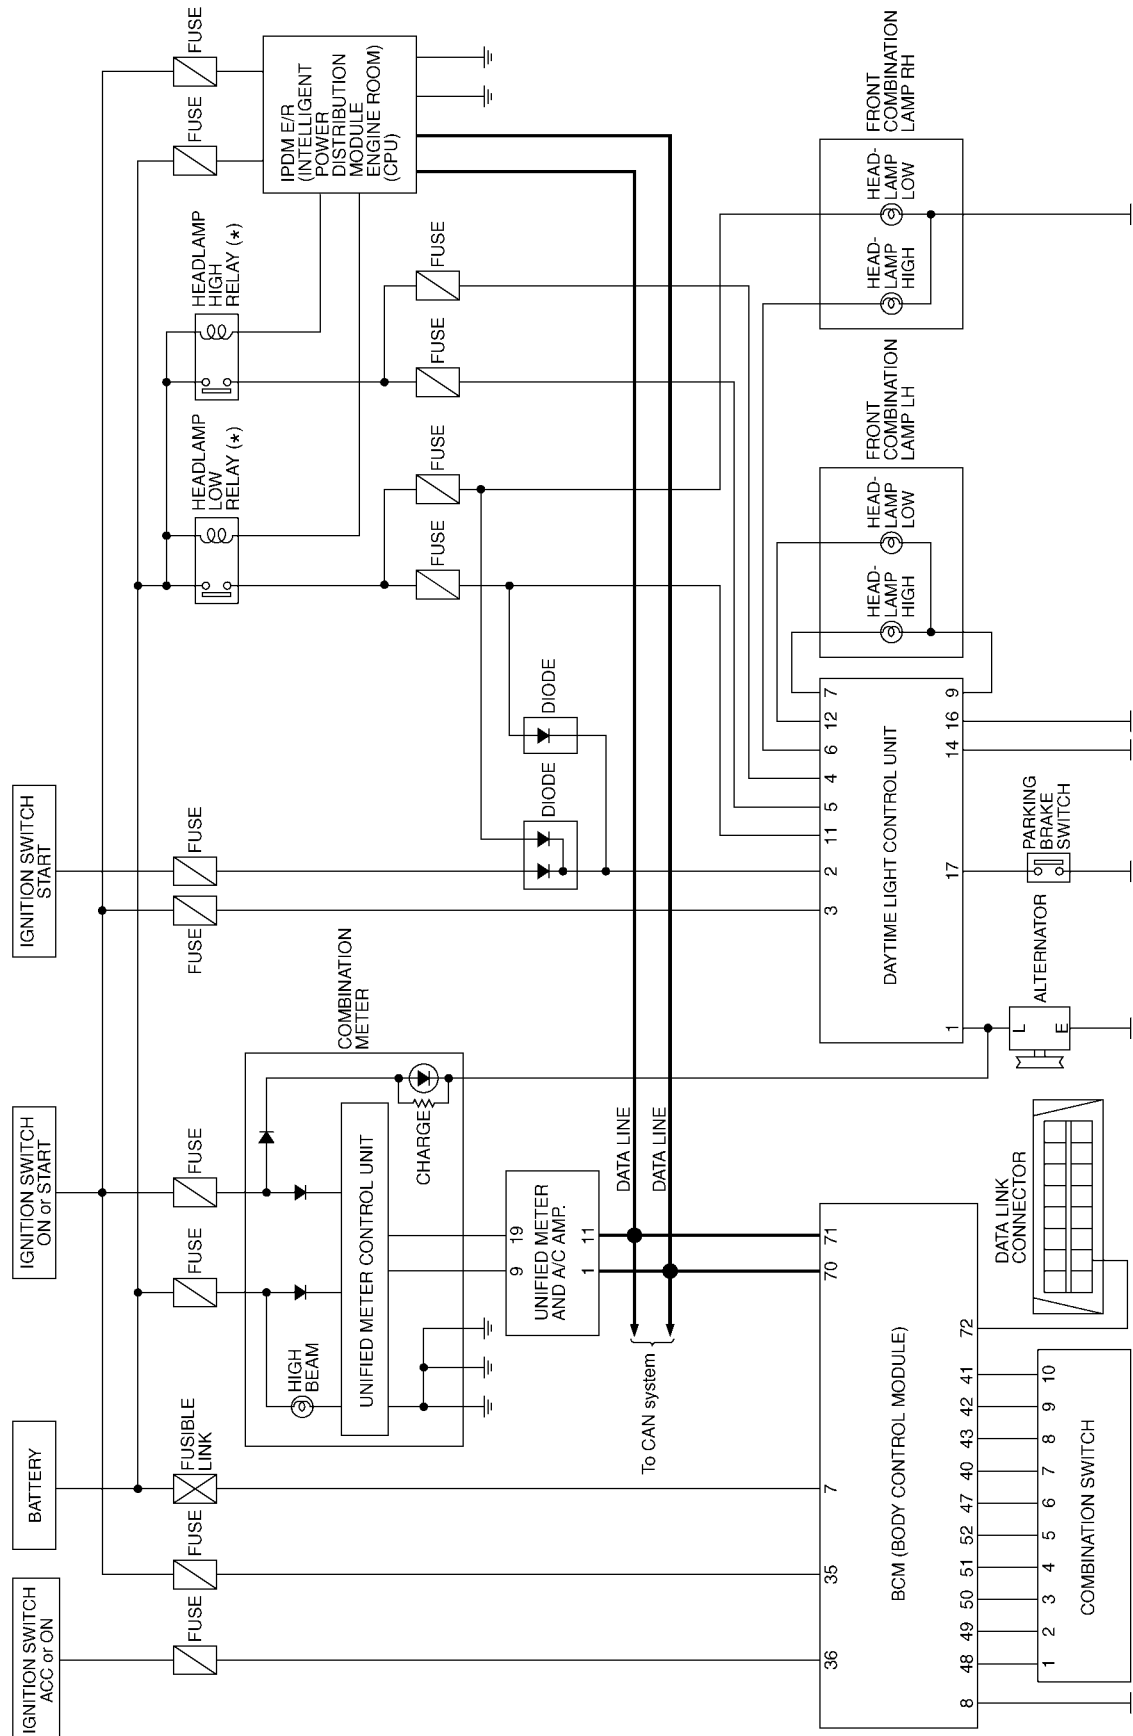

* : This relay is built into the IPDM E/R (Intelligent power distribution module engine room).

TKWT0441E




HEADLAMP (FOR CANADA) - CONVENTIONAL TYPE -

Wiring Diagram — DTRL —

AKS00311

LT-DTRL-07

DATA LINE

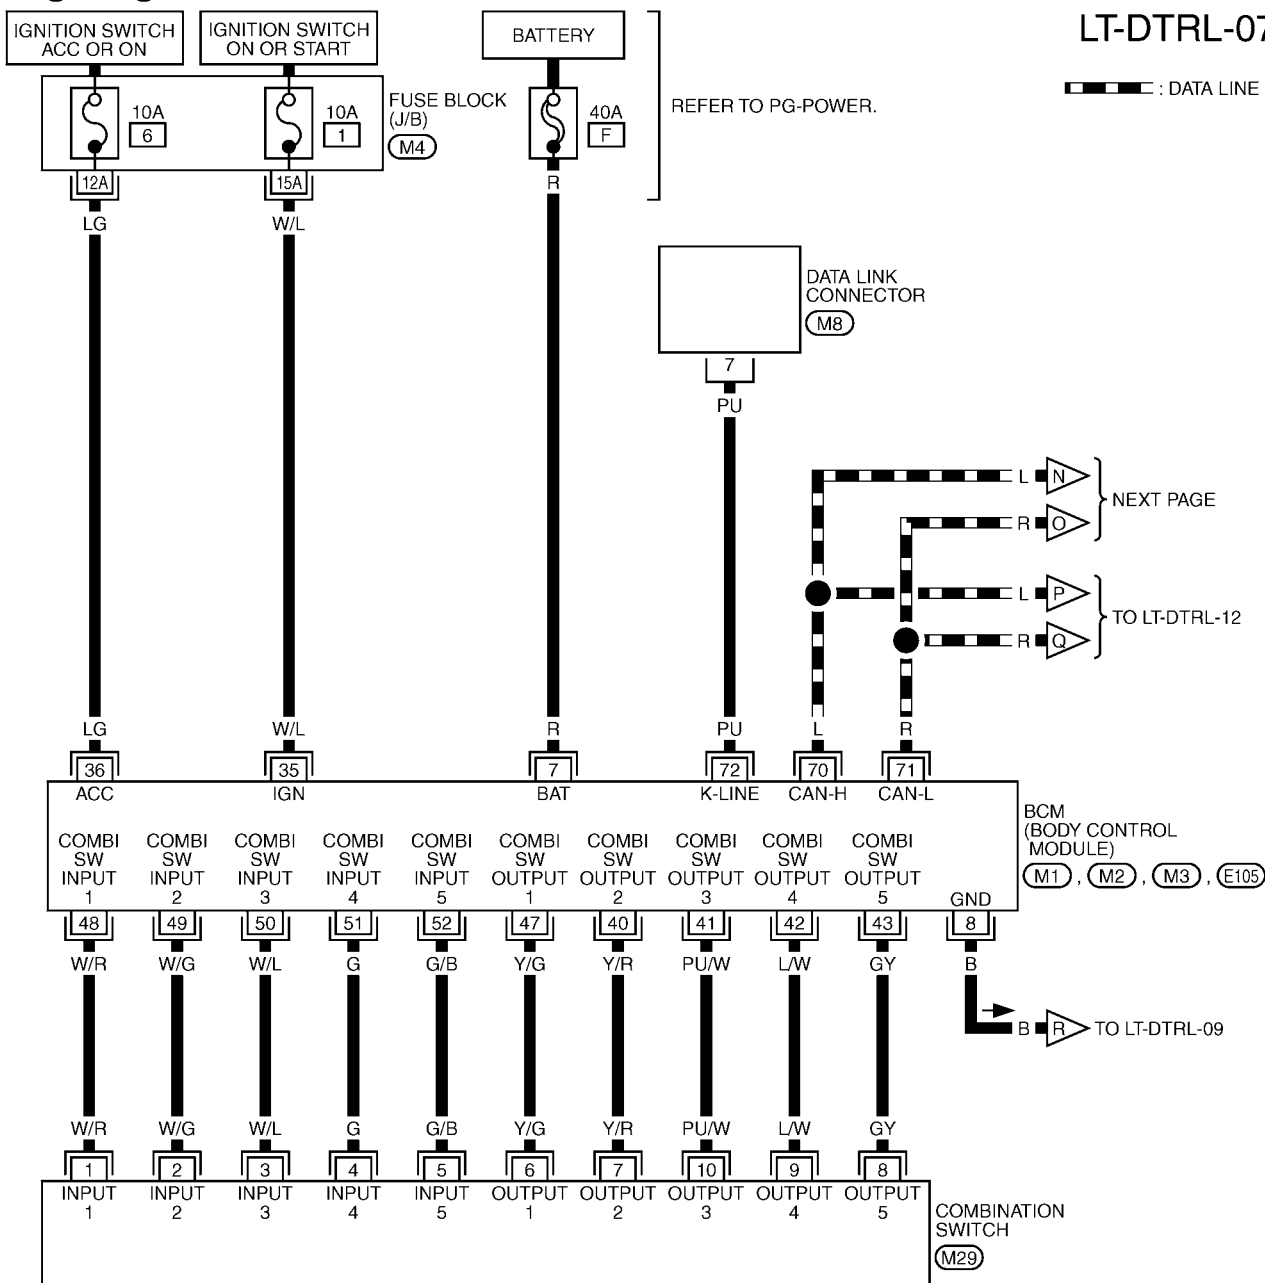



REFER TO THE FOLLOWING.

(M4) -FUSE BLOCK-JUNCTION BOX (J/B)

(M1), (M2), (M3), (E105) -ELECTRICAL UNITS


HEADLAMP (FOR CANADA) - CONVENTIONAL TYPE -

LT-DTRL-09

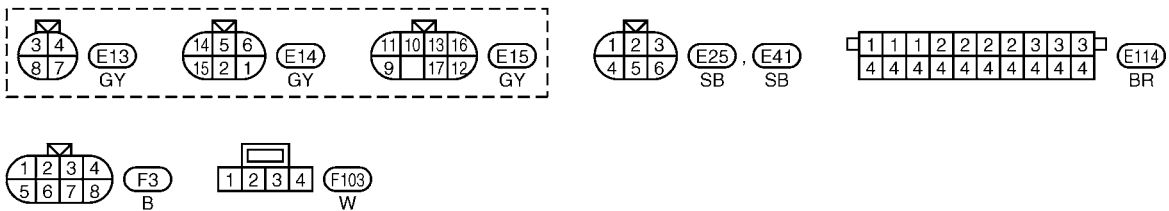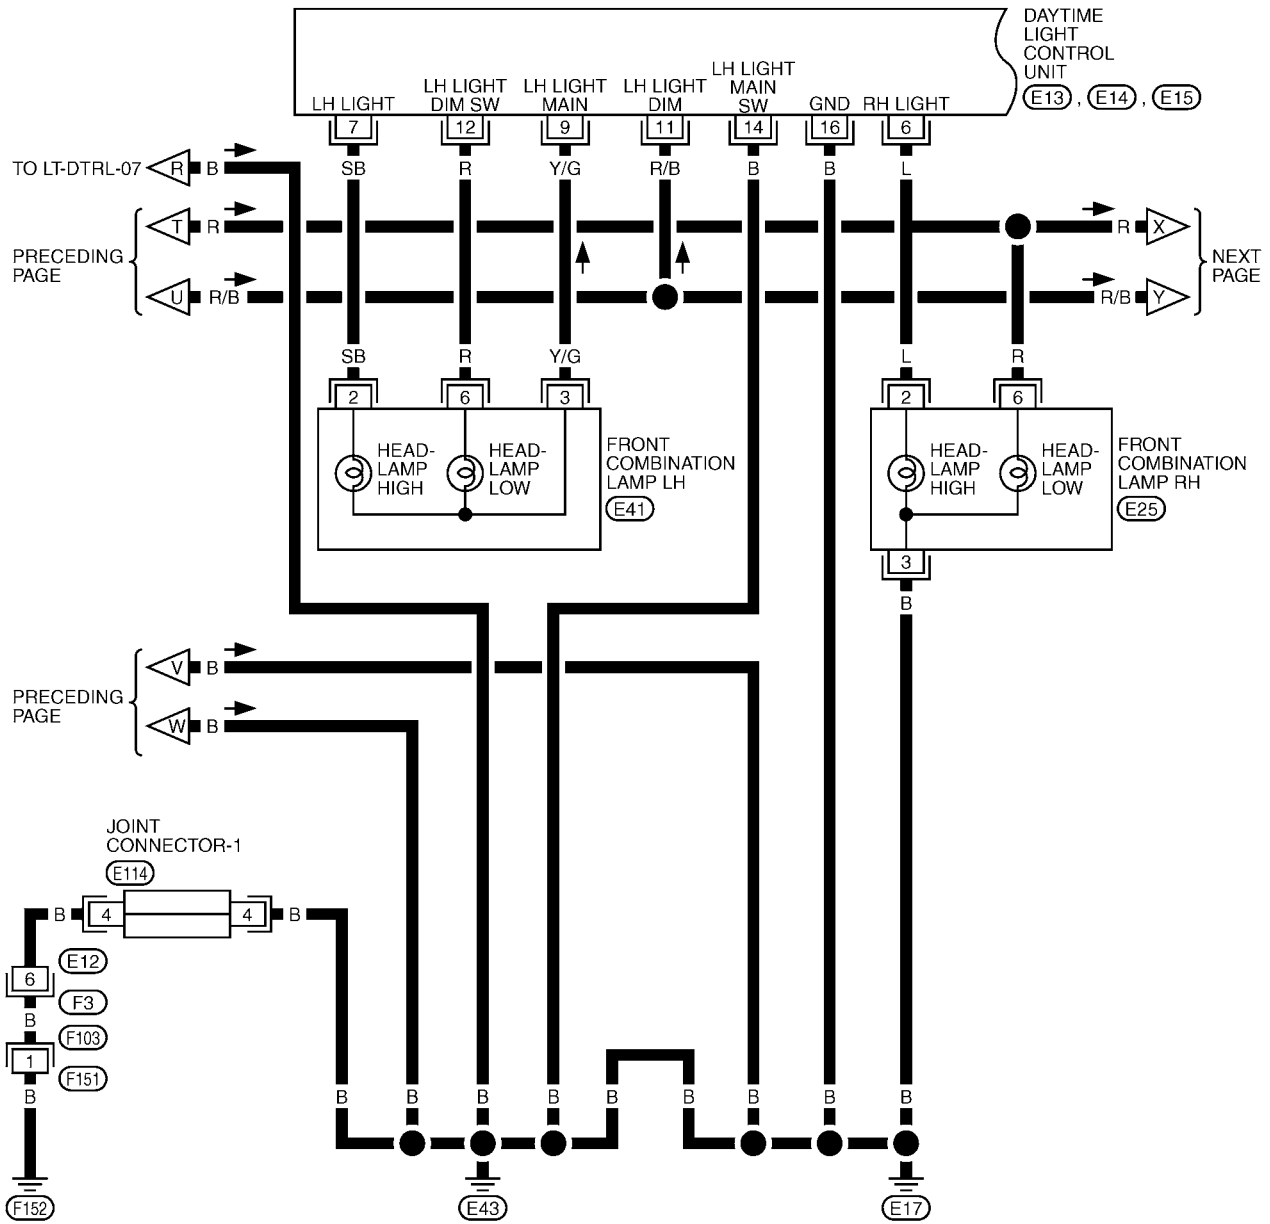

HEADLAMP (FOR CANADA) - CONVENTIONAL TYPE -

LT-DTRL-10

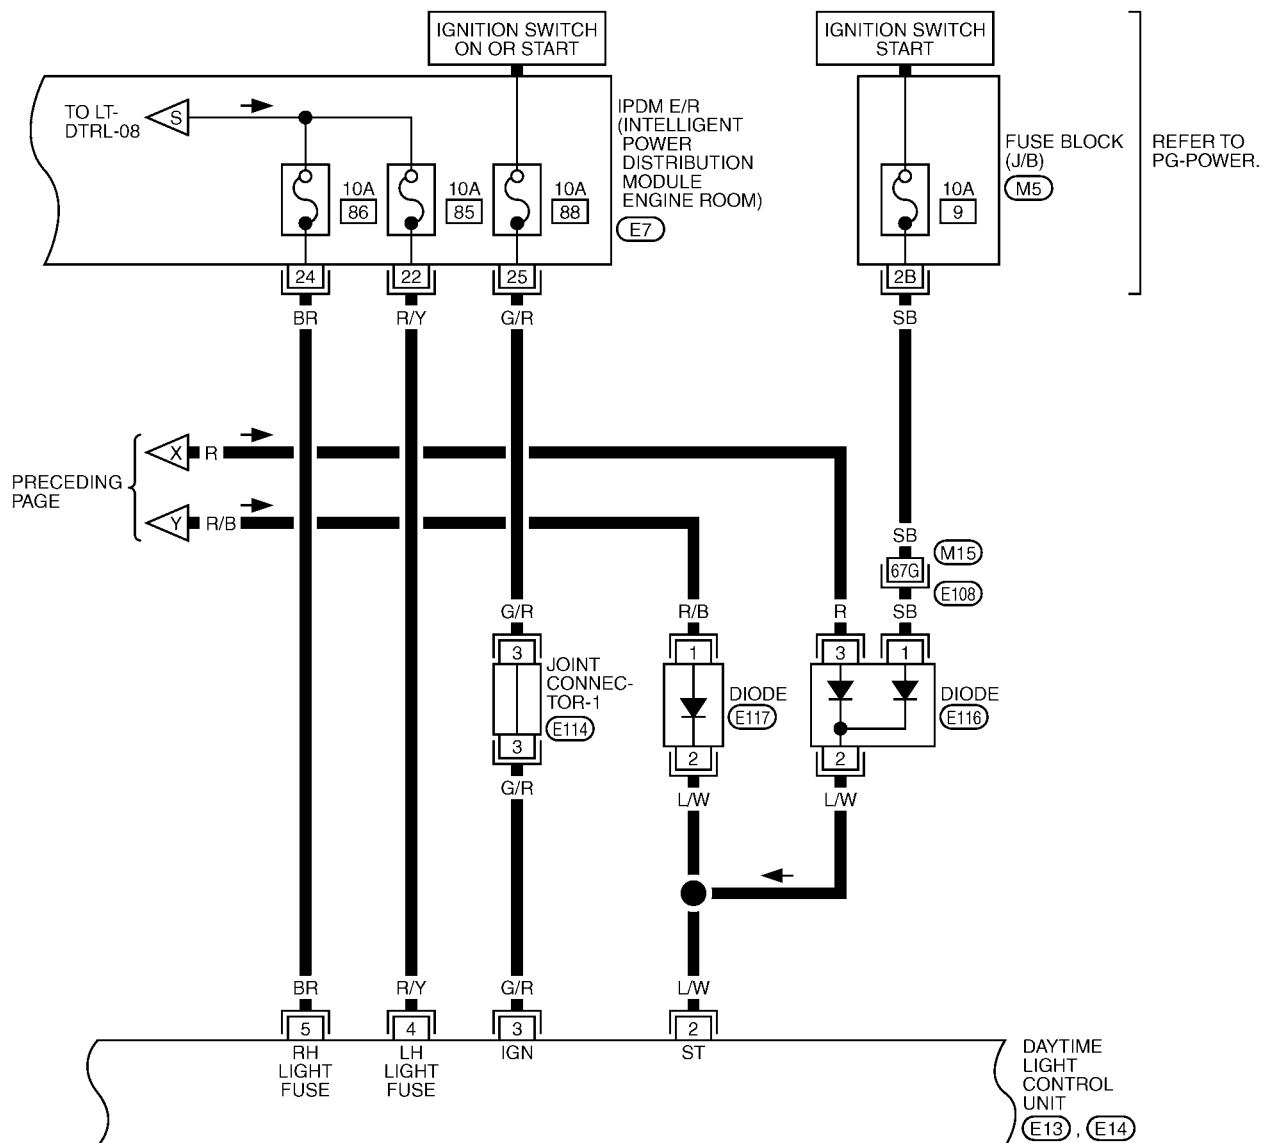

21	20	19	18	17
28	27	26	25	24
23	22			

(E7) W



3	4	8	7
14	5	6	15
2	1		

(E13) GY

(E14) GY

1	1	2	2	2	2	3	3	3
4	4	4	4	4	4	4	4	4

(E114) BR

1	2	3
---	---	---

(E116)

1	2
---	---

(E117)

REFER TO THE FOLLOWING.





(E108) -SUPER MULTIPLE JUNCTION (SMJ)

(M5) -FUSE BLOCK-JUNCTION BOX (J/B)

TKWT0445E

HEADLAMP (FOR CANADA) - CONVENTIONAL TYPE -

LT-DTRL-11

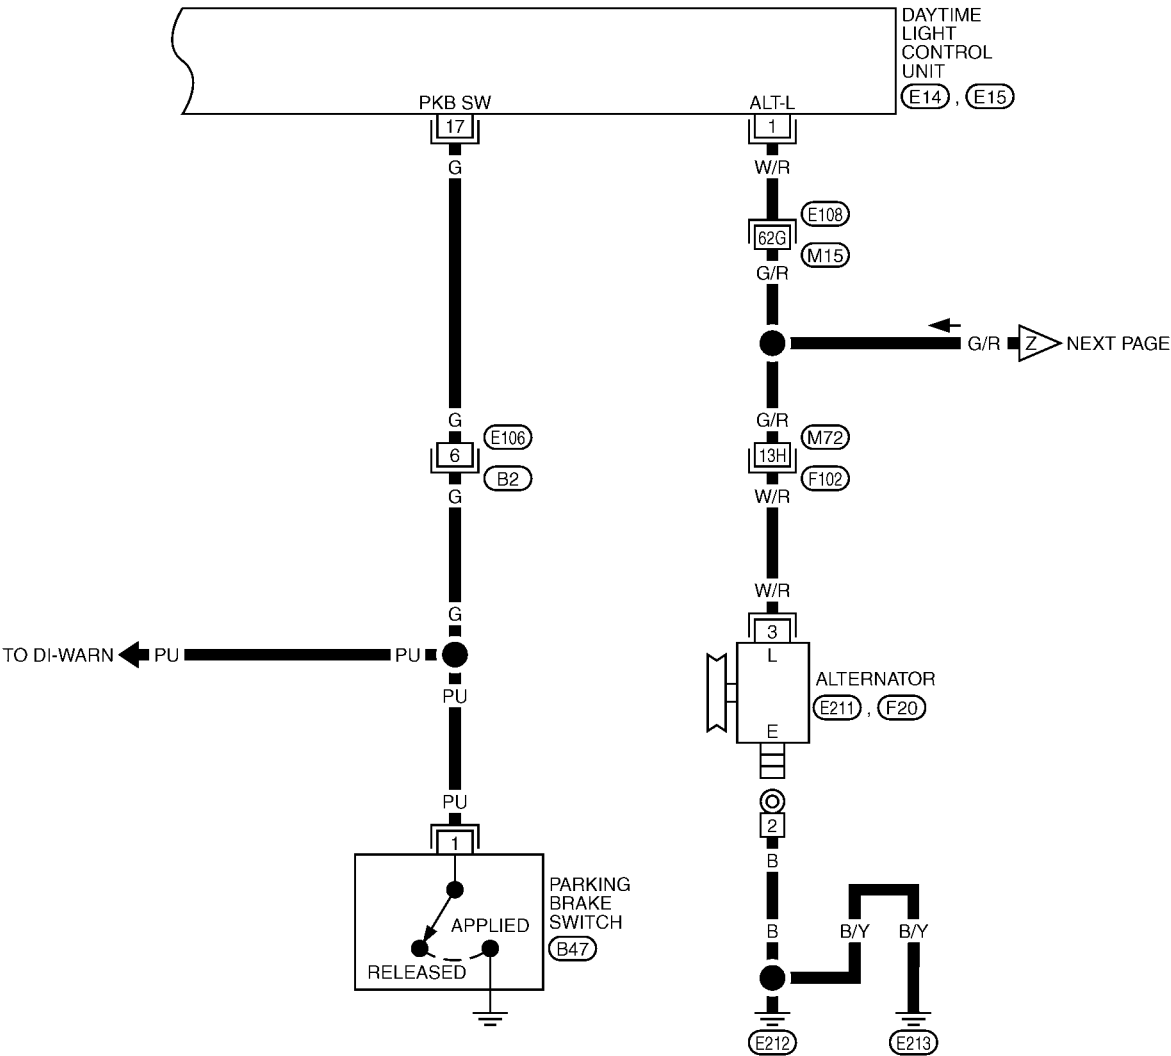


REFER TO THE FOLLOWING.
(E108), (F102) -SUPER MULTIPLE
JUNCTION (SMJ)

HEADLAMP (FOR CANADA) - CONVENTIONAL TYPE -

LT-DTRL-12

DATA LINE

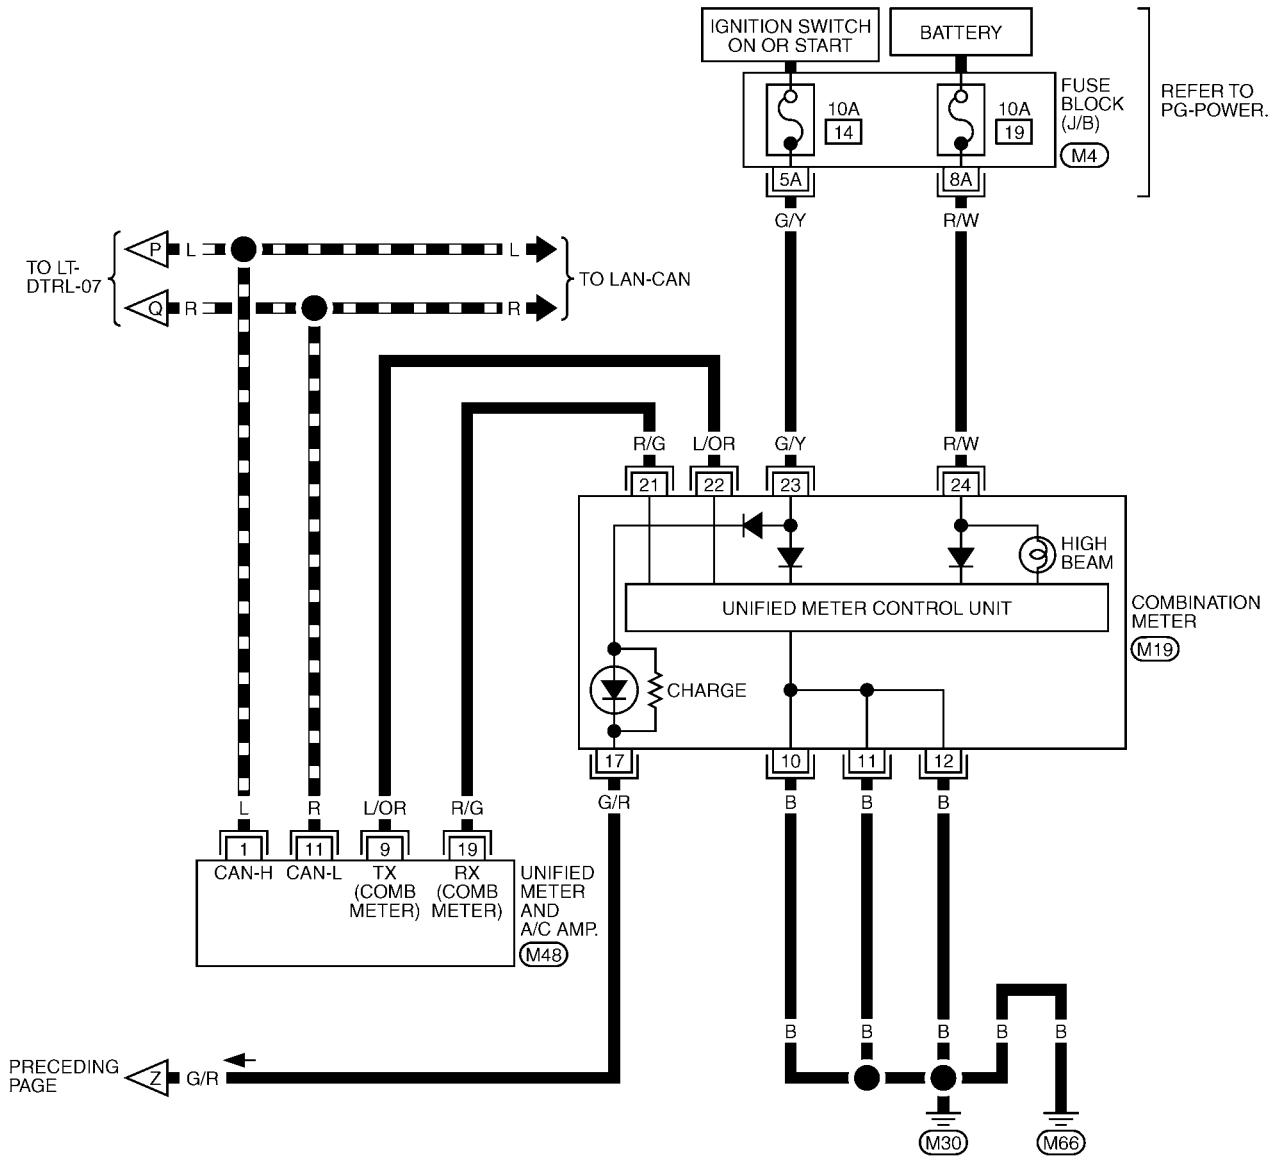

12	11	10	9	8	7	6	5	4	3	2	1
24	23	22	21	20	19	18	17	16	15	14	13

(M19) W

1	2	3	4	5	6	7	8	9	10
11	12	13	14	15	16	17	18	19	20

(M48) GY



REFER TO THE FOLLOWING.

(M4) -FUSE BLOCK-JUNCTION BOX (J/B)

TKWT0447E

HEADLAMP (FOR CANADA) - CONVENTIONAL TYPE -

Terminals and Reference Value for Daytime Light Control Unit

AKS0031J

Terminal No.	Wire color	Item	Condition	Reference value
1	W/R	Alternator	When turning ignition switch to "ON"	Less than 1V
			When engine is running	Battery voltage
			When turning ignition switch to "OFF"	Less than 1V
2	L/W	Start signal	When turning ignition switch to "START"	Battery voltage
			When turning ignition switch to "ON" from "START"	Less than 1V
			When turning ignition switch to "OFF"	Less than 1V
3	G/R	Ignition power supply	When turning ignition switch to "ON"	Battery voltage
4	R/Y	Lighting switch (LH hi beam)	When turning lighting switch to "HI BEAM"	Battery voltage
5	BR	Lighting switch (RH hi beam)	When turning lighting switch to "HI BEAM"	Battery voltage
6	L	RH hi beam	When lighting switch is turned to the 2ND position with "HI BEAM" or "FLASH TO PASS" position	Battery voltage
			When releasing parking brake with engine running and turning lighting switch to "OFF" (daytime light operation) CAUTION: Block wheels and ensure selector lever is in N or P position.	Battery voltage
7	SB	LH hi beam	When lighting switch is turned to the 2ND position with "HI BEAM" or "FLASH TO PASS" position	Battery voltage
			When releasing parking brake with engine running and turning lighting switch to "OFF" (daytime light operation) CAUTION: Block wheels and ensure selector lever is in N or P position.	Battery voltage
9	Y/G	LH hi/low beam (ground)	When turning lighting switch to the 2ND position with "HI BEAM" or "FLASH TO PASS" position	Less than 1V
			When releasing parking brake with engine running and turning lighting switch to "OFF" (daytime light operation) CAUTION: Block wheels and ensure selector lever is in N or P position.	Less than 1V
12	R	LH Low beam	When turning lighting switch to "LOW BEAM"	Battery voltage
14	B	Ground	—	—
16	B	Ground	—	—
17	G	Parking brake switch	When parking brake is released	Battery voltage
			When parking brake is applied	Less than 1.7V

How to Proceed With Trouble Diagnosis

AKS0031K

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-100, "System Description"](#) .
3. Carry out the Preliminary Check. Refer to [LT-118, "Preliminary Check"](#) .
4. Check symptom and repair or replace the cause of malfunction.
5. Does the headlamp operate normally? If YES: GO TO 6. If NO: GO TO 4.
6. Inspection end.

HEADLAMP (FOR CANADA) - CONVENTIONAL TYPE -

Preliminary Check INSPECTION FOR POWER SUPPLY AND GROUND CIRCUIT

AKS0031L

1. CHECK FUSES

- Check for blown fuses.

UNIT	POWER SOURCE	FUSE No.
BCM	Battery	F
	Ignition switch ON or START position	1
	Ignition switch ACC or ON position	6
IPDM E/R	Battery	83
		84
		85
		86
		88
DAYTIME LIGHT CONTROL UNIT	Ignition switch START position	9
	Ignition switch ON or START position	88

Refer to [LT-111, "Wiring Diagram — DTRL —"](#).

OK or NG


OK >> GO TO 2.

NG >> If fuse is blown, be sure to eliminate cause of malfunction before installing new fuse. Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#).

2. POWER SUPPLY CIRCUIT CHECK

- Disconnect BCM connector.
- Check voltage between BCM harness connector and ground.

Terminals		Ignition switch position		
(+)		(-)		
Connector	Terminal (Wire color)	OFF	ACC	ON
E105	7 (R)	Battery voltage	Battery voltage	Battery voltage
M1	35 (W/L)	0V	0V	Battery voltage
M1	36 (LG)	0V	Battery voltage	Battery voltage

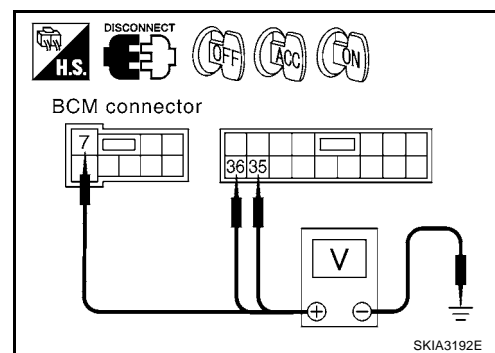

OK or NG


OK >> GO TO 3.

NG >> Check harness for open or short between BCM and fuse.

3. GROUND CIRCUIT CHECK

Check continuity between BCM harness connector and ground.

Terminals			Continuity
(+)		(-)	
Connector	Terminal (wire color)		
E105	8 (B)	Ground	Yes

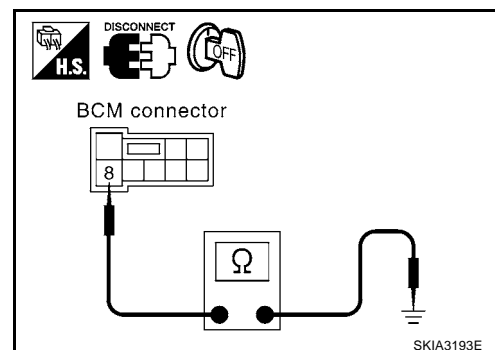

OK or NG

OK >> INSPECTION END.

NG >> Check harness ground circuit.

HEADLAMP (FOR CANADA) - CONVENTIONAL TYPE -

CONSULT-II Function

AKS0031M

- CONSULT-II executes the following functions by combining data reception and command transmission via the communication line from BCM. Work support, self-diagnosis, data monitor, and active test display.


BCM diagnosis part	Check item, diagnosis mode	Description
HEAD LAMP	Work support	Changes the setting for each function.
	Data monitor	Displays BCM input data in real time.
	Active test	Operation of electrical loads can be checked by sending drive signal to them.
BCM C/U	Self-diagnosis	BCM performs self-diagnosis of CAN communication and combination switch.

CONSULT-II BASIC OPERATION


CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carry out CAN communication.


- With the ignition switch OFF, connect CONSULT-II and CONSULT-II CONVERTER to the data link connector, then turn ignition switch ON.

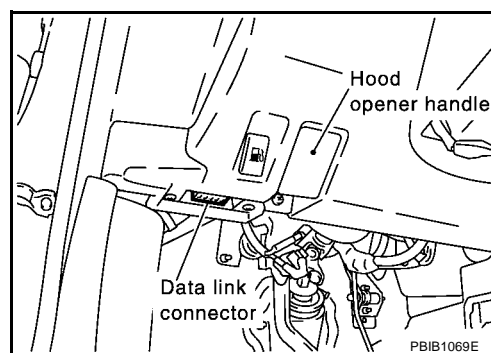

- Touch "START(NISSAN BASED VHCL)".

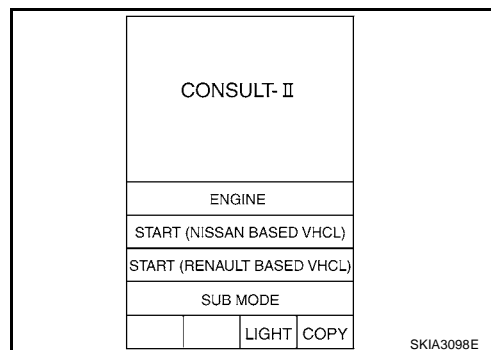


- Touch "BCM" on "SELECT SYSTEM" screen.
If "BCM" is not indicated, go to [GI-40, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#)

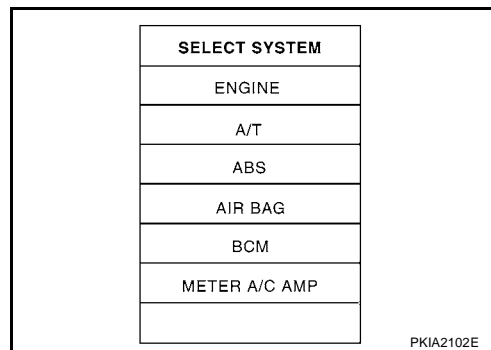

HEADLAMP (FOR CANADA) - CONVENTIONAL TYPE -

4. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.

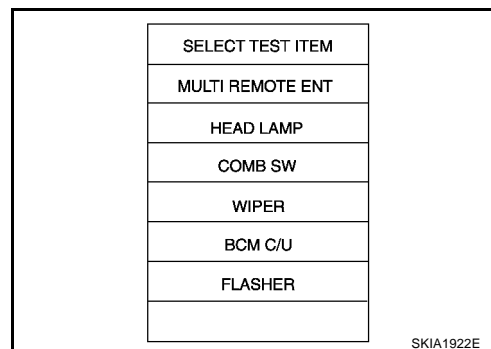

WORK SUPPORT

Operation Procedure

1. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.
2. Touch "WORK SUPPORT" on "SELECT DIAG MODE" screen.
3. Touch "BATTERY SAVER SET" on "SELECT WORK ITEM" screen.
4. Touch "START".
5. Touch "CHANGE SET".
6. The setting will be changed and "CUSTOMIZING COMPLETED" will be displayed.
7. Touch "END".

Display Item List

Item	Description	CONSULT-II	Factory setting
BATTERY SAVER SET	Exterior lamp battery saver control mode can be changed in this mode. Selects exterior lamp battery saver control mode between two ON/OFF.	ON	○
		OFF	—

DATA MONITOR

Operation Procedure

1. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.
2. Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.
3. Touch either "ALL SIGNALS" or "SELECTION FROM MENU" on the "DATA MONITOR" screen.

All signals	Monitors all the signals.
Selection from menu	Selects and monitors individual signal.

4. Touch "START".
5. When "SELECTION FROM MENU" is selected, touch individual items to be monitored. When "ALL SIGNALS" is selected, all the items will be monitored.
6. Touch "RECORD" while monitoring, then the status of the monitored item can be recorded. To stop recording, touch "STOP".

Display Item List

Monitor item	Contents
IGN ON SW "ON/OFF"	Display "IGN position (ON)/OFF, ACC position (OFF)" judged from the ignition switch signal.
ACC ON SW "ON/OFF"	Displays "ACC (ON)/OFF, Ignition OFF (OFF)" status judged from ignition switch signal.
AUTO LIGHT SW ^{Note} "OFF"	—
TAIL LAMP SW "ON/OFF"	Displays status (lighting switch 1st position: ON/Others: OFF) of lighting switch judged from lighting switch signal.
HEAD LAMP SW "ON/OFF"	Displays status (headlamp switch: ON/Others: OFF) of headlamp switch judged from lighting switch signal.
HI BEAM SW "ON/OFF"	Displays status (high beam switch: ON/Others: OFF) of high beam switch judged from lighting switch signal.

HEADLAMP (FOR CANADA) - CONVENTIONAL TYPE -

Monitor item		Contents
PASSING SW	"ON/OFF"	Displays status (flash-to-pass switch: ON/Others: OFF) of flash-to-pass switch judged from lighting switch signal.
FR FOG SW ^{Note}	"OFF"	—
DOOR SW - DR	"ON/OFF"	Displays status of the driver door as judged from the driver door switch signal. (Door is open: ON/Door is closed: OFF)
DOOR SW - AS	"ON/OFF"	Displays status of the passenger door as judged from the passenger door switch signal. (Door is open: ON/Door is closed: OFF)
DOOR SW - RR ^{Note}	"OFF"	—
HEAD LAMP SW 2	"ON/OFF"	Displays status (headlamp switch 2: ON/Others: OFF) of headlamp switch 2 judged from lighting switch signal.
OPTICAL SENSOR ^{Note}	[0V]	Displays always indicates "0.00V"

NOTE:

This item is display, but cannot monitor it.

ACTIVE TEST

Operation Procedure

1. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.
2. Touch "ACTIVE TEST" on "SELECT DIAG MODE" screen.
3. Touch item to be tested and check operation of the selected item.
4. During the operation check, touching "BACK" deactivates the operation.

Display Item List

Test item	Description
TAIL LAMP	Allows tail lamp relay to operate by switching ON-OFF.
HEAD LAMP (LOW)	Allows headlamp relay to operate by switching ON-OFF.
HEAD LAMP (HI)	Allows headlamp relay to operate by switching ON-OFF.
FR FOG LAMP ^{Note}	—

NOTE:

This item is display, but cannot test it.

SELF-DIAGNOSTIC RESULTS

Operation Procedure

1. Touch "BCM C/U" on "SELECT ITEM" screen.
2. Touch "SELF-DIAG RESULTS" on "SELECT DIAG MODE" screen.
3. Self-diagnostic results are displayed.

Display Item List

Items to be displayed	CONSULT-II display	Description
CAN communication	CAN communication [U1000]	Malfunction is detected in CAN communication.
CAN communication system	CAN communication system 1 to 6 [U1000]	Malfunction is detected in CAN system.
Combination switch	Diagnosis 1 - 5 systems open circuit	Malfunction is detected in combination switch system.

HEADLAMP (FOR CANADA) - CONVENTIONAL TYPE -

AKS0031N

Daytime Light Control Does Not Operate Properly

1. DAYTIME LIGHT CONTROL UNIT INSPECTION


1. Disconnect daytime light control unit connector.
2. Turn ignition switch ON.
3. Check voltage between daytime light control unit harness connector E13 terminal 3(G/R) and ground.

Battery voltage should exist

OK or NG

OK >> GO TO 2.

NG >> Repair or replace daytime light control unit power supply circuit harness.

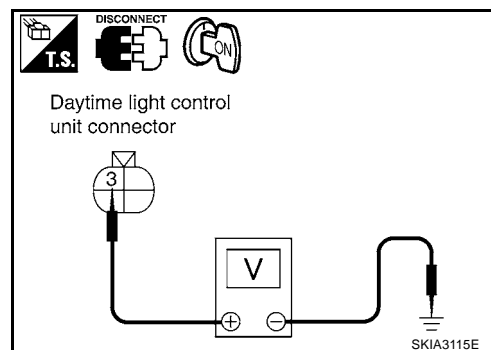

2. PARKING BRAKE SWITCH CIRCUIT CHECK


1. Turn ignition switch OFF.
2. Disconnect daytime light control unit connector and parking brake switch connector.
3. Check harness continuity between daytime light control unit harness connector E15 terminal 17(G) and parking brake switch harness connector B47 terminal 1(PU).

Continuity should exist

OK or NG

OK >> GO TO 3.

NG >> Repair harness or connector.

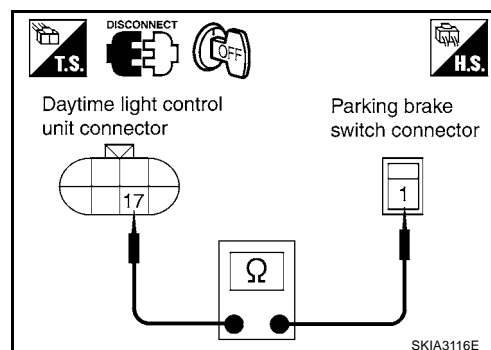

3. PARKING BRAKE SWITCH CHECK


1. Connect daytime light control unit connector and parking brake switch connector.
2. Turn ignition switch ON.
3. Check voltage between parking brake switch connector and ground, when parking brake is released.

Terminals			Condition	Voltage
(+) (Terminal (wire color))		(-)		
Connector	Terminal (wire color)		Not released	Approx. 0(V)
B47	1(PU)	Ground	Released	Battery voltage

OK or NG

OK >> GO TO 4.

NG >> Repair parking brake switch.

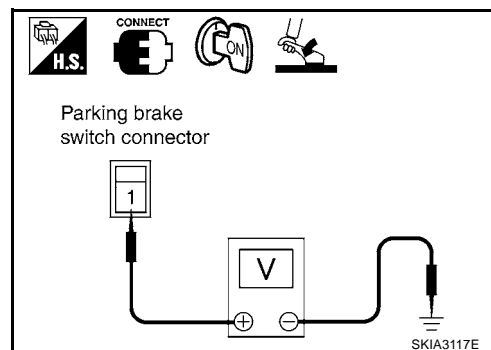

HEADLAMP (FOR CANADA) - CONVENTIONAL TYPE -


4. DAYTIME LIGHT CONTROL UNIT CIRCUIT CHECK

1. Turn ignition switch OFF.
2. Disconnect daytime light control unit connector and front combination lamp RH connector.
3. Check harness continuity between daytime light control unit harness connector E14 terminal 6(L) and front combination lamp RH harness connector E25 terminal 2(L).

Continuity should exist

OK or NG

- OK >> Replace daytime light control unit.
NG >> Repair harness or connector.

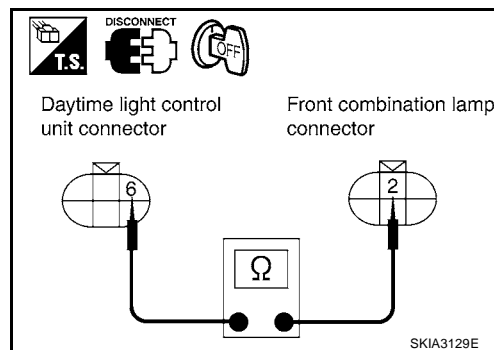

Headlamp High Beam Does Not Illuminate (Both Sides)

AKS00310

1. HEADLAMP AUTO ACTIVE TEST

1. Start auto active test. Refer to [PG-24, "Auto Active Test"](#).
2. Check whether headlamp HI operates.

OK or NG

- OK >> GO TO 4.
NG >> GO TO 2.


2. DAYTIME LIGHT CONTROL UNIT INSPECTION

1. Turn ignition switch OFF.
2. Disconnect daytime light control unit connector.
3. Start auto active test. Refer to [PG-24, "Auto Active Test"](#). When headlamp HI is operating, check voltage between daytime light control unit and ground.

Terminals			Voltage
(+) Terminal (wire color)		(-) Terminal	
Connector	Terminal (wire color)		
E13	4 (R/Y)	Ground	Battery voltage
E14	5 (BR)		

OK or NG

- OK >> Replace daytime light control unit.
NG >> GO TO 3

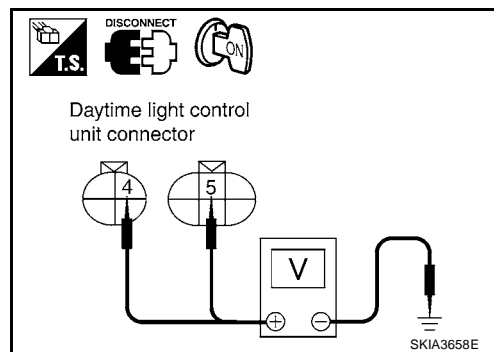

HEADLAMP (FOR CANADA) - CONVENTIONAL TYPE -


3. IPDM E/R CIRCUIT CHECK

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check harness continuity daytime light control unit harness connector E13 terminal 4(R/Y) and IPDM E/R harness connector E7terminal 22(R/Y).

Continuity should exist

4. Check harness continuity daytime light control unit harness connector E14 terminal 5(BR) and IPDM E/R harness connector E7terminal 24(R/Y).

Continuity should exist

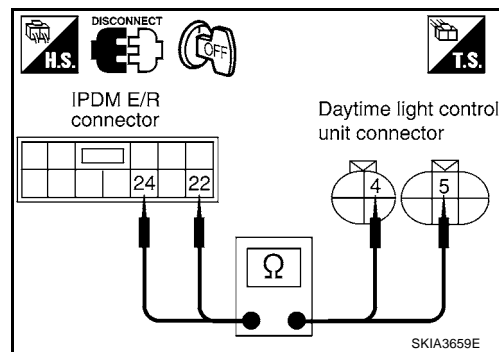

OK or NG

- OK >> Replace IPDM E/R.
NG >> Repair harness or connector.

4. COMBINATION SWITCH CIRCUIT CHECK

Select BCM on CONSULT-II. Carry out "BCM C/U" self-diagnosis.

Displayed results of self-diagnosis

No malfunction detected>> GO TO 5.

CAN communications or CAN system>> Inspect the BCM CAN communications system. Refer to [BCS-18, "CAN Communication Inspection Using CONSULT-II \(Self-Diagnosis\)"](#).

OPEN DETECT 1 - 5>> Combination switch system malfunction. Refer to [LT-164, "Combination Switch Inspection According to Self-Diagnostic Results"](#).

HEAD LAMP 1 SW or HEAD LAMP 2 SW>> Replace lighting switch.

SELF-DIAG RESULTS	
DTC RESULTS	TIME
NO DTC IS DETECTED. FURTHER TESTING MAY BE REQUIRED	

LKIA0073E

5. COMBINATION SWITCH INPUT SIGNAL CHECK

Select BCM on CONSULT-II. With "HEADLAMP" data monitor, check that "HI BEAM SW" turns ON-OFF linked with operation of lighting switch.

OK or NG

- OK >> Replace BCM.
NG >> Replace lighting switch.

DATA MONITOR	
MONITOR	
IGN ON SW	ON
ACC ON SW	ON
AUTO LIGHT SW	OFF
TAIL LAMP SW	OFF
HEAD LAMP SW	OFF
HI BEAM SW	OFF
PASSING SW	OFF
FR FOG SW	OFF
DOOR SW-DR	OFF

LKIA0074E

HEADLAMP (FOR CANADA) - CONVENTIONAL TYPE -

RH High Beam Does Not Illuminate But RH Low Beam Illuminates

AKS0031P


1. DAYTIME LIGHT CONTROL UNIT CIRCUIT CHECK

1. Disconnect daytime light control unit connector and front combination lamp RH connector.
2. Check harness continuity between daytime light control unit harness connector E14 terminal 6(L) and front combination lamp RH harness connector E25 terminal 2(L).

Continuity should exist

OK or NG

- OK >> GO TO 2.
NG >> Repair harness or connector.

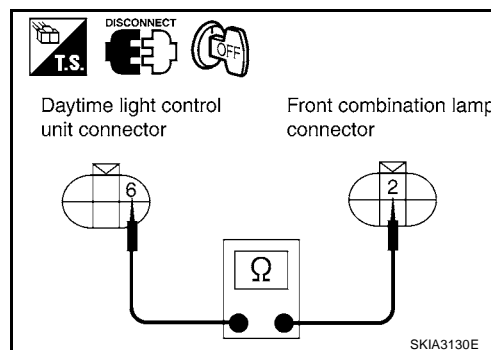


2. HEADLAMP INPUT SIGNAL CHECK

1. Connect daytime light control unit connector.
2. Start auto active test. Refer to [PG-24, "Auto Active Test"](#). When headlamp HI is operating, Check voltage between front combination lamp RH harness connector E25 terminal 2(L) and ground.

Battery voltage should exist

OK or NG

- OK >> Check headlamp bulbs.
NG >> Replace daytime light control unit.

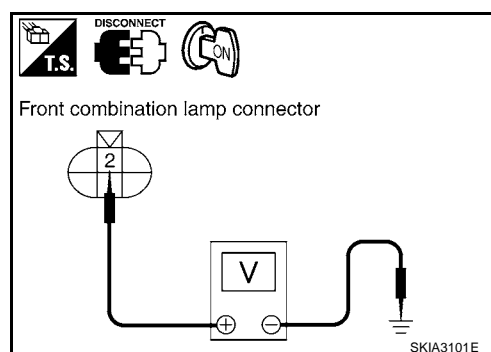

LH High Beam Does Not Illuminate But LH Low Beam Illuminates

AKS0031Q


1. DAYTIME LIGHT CONTROL UNIT CIRCUIT CHECK

1. Disconnect daytime light control unit connector and front combination lamp LH connector.
2. Check harness continuity between daytime light control unit harness connector E13 terminal 7(SB) and front combination lamp LH harness connector E41 terminal 2(SB).

Continuity should exist

OK or NG

- OK >> GO TO 2.
NG >> Repair harness or connector.

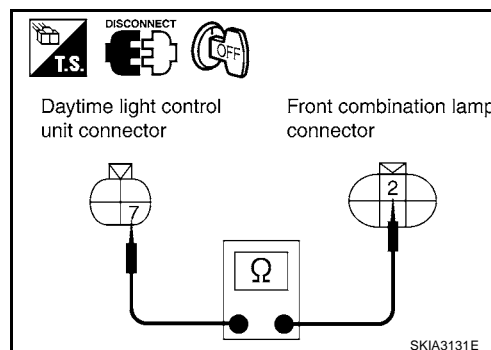


2. DAYTIME LIGHT CONTROL UNIT CIRCUIT CHECK

Check harness continuity between daytime light control unit harness connector E15 terminal 9(Y/G) and front combination lamp LH harness connector E41 terminal 3(Y/G).

Continuity should exist

OK or NG

- OK >> GO TO 3.
NG >> Repair harness or connector.

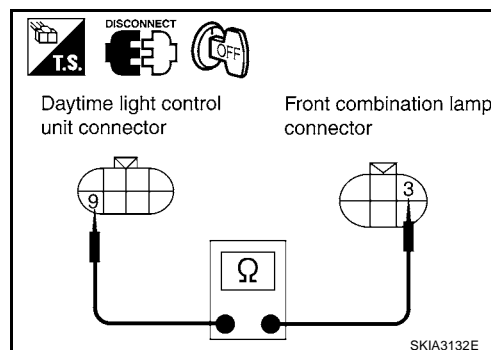

HEADLAMP (FOR CANADA) - CONVENTIONAL TYPE -


3. HEADLAMP INPUT SIGNAL CHECK

1. Connect daytime light control unit connector.
2. Start auto active test. Refer to [PG-24, "Auto Active Test"](#) . When headlamp HI is operating, Check voltage between front combination lamp LH harness connector E41 terminal 2(SB) and ground.

Battery voltage should exist

OK or NG

- OK >> Check headlamp bulbs.
NG >> Replace daytime light control unit.

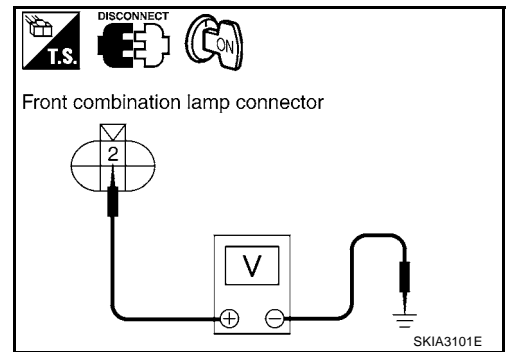

Headlamp Low Beam Does Not Illuminate (Both Sides)

AKS0031R

1. HEADLAMP AUTO ACTIVE TEST

1. Start auto active test. Refer to [PG-24, "Auto Active Test"](#) .
2. Check whether headlamp LO operates.

OK or NG

- OK >> GO TO 3.
NG >> GO TO 2.


2. IPDM E/R SIGNAL CHECK

1. Turn ignition switch OFF.
2. Connect IPDM E/R connector.
3. Start auto active test. Refer to [PG-24, "Auto Active Test"](#) . When headlamp LO is operating, check voltage between IPDM E/R and ground.

Terminals			Voltage
(+) (Terminal wire color)		(-)	
Connector	Terminal (wire color)		
E7	21 (R/B)	Ground	Battery voltage
	27 (R)		

OK or NG

- OK >> Check headlamp bulbs.
NG >> Replace IPDM E/R.

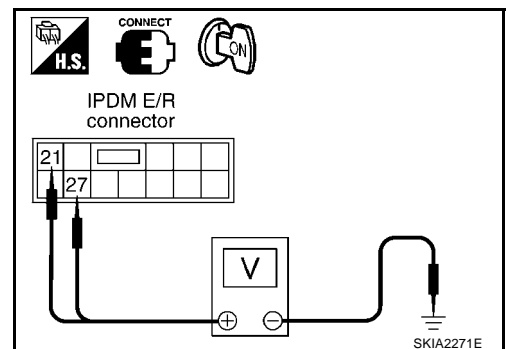

3. COMBINATION SWITCH CIRCUIT CHECK

Select BCM on CONSULT-II. Carry out "BCM C/U" self-diagnosis.

Displayed results of self-diagnosis

No malfunction detected>> GO TO 5.

CAN communications or CAN system>> Inspect the BCM CAN communications system. Refer to [BCS-18, "CAN Communication Inspection Using CONSULT-II \(Self-Diagnosis\)"](#) .

OPEN DETECT 1 - 5>> Combination Switch System malfunction. Refer to [LT-164, "Combination Switch Inspection According to Self-Diagnostic Results"](#) .

HEAD LAMP 1 SW or HEAD LAMP 2 SW>> Replace lighting switch.

SELF-DIAG RESULTS	
DTC RESULTS	TIME
NO DTC IS DETECTED. FURTHER TESTING MAY BE REQUIRED	

LKIA0073E

HEADLAMP (FOR CANADA) - CONVENTIONAL TYPE -

4. COMBINATION SWITCH INPUT SIGNAL CHECK

Select BCM on CONSULT-II. With "HEAD LAMP" data monitor, check that "HEAD LAMP SW" and "HEAD LAMP SW 2" turn ON-OFF with operation of lighting switch.

OK or NG

- OK >> Replace BCM.
- NG >> ● Replace lighting switch.
 - If one of "HEAD LAMP SW" and "HEAD LAMP SW 2" is NG, replace both BCM and lighting switch.

DATA MONITOR	
MONITOR	
HEAD LAMP SW	OFF
HIBEM SW	OFF
PASSING SW	OFF
FR FOG SW	OFF
DOOR SW-DR	OFF
DOOR SW-AS	OFF
DOOR SW-RR	OFF
HEAD LAMP SW2	OFF
OPTICAL SENSOR	0.00V

SKIA3661E

RH Low Beam Does Not Illuminate But RH High Beam Illuminates

AKS0031S

1. CHECK BULB

Inspect bulb of lamp which does not illuminate.

OK or NG

- OK >> GO TO 2.
- NG >> Replace bulb of lamp.


2. HEADLAMP RH CIRCUIT CHECK

1. Disconnect IPDM E/R connector and front combination lamp RH connector.
2. Check harness continuity between IPDM E/R harness connector E7 terminal 27(R) and front combination lamp RH harness connector E25 terminal 6(R).

Continuity should exist

OK or NG

- OK >> Replace IPDM E/R.
- NG >> Repair harness or connector.

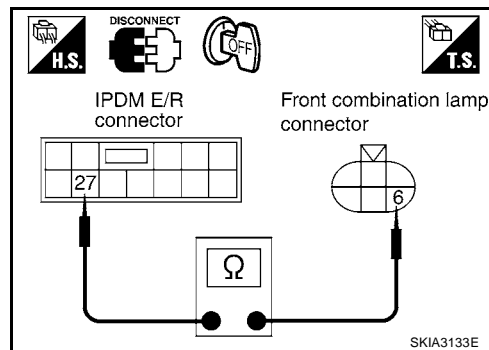

LH Low Beam Does Not Illuminate But LH High Beam Illuminates

AKS0031T

1. CHECK BULB

Inspect bulb of lamp which does not illuminate.

OK or NG

- OK >> GO TO 2.
- NG >> Replace bulb of lamp.


2. DAYTIME LIGHT CONTROL UNIT CIRCUIT CHECK

1. Disconnect daytime light control unit connector and front combination lamp LH connector.
2. Check harness continuity between daytime light control unit harness connector E15 terminal 12(R) and front combination lamp LH harness connector E41 terminal 6(R).

Continuity should exist

OK or NG

- OK >> GO TO 2.
- NG >> Repair harness or connector.

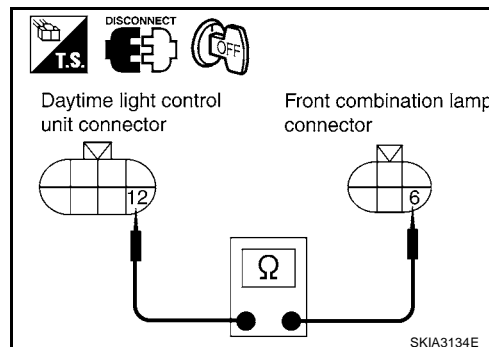

HEADLAMP (FOR CANADA) - CONVENTIONAL TYPE -

3. DAYTIME LIGHT CONTROL UNIT CIRCUIT CHECK


1. Disconnect daytime light control unit connector and front combination lamp connector.
2. Check harness continuity between daytime light control unit harness connector E15 terminal 9(Y/G) and front combination lamp LH harness connector E41 terminal 3(Y/G).

Continuity should exist

OK or NG

OK >> GO TO 3.

NG >> Repair harness or connector.

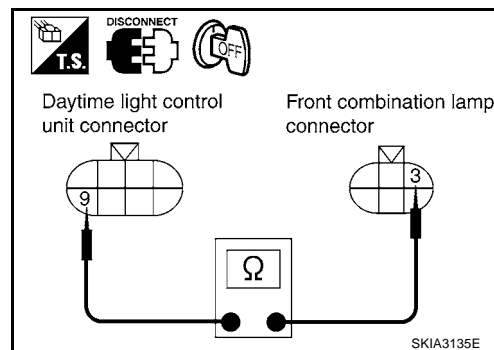

4. INSPECTION DAYTIME LIGHT CONTROL UNIT


1. Connect daytime light control unit connector.
2. Start auto active test. Refer to [PG-24, "Auto Active Test"](#). When headlamp LO is operating, Check voltage between front combination lamp LH harness connector E41 terminal 6(R) and ground.

Battery voltage should exist

OK or NG


OK >> Check headlamp bulbs.

NG >> Replace daytime light control unit.

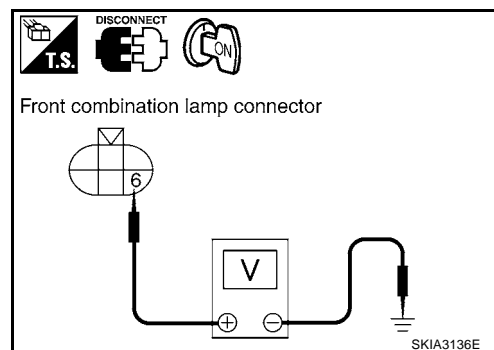

Aiming Adjustment

AKS003M0

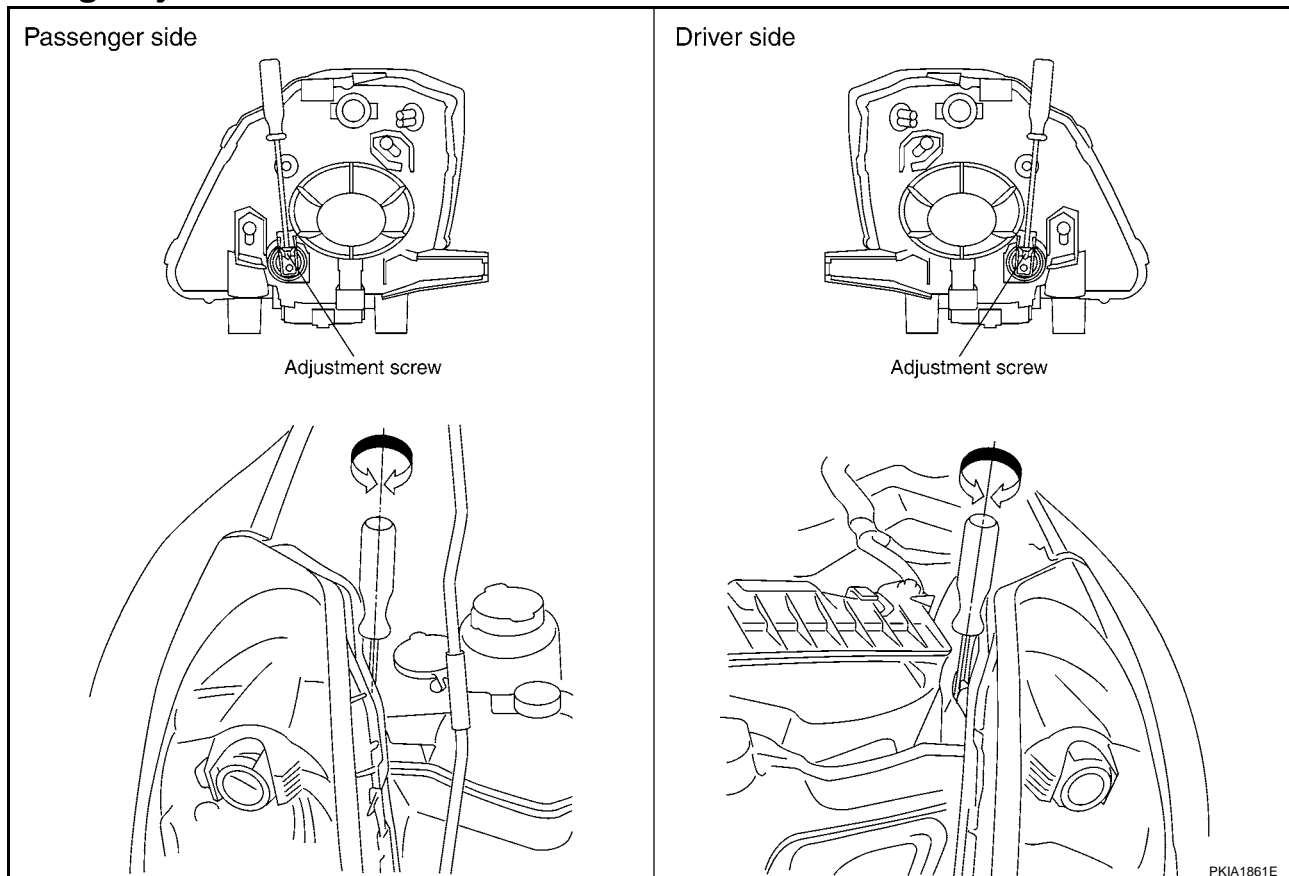

HEADLAMP (FOR CANADA) - CONVENTIONAL TYPE -

PREPARATION BEFORE ADJUSTING

For details, refer to the regulations in your own country.


Before performing aiming adjustment, check the following.

1. Keep all tires inflated to correct pressures.
2. Place vehicle on flat surface.
3. Set that there is no-load in vehicle other than the driver (or equivalent weight placed in driver's position). Coolant, engine oil filled up to correct level and full fuel tank.

LOW BEAM AND HIGH BEAM

1. Turn headlamp low beam on.
2. Use adjusting screws to perform aiming adjustment.

ADJUSTMENT USING AN ADJUSTMENT SCREEN (LIGHT/DARK BORDERLINE)

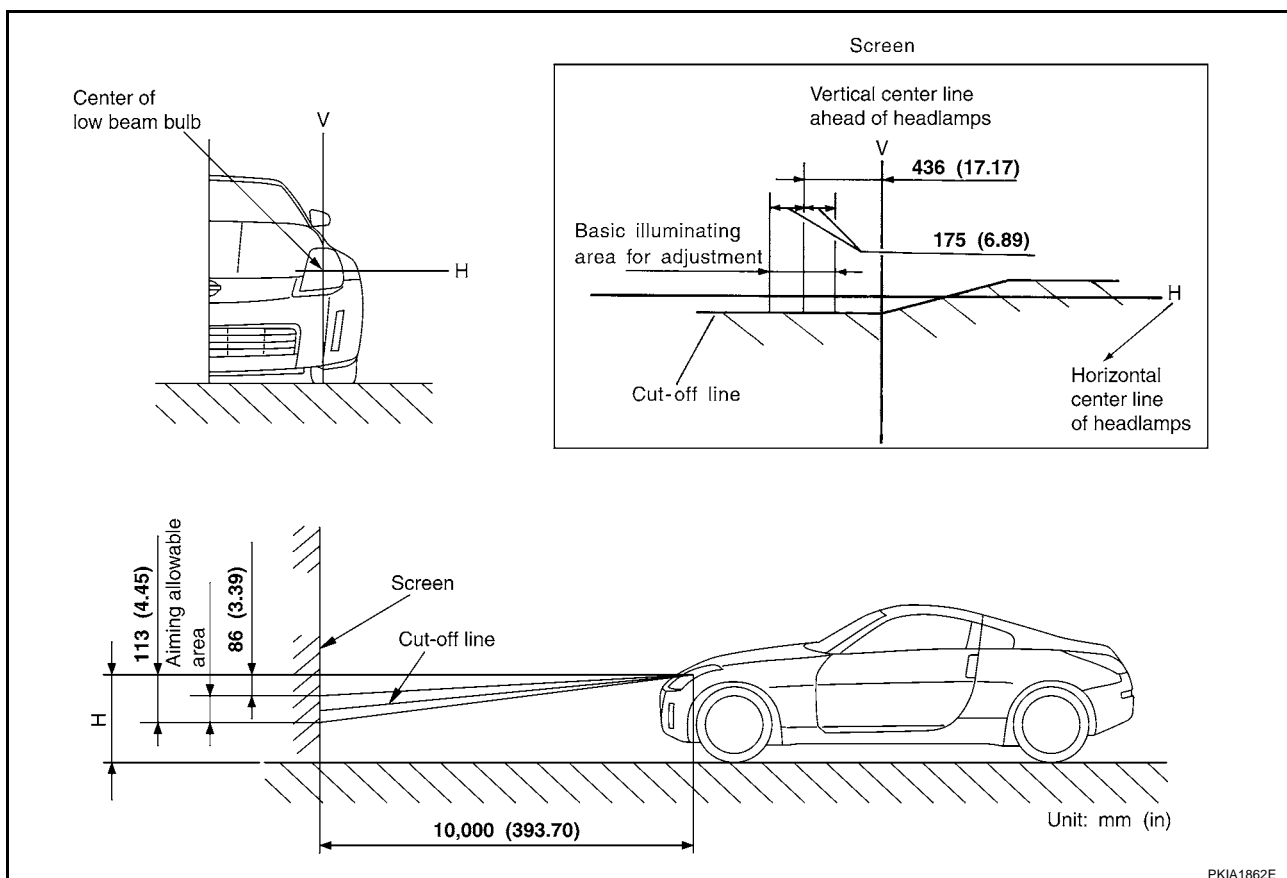

If the vehicle front body has been repaired and/or the headlamp assembly has been replaced, check aiming. Use the aiming chart shown in the figure.

- Basic illumination area for adjustment should be within the range shown on the aiming chart. Adjust headlamp accordingly.

Bulb Replacement

HEADLAMP (UPPER) LOW BEAM

1. Turn lighting switch OFF.
2. Remove fender protector (front). Refer to [EI-21, "FENDER PROTECTOR"](#) in "EI" section.
3. Turn plastic cap counterclockwise and unlock it.
4. Disconnect bulb terminal.
5. Unlock retaining spring and remove bulb from headlamp.
6. Install in reverse order of removal.

Headlamp (upper) low beam
(Halogen)

: 12V - 55W (H7)

HEADLAMP (FOR CANADA) - CONVENTIONAL TYPE -

HEADLAMP (LOWER) HIGH BEAM

1. Turn lighting switch OFF.
2. Remove fender protector (front). Refer to [EI-21, "FENDER PROTECTOR"](#) in "EI" section.
3. Turn plastic cap counterclockwise and unlock it.
4. Disconnect bulb terminal.
5. Unlock retaining spring and remove bulb from headlamp.
6. Install in the reverse order of removal.

Headlamp (lower) high beam/Fog lamp : 12V - 55W (H1)

PARKING LAMPS (CLEARANCE LAMPS)

1. Turn lighting switch OFF.
2. Remove fender protector (front). Refer to [EI-21, "FENDER PROTECTOR"](#) in "EI" section.
3. Turn bulb socket counterclockwise and unlock it.
4. Remove bulb from its socket.
5. Install in the reverse order of removal.

Parking lamps (Clearance lamps) : 12V - 5W

FRONT TURN SIGNAL LAMP

1. Turn lighting switch OFF.
2. Remove fender protector (front). Refer to [EI-21, "FENDER PROTECTOR"](#) in "EI" section.
3. Turn bulb socket counterclockwise and unlock it.
4. Remove bulb from its socket.
5. Install in the reverse order of removal.

Front turn signal lamp : 12V - 21W

CAUTION:

After installing bulb, be sure to install plastic cap and bulb socket securely to insure watertightness.

FRONT SIDE MARKER LAMP

1. Turn lighting switch OFF.
2. Remove fender protector (front). Refer to [EI-21, "FENDER PROTECTOR"](#) in "EI" section.
3. Turn bulb socket counterclockwise and unlock it.
4. Remove bulb from its socket.
5. Install in the reverse order of removal.

Front side marker lamp : 12V - 5W


CAUTION:

After installing bulb, be sure to install plastic cap and socket securely to insure watertightness.

Removal and Installation

REMOVAL

1. Remove front bumper. Refer to [EI-14, "FRONT BUMPER"](#) in "EI" section.
2. Remove headlamp mounting bolts.
3. Pull headlamp toward vehicle front, disconnect connector, and remove headlamp.

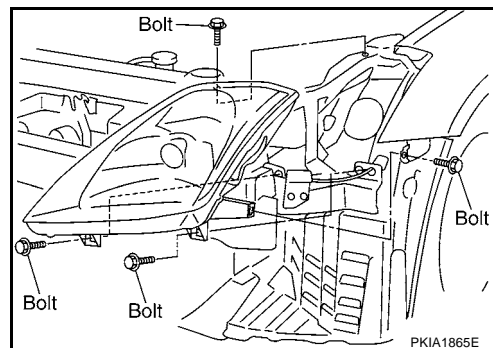

HEADLAMP (FOR CANADA) - CONVENTIONAL TYPE -

INSTALLATION

Install in the reverse order of removal. Be careful of the following:

Headlamp mounting bolt:




: 4.4 - 6.5 N·m (0.45 - 0.66 kg-m, 39 - 57 in-lb)

NOTE:

After installation, aiming adjustment. Refer to [LT-128, "Aiming Adjustment"](#) .

Disassembly and Assembly

AKS003MR

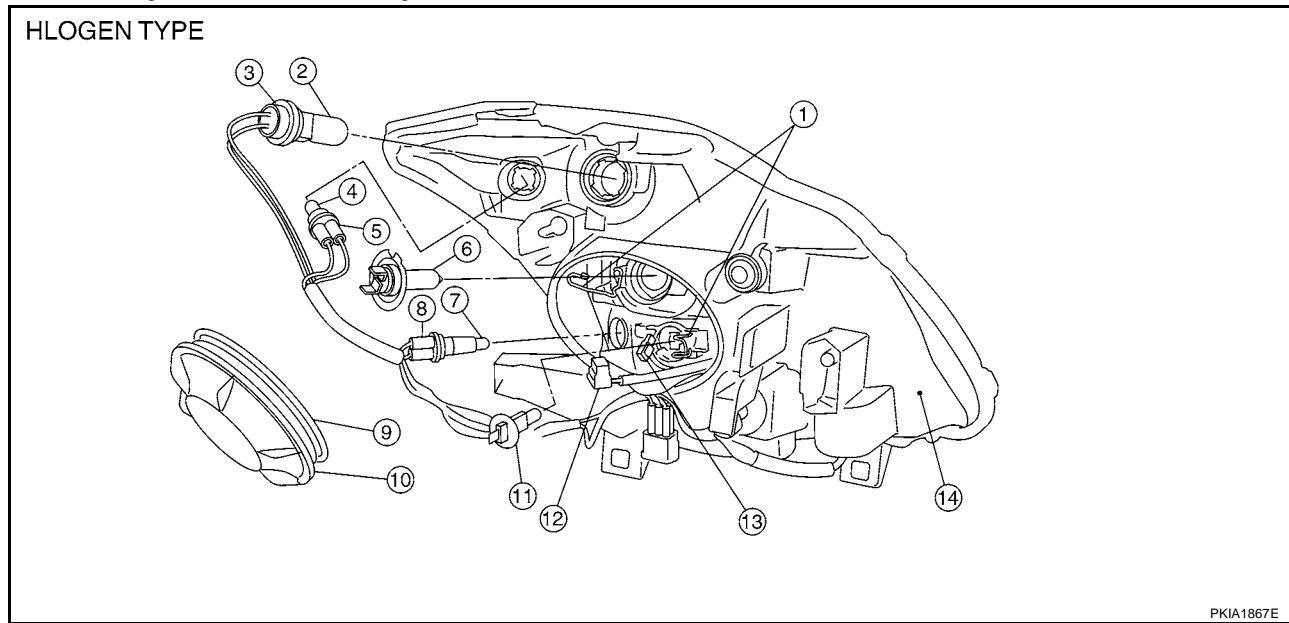

- | | | |
|--------------------------------|---------------------------------|---------------------------------------|
| 1. Retaining spring | 2. Front turn signal lamp bulb | 3. Front turn signal lamp bulb socket |
| 4. Side marker lamp bulb | 5. Side marker lamp bulb socket | 6. Halogen bulb (low) |
| 7. Halogen bulb socket | 8. Clearance lamp bulb socket | 9. Seal rubber |
| 10. Plastic cap | 11. Halogen bulb (high) | 12. Halogen bulb socket (low) |
| 13. Halogen bulb socket (high) | 14. Headlamp housing assembly | |

DISASSEMBLY

1. Turn plastic cap counterclockwise and unlock it.
2. Disconnect bulb socket (low).
3. Unlock retaining spring, and remove halogen bulb (low).
4. Disconnect the socket connected to the halogen bulb (high).
5. Unlock retaining spring, and remove halogen bulb (high).
6. Turn parking lamp bulb socket counterclockwise and unlock it.
7. Remove parking lamp bulb from its socket.
8. Turn front turn signal lamp bulb socket counterclockwise and unlock it.
9. Remove front turn signal lamp bulb from its socket.
10. Turn front side marker lamp bulb socket counterclockwise and unlock it.
11. Remove front side lamp marker lamp bulb from its socket.

ASSEMBLY

AKS003MS

Assemble in reverse order of disassembly. Be careful of the following:

CAUTION:


- After installing bulb, be sure to install plastic cap and bulb socket securely to insure watertightness.

HEADLAMP (FOR CANADA) - CONVENTIONAL TYPE -

Servicing to Replace Headlamps When Damaged

AKS003MT


If only installation part as shown in the figure is damaged, and headlamp housing itself is not damaged, repair can be completed easily by installing correction brackets.

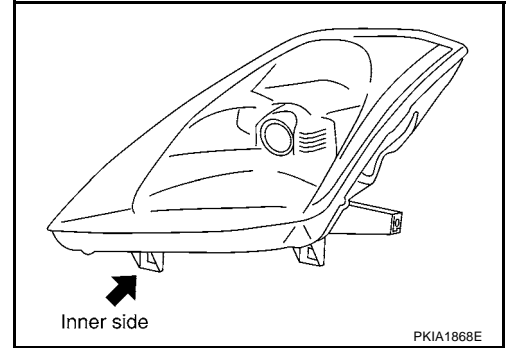

INSTALLATION OF HEADLAMP BRACKET

1. Remove headlamps. Refer to [LT-130, "Removal and Installation"](#).
2. Cut damaged section of installation part, then shape with sandpaper.
3. Attach each correction bracket to headlamp housing boss with 2 screws.

RH headlamp	Inner side	26040 CD000
LH headlamp	Inner side	26090 CD000

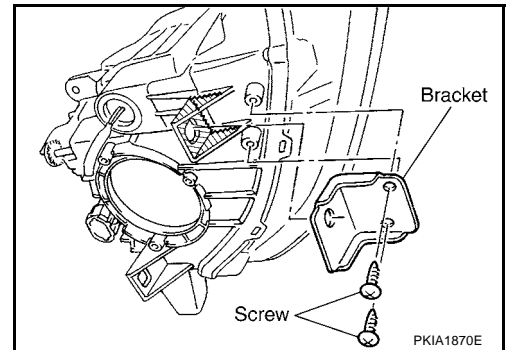

TURN SIGNAL AND HAZARD WARNING LAMPS

PFP:26120

System Description

AKS000UC

TURN SIGNAL OPERATION

When the ignition switch is in the ON or START position, power is supplied

- through 10A fuse [No. 1, located in the fuse block (J/B)]
- to BCM (body control module) terminal 35, and
- through 10A fuse [No. 14, located in the fuse block (J/B)]
- to terminal 23 of the combination meter.

Ground is supplied

- to BCM (body control module) terminal 8
- through grounds E17, E43, and F152, and
- to combination meter terminals 10, 11 and 12
- through grounds M30 and M66.

LH Turn

When the turn signal switch (combination switch) is moved to the LH position, the BCM (body control module) receives left turn signal by combination switch reading function (Refer to [LT-159, "Combination Switch Reading Function"](#)). Power is supplied

- through BCM (body control module) terminal 22
- to front turn signal lamp LH (part of the front combination lamp LH) terminal 2 (with xenon headlamp)
- to front turn signal lamp LH (part of the front combination lamp LH) terminal 1 (with halogen headlamp)
- to rear turn signal lamp LH (part of the rear combination lamp LH) terminal 2.

Ground is supplied to the front turn signal lamp LH (part of the front combination lamp LH) terminal 1 through grounds E17, E43 and F152 (with xenon headlamp).

Ground is supplied to the front turn signal lamp LH (part of the front combination lamp LH) terminal 4 through grounds E17, E43 and F152 (with halogen headlamp).

Ground is supplied to the rear turn signal lamp LH (part of the rear combination lamp LH) terminal 4 through grounds T14, B6, B5 and D105.

The BCM also supplies ground to unified meter and A/C amp terminals 1 and 11 across the CAN communication lines. This input signal is processed by the unified meter control unit in the combination meter through the unified meter and A/C amp, which in turn supplies ground to the left turn signal indicator lamp.

With power and ground supplied, the BCM controls the flashing of the LH turn signal lamps.

RH Turn

When the turn signal switch (combination switch) is moved to the RH position, the BCM (body control module) receives right turn signal by combination switch reading function (Refer to [LT-159, "Combination Switch Reading Function"](#)) power is supplied

- through BCM (body control module) terminal 21
- to front turn signal lamp RH (part of the front combination lamp RH) terminal 2 (with xenon headlamp)
- to front turn signal lamp RH (part of the front combination lamp RH) terminal 1 (with halogen headlamp)
- to rear turn signal lamp RH (part of the rear combination lamp RH) terminal 2.

Ground is supplied to the front turn signal lamp RH (part of the front combination lamp RH) terminal 1 through grounds E17, E43 and F152 (with xenon headlamp).

Ground is supplied to the front turn signal lamp RH (part of the front combination lamp RH) terminal 4 through grounds E17, E43 and F152 (with halogen headlamp).

Ground is supplied to the rear turn signal lamp RH (part of the rear combination lamp RH) terminal 4 through y grounds T14, B6, B5 and D105.

The BCM also supplies ground to unified meter and A/C amp terminals 1 and 11 across the CAN communication lines. This input is processed by the unified meter control unit in the combination meter through the unified meter and A/C amp, which in turn supplies ground to the right turn signal indicator lamp.

With power and ground supplied, the BCM controls the flashing of the RH turn signal lamps.

HAZARD LAMP OPERATION

Power is supplied at all times

- to BCM (body control module) terminal 7

TURN SIGNAL AND HAZARD WARNING LAMPS

- through 40A fusible link [letter F, located in the fuse and fusible link box], and
- to combination meter terminal 24
- through 10A fuse [No. 19, located in the fuse block (J/B)].

Ground is supplied

- to hazard switch terminal 2
- through grounds M30 and M66,
- to BCM terminals 8,
- through grounds E17, E43 and F152
- to combination meter terminals 10, 11 and 12
- through grounds M30 and M66.

When the hazard switch is depressed, ground is supplied

- to BCM terminal 61
- through hazard lamp switch terminal 1.

The BCM then supplies power

- through BCM terminal 22
- to front turn signal lamp LH (part of the front combination lamp LH) terminal 2 (with xenon headlamp)
- to front turn signal lamp LH (part of the front combination lamp LH) terminal 1 (with halogen headlamp)
- to rear turn signal lamp LH (part of the rear combination lamp LH) terminal 2
- through BCM terminal 21
- to front turn signal lamp RH (part of the front combination lamp RH) terminal 2 (with xenon headlamp)
- to front turn signal lamp RH (part of the front combination lamp RH) terminal 1 (with halogen headlamp)
- to rear turn signal lamp RH (part of the rear combination lamp RH) terminal 2.

Ground is supplied

- to the front turn signal lamp LH (part of the front combination lamp LH) terminal 1 through grounds E17, E43 and F152 (with xenon headlamp)
- to the front turn signal lamp LH (part of the front combination lamp LH) terminal 4 through grounds E17, E43 and F152 (with halogen headlamp)
- to the front turn signal lamp RH (part of the front combination lamp RH) terminal 1 through grounds E17, E43 and F152 (with xenon headlamp)
- to the front turn signal lamp RH (part of the front combination lamp RH) terminal 4 through grounds E17, E43 and F152 (with halogen headlamp)
- to the rear turn signal lamp LH (part of the rear combination lamp LH) terminal 4 through grounds T14, B6, B5 and D105.
- to the rear turn signal lamp RH (part of the rear combination lamp RH) terminal 4 through grounds T14, B6, B5 and D105.

The BCM also supplies input to combination meter terminals 1 and 11 across the CAN communication lines. This input is processed by the unified meter control unit in the combination meter through the unified meter and A/C amp, which in turn supplies ground to the left and right turn signal indicator lamps.

With power and ground supplied, the BCM controls the flashing of the hazard warning lamps.

REMOTE KEYLESS ENTRY SYSTEM OPERATION

Power is supplied at all times

- to BCM (body control module) terminal 7
- through 40A fusible link [letter F, located in the fuse and fusible link box], and
- to combination meter terminal 24
- through 10A fuse [No. 19, located in the fuse block (J/B)].

Ground is supplied

- to BCM terminal 8,
- through grounds E17, E43, F152, and
- to combination meter terminals 10, 11 and 12
- through grounds M30 and M66.

TURN SIGNAL AND HAZARD WARNING LAMPS

When the remote keyless entry system is triggered by input signal from the key fob, the BCM supplies power

- through BCM terminal 22
- to front turn signal lamp LH (part of the front combination lamp LH) terminal 2 (with xenon headlamp)
- to front turn signal lamp LH (part of the front combination lamp LH) terminal 1 (with halogen headlamp)
- to rear turn signal lamp LH (part of the rear combination lamp LH) terminal 2
- through BCM terminal 21
- to front turn signal lamp RH (part of the front combination lamp RH) terminal 2 (with xenon headlamp)
- to front turn signal lamp RH (part of the front combination lamp RH) terminal 1 (with halogen headlamp)
- to rear turn signal lamp RH (part of the rear combination lamp RH) terminal 2.

Ground is supplied

- to the front turn signal lamp LH (part of the front combination lamp LH) terminal 1 through grounds E17, E43 and F152 (with xenon headlamp)
- to the front turn signal lamp LH (part of the front combination lamp LH) terminal 4 through grounds E17, E43 and F152 (with halogen headlamp)
- to the front turn signal lamp RH (part of the front combination lamp RH) terminal 1 through grounds E17, E43 and F152 (with xenon headlamp)
- to the front turn signal lamp RH (part of the front combination lamp RH) terminal 4 through grounds E17, E43 and F152 (with halogen headlamp)
- to the rear turn signal lamp LH (part of the rear combination lamp LH) terminal 4 through grounds T14, B6, B5 and D105.
- to the rear turn signal lamp RH (part of the rear combination lamp RH) terminal 4 through grounds T14, B6, B5 and D105.

The BCM also supplies input signal to combination meter terminals 27 and 28 across the CAN communication lines. This input is processed by the unified meter control unit in the combination meter through the unified meter and A/C amp, which in turn supplies ground to the left and right turn signal indicator lamps.

With power and ground supplied, the BCM controls the flashing of the hazard warning lamps when key fob is used to activate the remote keyless entry system.

COMBINATION SWITCH READING FUNCTION

Refer to [LT-159, "Combination Switch Reading Function"](#).

CAN Communication System Description

AKS003N5

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

CAN Communication Unit

AKS003N6

Body type	Coupe						
Axle	2WD						
Engine	VQ35DE						
Transmission	A/T	M/T					
Brake control	TCS	ABS		TCS		VDC	
Low tire pressure warning system	Not Applicable	Not Applicable	Applicable	Not Applicable	Applicable	Not Applicable	Applicable
CAN communication unit							
ECM	×	×	×	×	×	×	×
TCM	×						
Data link connector	×	×	×	×	×	×	×
Unified meter and A/C amp.	×	×	×	×	×	×	×

TURN SIGNAL AND HAZARD WARNING LAMPS


Body type	Coupe						
Axle	2WD						
Engine	VQ35DE						
Transmission	A/T	M/T					
Brake control	TCS	ABS		TCS		VDC	
Low tire pressure warning system	Not Applicable	Not Applicable	Applicable	Not Applicable	Applicable	Not Applicable	Applicable
CAN communication unit							
BCM	×	×	×	×	×	×	×
Low tire pressure warning control unit			×		×		×
Steering angle sensor						×	×
ABS actuator and electric unit (control unit)	×	×	×	×	×		
VDC/TCS/ABS control unit						×	×
IPDM E/R	×	×	×	×	×	×	×
CAN communication type	LAN-7. "TYPE 1"	LAN-8. "TYPE 2/ TYPE3"		LAN-10. "TYPE 4/ TYPE5"		LAN-12. "TYPE 6/ TYPE7"	

×: Applicable

TYPE 1

System diagram

- Type1

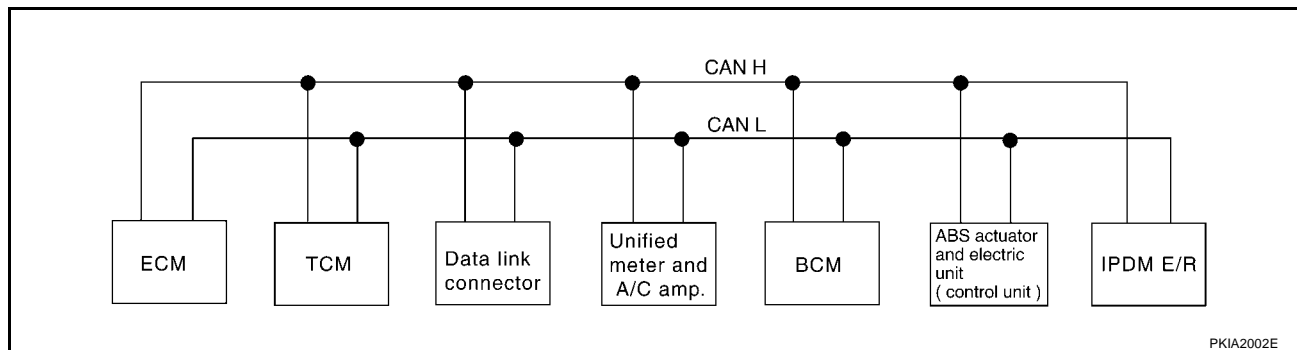

Input/output signal chart

T: Transmit R: Receive

Signals	ECM	TCM	Unified meter and A/C amp.	BCM	ABS actuator and electric unit (control unit)	IPDM E/R
Engine speed signal	T	R	R		R	
Engine torque signal	T	R				
Engine coolant temperature signal	T	R	R			
Accelerator pedal position signal	T	R			R	
Closed throttle position signal	T	R				
Wide open throttle position signal	T	R				
Battery voltage signal	T	R				
Stop lamp switch signal		R	T			
Fuel consumption monitor signal	T		R			
A/T self-diagnosis signal	R	T				
A/T CHECK indicator lamp signal		T	R			

TURN SIGNAL AND HAZARD WARNING LAMPS

Signals	ECM	TCM	Unified meter and A/C amp.	BCM	ABS actuator and electric unit (control unit)	IPDM E/R	A
A/T position indicator signal		T	R		R		B
ABS operation signal		R			T		C
A/T shift schedule change demand signal		R			T		D
Air conditioner switch signal	R			T			E
A/C compressor request signal	T					R	F
A/C compressor feedback signal	T		R				G
Blower fan motor switch signal	R			T			H
Cooling fan speed request signal	T					R	I
Position lights request signal			R	T		R	J
Low beam request signal				T		R	
Low beam status signal	R					T	
High beam request signal			R	T		R	
High beam status signal	R					T	
Vehicle speed signal			R		T		
	R	R	T	R			
Sleep request 1 signal			R	T			
Sleep request 2 signal				T		R	
Wake up request 1 signal			R	T			
Door switch signal			R	T		R	
Turn indicator signal			R	T			
Seat belt buckle switch signal			T	R			
Buzzer output signal			R	T			
Fuel level sensor signal	R		T				LT
Malfunction indicator lamp signal	T		R				
ASCD SET lamp signal	T		R				
ASCD operation signal	T	R					L
ASCD CRUISE lamp signal	T		R				
Overdrive cancel signal	T	R					
Output shaft revolution signal	R	T					M
Turbine revolution signal	R	T					
Front wiper request signal				T		R	
Front wiper stop position signal				R		T	
Rear window defogger switch signal				T		R	
Rear window defogger control sig- nal	R					T	
Manual mode signal		R	T				
Not manual mode signal		R	T				
Manual mode shift up signal		R	T				
Manual mode shift down signal		R	T				
Manual mode indicator signal		T	R				
Hood switch signal				R		T	
Theft warning horn request signal				T		R	


TURN SIGNAL AND HAZARD WARNING LAMPS

Signals	ECM	TCM	Unified meter and A/C amp.	BCM	ABS actuator and electric unit (control unit)	IPDM E/R
Horn chirp signal				T		R
ABS warning lamp signal			R		T	
TCS OFF indicator lamp signal			R		T	
SLIP indicator lamp signal			R		T	
Brake (EBD) warning lamp signal			R		T	


TYPE 2/TYPE3

System diagram

- Type2

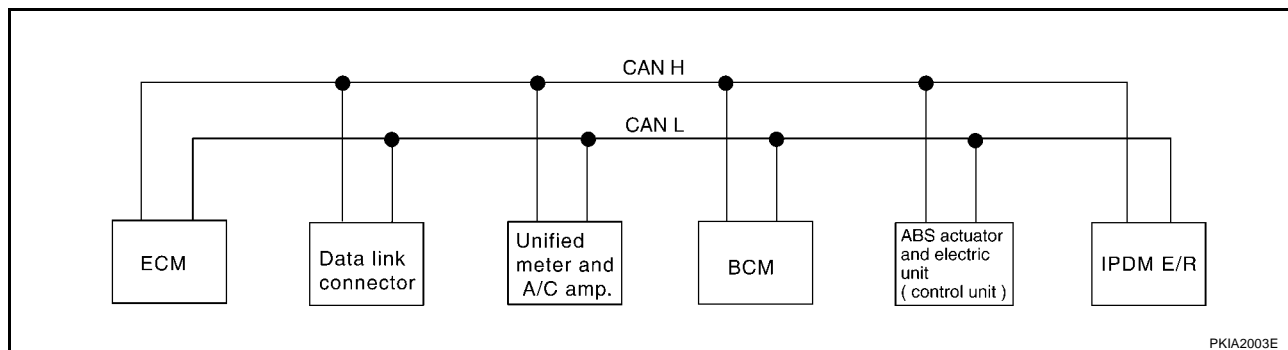

- Type3

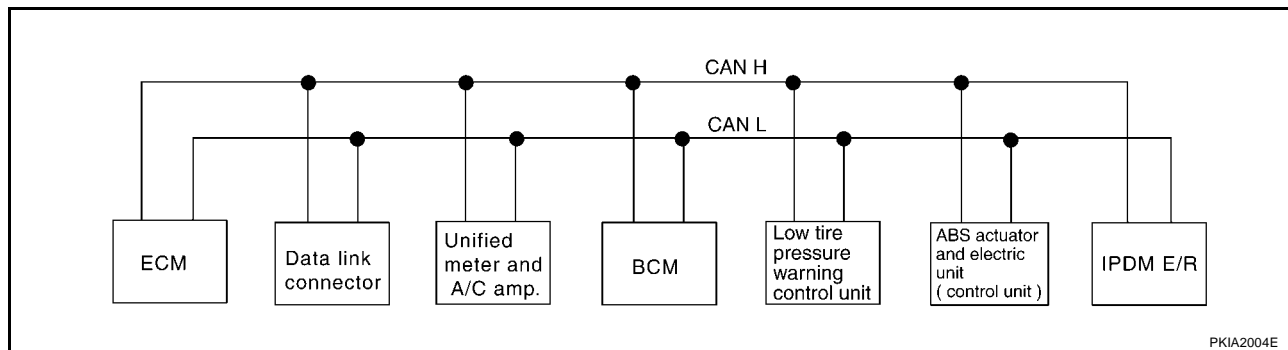

Input/output signal chart

T: Transmit R: Receive

Signals	ECM	Unified meter and A/C amp.	BCM	Low tire pressure warning control unit	ABS actuator and electric unit (control unit)	IPDM E/R
Engine speed signal	T	R			R	
Engine coolant temperature signal	T	R				
Accelerator pedal position signal	T				R	
Fuel consumption monitor signal	T	R				
Air conditioner switch signal	R		T			
A/C compressor request signal	T					R
A/C compressor feedback signal	T	R				
Blower fan motor switch signal	R		T			
Cooling fan speed request signal	T					R
Position lights request signal			R	T		R
Low beam request signal			T			R


TURN SIGNAL AND HAZARD WARNING LAMPS

Signals	ECM	Unified meter and A/C amp.	BCM	Low tire pressure warning control unit	ABS actuator and electric unit (control unit)	IPDM E/R
Low beam status signal	R					T
High beam request signal		R	T			R
High beam status signal	R					T
Vehicle speed signal		R			T	
	R	T	R	R		
Sleep request 1 signal		R	T			
Sleep request 2 signal			T			R
Wake up request 1 signal		R	T			
Door switch signal		R	T			R
Turn indicator signal		R	T			
Seat belt buckle switch signal		T	R			
Buzzer output signal		R	T			
Fuel level sensor signal	R	T				
Malfunction indicator lamp signal	T	R				
ASCD SET lamp signal	T	R				
ASCD CRUISE lamp signal	T	R				
Front wiper request signal			T			R
Front wiper stop position signal			R			T
Rear window defogger switch signal			T			R
Rear window defogger control signal	R					T
Hood switch signal			R			T
Theft warning horn request signal			T			R
Horn chirp signal			T			R
Tire pressure signal		R		T		
ABS warning lamp signal		R			T	
Brake (EBD) warning lamp signal		R			T	

TYPE 4/TYPE5

System diagram


- Type4

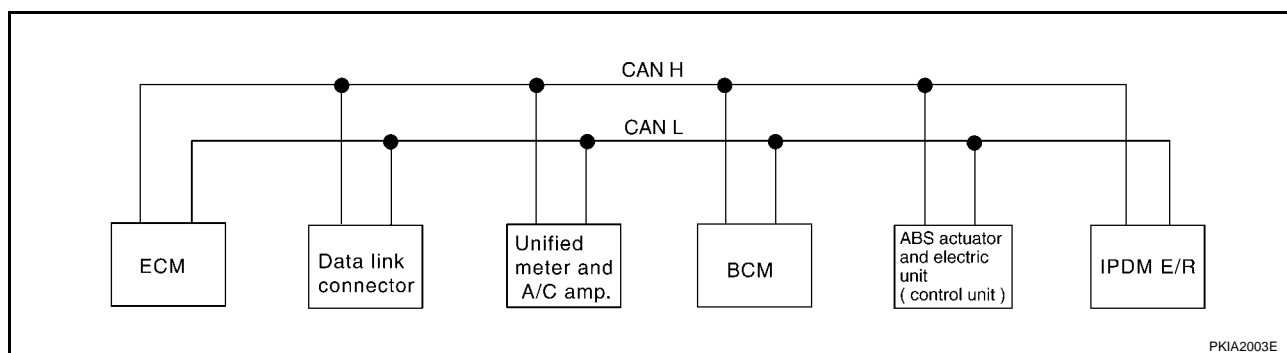

PKIA2003E

TURN SIGNAL AND HAZARD WARNING LAMPS

● Type5

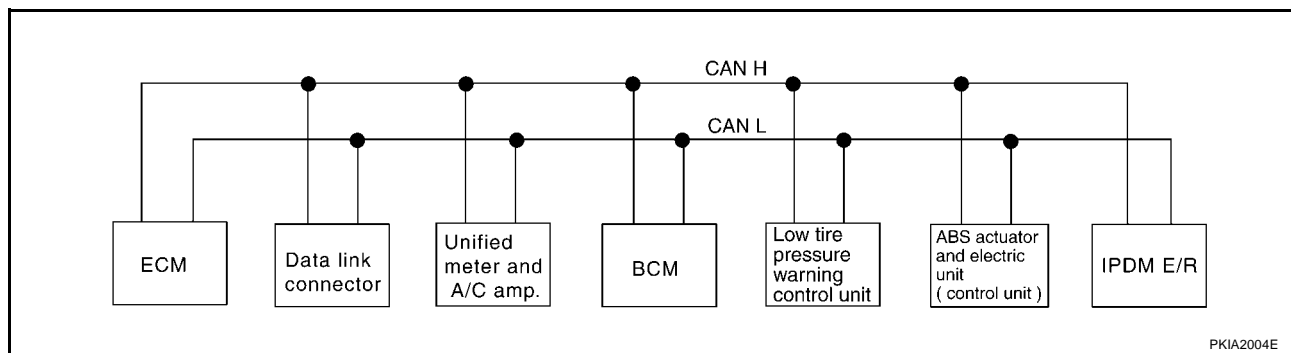

Input/output signal chart

T: Transmit R: Receive

Signals	ECM	Unified meter and A/C amp.	BCM	Low tire pressure warning control unit	ABS actuator and electric unit (control unit)	IPDM E/R
Engine speed signal	T	R			R	
Engine coolant temperature signal	T	R				
Accelerator pedal position signal	T				R	
Fuel consumption monitor signal	T	R				
Air conditioner switch signal	R		T			
A/C compressor request signal	T					R
A/C compressor feedback signal	T	R				
Blower fan motor switch signal	R		T			
Cooling fan speed request signal	T					R
Position lights request signal		R	T			R
Low beam request signal			T			R
Low beam status signal	R					T
High beam request signal		R	T			R
High beam status signal	R					T
Vehicle speed signal		R			T	
	R	T	R	R		
Sleep request 1 signal		R	T			
Sleep request 2 signal			T			R
Wake up request 1 signal		R	T			
Door switch signal		R	T			R
Turn indicator signal		R	T			
Seat belt buckle switch signal		T	R			
Buzzer output signal		R	T			
Fuel level sensor signal	R	T				
Malfunction indicator lamp signal	T	R				
ASCD SET lamp signal	T	R				
ASCD CRUISE lamp signal	T	R				
Front wiper request signal			T			R
Front wiper stop position signal			R			T
Rear window defogger switch signal			T			R


TURN SIGNAL AND HAZARD WARNING LAMPS

Signals	ECM	Unified meter and A/C amp.	BCM	Low tire pressure warning control unit	ABS actuator and electric unit (control unit)	IPDM E/R
Rear window defogger control signal	R					T
Hood switch signal			R			T
Theft warning horn request signal			T			R
Horn chirp signal			T			R
Tire pressure signal		R		T		
ABS warning lamp signal		R			T	
TCS OFF indicator lamp signal		R			T	
SLIP indicator lamp signal		R			T	
Brake (EBD) warning lamp signal		R			T	


TYPE 6/TYPE7

System diagram

- Type6

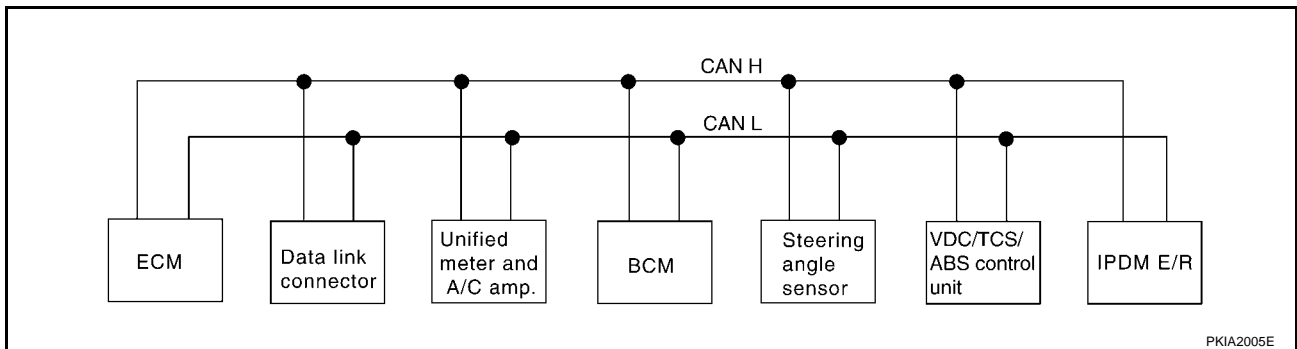

- Type7

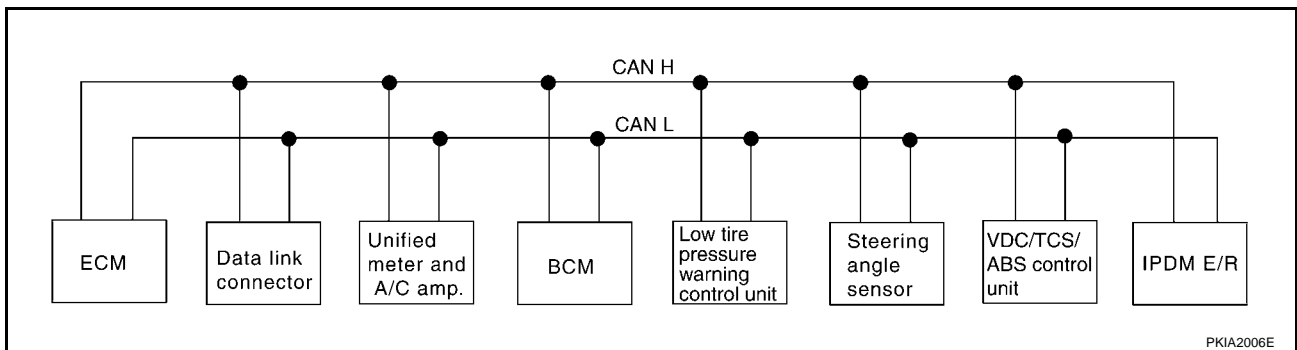

Input/output signal chart

T: Transmit R: Receive


Signals	ECM	Unified meter and A/C amp.	BCM	Low tire pressure warning control unit	Steering angle sensor	VDC/TCS/ABS control unit	IPDM E/R
Engine speed signal	T	R				R	
Engine coolant temperature signal	T	R					
Accelerator pedal position signal	T					R	
Fuel consumption monitor signal	T	R					
Air conditioner switch signal	R		T				
A/C compressor request signal	T						R

TURN SIGNAL AND HAZARD WARNING LAMPS

Signals	ECM	Unified meter and A/C amp.	BCM	Low tire pressure warning control unit	Steering angle sensor	VDC/TCS/ABS control unit	IPDM E/R
A/C compressor feedback signal	T	R					
Blower fan motor switch signal	R		T				
Cooling fan speed request signal	T						R
Position lights request signal		R	T				R
Low beam request signal			T				R
Low beam status signal	R						T
High beam request signal		R	T				R
High beam status signal	R						T
Vehicle speed signal		R				T	
	R	T	R	R			
Sleep request 1 signal		R	T				
Sleep request 2 signal			T				R
Wake up request 1 signal		R	T				
Door switch signal		R	T				R
Turn indicator signal		R	T				
Seat belt buckle switch signal		T	R				
Buzzer output signal		R	T				
Fuel level sensor signal	R	T					
Malfunction indicator signal	T	R					
ASCD SET lamp signal	T	R					
ASCD CRUISE lamp signal	T	R					
Front wiper request signal			T				R
Front wiper stop position signal			R				T
Rear window defogger switch signal			T				R
Rear window defogger control signal	R						T
Hood switch signal			R				T
Theft warning horn request signal			T				R
Horn chirp signal			T				R
Steering angle sensor signal					T	R	
Tire pressure signal		R		T			
ABS warning lamp signal		R				T	
VDC OFF indicator lamp signal		R				T	
SLIP indicator lamp signal		R				T	
Brake (EBD) warning lamp signal		R				T	

Schematic

AKS000UF

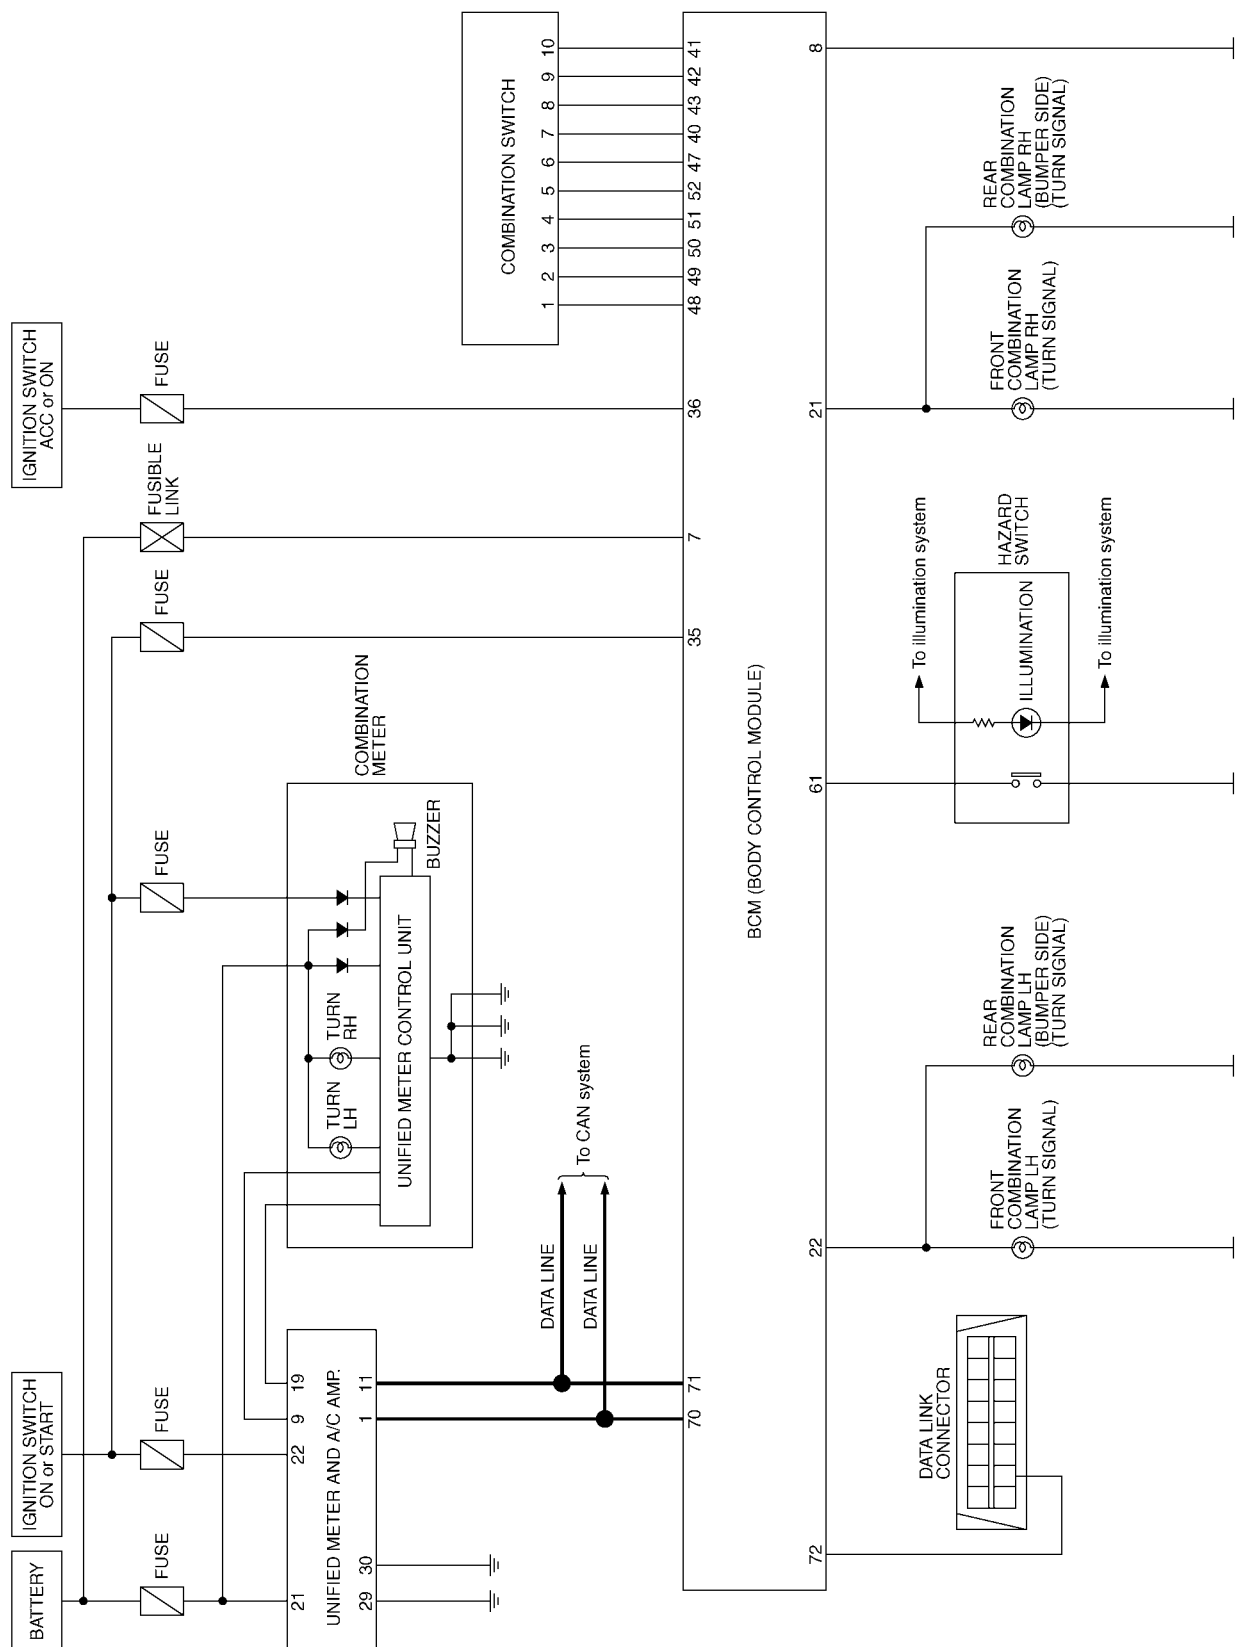

TKWT0448E

A
B
C
D
E
F
G
H
I
J
LT
L
M





LT

TURN SIGNAL AND HAZARD WARNING LAMPS

Wiring Diagram — TURN —

AKS000UG

LT-TURN-01

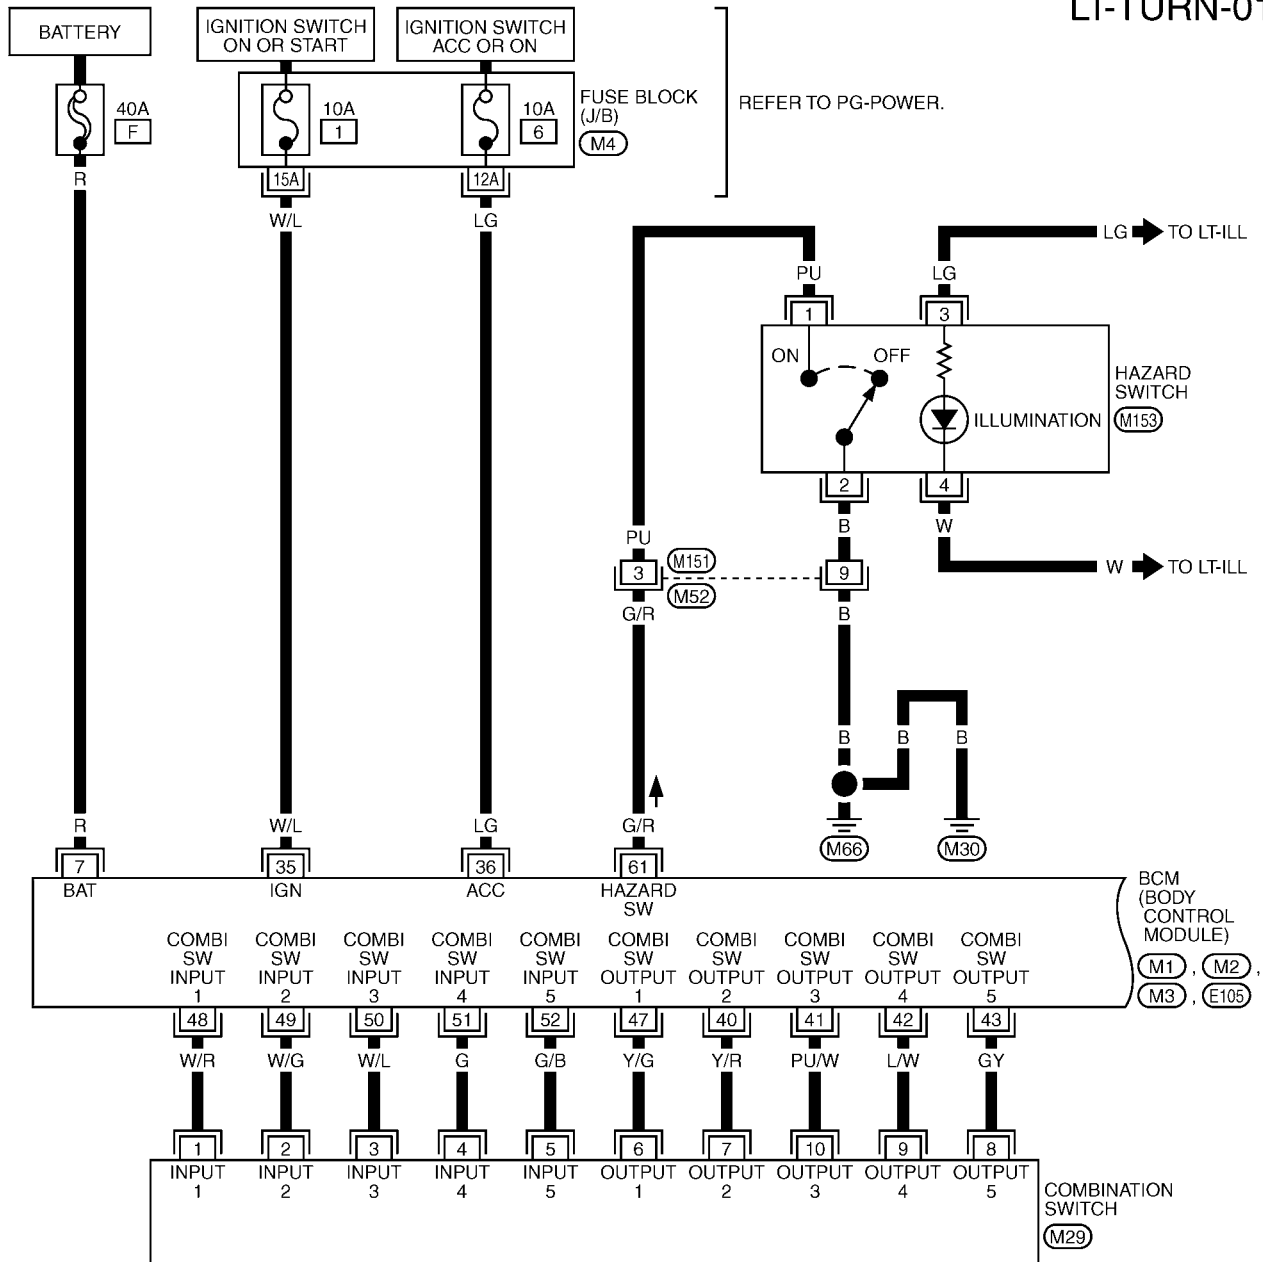

REFER TO THE FOLLOWING.



(M4) -FUSE BLOCK-JUNCTION BOX (J/B)

(M1), (M2), (M3), (E105) -ELECTRICAL UNITS

TKWT0449E

TURN SIGNAL AND HAZARD WARNING LAMPS

LT-TURN-02






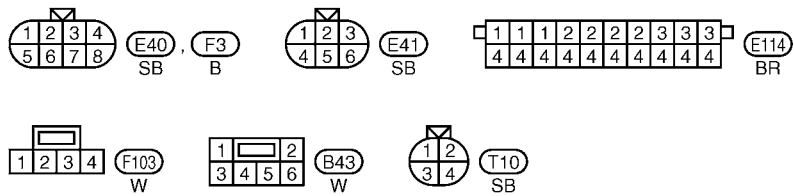
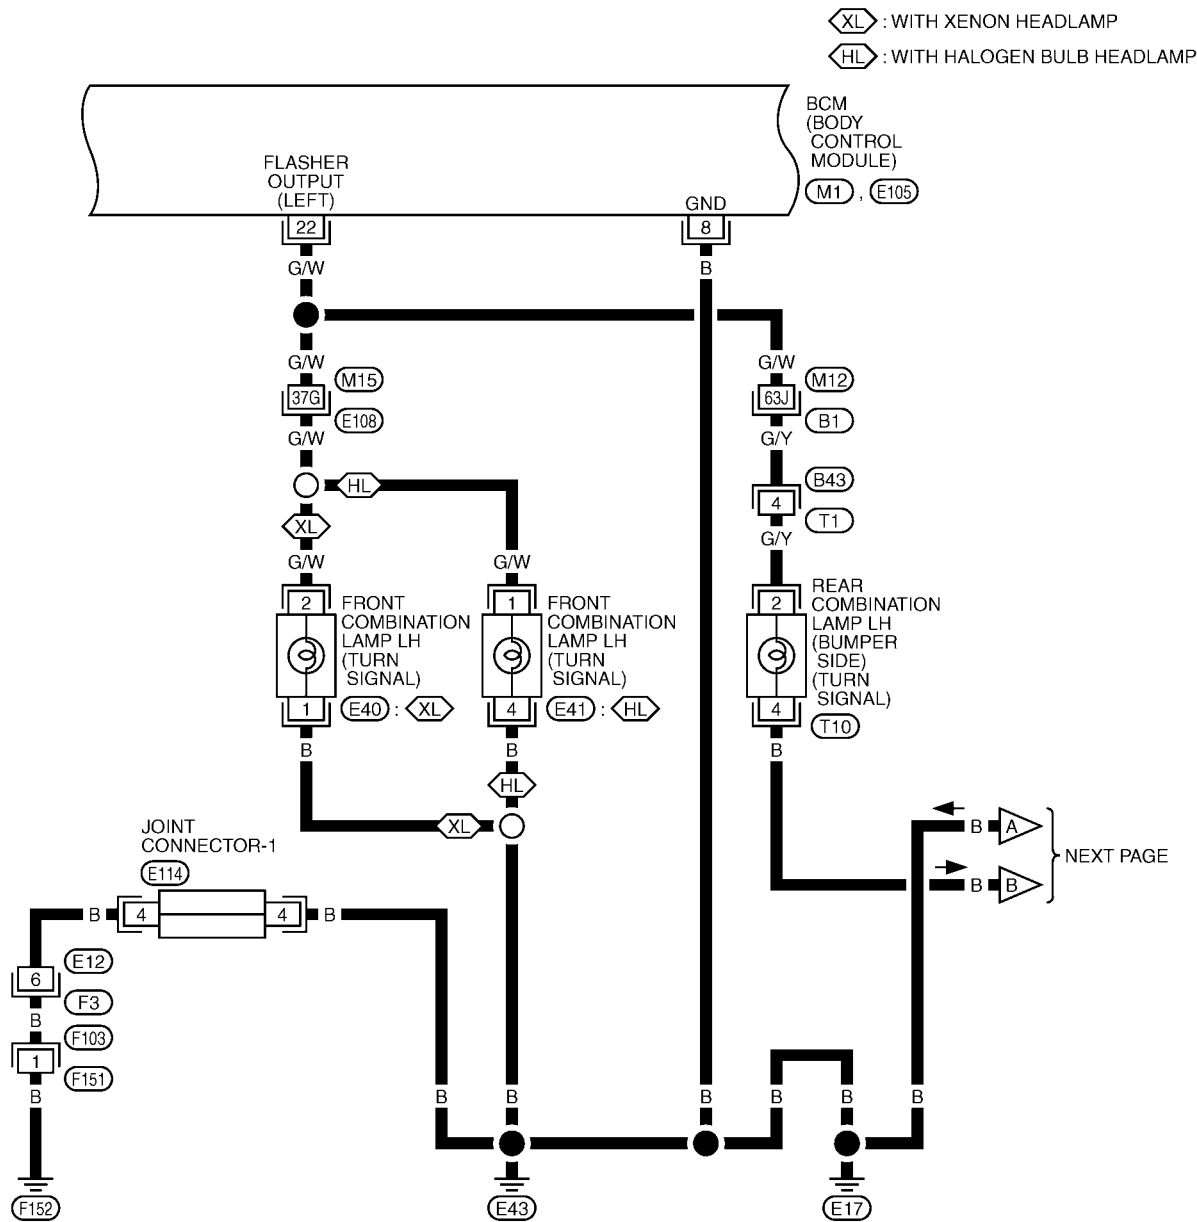


REFER TO THE FOLLOWING.

E108, **B1** -SUPER MULTIPLE JUNCTION (SMJ)




M1, **E105** -ELECTRICAL UNITS

LT-TURN-03



(M1), (M3) -ELECTRICAL
UNITS

TURN SIGNAL AND HAZARD WARNING LAMPS

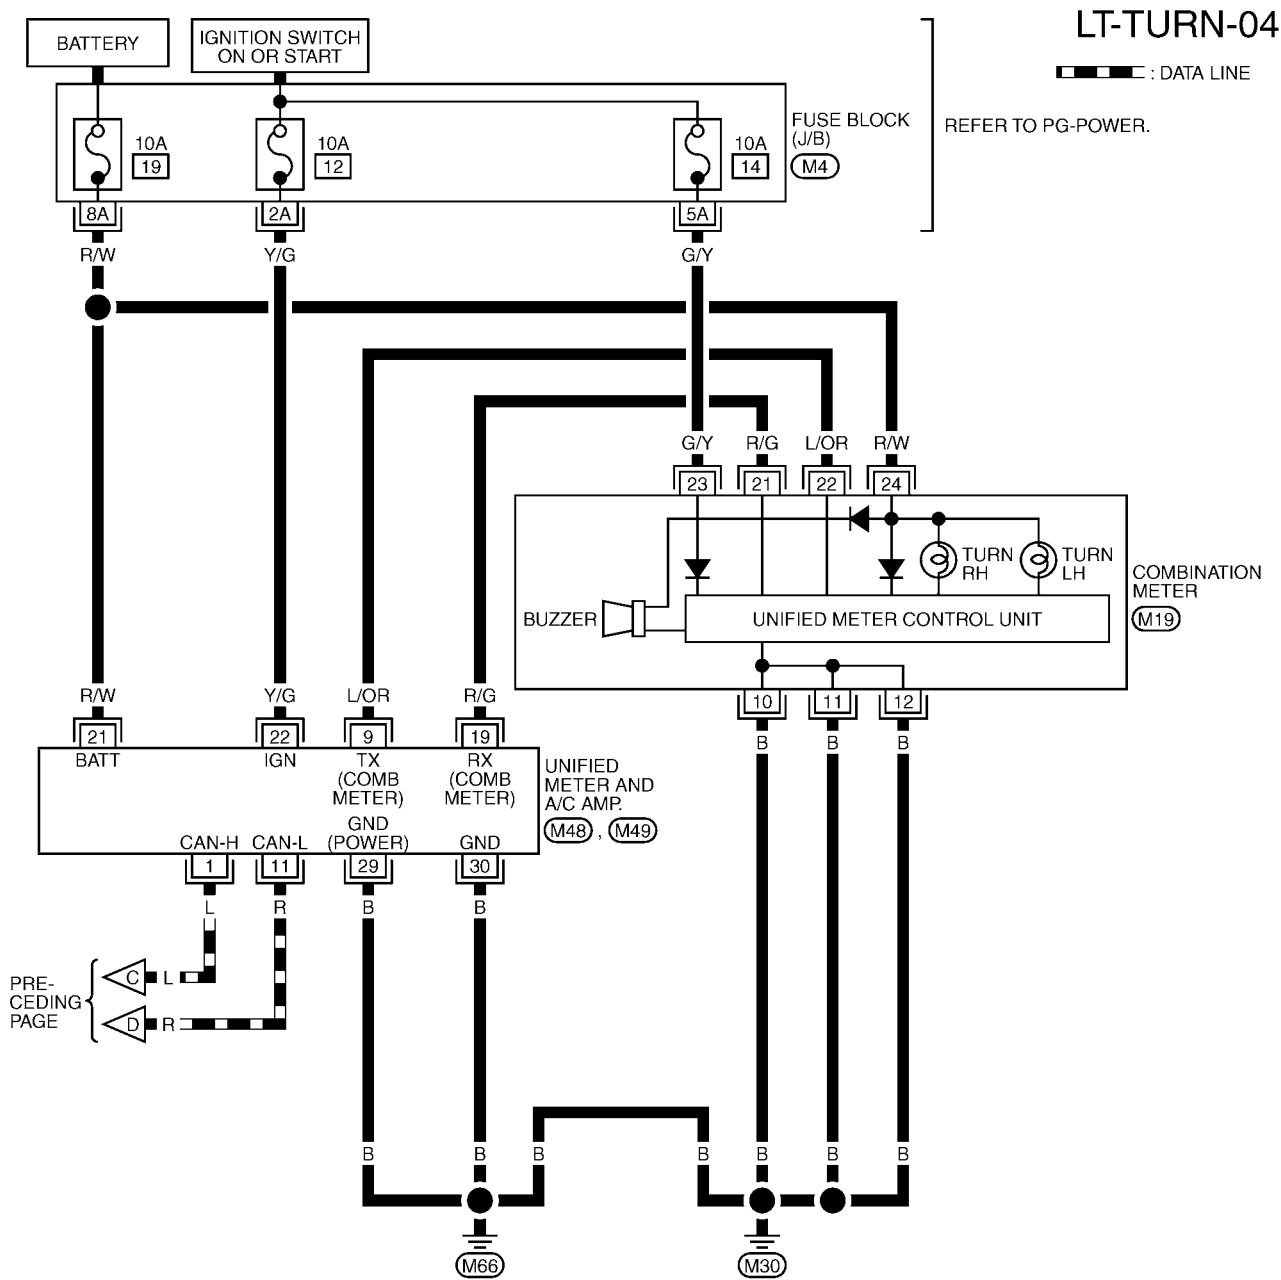




REFER TO THE FOLLOWING.

(M4) -FUSE BLOCK-JUNCTION BOX (J/B)

TURN SIGNAL AND HAZARD WARNING LAMPS

Terminals and Reference Value for BCM

AKS000UH

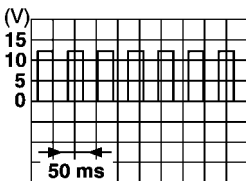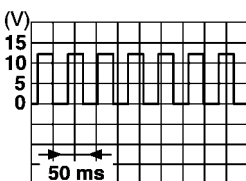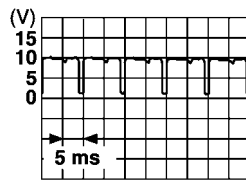Terminal No.	Wire color	Signal name	Measuring condition			Reference value
			Ignition switch	Operation or condition		
7	R	Battery power supply	OFF	—		Battery voltage
8	B	Ground	ON	—		Approx. 0V
21	PU/W	Turn signal (right)	ON	Combination switch	Turn right ON	 SKIA1120J
22	G/W	Turn signal (left)	ON	Combination switch	Turn left ON	 SKIA1120J
35	W/L	Ignition switch (ON)	ON	—		Battery voltage
36	LG	Ignition switch (ACC)	ACC	—		Battery voltage
40	Y/R	Combination switch Output 2	ON	Lighting, turn, wiper OFF		 SKIA1119J
41	PU/W	Combination switch Output 3				
42	L/W	Combination switch Output 4				
43	GY	Combination switch Output 5				
47	Y/G	Combination switch Output 1				
48	W/R	Combination switch Input 1	ON	Lighting, turn, wiper OFF		4.5V or more
49	W/G	Combination switch Input 2				
50	W/L	Combination switch Input3				
51	G	Combination switch Input 4				
52	G/B	Combination switch Input 5				
61	P/U	Hazard	OFF	Hazard switch	ON	Approx. 0V
					OFF	Approx. 5V
70	L	CAN-H	—	—		—
71	R	CAN-L	—	—		—
72	PU	K-LINE	—	—		—

TURN SIGNAL AND HAZARD WARNING LAMPS

How to Proceed With Trouble Diagnosis

AKS000UJ

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-133, "System Description"](#) .
3. Conduct pre-inspection. Refer to [LT-149, "Preliminary Check"](#) .
4. Check symptom and repair or replace the cause of malfunction.
5. Do the turn signal and hazard warning lamps operate normally? If Yes: Go to 6. If No: Go to 4.
6. Inspection end.

Preliminary Check

AKS000UJ

INSPECTION FOR POWER SUPPLY AND GROUND CIRCUIT

1. CHECK FUSES

- Check for blown BCM fuses.

UNIT	POWER SOURCE	FUSE No.
BCM	Battery	F
	Ignition switch ON or START position	1

Refer to [LT-144, "Wiring Diagram — TURN —"](#) .

OK or NG

OK >> GO TO 2.

NG >> If fuse is blown, be sure to eliminate cause of malfunction before installing new fuse. Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#) .

2. POWER SUPPLY CIRCUIT CHECK

1. Disconnect BCM connector.
2. Check voltage between BCM connector and ground.

Terminals		Ignition switch position	
(+)		(-)	
Connector	Terminal (Wire color)	OFF	ON
E105	7 (R)	Battery voltage	Battery voltage
M1	35 (W/L)	0V	Battery voltage

OK or NG

OK >> GO TO 3.

NG >> Check harness for open or short between BCM and fuse.

3. GROUND CIRCUIT CHECK



Check continuity between BCM and ground.

Terminals			Continuity
(+)		(−)	
Connector	Terminal (wire color)		
E105	8 (B)	Ground	Yes

OK or NG

OK >> INSPECTION END.

NG >> Check harness ground circuit.

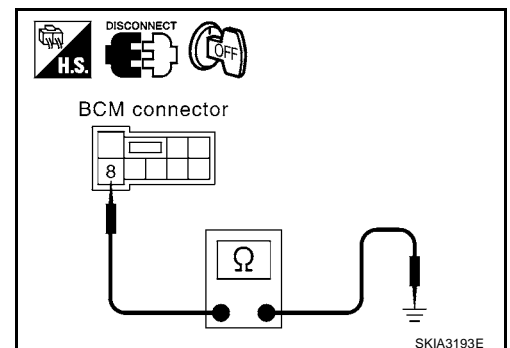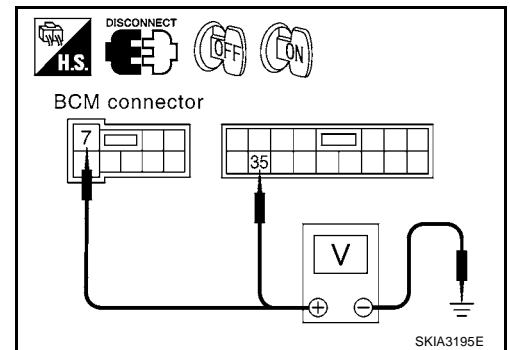

TURN SIGNAL AND HAZARD WARNING LAMPS

CONSULT-II Function

AKS000UK

CONSULT-II has a display function for work support, self-diagnosis, data monitor, and active test for each part by combining data receiving and sending via the communication line from BCM.


BCM diagnosis part	Check item, diagnosis mode	Description
FLASHER	Data monitor	Displays BCM input data in real time.
	Active test	Operation of electrical loads can be checked by sending driving signal to them.

CONSULT-II BASIC OPERATION


CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carry out CAN communication.


1. With the ignition switch OFF, connect CONSULT-II and CONSULT-II CONVERTER to the data link connector, then turn ignition switch ON.

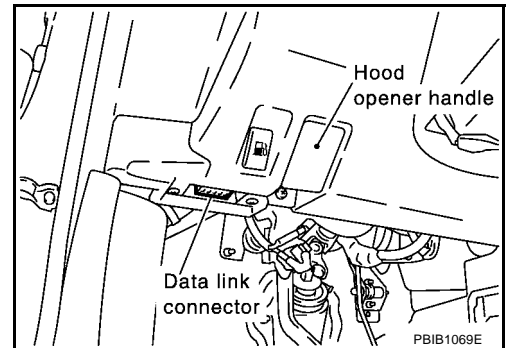

2. Touch "START(NISSAN BASED VHCL)".

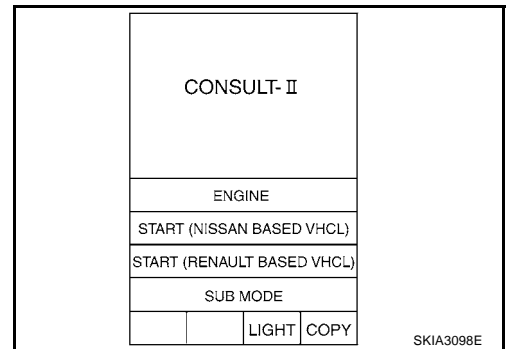


3. Touch "BCM" on "SELECT SYSTEM" screen.
If "BCM" is not indicated, go to [GI-40, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#).

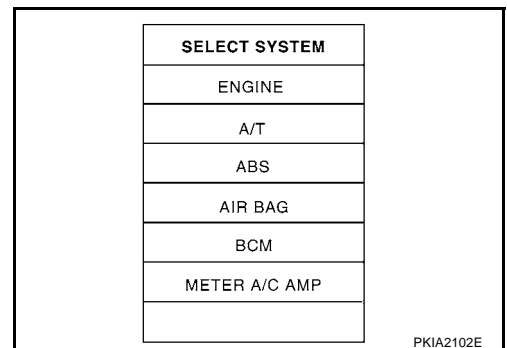

TURN SIGNAL AND HAZARD WARNING LAMPS

4. Touch "FLASHER" on "SELECT TEST ITEM" screen.

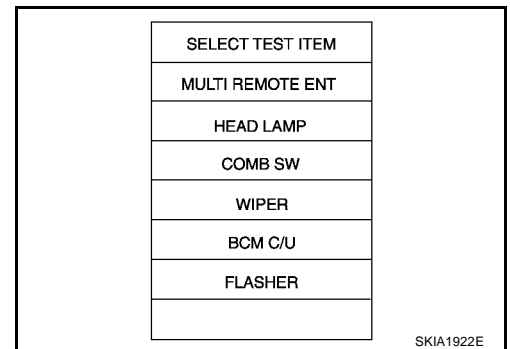

DATA MONITOR

Operation Procedure

1. Touch "FLASHER" on "SELECT TEST ITEM" screen.
2. Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.
3. Touch either "ALL SIGNALS" or "SELECTION FROM MENU" on the "DATA MONITOR" screen.

All signals	Monitors all the signals.
Selection from menu	Selects and monitors the individual signal.

4. Touch "START".
5. When "SELECTION FROM MENU" is selected, touch items to be monitored. When "ALL SIGNALS" is selected, all the items will be monitored.
6. Touch "RECORD" while monitoring, then the status of the monitored item can be recorded. To stop recording, touch "STOP".

Display Item List

Monitor item		Contents
IGN ON SW	"ON/OFF"	Displays "IGN position (ON)/OFF, ACC position (OFF)" judged from the ignition switch signal.
HAZARD SW	"ON/OFF"	Displays "Hazard ON (ON)/Hazard OFF (OFF)" status, determined from hazard switch signal.
TURN SIGNAL R	"ON/OFF"	Displays "Turn right (ON)/Other (OFF)" status, determined from lighting switch signal.
TURN SIGNAL L	"ON/OFF"	Displays "Turn left (ON)/Other (OFF)" status, determined from lighting switch signal.

ACTIVE TEST

Operation Procedure

1. Touch "FLASHER" on "SELECT TEST ITEM" screen.
2. Touch "ACTIVE TEST" on "SELECT DIAG MODE" screen.
3. Touch item to be tested and check operation of the selected item.
4. During the operation check, touching "BACK" deactivates the operation.

Display Item List

Test item	Description
FLASHER (RIGHT)	Turn signal lamp (right) can be operated by any ON-OFF operations.
FLASHER (LEFT)	Turn signal lamp (left) can be operated by any ON-OFF operations.
FLASHER (RIGHT) (CAN)	Turn signal lamp (right) indicator signal can be output by CAN communication line to gauges by any ON-OFF operations.
FLASHER (LEFT) (CAN)	Turn signal lamp (left) indicator signal can be output by CAN communication line to gauges by any ON-OFF operations.

TURN SIGNAL AND HAZARD WARNING LAMPS

AKS000UL

Turn Signal Lamp Does Not Operate

1. CHECK BULB

Check bulb standard of each turn signal lamp is correct.

OK or NG

OK >> GO TO 2.

NG >> Replace turn signal lamp bulb.

2. COMBINATION SWITCH CIRCUIT CHECK

Select BCM on CONSULT-II. Carry out "BCM C/U" self-diagnosis.

Displayed results of self-diagnosis

Diagnosis system 1 - 5>> Combination switch system malfunction.

Refer to [LT-164, "Combination Switch Inspection According to Self-Diagnostic Results"](#).

No malfunction detected>> GO TO 3.

SELF-DIAG RESULTS	
DTC RESULTS	TIME
NO DTC IS DETECTED. FURTHER TESTING MAY BE REQUIRED	

LKIA0073E

3. COMBINATION SWITCH INPUT SIGNAL CHECK

Select "BCM" on CONSULT-II. With "FLASHER" data monitor, check that "TURN SIGNAL R" and "TURN SIGNAL L" turn ON-OFF linked with operation of turn signal switch.

**When turn signal switch
LH position :TURN SIGNAL L ON**

**When turn signal switch
RH position :TURN SIGNAL R ON**

OK or NG

OK >> GO TO 4.

NG >> Replace lighting switch.

DATA MONITOR	
MONITOR	
IGN ON SW	ON
HAZARD SW	ON
TURN SIGNAL R	OFF
TURN SIGNAL L	OFF

LKIA0083E

4. ACTIVE TEST

1. Select "BCM" on CONSULT-II. Select "FLASHER" active test.
2. Check that "FLASHER RIGHT" and "FLASHER LEFT" operate.

Turn signal lamp :Should turn ON

OK or NG

OK >> Replace BCM.

NG >> GO TO 5.

ACTIVE TEST	
FLASHER RIGHT	ON
	OFF

LKIA0084E

TURN SIGNAL AND HAZARD WARNING LAMPS

5. SHORT CIRCUIT CHECK

1. Turn ignition switch OFF.
2. Disconnect BCM connector and all turn signal lamp connectors.
3. Check continuity (short circuit) between BCM harness connector M1 terminal 21(PU/W) and ground.

Continuity not should exist


4. Check continuity (short circuit) between BCM harness connector M1 terminal 22(G/W) and ground.

Continuity not should exist

OK or NG

OK >> Replace BCM.

NG >> After repairing harness be sure to disconnect battery negative cable, and then reconnect it.

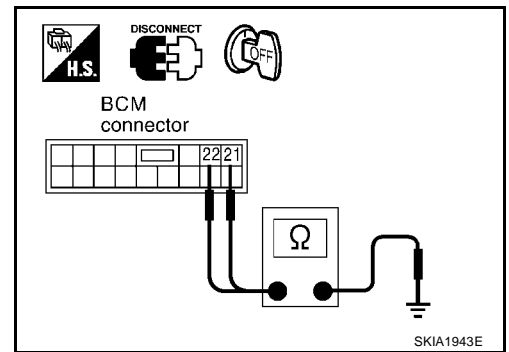

Hazard Warning Lamps Do Not Operate But Turn Signal Lamps Operate

AKS000UM

1. CHECK BULB

Check that bulb standard of each turn signal lamp is correct.

OK or NG

OK >> GO TO 2.

NG >> Replace turn signal lamp bulb.

2. HAZARD SWITCH INPUT SIGNAL

Select "BCM" on CONSULT-II. Use "FLASHER" data monitor to verify that "HAZARD SW" turns ON-OFF linked with operation of hazard switch.

OK or NG

OK >> Replace BCM.

NG >> GO TO 3.

DATA MONITOR	
MONITOR	
IGN ON SW	ON
HAZARD SW	ON
TURN SIGNAL R	OFF
TURN SIGNAL L	OFF

LKIA0083E

3. HAZARD SWITCH SIGNAL CIRCUIT CHECK


1. Turn ignition switch OFF.
2. Disconnect BCM connector and hazard switch connectors.
3. Check continuity between BCM harness connector M3 terminal 61(G/R) and hazard switch connector M153 terminal 1(PU).

Continuity should exist

OK or NG

OK >> GO TO 4.

NG >> Repair harness or connector.

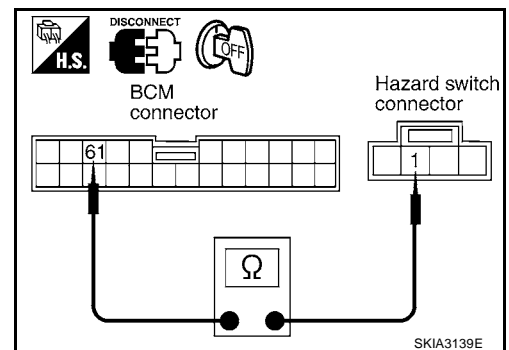

TURN SIGNAL AND HAZARD WARNING LAMPS


4. HAZARD SIGNAL INPUT CHECK

1. Connect BCM connector.
2. Check voltage between BCM harness connector and ground.

Terminals			Voltage
(+)		(-)	
Connector	Terminal (wire color)		
M3	61 (G/R)	Ground	Approx. 5V

OK or NG

- OK >> GO TO 5.
NG >> Replace BCM.

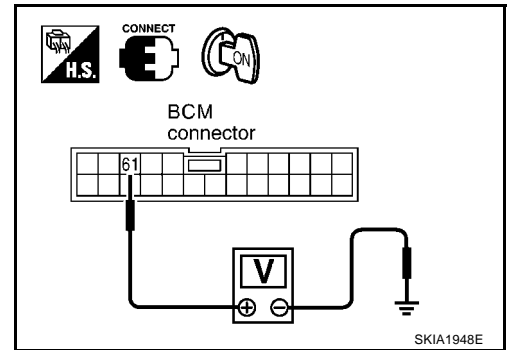


5. HAZARD SWITCH CHECK

Check continuity between hazard switch connectors.

Terminal		Condition	Continuity
1	2	Hazard switch is ON	Yes
		Hazard switch is OFF	No

OK or NG

- OK >> GO TO 6.
NG >> Replace hazard switch.

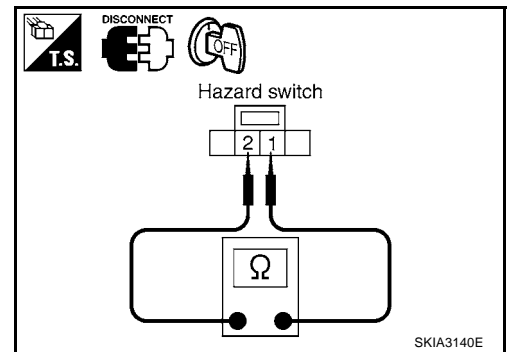


6. HAZARD SWITCH GROUND CIRCUIT CHECK

Check continuity between hazard switch harness connector M153 terminal 2(B) and ground.

Continuity should exist

OK or NG

- OK >> Replace BCM.
NG >> Repair or replace harness.

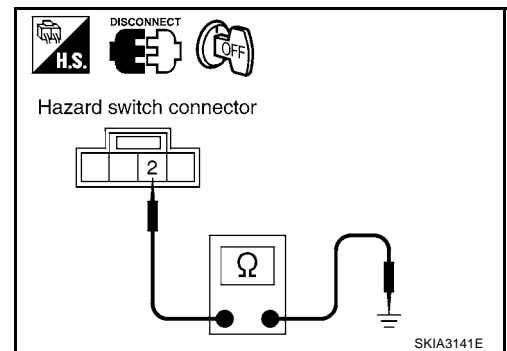

Turn Signal Indicator Lamp Does Not Operate

1. CHECK BULB

Inspect bulb of turn signal indicator lamp in combination meter.

OK or NG

- OK >> Replace combination meter.
NG >> Replace indicator bulb.

TURN SIGNAL AND HAZARD WARNING LAMPS

Bulb Replacement (Front Turn Signal Lamp)

AKS000UO

Refer to [LT-31, "Bulb Replacement"](#) in "HEADLAMP (FOR USA)".

A

Bulb Replacement (Rear Turn Signal Lamp)

AKS000UQ

Refer to [LT-198, "Bulb Replacement"](#) in "REAR COMBINATION LAMP".

B

Removal and Installation of Front Turn Signal Lamp

AKS000UR

Refer to [LT-33, "Removal and Installation"](#) in "HEADLAMP (FOR USA)".

C

Removal and Installation of Rear Turn Signal Lamp

AKS000UT

Refer to [LT-199, "Removal and Installation"](#) in "REAR COMBINATION LAMP".

D

E

F

G

H

I

J

LT

L

M

LIGHTING AND TURN SIGNAL SWITCH

LIGHTING AND TURN SIGNAL SWITCH


PFP:25540

Removal and Installation

AKS000UU

REMOVAL

1. Remove steering column lower cover. Refer to [IP-11, "INSTRUMENT PANEL ASSEMBLY"](#) in "IP" section.
2. Remove column upper cover and combination meter assembly. Refer to [IP-11, "INSTRUMENT PANEL ASSEMBLY"](#) in "IP" section.
3. While pressing pawls in direction as shown in the figure, pull lighting and turn signal switch toward driver door and disconnect from the base.

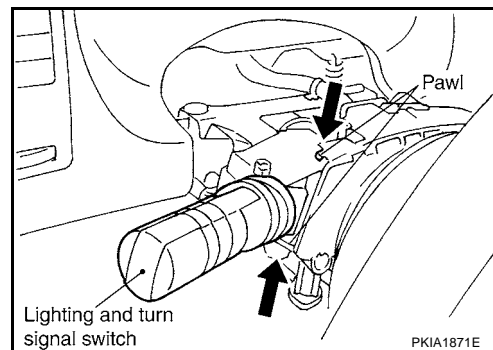

INSTALLATION

Installation in the reverse order of removal.

HAZARD SWITCH

HAZARD SWITCH


PFP:25290

Removal and Installation

AKS000UV

REMOVAL

1. Remove center console assembly. Refer to [IP-11, "INSTRUMENT PANEL ASSEMBLY"](#) in "IP" section.
2. Disconnect hazard switch connector.
3. Remove ashtray bracket assembly from center console assembly.
4. Press pawl on reverse side and remove the hazard switch.

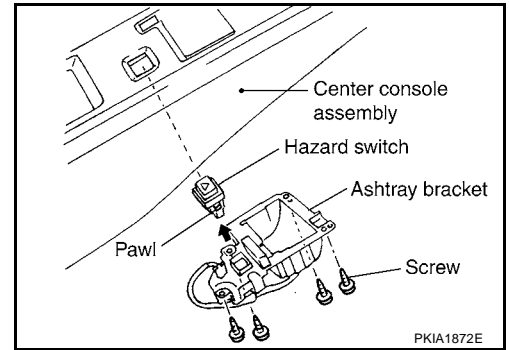

INSTALLATION

Install in the reverse order of removal.

COMBINATION SWITCH

COMBINATION SWITCH



PFP:25567

Wiring Diagram—COMBSW—


AKS00377

LT-COMBSW-01

DATA LINE

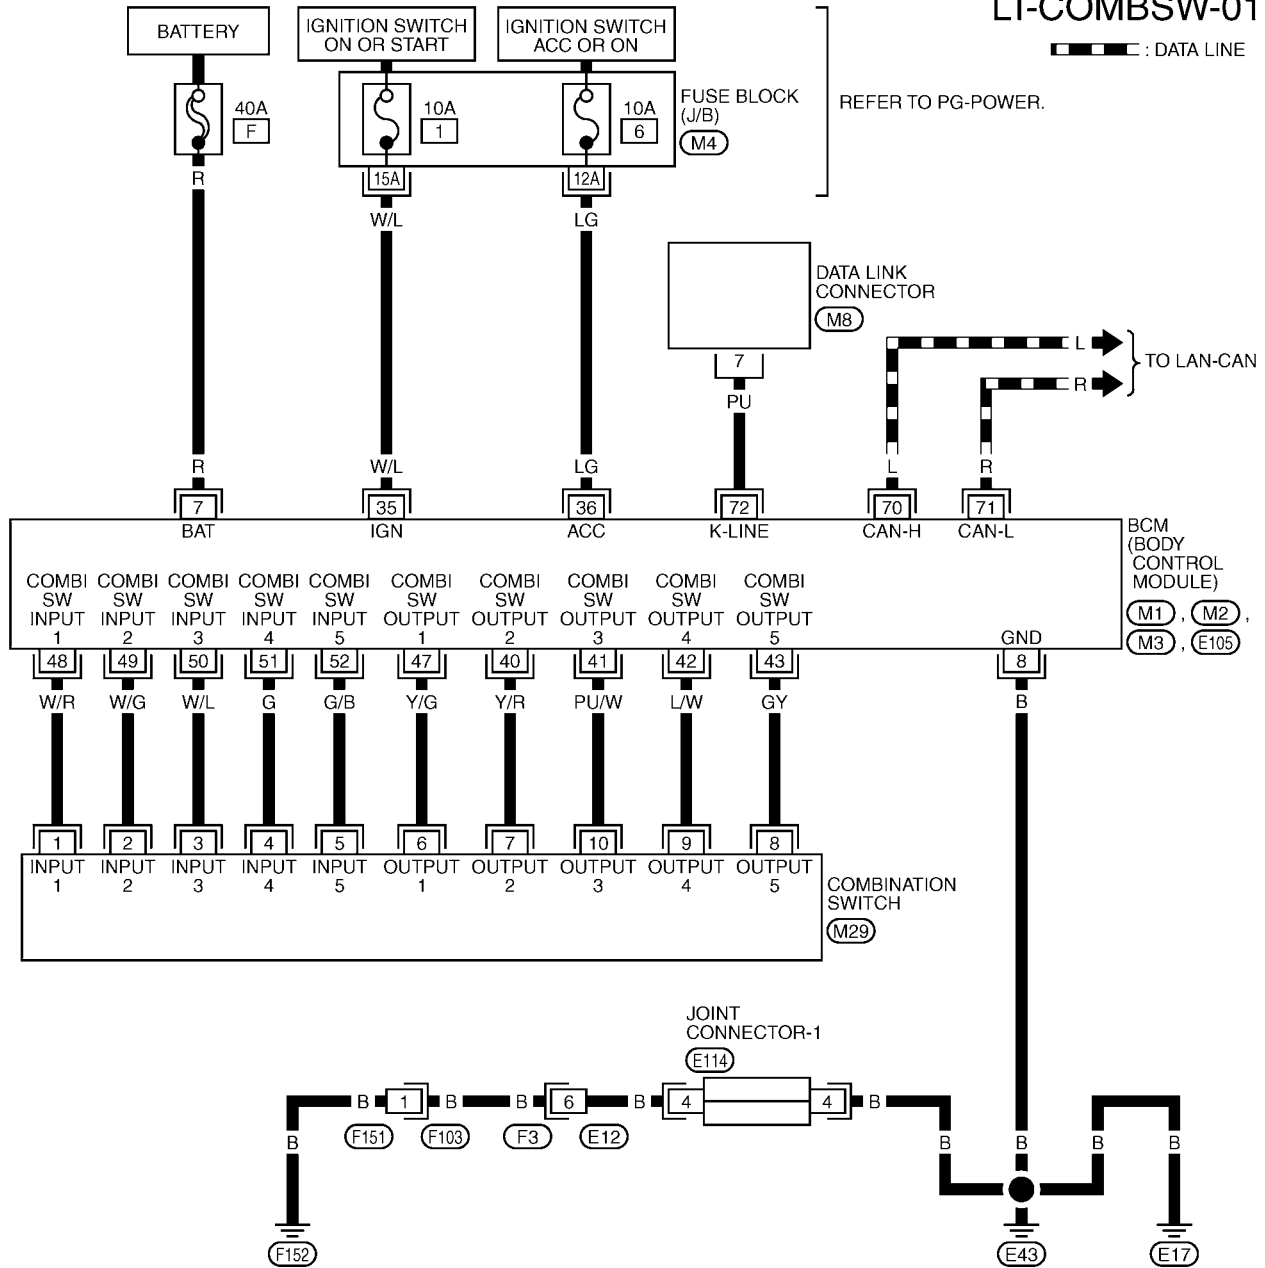

M8
W




M29
W



E114
BR



F3
B



F103
W

REFER TO THE FOLLOWING.

(M4) - FUSE BLOCK-JUNCTION BOX (J/B)

(M1), (M2), (M3), (E105) - ELECTRICAL UNITS

COMBINATION SWITCH

AKS000UW


Combination Switch Reading Function

1. Description

- BCM reads combination switch (light, wiper washer, turn signal) status, and controls various electrical components according to the results.
- BCM reads information of 20 switches and 5 diagnostic results by combining five output terminals (OUTPUT 1 - 5) and five input terminals (INPUT 1 - 5).

2. Operation description

- BCM outputs battery voltage from input terminals (INPUT 1 - 5) all the time. At the same time output terminals (OUTPUT 1 - 5) activate transistors in turn, and allow current to flow. At this time, if any (1 or more) of the switches are ON, the input terminals corresponding to these switches detect current flow, and the interface of BCM detects the condition. Then BCM judges switches are ON.

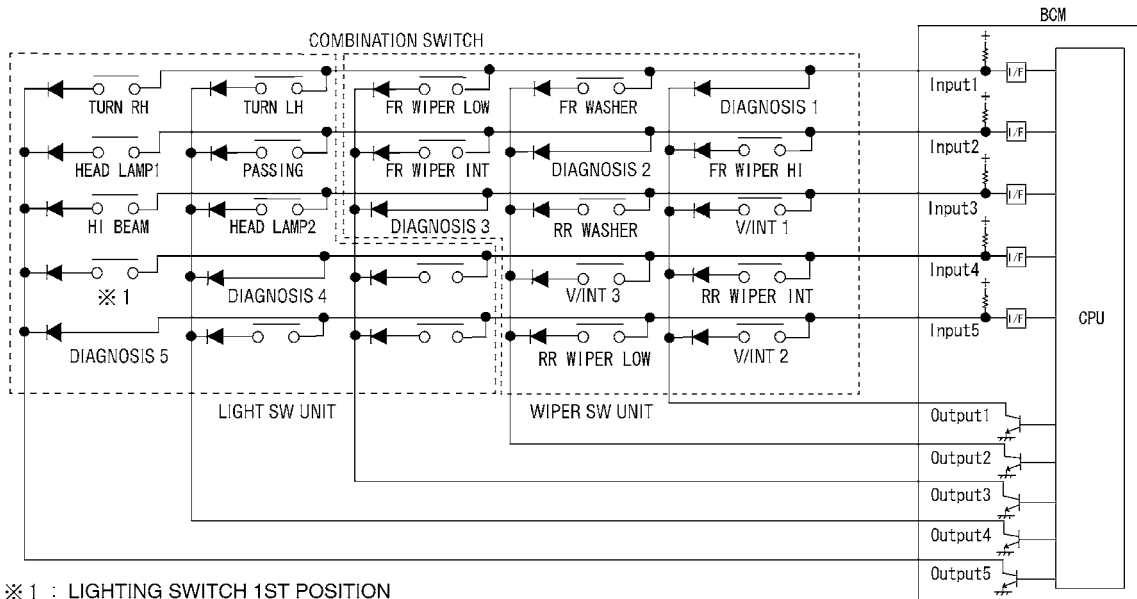

SKIA3094E

3. BCM - Operation table of combination switches

- BCM reads operation status of combination switches by the combination shown in the table.

	COMB SW INPUT 1		COMB SW INPUT 2		COMB SW INPUT 3		COMB SW INPUT 4		COMB SW INPUT 5	
	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF
COMB SW OUTPUT 1	DIAGNOSIS 1 OK	DIAGNOSIS 1 NG	FR WIPER HI ON	FR WIPER HI OFF	V/INT 1 ON	V/INT 1 OFF	RR WIPER INT ON	RR WIPER INT OFF	V/INT 2 ON	V/INT 2 OFF
COMB SW OUTPUT 2	FR WASHER ON	FR WASHER OFF	DIAGNOSIS 2 OK	DIAGNOSIS 2 NG	RR WASHER ON	RR WASHER OFF	V/INT 3 ON	V/INT 3 OFF	RR WIPER ON	RR WIPER OFF
COMB SW OUTPUT 3	FR WIPER LOW ON	FR WIPER LOW OFF	FR WIPER INT ON	FR WIPER INT OFF	DIAGNOSIS 3 OK	DIAGNOSIS 3 NG	—	—	—	—
COMB SW OUTPUT 4	TURN LH ON	TURN LH OFF	PASSING ON	PASSING OFF	HEAD LAMP 2 ON	HEAD LAMP 2 OFF	DIAGNOSIS 4 OK	DIAGNOSIS 4 NG	—	—
COMB SW OUTPUT 5	TURN RH ON	TURN RH OFF	HEAD LAMP ON	HEAD LAMP OFF	HI BEAM ON	HI BEAM OFF	LIGHTING SWITCH 1ST POSITION ON	LIGHTING SWITCH 1ST POSITION OFF	DIAGNOSIS 5 OK	DIAGNOSIS 5 NG

SKIA3095E


NOTE:

Dual switches are set for head lamps.

4. Example (When lighting switch 1st position switch is turned ON)

COMBINATION SWITCH

- When lighting switch 1st position switch is turned ON, contact in combination switch turns ON. At this time if OUTPUT 5 transistor is activated, BCM detects current flow in INPUT 4.
- When OUTPUT 5 transistor is ON, BCM detects current flow in INPUT 4, and judges lighting switch 1st position switch is ON. Then BCM sends tail lamp ON signal to IPDM E/R using CAN communication.
- When OUTPUT 5 transistor is activated again, BCM detects current flow in INPUT 4, and confirms lighting switch 1st position switch is continuously ON.

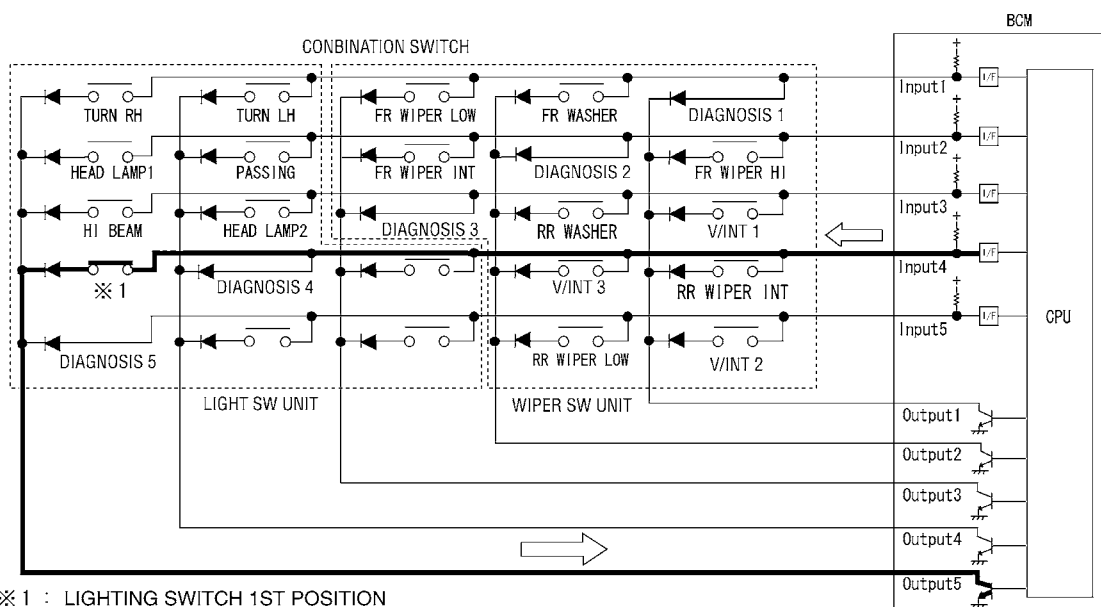

SKIA3096E

NOTE:

Each OUTPUT terminal transistor is activated at 10 ms intervals. Therefore, after a switch is turned ON, the electrical loads are activated with a time delay, but this time delay is so short that it cannot be noticed.

5. Operation mode


- Combination switch reading function has operation modes shown below.

a. Normal mode

- When BCM is not in sleep mode, each OUTPUT (1 - 5) terminal turns ON-OFF at 10 ms intervals.

b. Sleep mode

- When BCM is in sleep mode, transistors of OUTPUT 1 and 2 stop the output, and BCM enters low-current-consumption mode. OUTPUTS (3 - 5) turn ON-OFF at 60 ms intervals, and receive lighting switch input only.

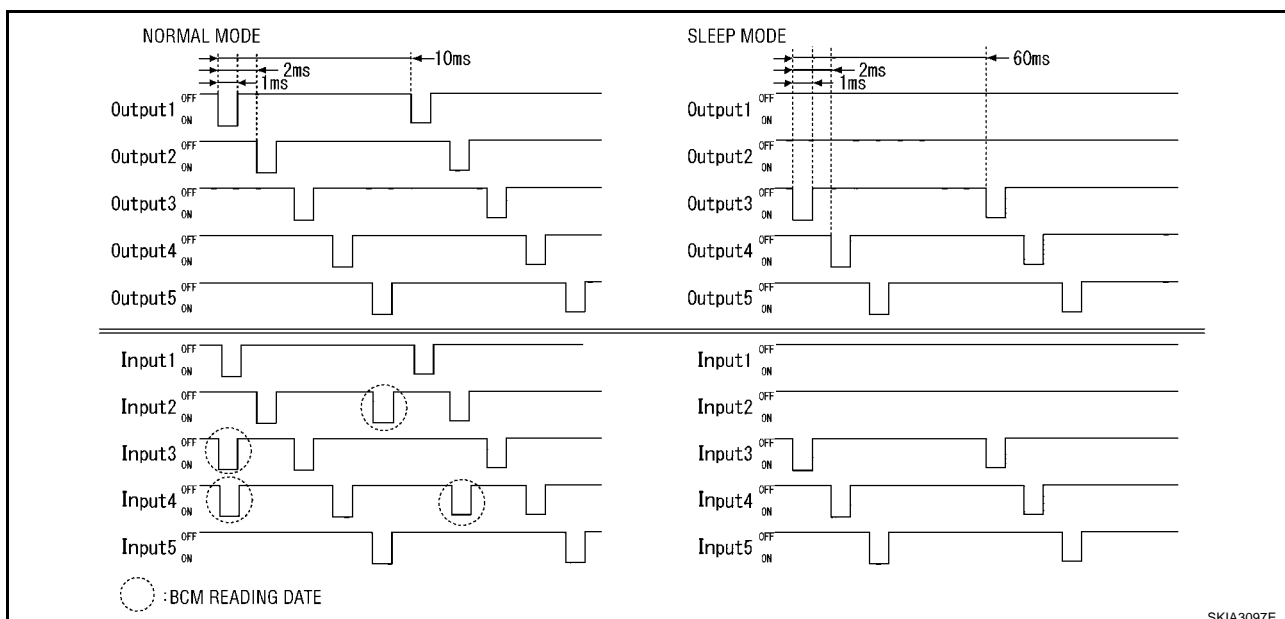

SKIA3097E

COMBINATION SWITCH

CONSULT-II Function

AKS000UX

CONSULT-II has a display function for work support, self-diagnosis, data monitor, and active test for each part by combining data receiving and sending via the communication line from BCM.


BCM diagnosis part	Check item, diagnosis mode	Description
Combination switch	Data monitor	Displays BCM input data in real time.

CONSULT-II BASIC OPERATION


CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carry out CAN communication.


1. With the ignition switch OFF, connect CONSULT-II and CONSULT-II CONVERTER to the data link connector, then turn ignition switch ON.

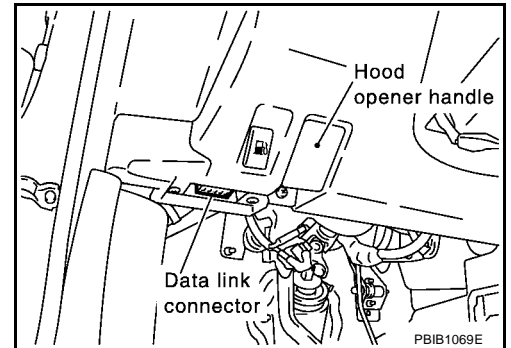


2. Touch "START(NISSAN BASED VHCL)".

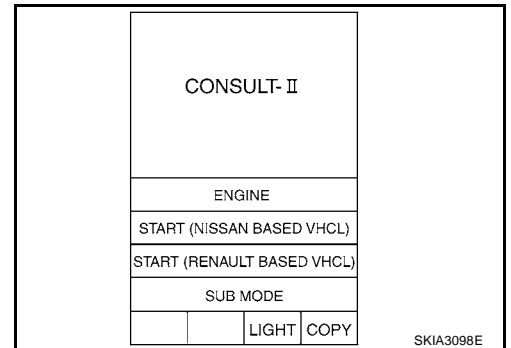

3. Touch "BCM" on "SELECT SYSTEM" screen.
If "BCM" is not indicated, go to [GI-40, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#).

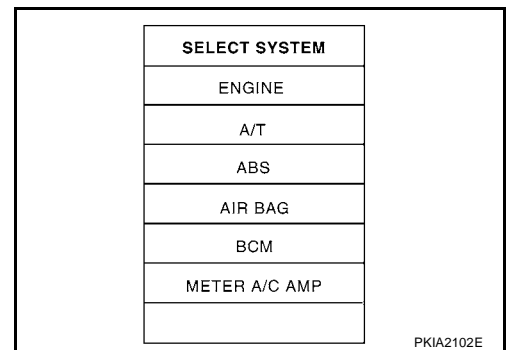

4. Select the desired part to be diagnosed on the "SELECT TEST ITEM" screen.

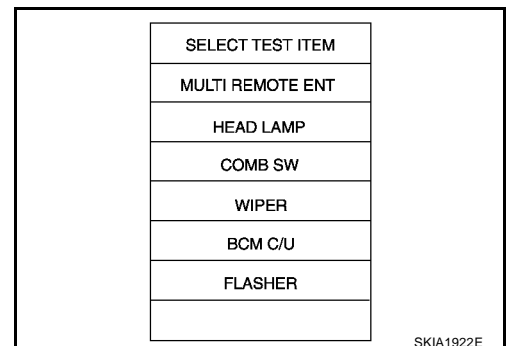

COMBINATION SWITCH

DATA MONITOR

Operation Procedure

1. Touch "COMB SW" on "SELECT TEST ITEM" screen.
2. Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.
3. Touch either "ALL SIGNALS" or "SELECTION FROM MENU" on "DATA MONITOR" screen.

All signals	Monitors all the signals.
Selection from menu	Selects and monitors individual signal.

4. Touch "START".
5. When "SELECTION FROM MENU" is selected, touch items to be monitored. When "ALL SIGNALS" is selected, all the signals will be monitored.
6. Touch "RECORD" while monitoring, then the status of the monitored item can be recorded. To stop recording, touch "STOP".

COMBINATION SWITCH

Display Item List

Monitor item name "OPERATION OR UNIT"		Contents
TAIL LAMP SW	"ON/OFF"	Displays status (lighting switch 1st position: ON/Others: OFF) of lighting switch judged from lighting switch signal.
HEAD LAMP SW 1	"ON/OFF"	Displays "Headlamp switch 1 (ON)/Other (OFF)" status, determined from lighting switch signal.
HEAD LAMP SW 2	"ON/OFF"	Displays status (headlamp switch 2: ON/Others: OFF) of headlamp switch 2 judged from lighting switch signal.
HI BEAM SW	"ON/OFF"	Displays status (high beam switch: ON/Others: OFF) of high beam switch judged from lighting switch signal.
PASSING SW	"ON/OFF"	Displays status (flash-to-pass switch: ON/Others: OFF) of flash-to-pass switch judged from lighting switch signal.
AUTO LIGHT SW ^{Note}	"OFF"	—
FR FOG SW ^{Note}	"OFF"	—
FR WIPER HI	"ON/OFF"	Displays "Front Wiper HI (ON)/Other (OFF)" status, determined from wiper switch signal.
FR WIPER LOW	"ON/OFF"	Displays "Front Wiper LOW (ON)/Other (OFF)" status, determined from wiper switch signal.
FR WIPER INT	"ON/OFF"	Displays "Front Wiper INT (ON)/Other (OFF)" status, determined from wiper switch signal.
INT VOLUME	[1 - 7]	Displays intermittent operation knob setting (1 - 7), determined from wiper switch signal.
RR WIPER ON	"ON/OFF"	Displays "rear Wiper (ON)/Other (OFF)" status as judged from wiper switch signal.
RR WIPER INT	"ON/OFF"	Displays "rear Wiper INT (ON)/Other (OFF)" status as judged from wiper switch signal.
FR WASHER SW	"ON/OFF"	Displays "Front Washer Switch (ON)/Other (OFF)" status, determined from wiper switch signal.
RR WASHER SW	"ON/OFF"	Displays "rear Washer Switch (ON)/Other (OFF)" status as judged from wiper switch signal.
TURN SIGNAL R	"ON/OFF"	Displays "Turn Right (ON)/Other (OFF)" status, determined from lighting switch signal.
TURN SIGNAL L	"ON/OFF"	Displays "Turn Left (ON)/Other (OFF)" status, determined from lighting switch signal.

NOTE:

This item is displayed, but cannot monitor it.

A

B

C

D

E

F

G

H

I

J

LT

L

M

COMBINATION SWITCH

Combination Switch Inspection According to Self-Diagnostic Results

AKS003MU

1. SELF-DIAGNOSTIC RESULT CHECK

CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carry out CAN communication.

1. Connect to CONSULT-II, and select "BCM" on "SELECT SYSTEM" screen.
2. Select "BCM control unit" on "SELECT WORK ITEM" screen, and select "SELF-DIAG RESULTS".
3. Check display content in self-diagnostic results.

CONSULT-II display code	Self-diagnostic result content	Malfunctioning switch system	Detection conditions	Possible causes
B2049	OPEN DETECT 1	The following switch operation shown below cannot be input. <ul style="list-style-type: none"> ● Front wiper Hi ● Rear wiper INT ● Intermittent control 1 ● Intermittent control 2 	BCM terminal No. 48 (Input 1) does not change. (Open circuit in diagnosis 1 system line or open malfunction in output 1 transistor.)	<ul style="list-style-type: none"> ● Harness between BCM and combination switch ● Wiper switch ● BCM
B2050	OPEN DETECT 2	The following switch operation shown below cannot be input. <ul style="list-style-type: none"> ● Front washer ● Intermittent control 3 ● Rear washer ● Rear wiper low 	BCM terminal No. 49 (Input 2) does not change. (Open circuit in diagnosis 2 system line or open malfunction in output 2 transistor.)	<ul style="list-style-type: none"> ● Harness between BCM and combination switch ● Wiper switch ● BCM
B2051	OPEN DETECT 3	The following switch operation shown below cannot be input. <ul style="list-style-type: none"> ● Front wiper Lo ● Front wiper INT 	BCM terminal No. 50 (Input 3) does not change. (Open circuit in diagnosis 3 system line or open malfunction in output 3 transistor.)	<ul style="list-style-type: none"> ● Harness between BCM and combination switch ● Wiper switch (Front wiper Lo, INT) ● BCM
B2052	OPEN DETECT 4	The following switch operation shown below cannot be input. <ul style="list-style-type: none"> ● TURN LH ● PASSING ● Headlamp 2 	BCM terminal No. 51 (Input 4) does not change. (Open circuit in diagnosis 4 system line or open malfunction in output 4 transistor.)	<ul style="list-style-type: none"> ● Harness between BCM and combination switch ● Lighting switch ● BCM
B2053	OPEN DETECT 5	The following switch operation shown below cannot be input. <ul style="list-style-type: none"> ● TURN RH ● Headlamp 1 ● HI BEAM ● Lighting switch 1st position 	BCM terminal No. 52 (Input 5) does not change. (Open circuit in diagnosis 5 system line or open malfunction in output 5 transistor.)	<ul style="list-style-type: none"> ● Harness between BCM and combination switch ● Lighting switch ● BCM
B2054	HEADLAMP 1 SW NG	Headlamp 1 malfunction	Headlamp 1 switch OFF Headlamp 2 switch ON	Lighting switch
B2055	HEADLAMP 2 SW NG	Headlamp 2 malfunction	Headlamp 1 switch ON Headlamp 2 switch OFF	Lighting switch

Display content

No malfunction>>Inspection End

Malfunction in diagnosis system>>GO TO 2.


Malfunction in headlamp switch system>>Replace Lighting switch.

COMBINATION SWITCH

2. HARNESS INSPECTION

1. Disconnect BCM connector and combination switch connector.
2. Check continuity between BCM harness connector of suspect system and combination switch harness connector terminals.

Self-diagnostic result content	Terminals					Continuity
	BCM (+)			Combination switch (−)		
	Connector	Terminal (wire color)		Connector	Terminal (wire color)	
OPEN DETECT 1	M2	Input 1	48 (W/R)	M29	1 (W/R)	Yes
		Output 1	47 (Y/G)		6 (Y/G)	
Input 2		49 (W/G)	2 (W/G)			
Output 2		40 (Y/R)	7 (Y/R)			
Input 3		50 (W/L)	3 (W/L)			
Output 3		41 (PU/W)	10 (PU/W)			
Input 4		51 (G)	4 (G)			
Output 4		42 (L/W)	9 (L/W)			
Input 5		52 (G/B)	5 (G/B)			
Output 5		43 (GY)	8 (GY)			

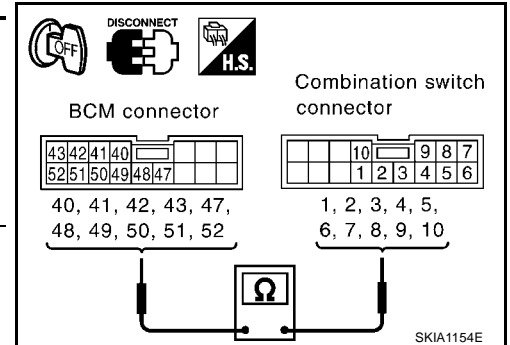


OK or NG

- OK >> GO TO 3.
NG >> Repair harness.

3. INSPECTION OF BCM INPUT TERMINAL VOLTAGE

Connect BCM connector, and check BCM input terminal voltage of suspect system.

Self-diagnostic result content	Terminals			Voltage
	BCM			
	Connector	Terminal (wire color)		
OPEN DETECT 1	M2	Input 1	48 (W/R)	4.5V or more
OPEN DETECT 2		Input 2	49 (W/G)	
OPEN DETECT 3		Input 3	50 (W/L)	
OPEN DETECT 4		Input 4	51 (G)	
OPEN DETECT 5		Input 5	52 (G/B)	

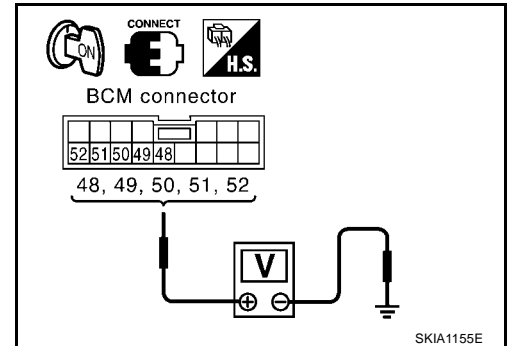

OK or NG

- OK >> GO TO 4.
NG >> Replace BCM.

COMBINATION SWITCH


4. BCM OUTPUT TERMINAL INSPECTION

Connect combination switch connector, and check BCM output terminal voltage waveform of applicable malfunctioning system.

Self-diagnostic result content	Terminals		
	BCM		
	Connector	Terminal (wire color)	
OPEN DETECT 1	M2	Output 1	47 (Y/G)
OPEN DETECT 2		Output 2	40 (Y/R)
OPEN DETECT 3		Output 3	41 (PU/W)
OPEN DETECT 4		Output 4	42 (L/W)
OPEN DETECT 5		Output 5	43 (GY)

OK or NG

- OK >> Combination switch malfunction, go to 5.
 NG >> Replace BCM.

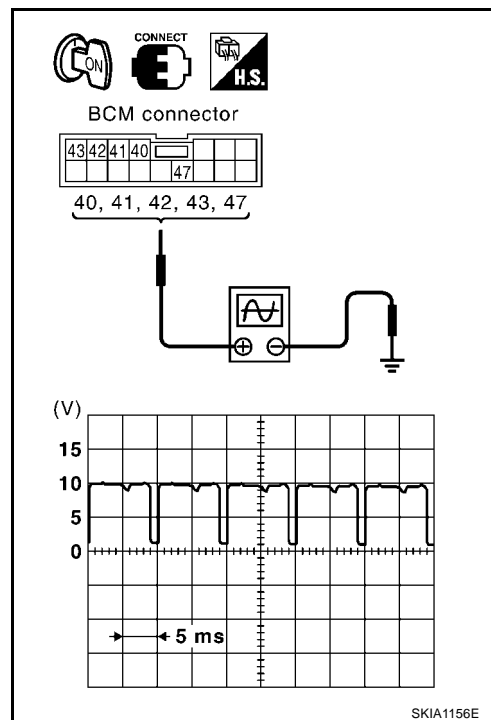

5. COMBINATION SWITCH INSPECTION

Following the table below, check switches by procedure of appropriate malfunctioning system.

Self-diagnostic result content	Procedure									
	1	2	3	4	5	6	7			
OPEN DETECT 1	Wiper switch replacement	Confirm self-diagnostic results again.	OK	Inspection End	—					
			NG	Confirm symptom again.						
OPEN DETECT 2	Wiper switch replacement	Confirm self-diagnostic results again.	OK	Inspection End	—					
			NG	Confirm symptom again.						
OPEN DETECT 3	Wiper switch replacement	Confirm self-diagnostic results again.	OK	Inspection End	Confirm self-diagnostic results again.	OK	Inspection End	Confirm self-diagnostic results again.	OK	Inspection End
			NG	Lighting switch replacement		NG	Switch base replacement		NG	Confirm symptom again.
OPEN DETECT 4	Lighting switch replacement	Confirm self-diagnostic results again.	OK	Inspection End	Confirm self-diagnostic results again.	OK	Inspection End	Confirm self-diagnostic results again.	OK	Inspection End
			NG	Wiper switch replacement		NG	Switch base replacement		NG	Confirm symptom again.
OPEN DETECT 5	Lighting switch replacement	Confirm self-diagnostic results again.	OK	Inspection End	Confirm self-diagnostic results again.	OK	Inspection End	Confirm self-diagnostic results again.	OK	Inspection End
			NG	Wiper switch replacement		NG	Switch base replacement		NG	Confirm symptom again.

>> Inspection End

COMBINATION SWITCH

Malfunctioning Operation of Lamps and Wipers

AKS003MV

1. SYMPTOM CHECK

Confirm symptom, and confirm malfunctioning system No. from the table below.

Malfunctioning system	Symptom	Possible causes
1	When the ignition switch is ON position <ul style="list-style-type: none"> ● LH Turn signal lamp and RH Turn signal lamp on ● Front wiper on (LO speed) 	<ul style="list-style-type: none"> ● Short between the following harness and ground <ul style="list-style-type: none"> – Between BCM INPUT 1 terminal and combination switch – Between combination switch and BCM OUTPUT 1 ● BCM ● Combination switch
2	When the ignition switch is ON position <ul style="list-style-type: none"> ● Headlamp on (HI and LO) ● Front wiper on (HI speed) 	<ul style="list-style-type: none"> ● Short between the following harness and ground <ul style="list-style-type: none"> – Between BCM INPUT 2 terminal and combination switch – Between combination switch and BCM OUTPUT 2 ● BCM ● Combination switch
	When the ignition switch is OFF position <ul style="list-style-type: none"> ● Headlamp on (HI and LO) 	<ul style="list-style-type: none"> ● BCM ● Combination switch
3	When the ignition switch is ON position <ul style="list-style-type: none"> ● Headlamp on (HI and LO) 	<ul style="list-style-type: none"> ● Short between the following harness and ground <ul style="list-style-type: none"> – Between BCM INPUT 3 terminal and combination switch – Between combination switch and BCM OUTPUT 3 ● BCM ● Combination switch
	When the ignition switch is OFF position <ul style="list-style-type: none"> ● Headlamp on (HI and LO) 	<ul style="list-style-type: none"> ● BCM ● Combination switch
4	When the ignition switch is ON position <ul style="list-style-type: none"> ● Parking lamp and tail lamp on 	<ul style="list-style-type: none"> ● Short between the following harness and ground <ul style="list-style-type: none"> – Between BCM INPUT 4 terminal and combination switch – Between combination switch and BCM OUTPUT 4 ● BCM ● Combination switch
	When the ignition switch is OFF position <ul style="list-style-type: none"> ● Parking lamp and tail lamp on 	<ul style="list-style-type: none"> ● BCM ● Combination switch
5	When front wiper conducts intermittent operation <ul style="list-style-type: none"> ● Intermittent interval does not change at intermittent operation dial position 2 and 3. ● Intermittent interval does not change at intermittent operation dial position 4 and 7. ● Intermittent interval does not change at intermittent operation dial position 5 and 6. 	<ul style="list-style-type: none"> ● Short between the following harness and ground <ul style="list-style-type: none"> – Between BCM INPUT 5 terminal and combination switch – Between combination switch and BCM OUTPUT 5 ● BCM ● Combination switch


>> GO TO 2.

COMBINATION SWITCH

2. HARNESS INSPECTION

1. Disconnect BCM connector and combination switch connector.
2. Check continuity between BCM harness connector of Malfunctioning system and ground.

Malfunctioning system	Terminals			Continuity	
	BCM (+)		(−)		
	Connector	Terminal (wire color)			
1	M2	Input 1	48 (W/R)	Ground	No
		Output 1	47 (Y/G)		
2		Input 2	49 (W/G)		
		Output 2	40 (Y/R)		
3		Input 3	50 (W/L)		
		Output 3	41 (PU/W)		
4		Input 4	51 (G)		
		Output 4	42 (L/W)		
5		Input 5	52 (G/B)		
		Output 5	43 (GY)		

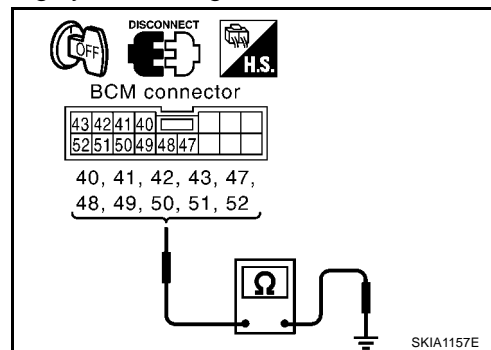


OK or NG

- OK >> GO TO 3.
 NG >> Repair harness.

3. INSPECTION OF BCM INPUT TERMINAL VOLTAGE

Connect BCM connector. Check voltage between BCM input terminal of applicable malfunctioning system and ground.

Malfunctioning system	Terminals			Voltage
	BCM (+)		(–)	
	Connector	Terminal (wire color)		
1	M2	48 (W/R)	Ground	4.5V or more
2		49 (W/G)		
3		50 (W/L)		
4		51 (G)		
5		52 (G/B)		

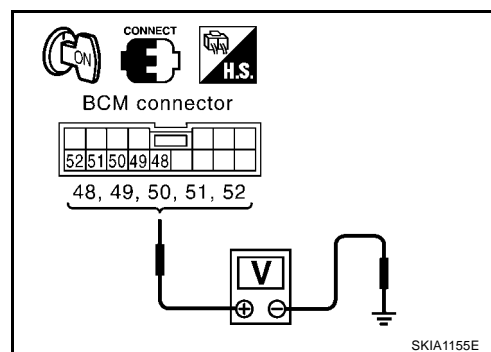

OK or NG

- OK >> Combination switch malfunction, go to 4.
 NG >> Replace BCM.

4. COMBINATION SWITCH INSPECTION

Following the table below, check combination switch.

Procedure									
1	2		3	4		5	6		7
Lighting switch replacement	Confirm self-diagnostic results again.	OK	Inspection End	Confirm self-diagnostic results again.	OK	Inspection End	Confirm self-diagnostic results again.	OK	Inspection End
		NG	Wiper switch replacement		NG	Replacement of switch base		NG	Confirm symptom again.

>> Inspection End

COMBINATION SWITCH

Removal and Installation

AKS000UY

For details, refer to [SRS-40, "Removal and Installation"](#) in "SRS" section.

Switch Circuit Inspection

AKS000UZ

For details, refer to [LT-164, "Combination Switch Inspection According to Self-Diagnostic Results"](#) .

A

B

C

D

E

F

G

H

I

J

LT

L

M

STOP LAMP



STOP LAMP

PFP:26550

Wiring Diagram — STOP/L —

AKS000V0

LT-STOP/L-01

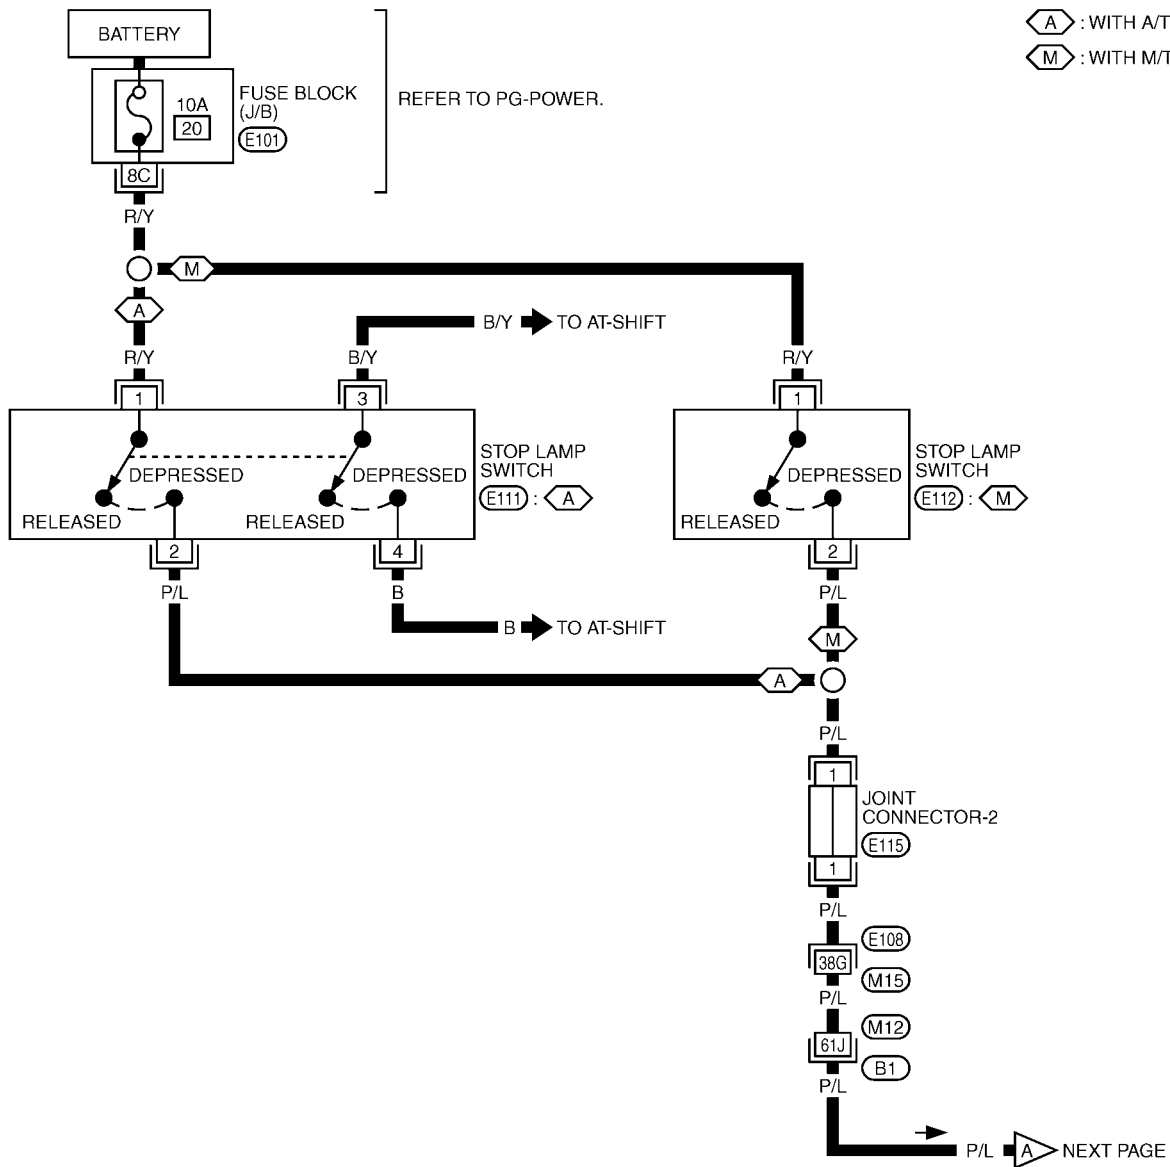


REFER TO THE FOLLOWING.

(E108), (B1) -SUPER MULTIPLE
JUNCTION (SMJ)

**(E101) -FUSE BLOCK-JUNCTION
BOX (J/B)**

LT-STOP/L-02

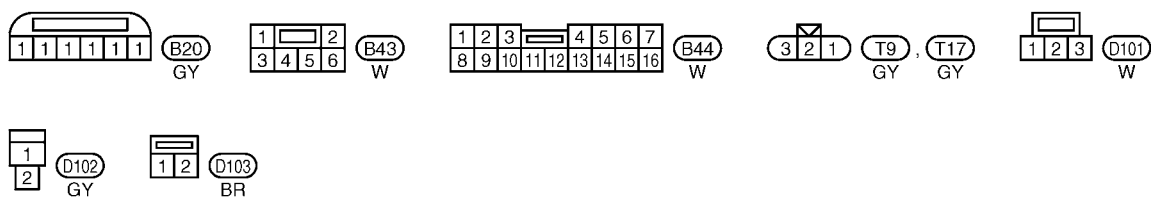

STOP LAMP


High-Mounted Stop Lamp

AKS003U0

BULB REPLACEMENT, REMOVAL AND INSTALLATION

1. Remove back door finisher upper Refer to [EI-36, "Removal and Installation"](#) in "EI" section.
2. Disconnect high-mounted stop lamp connector.
3. Remove Nuts and remove high-mounted stop lamp with cover from back door. Be sure to pull toward the arrow in the figure.
4. Remove screws and remove high-mounted stop lamp assembly from cover.
5. Install in the reverse order of removal.

High-mounted stop lamp :LED

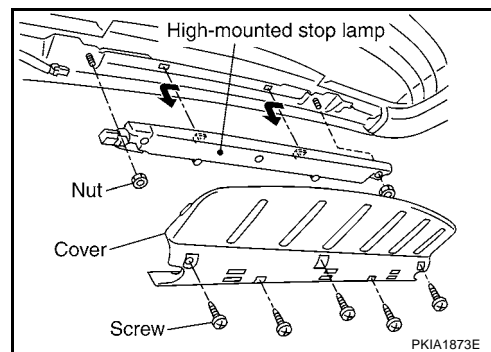

Stop Lamp

BULB REPLACEMENT

AKS000V1

Refer to [LT-198, "Bulb Replacement"](#) in "REAR COMBINATION LAMP".

REMOVAL AND INSTALLATION


Refer to [LT-199, "Removal and Installation"](#) in "REAR COMBINATION LAMP".

A
B
C
D
E
F
G
H
I
J
K
L
M

PFP:26550


AKS000V7

LT



BACK-UP LAMP

LT-BACK/L-02

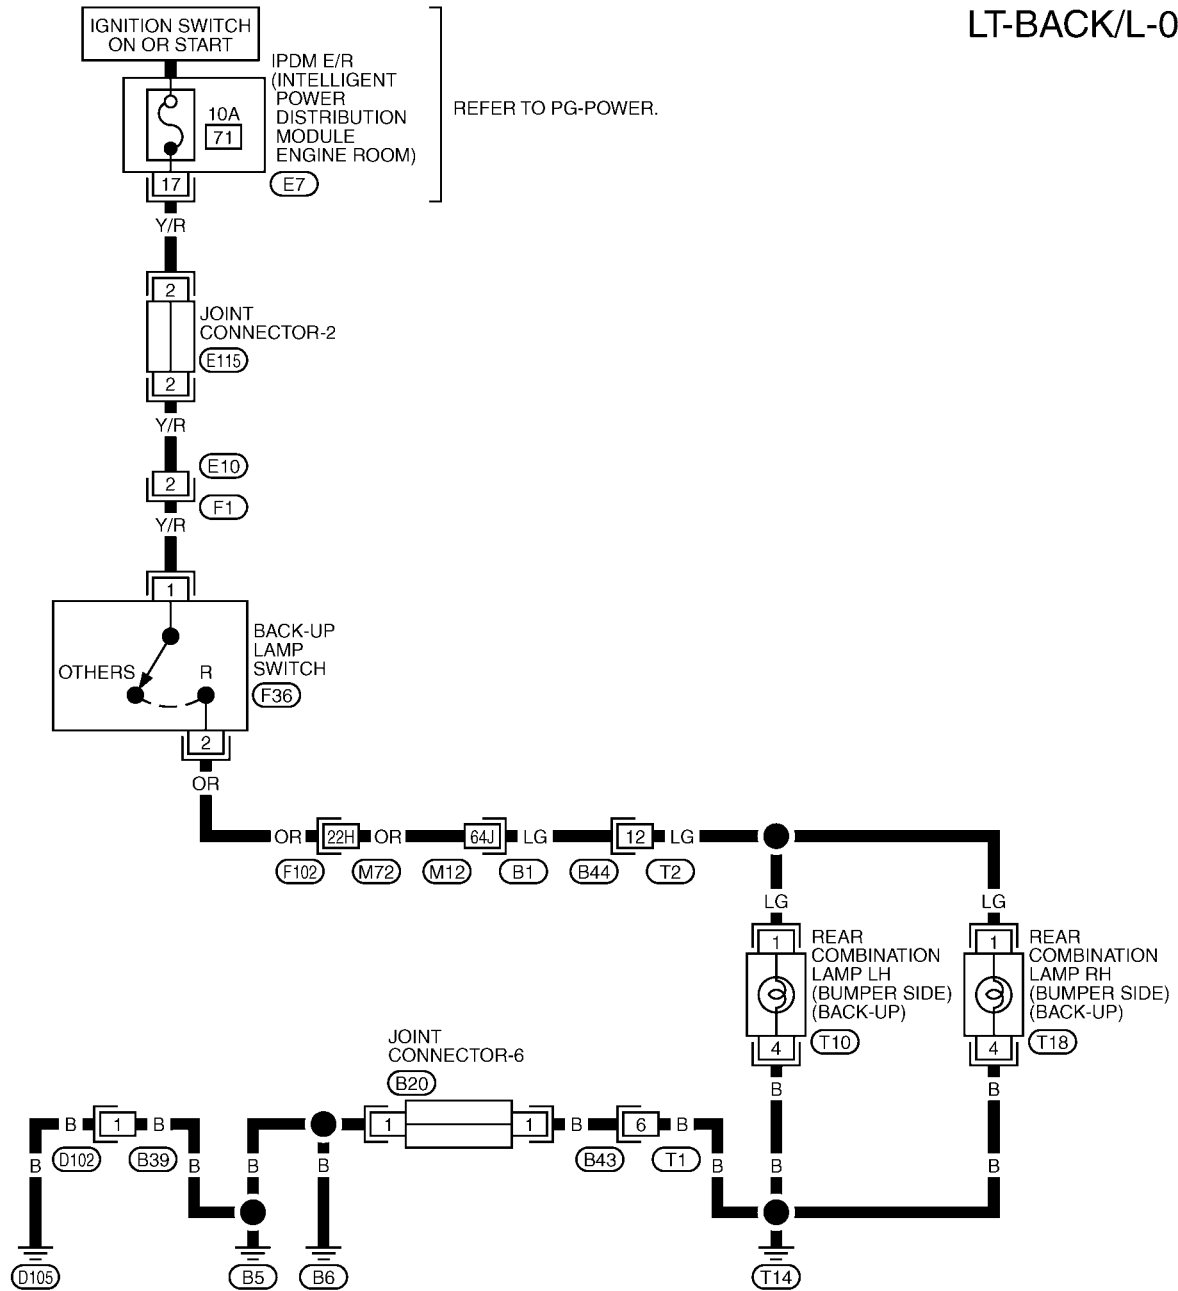

21	20	19	18	17
28	27	26	25	24
23	22			

(E7) W



1	1	1	1	2	2	2	3	3
4	4	4	4	4	4	4	3	3

(E115) G

1	2	3	4	5
6	7	8	9	

(F1) GY

1	2
---	---

(F36) B

1	1	1	1	1	1
---	---	---	---	---	---

(B20) GY

1	2
3	4
5	6

(B43) W

1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16					

(B44) W

1	2
3	4

(T10, T18) SB

1
2

(D102) GY

REFER TO THE FOLLOWING.

(F102), (B1) -SUPER MULTIPLE JUNCTION (SMJ)

TKWT0455E

BACK-UP LAMP

Bulb Replacement

AKS000V8

Refer to [LT-198, "Bulb Replacement"](#) in "REAR COMBINATION LAMP".

Removal and Installation

AKS000V9

Refer to [LT-199, "Removal and Installation"](#) in "REAR COMBINATION LAMP".

- A
- B
- C
- D
- E
- F
- G
- H
- I
- J
- LT
- L
- M

PARKING, LICENSE PLATE AND TAIL LAMPS

PFP:26550

System Description

AKS000VA

Control of the parking, license plate, and tail lamp operation is dependent upon the position of the lighting switch (combination switch). When the lighting switch is placed in the 1ST position, the BCM receives input signal requesting the parking, license plate, side marker and tail lamps to illuminate. This input signal is communicated to the IPDM E/R (intelligent power distribution module engine room) across the CAN communication lines. The central processing unit of the IPDM E/R controls the tail lamp relay coil. This relay, when energized, directs power to the parking, license plate, side marker and tail lamps, which then illuminate.

Power is supplied at all times

- to tail lamp relay, located in the IPDM E/R (intelligent power distribution module engine room)
- through 10A fuse [No. 75, located in the IPDM E/R (intelligent power distribution module engine room)].

Power is also supplied at all times

- to BCM (body control module) terminal 7
- through 40A fusible link (letter F, located in the fuse and fusible link box).

With the ignition switch in the ON or START position, power is supplied

- to BCM (body control module) terminal 35
- through 10A fuse [No. 1, located in the fuse block (J/B)].

With the ignition switch in the ACC or ON position, power is supplied

- to BCM (body control module) terminal 36
- through 10A fuse [No. 6, located in the fuse block (J/B)].

Ground is supplied

- to BCM (body control module) terminal 8
- through grounds E17, E43 and F152.

OPERATION BY LIGHTING SWITCH

With the lighting switch in the 1st or 2nd position (or if the auto light system is activated), the BCM (body control module) receives input signal requesting the parking, license plate, side marker and tail lamps to illuminate. This input is communicated to the IPDM E/R (intelligent power distribution module engine room) across the CAN communication lines. The CPU (central processing unit) in the IPDM E/R controls the tail lamp relay coil, which when energized, directs power

- through terminal 37 of the IPDM E/R
- to front combination lamp LH terminal 5 and 6 (with xenon bulb headlamp),
- to front combination lamp LH terminal 5 (with halogen bulb headlamp),
- to front combination lamp RH terminal 5 and 6 (with xenon bulb headlamp),
- to front combination lamp RH terminal 5 (with halogen bulb headlamp),
- to rear combination lamp LH terminal 2 and 5,
- to rear combination lamp RH terminal 2 and 5,
- to license plate lamp terminal 2,

Ground is supplied at all times

- to front combination lamp LH terminal 1 (with xenon bulb headlamp),
- to front combination lamp LH terminal 4 (with halogen bulb headlamp),
- through grounds E17, E43 and F152, and
- to front combination lamp RH terminal 1 (with xenon bulb headlamp),
- to front combination lamp RH terminal 4 (with halogen bulb headlamp),
- through grounds E17, E43 and F152, and
- to front side marker lamp LH terminal 1 (with xenon bulb headlamp),
- to front side marker lamp LH terminal 4 (with halogen bulb headlamp),
- through body grounds E17, E43 and F152, and
- to front side marker lamp RH terminal 1 (with xenon bulb headlamp),
- to front side marker lamp RH terminal 4 (with halogen bulb headlamp),
- through grounds E17, E43 and F152, and

PARKING, LICENSE PLATE AND TAIL LAMPS

- to rear combination lamp LH terminal 3 and 4
- through grounds D105, B5, B6 and T14, and
- to rear combination lamp RH terminal 3 and 4
- through grounds D105, B5, B6 and T14, and
- to license plate lamp terminal 1,
- through grounds D105, B5, B6 and T14.

With power and ground supplied, the parking, license plate side marker and tail lamps illuminate.

COMBINATION SWITCH READING FUNCTION

Refer to [LT-159, "Combination Switch Reading Function"](#).

EXTERIOR LAMP BATTERY SAVER CONTROL

When the combination switch (lighting switch) is in the 1ST (or 2ND) position, and the ignition switch is turned from ON or ACC to OFF, the battery saver control function is activated.

Under this condition, the parking, license plate, side marker and tail lamps remain illuminated for 5 minutes, then the parking, license plate, side marker and tail lamps are turned off.

Exterior lamp battery saver control mode can be changed by the function setting of CONSULT-II.

CAN Communication System Description

AKS003N7

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

CAN Communication Unit

AKS003NB

Body type	Coupe						
Axle	2WD						
Engine	VQ35DE						
Transmission	A/T	M/T					
Brake control	TCS	ABS		TCS		VDC	
Low tire pressure warning system	Not Applicable	Not Applicable	Applicable	Not Applicable	Applicable	Not Applicable	Applicable
CAN communication unit							
ECM	×	×	×	×	×	×	×
TCM	×						
Data link connector	×	×	×	×	×	×	×
Unified meter and A/C amp.	×	×	×	×	×	×	×
BCM	×	×	×	×	×	×	×
Low tire pressure warning control unit			×		×		×
Steering angle sensor						×	×
ABS actuator and electric unit (control unit)	×	×	×	×	×		
VDC/TCS/ABS control unit						×	×
IPDM E/R	×	×	×	×	×	×	×
CAN communication type	LAN-7, "TYPE 1"	LAN-8, "TYPE 2/TYPE 3"		LAN-10, "TYPE 4/TYPE 5"		LAN-12, "TYPE 6/TYPE 7"	


×: Applicable

PARKING, LICENSE PLATE AND TAIL LAMPS

TYPE 1

System diagram

- Type1

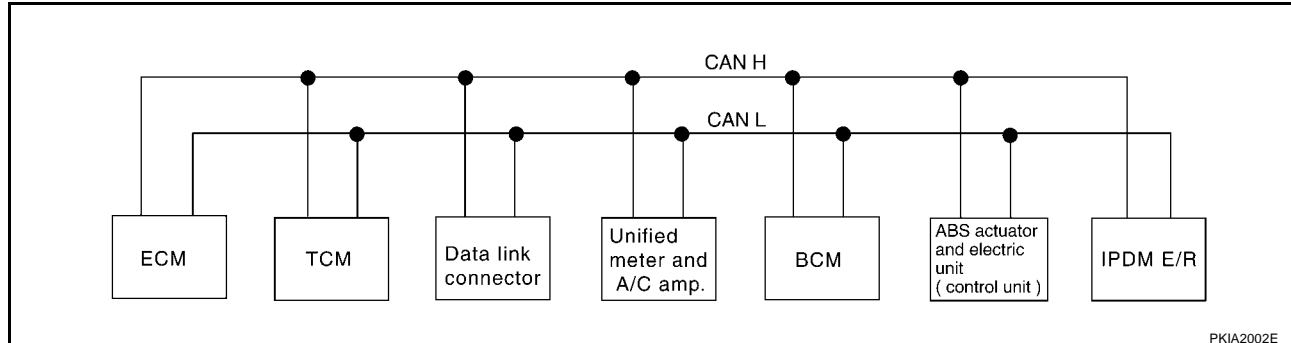

Input/output signal chart

T: Transmit R: Receive

Signals	ECM	TCM	Unified meter and A/C amp.	BCM	ABS actuator and electric unit (control unit)	IPDM E/R
Engine speed signal	T	R	R		R	
Engine torque signal	T	R				
Engine coolant temperature signal	T	R	R			
Accelerator pedal position signal	T	R			R	
Closed throttle position signal	T	R				
Wide open throttle position signal	T	R				
Battery voltage signal	T	R				
Stop lamp switch signal		R	T			
Fuel consumption monitor signal	T		R			
A/T self-diagnosis signal	R	T				
A/T CHECK indicator lamp signal		T	R			
A/T position indicator signal		T	R		R	
ABS operation signal		R			T	
A/T shift schedule change demand signal		R			T	
Air conditioner switch signal	R			T		
A/C compressor request signal	T					R
A/C compressor feedback signal	T		R			
Blower fan motor switch signal	R			T		
Cooling fan speed request signal	T					R
Position lights request signal			R	T		R
Low beam request signal				T		R
Low beam status signal	R					T
High beam request signal			R	T		R
High beam status signal	R					T
Vehicle speed signal			R		T	
	R	R	T	R		
Sleep request 1 signal			R	T		
Sleep request 2 signal				T		R


PARKING, LICENSE PLATE AND TAIL LAMPS

Signals	ECM	TCM	Unified meter and A/C amp.	BCM	ABS actuator and electric unit (control unit)	IPDM E/R	
Wake up request 1 signal			R	T			A
Door switch signal			R	T		R	B
Turn indicator signal			R	T			C
Seat belt buckle switch signal			T	R			
Buzzer output signal			R	T			
Fuel level sensor signal	R		T				D
Malfunction indicator lamp signal	T		R				
ASCD SET lamp signal	T		R				
ASCD operation signal	T	R					E
ASCD CRUISE lamp signal	T		R				
Overdrive cancel signal	T	R					F
Output shaft revolution signal	R	T					
Turbine revolution signal	R	T					
Front wiper request signal				T		R	G
Front wiper stop position signal				R		T	
Rear window defogger switch signal				T		R	H
Rear window defogger control signal	R					T	
Manual mode signal		R	T				I
Not manual mode signal		R	T				
Manual mode shift up signal		R	T				J
Manual mode shift down signal		R	T				
Manual mode indicator signal		T	R				
Hood switch signal				R		T	LT
Theft warning horn request signal				T		R	
Horn chirp signal				T		R	
ABS warning lamp signal			R		T		L
TCS OFF indicator lamp signal			R		T		
SLIP indicator lamp signal			R		T		M
Brake (EBD) warning lamp signal			R		T		

TYPE 2/TYPE3


System diagram

- Type2

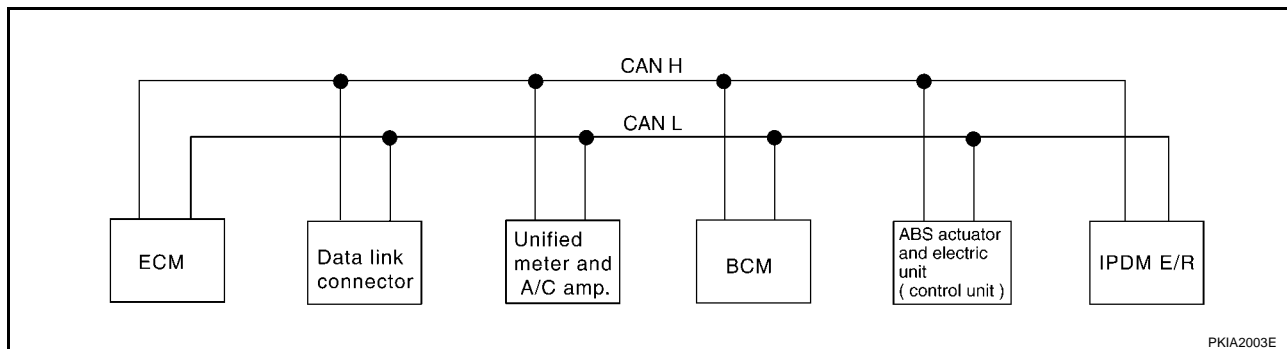

PARKING, LICENSE PLATE AND TAIL LAMPS

- Type3

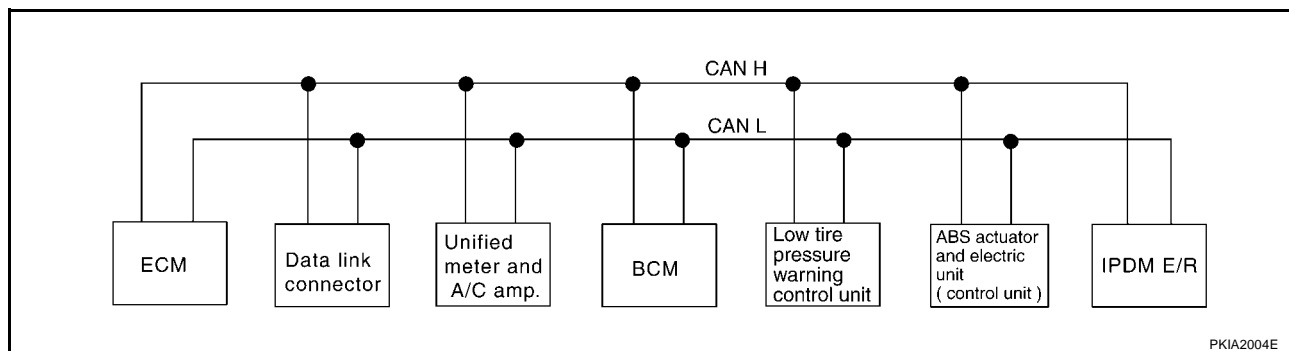

Input/output signal chart

T: Transmit R: Receive

Signals	ECM	Unified meter and A/C amp.	BCM	Low tire pressure warning control unit	ABS actuator and electric unit (control unit)	IPDM E/R
Engine speed signal	T	R			R	
Engine coolant temperature signal	T	R				
Accelerator pedal position signal	T				R	
Fuel consumption monitor signal	T	R				
Air conditioner switch signal	R		T			
A/C compressor request signal	T					R
A/C compressor feedback signal	T	R				
Blower fan motor switch signal	R		T			
Cooling fan speed request signal	T					R
Position lights request signal			R	T		R
Low beam request signal			T			R
Low beam status signal	R					T
High beam request signal		R	T			R
High beam status signal	R					T
Vehicle speed signal		R			T	
	R	T	R	R		
Sleep request 1 signal		R	T			
Sleep request 2 signal			T			R
Wake up request 1 signal		R	T			
Door switch signal		R	T			R
Turn indicator signal		R	T			
Seat belt buckle switch signal		T	R			
Buzzer output signal		R	T			
Fuel level sensor signal	R	T				
Malfunction indicator lamp signal	T	R				
ASCD SET lamp signal	T	R				
ASCD CRUISE lamp signal	T	R				
Front wiper request signal			T			R
Front wiper stop position signal			R			T
Rear window defogger switch signal			T			R


PARKING, LICENSE PLATE AND TAIL LAMPS

Signals	ECM	Unified meter and A/C amp.	BCM	Low tire pressure warning control unit	ABS actuator and electric unit (control unit)	IPDM E/R
Rear window defogger control signal	R					T
Hood switch signal			R			T
Theft warning horn request signal			T			R
Horn chirp signal			T			R
Tire pressure signal		R		T		
ABS warning lamp signal		R			T	
Brake (EBD) warning lamp signal		R			T	


TYPE 4/TYPE5

System diagram

- Type4

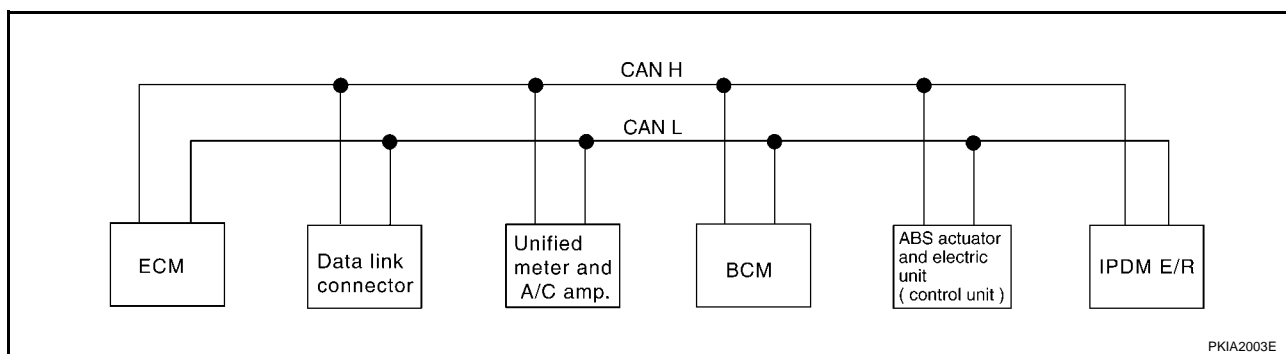

- Type5

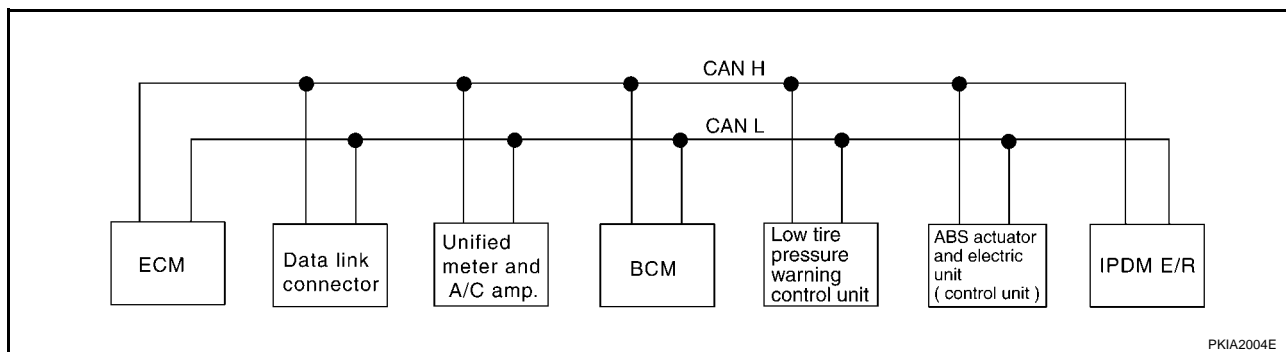

Input/output signal chart

T: Transmit R: Receive

Signals	ECM	Unified meter and A/C amp.	BCM	Low tire pressure warning control unit	ABS actuator and electric unit (control unit)	IPDM E/R
Engine speed signal	T	R			R	
Engine coolant temperature signal	T	R				
Accelerator pedal position signal	T				R	
Fuel consumption monitor signal	T	R				
Air conditioner switch signal	R		T			
A/C compressor request signal	T					R
A/C compressor feedback signal	T	R				
Blower fan motor switch signal	R		T			

PARKING, LICENSE PLATE AND TAIL LAMPS


Signals	ECM	Unified meter and A/C amp.	BCM	Low tire pressure warning control unit	ABS actuator and electric unit (control unit)	IPDM E/R
Cooling fan speed request signal	T					R
Position lights request signal		R	T			R
Low beam request signal			T			R
Low beam status signal	R					T
High beam request signal		R	T			R
High beam status signal	R					T
Vehicle speed signal		R			T	
	R	T	R	R		
Sleep request 1 signal		R	T			
Sleep request 2 signal			T			R
Wake up request 1 signal		R	T			
Door switch signal		R	T			R
Turn indicator signal		R	T			
Seat belt buckle switch signal		T	R			
Buzzer output signal		R	T			
Fuel level sensor signal	R	T				
Malfunction indicator lamp signal	T	R				
ASCD SET lamp signal	T	R				
ASCD CRUISE lamp signal	T	R				
Front wiper request signal			T			R
Front wiper stop position signal			R			T
Rear window defogger switch signal			T			R
Rear window defogger control signal	R					T
Hood switch signal			R			T
Theft warning horn request signal			T			R
Horn chirp signal			T			R
Tire pressure signal		R		T		
ABS warning lamp signal		R			T	
TCS OFF indicator lamp signal		R			T	
SLIP indicator lamp signal		R			T	
Brake (EBD) warning lamp signal		R			T	

PARKING, LICENSE PLATE AND TAIL LAMPS


TYPE 6/TYPE7

System diagram

- Type6

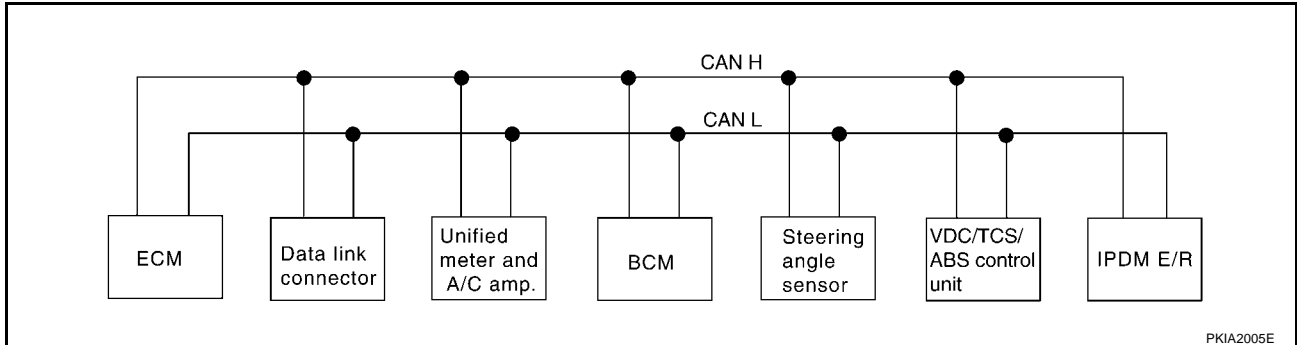

- Type7

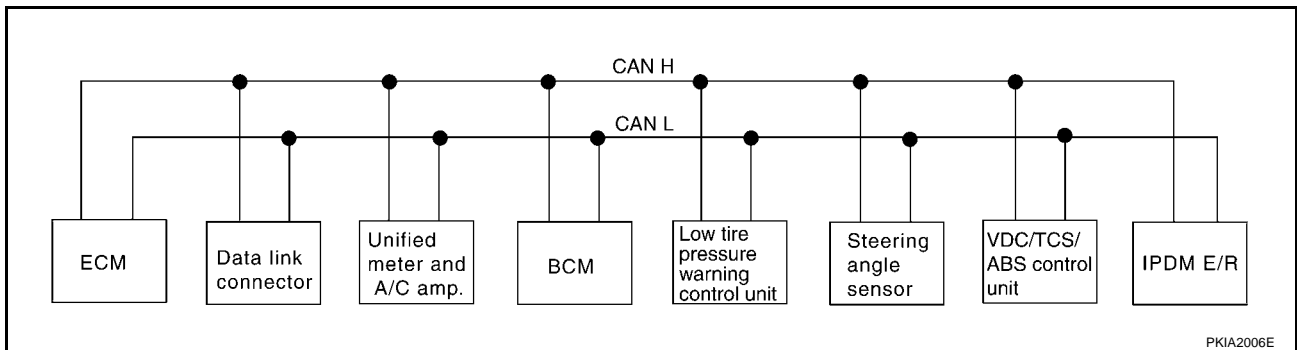

Input/output signal chart

T: Transmit R: Receive


Signals	ECM	Unified meter and A/C amp.	BCM	Low tire pressure warning control unit	Steering angle sensor	VDC/TCS/ABS control unit	IPDM E/R
Engine speed signal	T	R				R	
Engine coolant temperature signal	T	R					
Accelerator pedal position signal	T					R	
Fuel consumption monitor signal	T	R					
Air conditioner switch signal	R		T				
A/C compressor request signal	T						R
A/C compressor feedback signal	T	R					
Blower fan motor switch signal	R		T				
Cooling fan speed request signal	T						R
Position lights request signal		R	T				R
Low beam request signal			T				R
Low beam status signal	R						T
High beam request signal		R	T				R
High beam status signal	R						T
Vehicle speed signal		R				T	
	R	T	R	R			
Sleep request 1 signal		R	T				
Sleep request 2 signal			T				R
Wake up request 1 signal		R	T				

PARKING, LICENSE PLATE AND TAIL LAMPS

Signals	ECM	Unified meter and A/C amp.	BCM	Low tire pressure warning control unit	Steering angle sensor	VDC/TCS/ABS control unit	IPDM E/R
Door switch signal		R	T				R
Turn indicator signal		R	T				
Seat belt buckle switch signal		T	R				
Buzzer output signal		R	T				
Fuel level sensor signal	R	T					
Malfunction indicator signal	T	R					
ASCD SET lamp signal	T	R					
ASCD CRUISE lamp signal	T	R					
Front wiper request signal			T				R
Front wiper stop position signal			R				T
Rear window defogger switch signal			T				R
Rear window defogger control signal	R						T
Hood switch signal			R				T
Theft warning horn request signal			T				R
Horn chirp signal			T				R
Steering angle sensor signal					T	R	
Tire pressure signal		R		T			
ABS warning lamp signal		R				T	
VDC OFF indicator lamp signal		R				T	
SLIP indicator lamp signal		R				T	
Brake (EBD) warning lamp signal		R				T	

Schematic

AKS000VD

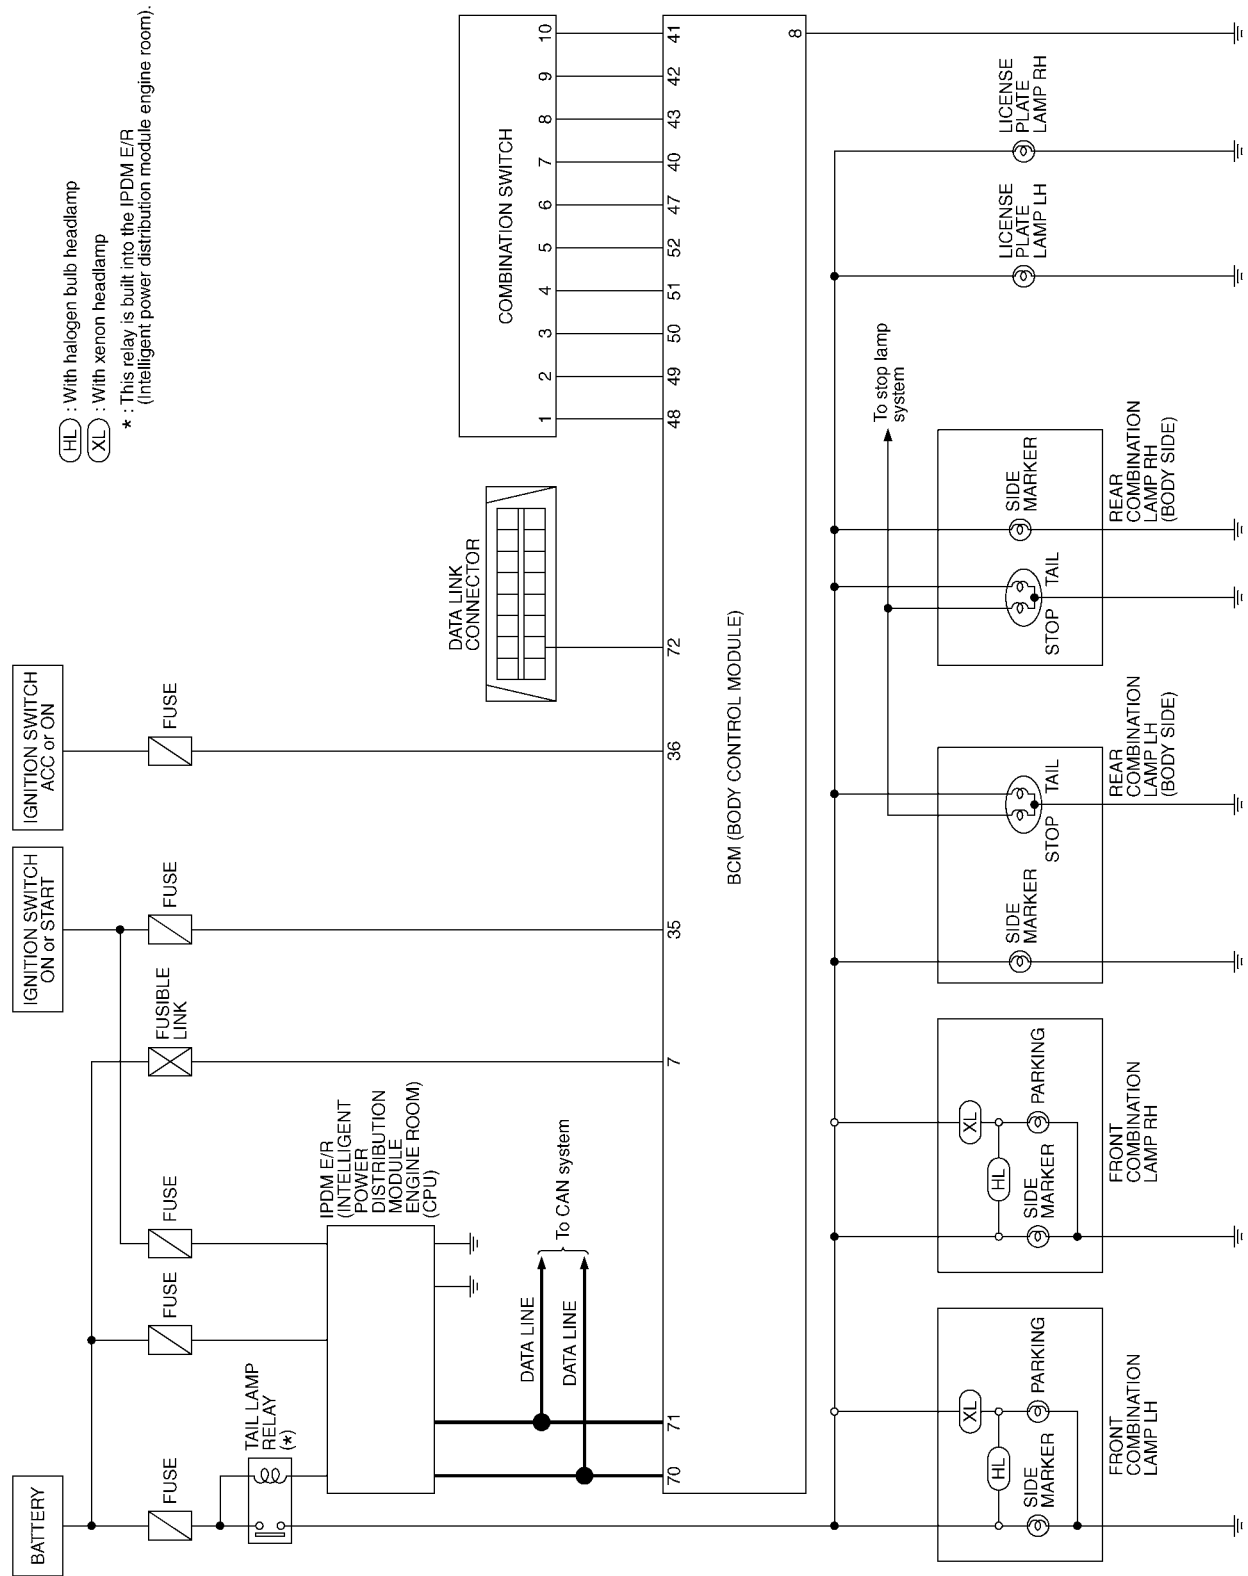



TKWT0456E

PARKING, LICENSE PLATE AND TAIL LAMPS


Wiring Diagram — TAIL/L —

AKS000VE

LT-TAIL/L-01

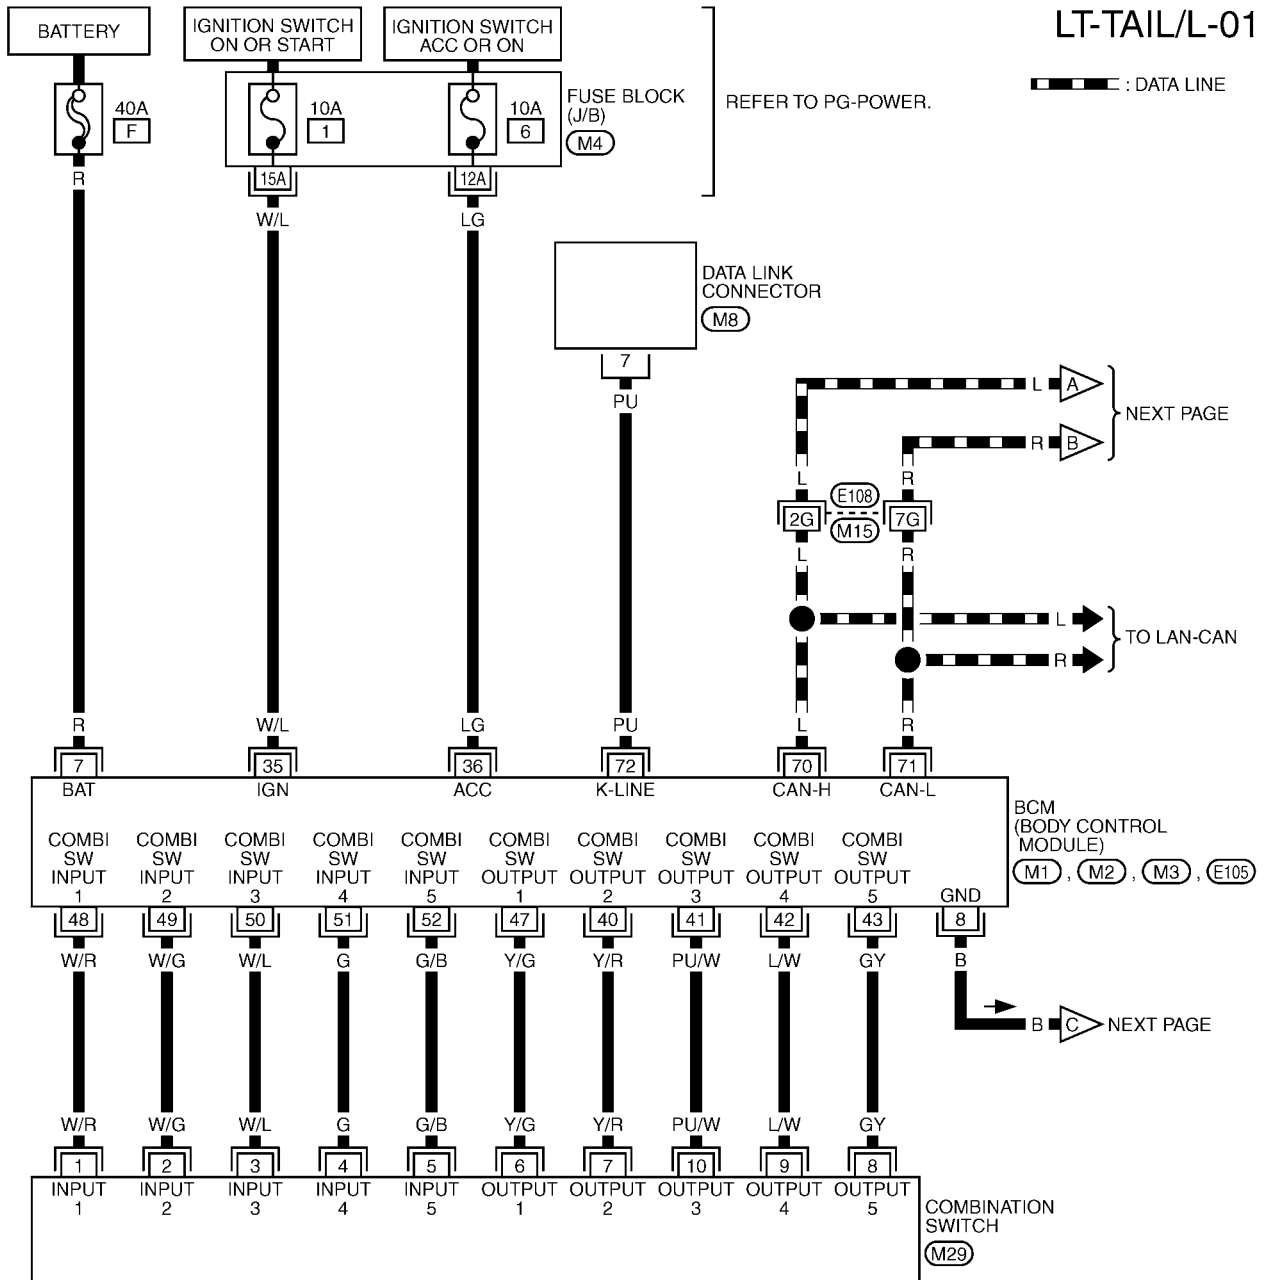

(M8)
W



(M29)
W

REFER TO THE FOLLOWING.

(E108) -SUPER MULTIPLE JUNCTION (SMJ)

(M4) -FUSE BLOCK-JUNCTION BOX (J/B)



(M1), (M2), (M3), (E105) -ELECTRICAL UNITS

TKWT0457E





PARKING, LICENSE PLATE AND TAIL LAMPS

LT-TAIL/L-02

DATA LINE

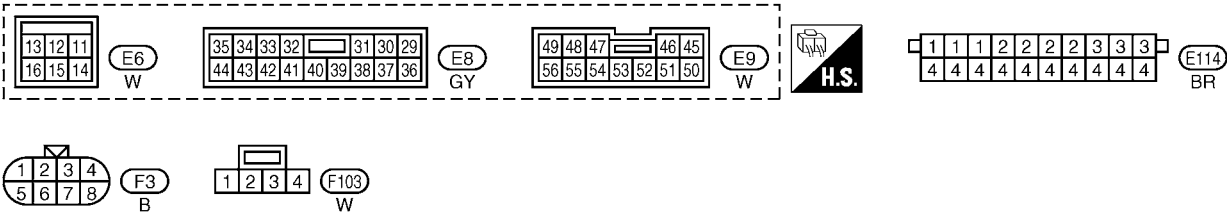
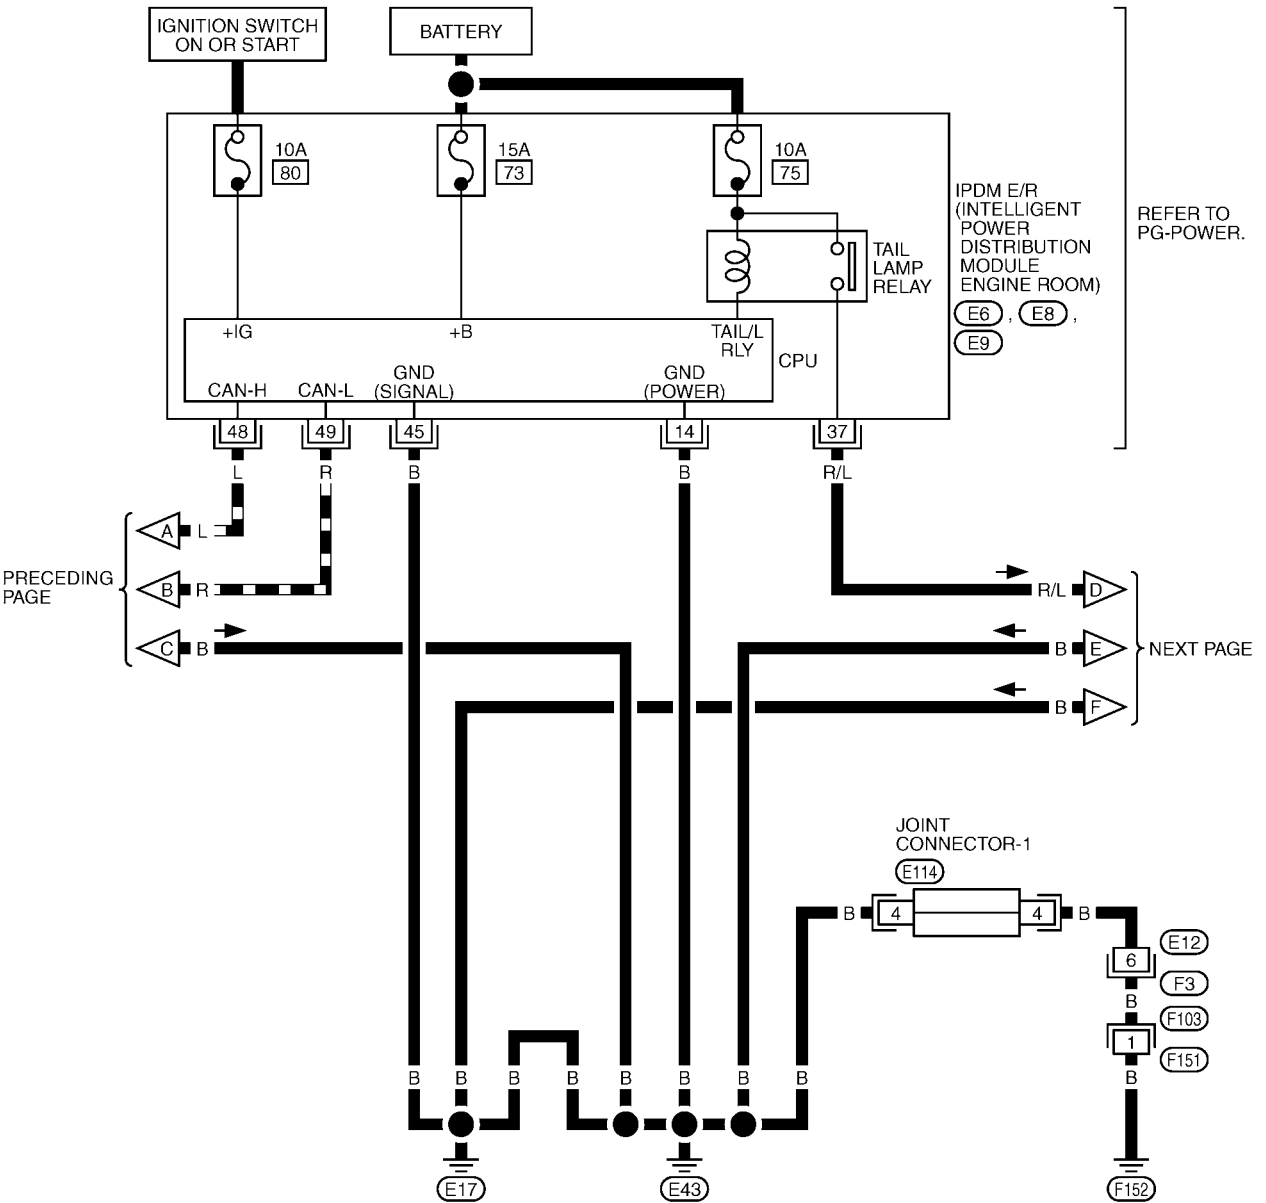


- HL : WITH HALOGEN BULB HEADLAMP
- XL : WITH XENON HEADLAMP

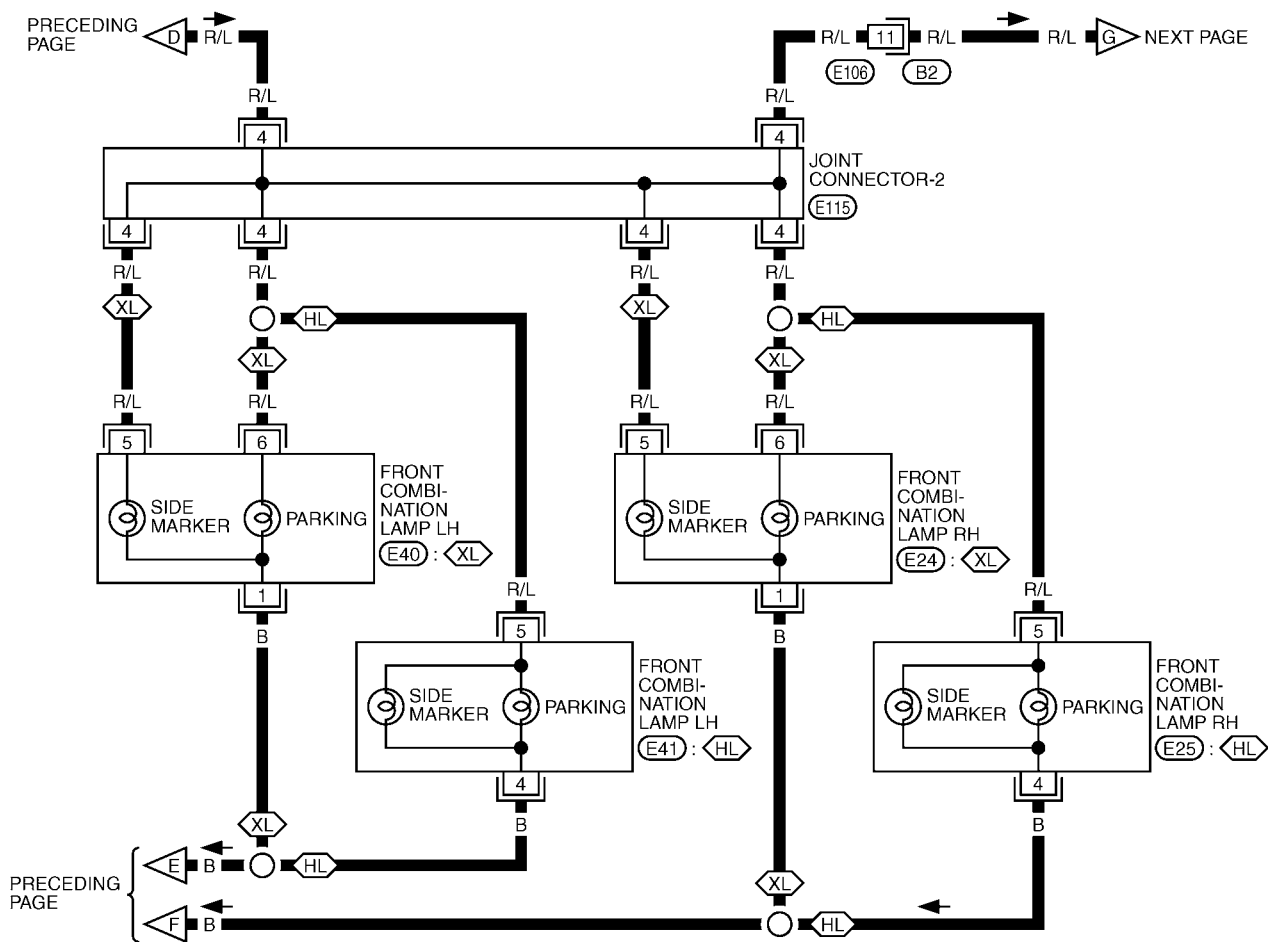

PARKING, LICENSE PLATE AND TAIL LAMPS

LT-TAIL/L-04

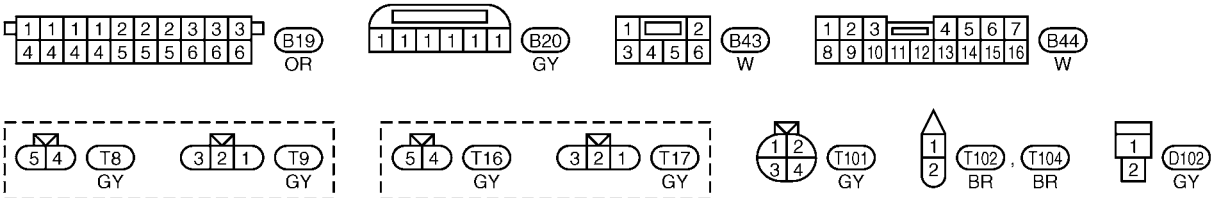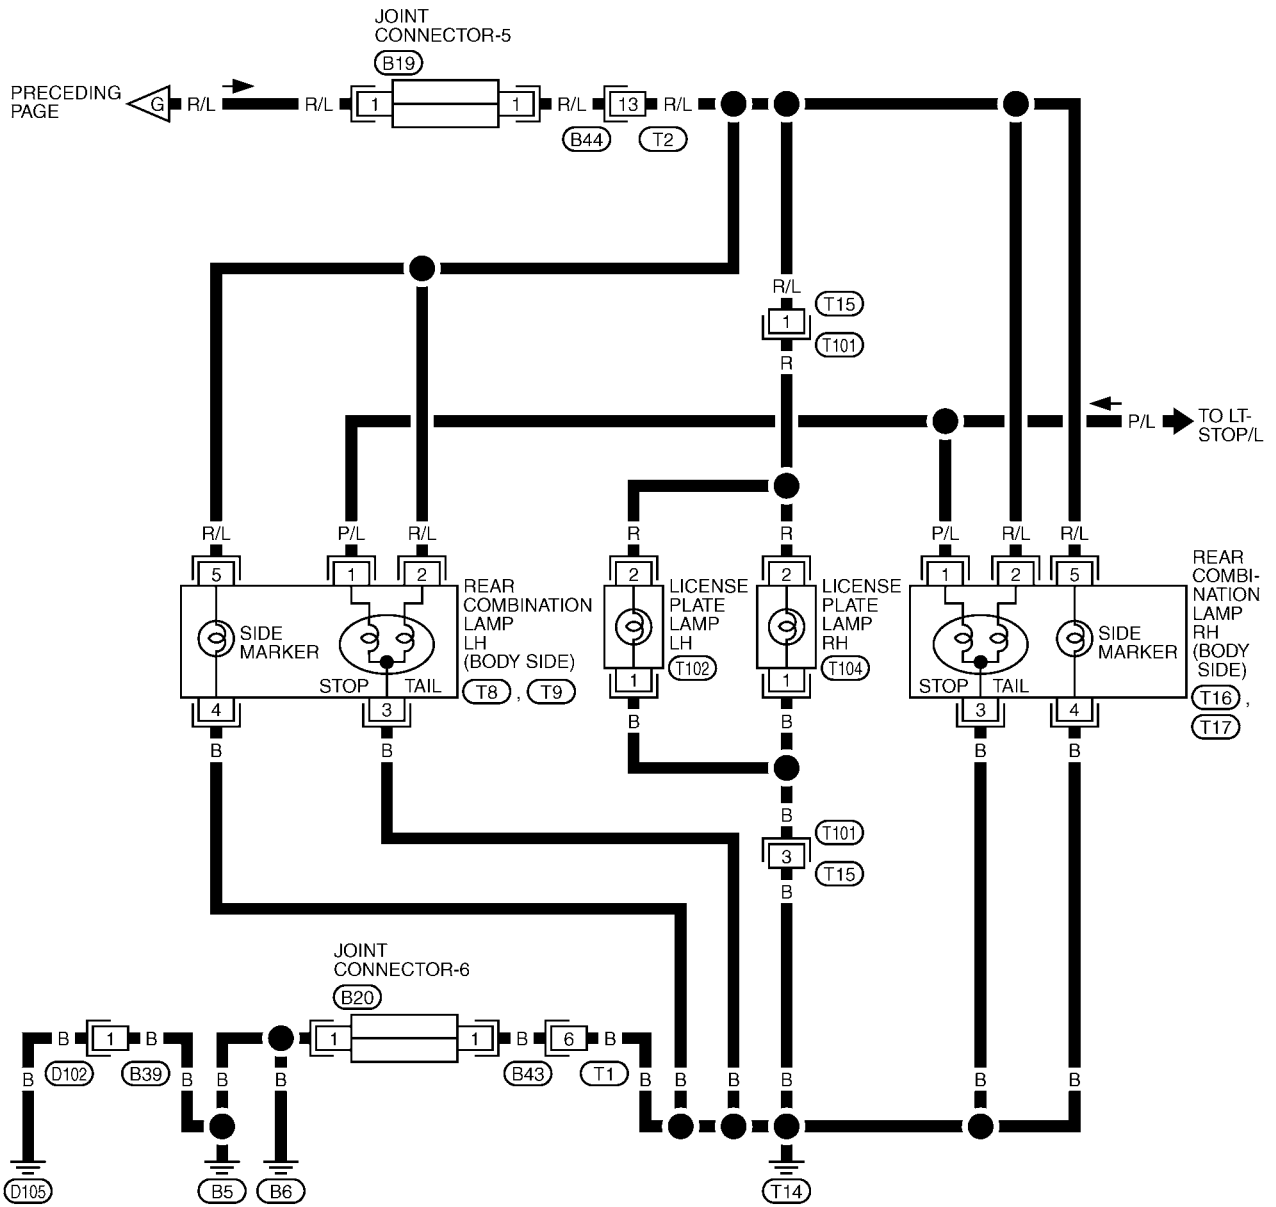


TKWT0460E

PARKING, LICENSE PLATE AND TAIL LAMPS

Terminals and Reference Value for BCM

AKS000VF

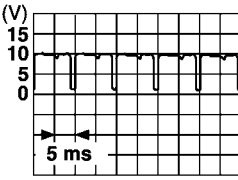Terminal No.	Wire color	Item	Measuring condition		Reference value
			Ignition switch	Operation or condition	
7	R	Battery power supply	OFF	—	Battery voltage
8	B	Ground	—	—	—
35	W/L	Ignition switch (ON)	ON	—	Battery voltage
36	LG	Ignition switch (ACC)	ACC	—	Battery voltage
40	Y/R	Combination switch output 2	ON	Lighting, turn, wiper OFF	
41	PU/W	Combination switch output 3			
42	L/W	Combination switch output 4			
43	GY	Combination switch output 5			
47	Y/G	Combination switch output 1			
48	W/R	Combination switch input 1	ON	Lighting, turn, wiper OFF	4.5V or more
49	W/G	Combination switch input 2			
50	W/L	Combination switch input 3			
51	G	Combination switch input 4			
52	G/B	Combination switch input 5			
70	L	CAN-H	—	—	—
71	R	CAN-L	—	—	—
72	PU	K-LINE	—	—	—

SKIA1119J

How to Proceed With Trouble Diagnosis

AKS000VG

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-176, "System Description"](#).
3. Carry out the Preliminary Check. Refer to [LT-190, "Preliminary Check"](#).
4. Check symptom and repair or replace the cause of malfunction.
5. Do the parking, license plate and tail lamps operate normally? If YES: GO TO 6. If NO: GO TO 4.
6. Inspection end.

Preliminary Check

AKS000VH

INSPECTION FOR POWER SUPPLY AND GROUND CIRCUIT

1. CHECK FUSES

- Check for blown BCM fuses.

UNIT	POWER SOURCE	FUSE No.
BCM	Battery	F
	Ignition switch ON or START position	1
	Ignition switch ACC or ON position	6

Refer to [LT-186, "Wiring Diagram — TAIL/L —"](#).

OK or NG


OK >> GO TO 2.

NG >> If fuse is blown, be sure to eliminate cause of malfunction before installing new fuse. Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#).

PARKING, LICENSE PLATE AND TAIL LAMPS

2. POWER SUPPLY CIRCUIT CHECK

1. Disconnect BCM connector.
2. Check voltage between BCM harness connector and ground.

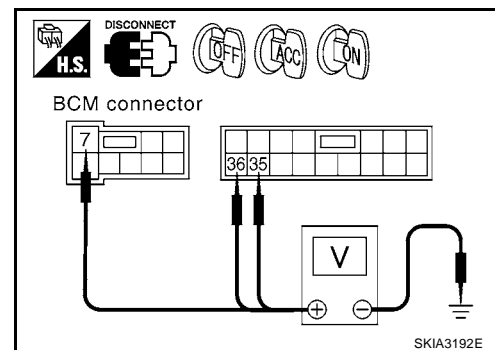

Terminals		Ignition switch position			
(+)		(-)	OFF	ACC	ON
Connector	Terminal (Wire color)				
E105	7 (R)	Ground	Battery voltage	Battery voltage	Battery voltage
M1	35 (W/L)		0V	0V	Battery voltage
M1	36 (LG)		0V	Battery voltage	Battery voltage

OK or NG

- OK >> GO TO 3.
 NG >> Check harness for open or short between BCM and fuse.


3. GROUND CIRCUIT CHECK

Check continuity between BCM harness connector and ground.

Terminals			Continuity
(+)		(-)	
Connector	Terminal (wire color)		
E105	8 (B)	Ground	Yes

OK or NG

- OK >> INSPECTION END.
 NG >> Check harness ground circuit.

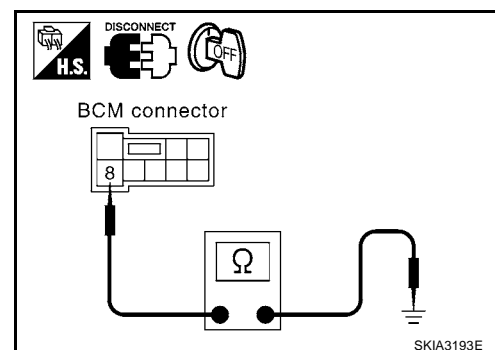

CONSULT-II Function

Refer to [LT-23, "CONSULT-II Function"](#) in XENON TYPE (FOR USA).
 Refer to [LT-52, "CONSULT-II Function"](#) in CONVENTIONAL TYPE (FOR USA).
 Refer to [LT-84, "CONSULT-II Function"](#) in XENON TYPE (FOR CANADA).
 Refer to [LT-119, "CONSULT-II Function"](#) in CONVENTIONAL TYPE (FOR CANADA).

Parking, License Plate and Tail Lamps Do Not Illuminate

1. INSPECTION 1 BETWEEN IPDM E/R AND PARKING, LICENSE PLATE, SIDE MARKER AND TAIL LAMPS

1. Start auto active test. Refer to [PG-24, "Auto Active Test"](#).
2. Check whether parking, license plate, side marker and tail lamps operate.

Parking, license plate lamp, side marker and tail lamps should operate

OK or NG

- OK >> GO TO 4.
 NG >> GO TO 2.


PARKING, LICENSE PLATE AND TAIL LAMPS

2. INSPECTION 2 BETWEEN IPDM E/R AND PARKING, LICENSE PLATE, SIDE MARKER AND TAIL LAMPS

1. Disconnect IPDM E/R connector, license plate lamp connector and front/rear combination lamp connectors.
2. Check harness continuity between IPDM E/R connector and license plate lamp and front/rear combination lamp connectors.


With xenon headlamp

Terminals					Continuity
IPDM E/R		Front combination lamp (Parking)			
Connector	Terminal (wire color)	Connector		Terminal (wire color)	
E8	37 (R/L)	RH	E24	6 (R/L)	Yes
		LH	E40	6 (R/L)	

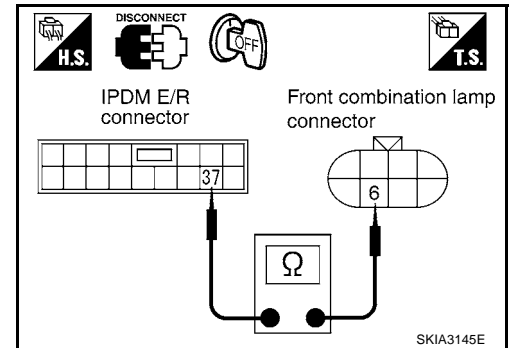


With halogen bulb headlamp

Terminals					Continuity
IPDM E/R		Front combination lamp (Parking)			
Connector	Terminal (wire color)	Connector		Terminal (wire color)	
E8	37 (R/L)	RH	E25	5 (R/L)	Yes
		LH	E41	5 (R/L)	

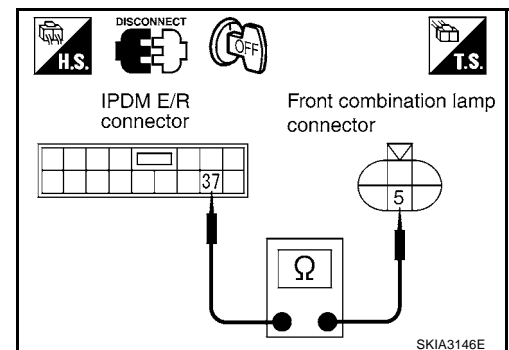


With xenon headlamp

Terminals					Continuity
IPDM E/R		Front combination lamp (side marker)			
Connector	Terminal (wire color)	Connector		Terminal (wire color)	
E8	37 (R/L)	RH	E24	5 (R/L)	Yes
		LH	E40	5 (R/L)	

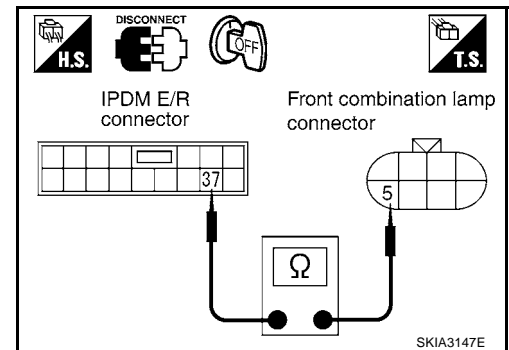


With halogen bulb headlamp

Terminals					Continuity
IPDM E/R		Front combination lamp (side marker)			
Connector	Terminal (wire color)	Connector		Terminal (wire color)	
E8	37 (R/L)	RH	E25	5 (R/L)	Yes
		LH	E41	5 (R/L)	

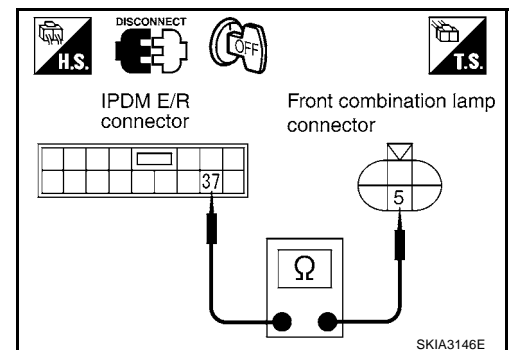


PARKING, LICENSE PLATE AND TAIL LAMPS


Terminals						Continuity
IPDM E/R		Rear combination lamp (Tail)				
Connector	Terminal (wire color)	Connector	Terminal (wire color)			
E8	37(R/L)	RH	T17	2 (R/L)	Yes	
		LH	T9	2 (R/L)		

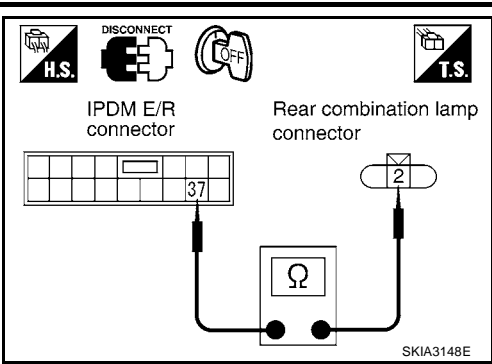

Terminals					Continuity
IPDM E/R		Rear combination lamp (side marker)			
Connector	Terminal (wire color)	Connector	Terminal (wire color)		
E8	37(R/L)	RH	T16	5 (R/L)	Yes
		LH	T8	5 (R/L)	

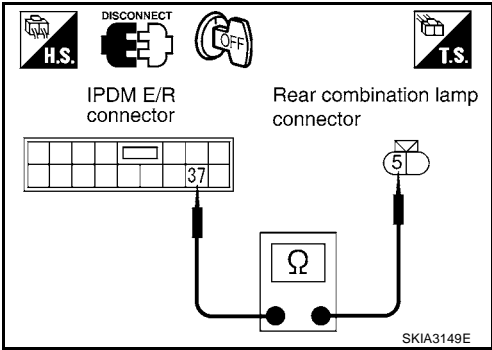

Terminals					Continuity
IPDM E/R		Licence plate lamp			
Connector	Terminal (wire color)	Connector		Terminal (wire color)	
E8	37 (R/L)	RH	T104	2 (R)	Yes
		LH	T102	2 (R)	

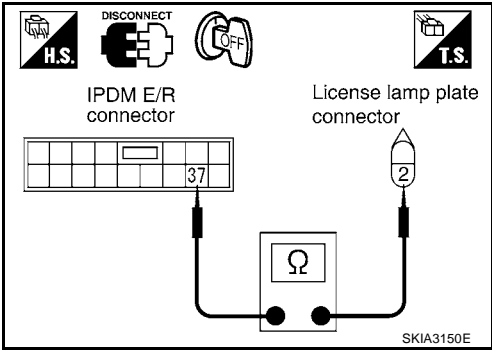

OK or NG

- OK >> GO TO 3.
- NG >> Repair harness or connector between IPDM E/R and turn signal lamp, between IPDM E/R and rear combination (tail and side marker) lamp, and between IPDM E/R and license lamp.


PARKING, LICENSE PLATE AND TAIL LAMPS

3. IPDM E/R INSPECTION

Start active test. Refer to [PG-24, "Auto Active Test"](#) .


- When tail lamp relay is operating, check voltage between front combination lamp and ground (with xenon headlamp).
When tail lamp relay is operating, check voltage between front combination lamp and ground (with halogen bulb headlamp).
With xenon headlamp

Terminals				Voltage
(+)		(-)		
Connector			Terminal (wire color)	
RH	E24	6 (R/L)	Ground	Battery voltage
LH	E40			

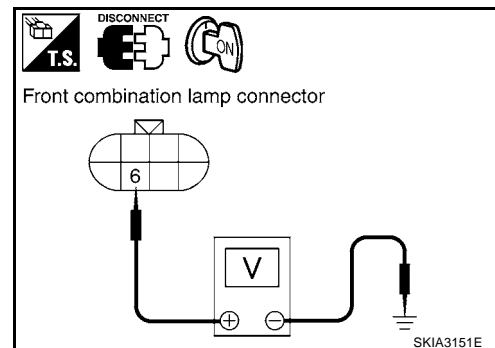


With halogen bulb headlamp

Terminals				Voltage
(+)		(-)		
Connector			Terminal (wire color)	
RH	E25	5 (R/L)	Ground	Battery voltage
LH	E41			

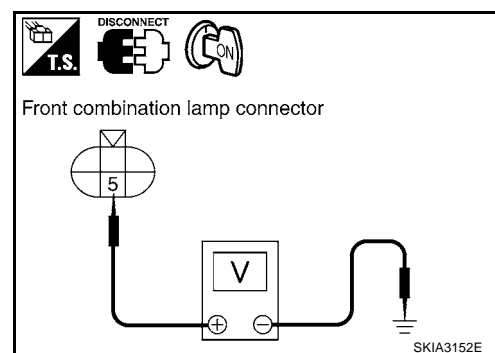


- When tail lamp relay is operating, check voltage between front combination (side marker) lamp and ground (with xenon headlamp).
When tail lamp relay is operating, check voltage between front combination (side marker) lamp and ground (with halogen bulb headlamp).
With xenon headlamp

Terminals				Voltage
(+) Connector		Terminal (wire color)	(-)	
RH	E24			
LH	E40	5 (R/L)	Ground	Battery voltage

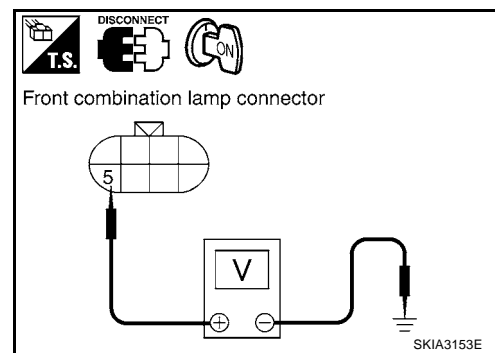

With halogen bulb headlamp


Terminals				Voltage
(+)			(-)	
Connector		Terminal (wire color)		
RH	E25	5 (R/L)	Ground	Battery voltage
LH	E41			

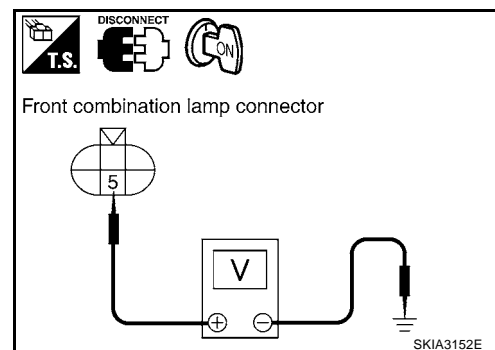

PARKING, LICENSE PLATE AND TAIL LAMPS


3. When tail lamp relay is operating, check voltage between rear combination (tail) lamp and ground.

Terminals				Voltage
(+)		(-)		
Connector			Terminal (wire color)	
RH	T17	2 (R/L)	Ground	Battery voltage
LH	T9			

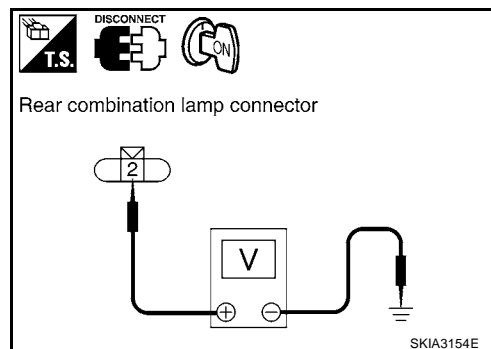


4. When tail lamp relay is operating, check voltage between rear combination (side marker) lamp and ground.

Terminals				Voltage
(+)		Terminal (wire color)	(-)	
Connector				
RH	T16	5 (R/L)	Ground	Battery voltage
LH	T8			

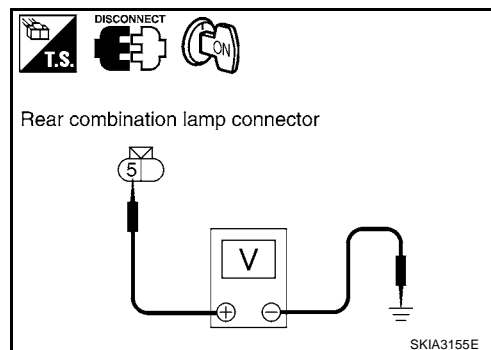

5. When tail lamp relay is operating, check voltage between license plate lamp terminal 2 and ground.

Terminals				Voltage
(+)		(-)		
Connector			Terminal (wire color)	
RH	T104	2 (R)	Ground	Battery voltage
LH	T102			

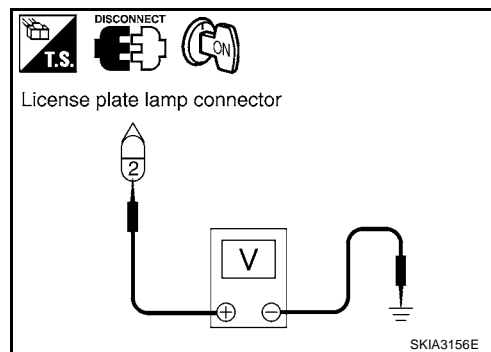

OK or NG

- OK >> Check ground circuit of parking, license plate and tail lamps.
NG >> Replace IPDM E/R.

4. COMBINATION SWITCH CIRCUIT CHECK

Select BCM on CONSULT-II. Carry out "BCM C/U" self-diagnosis.

Displayed results of self-diagnosis

No malfunction detected>> GO TO 5.

CAN communications or CAN system>> Inspect the BCM CAN communications system. Refer to [BCS-18, "CAN Communication Inspection Using CONSULT-II \(Self-Diagnosis\)"](#).

OPEN DETECT 1 - 5>> Combination switch system malfunction. Refer to [LT-164, "Combination Switch Inspection According to Self-Diagnostic Results"](#).

SELF-DIAG RESULTS	
DTC RESULTS	TIME
NO DTC IS DETECTED. FURTHER TESTING MAY BE REQUIRED	

LKIA0073E

PARKING, LICENSE PLATE AND TAIL LAMPS

5. COMBINATION SWITCH CIRCUIT CHECK

Select BCM on CONSULT-II. With "HEAD LAMP" data monitor, check that "TAIL LAMP SW" turns ON-OFF linked with operation of lighting switch.

OK or NG

- OK >> Replace BCM.
NG >> Replace lighting switch.

DATA MONITOR	
MONITOR	
IGN ON SW	ON
ACC ON SW	ON
AUTO LIGHT SW	ON
TAIL LAMP SW	OFF
HEAD LAMP SW	OFF
HI BEAM SW	OFF
PASSING SW	OFF
FR FOG SW	OFF
DOOR SW-DR	OFF

LKIA0077E

Parking, License Plate and Tail Lamps Do Not Turn OFF (After Approx. 10 Minutes)

AKS000VK

1. IPDM E/R INSPECTION

1. Turn the ignition switch ON. Place the combination switch (lighting switch) in the ON position. Turn the ignition switch OFF.
2. Verify that the parking, license plate, and tail lamps turn OFF after approximately 10 minutes.


OK or NG

- OK >> Normal.
NG >> Ignition relay malfunction. Refer to [PG-23, "Function of Detecting Ignition Relay Malfunction"](#).

License Plate Lamp BULB REPLACEMENT, REMOVAL AND INSTALLATION

AKS000VL


1. While pressing the license plate lamp to right side, pull left side of it and remove.
2. Disconnect the license plate lamp connector.

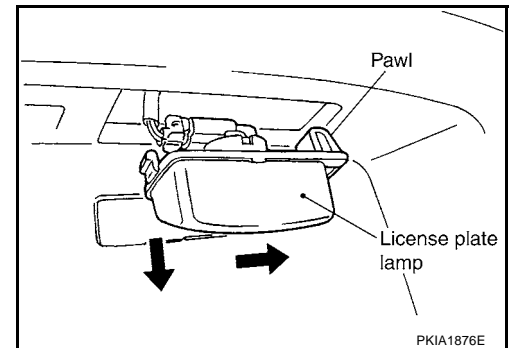

3. Turn bulb socket counterclockwise and unlock it.
4. Remove bulb from it's socket.

License plate lamp : 12V - 5W

5. Install in the reverse order of removal.

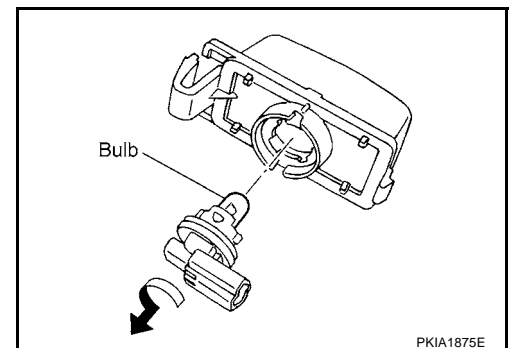

Front Parking (Clearance) Lamp BULB REPLACEMENT

AKS003RP

For bulb replacement, refer to [LT-31, "Bulb Replacement"](#) in "HEAD LAMP (FOR USA)".

REMOVAL AND INSTALLATION

For front parking (clearance) lamp removal and installation procedures, refer to [LT-196, "REMOVAL AND INSTALLATION"](#) in "HEAD LAMP (FOR USA)".

Tail Lamp
BULB REPLACEMENT

AKS003RQ

For bulb replacement, refer to [LT-198, "Bulb Replacement"](#) in "REAR COMBINATION LAMP".

REMOVAL AND INSTALLATION

For tail lamp removal and installation procedures, refer to [LT-199, "Removal and Installation"](#) in "REAR COMBINATION LAMP".

A
B
C
D
E
F
G
H
I
J
LT
L
M

REAR COMBINATION LAMP

REAR COMBINATION LAMP

PFP:26554

Bulb Replacement


AKS000VN

REAR FENDER SIDE (STOP & TAIL LAMP BULB, REAR SIDE MARKER LAMP BULB)

1. Remove rear combination lamp. Refer to [LT-199, "Removal and Installation"](#)
2. Turn bulb socket counterclockwise and unlock it.
3. Remove bulb.
4. Install in the reverse order of removal.


**Stop/tail lamp
(rear fender side) : 12V - 21/5W**

**Rear side marker lamp
(rear fender side) : 12V - 5W**

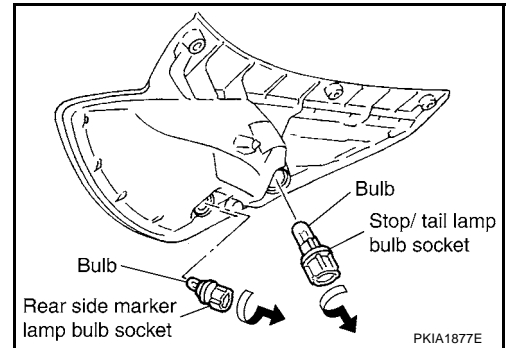

REAR BUMPER SIDE (BACK-UP LAMP BULB, REAR TURN SIGNAL LAMP BULB)


1. Remove rear combination lamp. Refer to [LT-199, "Removal and Installation"](#)
2. Turn bulb socket counterclockwise and unlock it through the bumper fascia crevice.

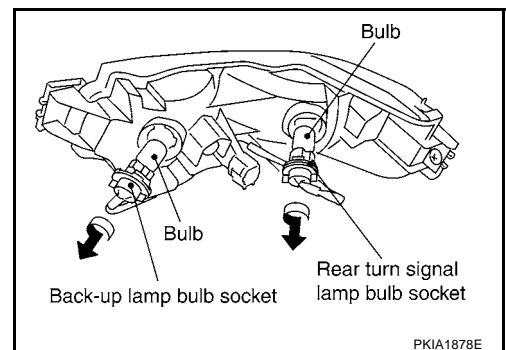

3. Remove bulb.
4. Install in the reverse order of removal.

**Rear turn signal lamp
(rear bumper side) : 12V - 21W (umber bulb)**

**Back-up lamp
(rear bumper side) : 12V - 21W**

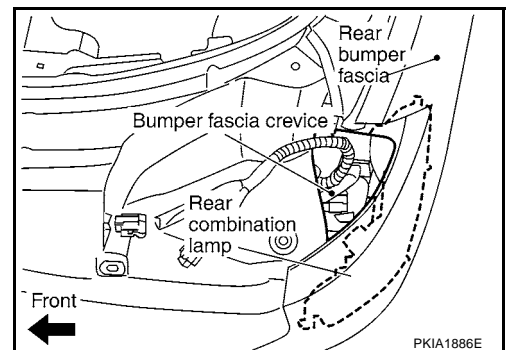

REAR COMBINATION LAMP


AKS000VO

Removal and Installation

REMOVAL


REAR FENDER SIDE

1. Remove plugs and remove rear combination lamp mounting bolts.
2. Pull the rear combination lamp toward side of the vehicle and remove from the vehicle.
3. Disconnect rear combination lamp connector.

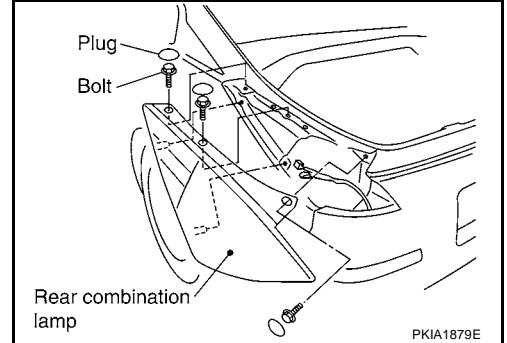

REAR BUMPER SIDE

1. Remove rear bumper fascia. Refer to [EI-17, "REAR BUMPER"](#) in "EI" section.
2. Disconnect rear combination lamp connector.
3. Remove rear combination lamp mounting screws.
4. Remove rear combination lamp from rear bumper fascia.

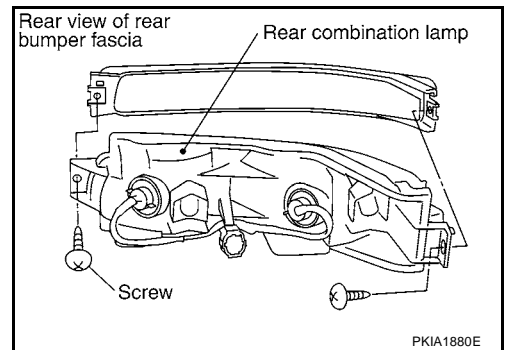

INSTALLATION

Install in the reverse order of removal. Be careful of the following:

Rear combination lamp mounting bolt:(Rear fender side)



: 4.4 - 6.0 N·m (0.45 - 0.61 kg-m, 39- 53 in-lb)

Rear combination lamp mounting screw:(Rear bumper side)



: 2.5 - 3.8 N·m (0.26 - 0.38 kg-m, 23 - 33 in-lb)

A

B

C

D

E

F

G

H

I

J

LT

L

M

VANITY MIRROR LAMP

VANITY MIRROR LAMP

PFP:96400


Bulb Replacement

AKS000VP

1. Insert a thin screwdriver in the lens end and remove lens.
2. Remove bulb with print circuit.

Vanity mirror lamp : 12V - 1.32W

3. Install in the reverse order of removal.

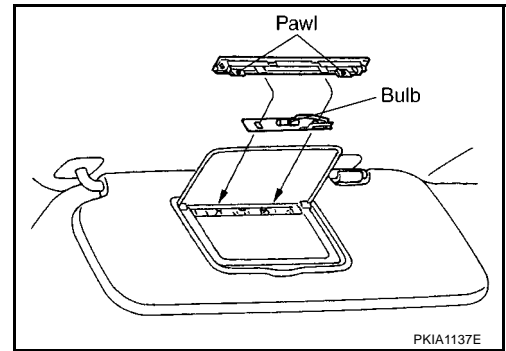

LUGGAGE ROOM LAMP


LUGGAGE ROOM LAMP

Wiring Diagram — INT/L —

PFP:26410

AKS0033R

LT-INT/L-01

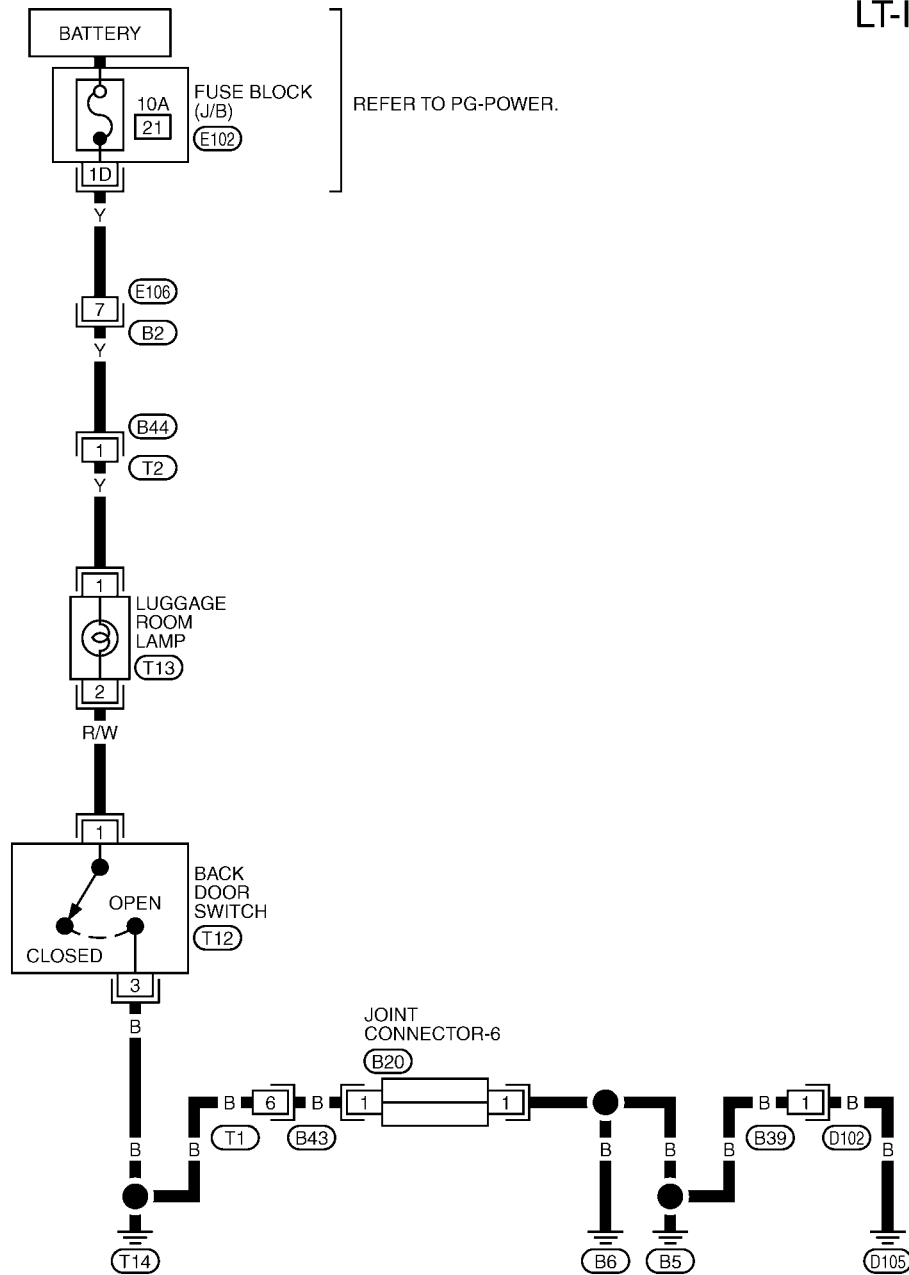

1	2	3	4	5	6	7	8	9	10
11	12	13	14	15	16	17	18		

B2
W

1	1	1	1	1	1
---	---	---	---	---	---

B20
GY

1	2
3	4
5	6

B43
W

1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16					

B44
W

1
2
3

T12
W

2	1
---	---

T13
GY

1
2


D102
GY

LUGGAGE ROOM LAMP

Bulb Replacement, Removal and Installation

AKS0033S


1. Pull out luggage room lamp in direction shown by the arrow in the figure.
2. Disconnect the luggage room lamp connector.

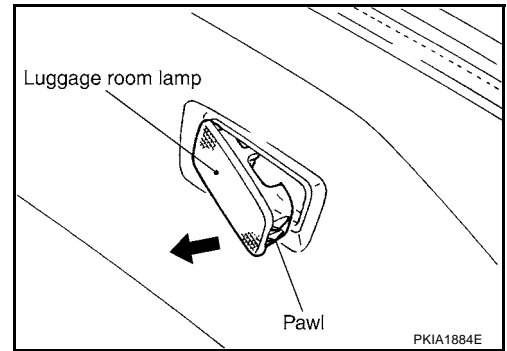

3. Remove the bulb.

Luggage room lamp : 12V 5W

4. Install in the reverse order of removal.

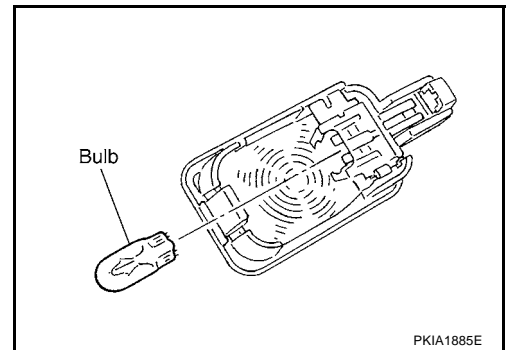

REAR FLOOR BOX LAMP


REAR FLOOR BOX LAMP

PFP:68520

Bulb Replacement, Removal and Installation

AKS003MW


1. Pull out rear floor box lamp using screwdriver or similar tool.

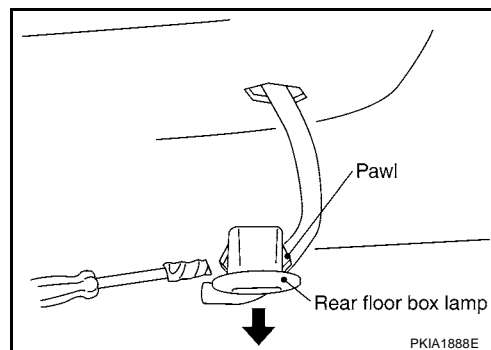

2. Turn bulb socket counterclockwise to release lock and remove it.

Rear floor box lamp :12V - 1.4W

3. Install in the reverse order of removal.

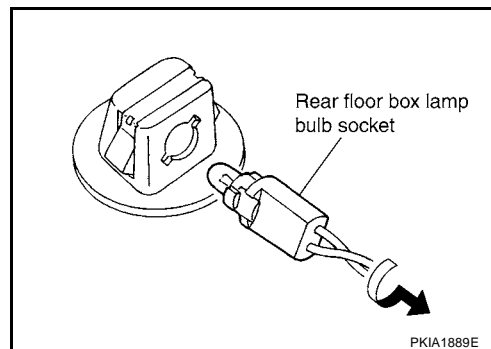

A
B
C
D
E
F
G
H
I
J
LT
L
M

ASHTRAY ILLUMINATION

ASHTRAY ILLUMINATION

PFP:25860


Bulb Replacement, Removal and Installation

AKS000VY

1. Remove center console assembly. Refer to [IP-11, "INSTRUMENT PANEL ASSEMBLY"](#) in "IP" section.
2. Turn bulb socket counterclockwise to undo lock and remove bulb socket.

Ashtray illumination : 12V - 1.4W

3. Install in the reverse order of removal.

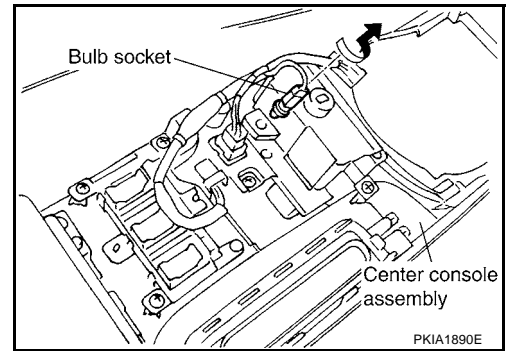

INTERIOR ROOM LAMP

PFP:26410

System Description

AKS000W0

When spot lamp switch is in DOOR position, spot lamp ON/OFF is controlled by timer according to signals from switches including key switch, front door switch driver side and assist side, unlock and lock signal from key fob, door lock and unlock switch, key cylinder lock and unlock switch, ignition switch.

When spot lamp turns ON, there is a gradual brightening over 1 second. When spot lamp turns OFF, there is a gradual dimming over 1 second.

The spot lamp timer is controlled by the BCM.

Spot lamp timer control settings can be changed with CONSULT-II.

POWER SUPPLY AND GROUND

Power is supplied at all times:

- through 10A fuse [No.21, located in the fuse block (J/B)]
- to key switch terminal 2.
- through 40A fusible link [letter F, located in the fuse and fusible link box]
- to BCM terminal 7.

When the key is removed from ignition key cylinder, power is interrupted:

- through key switch terminal 1
- to BCM terminal 62.

With the ignition switch in the ON or START position, power is supplied:

- through 10A fuse [No.1, located in the fuse block (J/B)]
- to BCM terminal 35.

When all door is closed, power is supplied at times.

- through BCM terminal 24
- to stop lamp terminal 3 and
- to vanity mirror lamp terminal 1.

Ground is supplied:

- to BCM terminal 8
- through grounds E17,E43 and F152.

When the front driver side door is opened, ground is supplied:

- through case ground of front door switch (driver side)
- to BCM terminal 14.

When the front passenger side door is opened, ground is supplied:

- through case ground of front door switch (passenger side)
- to BCM terminal 10.

When the back door is opened, ground is supplied:

- through case ground of back door switch
- to BCM terminal 18.

When the front driver side door or passenger side is unlocked by the door lock and unlock switch, BCM receives unlock signal with power window serial link

- through grounds M30 and M66
- to power window main switch terminal 15 (door lock and unlock switch) or power window sub switch 11
- from power window main switch terminal 12 or power window sub switch 16
- to BCM terminal 74

When the front driver side door is unlocked by the front door key cylinder switch, BCM receives information by communicating with power window main switch:

- through grounds M30 and M66
- to front door key cylinder switch terminal 2
- from front door key cylinder switch terminal 1
- to power window main switch terminal 7

A

B

C

D

E

F

G

H

I

J

LT

L

M

INTERIOR ROOM LAMP

- from power window main switch terminal 12
- to BCM terminal 74.

When a signal, or combination of signals is received by BCM, ground is supplied:

- through BCM terminal 32
- to spot lamp terminal 2.

With power and ground are supplied, the interior lamp illuminates.

SWITCH OPERATION

When spot lamp switch is ON, ground is supplied:

- through grounds M30 and M66
- to spot lamp terminal 1.

And power is supplied:

- from BCM terminal 24
- to spot lamp terminal 3.

When vanity mirror lamp (driver side and/or passenger side) is ON, ground is supplied:

- through grounds M30 and M66
- to vanity mirror lamp terminal 2.

And power is supplied:

- from BCM terminal 24
- to vanity mirror lamp terminal 1.

SPOT LAMP TIMER OPERATION

When spot lamp switch is in DOOR position, and when all conditions below are met, BCM performs timer control (maximum 30 seconds) for spot lamp ON/OFF.

In addition, when spot lamp turns ON or OFF there is gradual brightening or dimming over 1 second.

Power is supplied

- to 10A fuse [No. 21 (located in the fuse block (J/B))]
- through key switch terminal 2.

When all doors are closed (all door switches OFF) and key is removed from key cylinder (key switch OFF), power will not be supplied to BCM terminal 62.

Ground is supplied

- from BCM terminal 74
- to power window main switch (front door lock and unlock switch) terminal 12 (door lock and unlock switch with interruption detection function for all door window).

At this time, BCM detects that driver door is unlocked. It determines that spot lamp timer operation conditions are met, and turns the spot lamp ON for 30 seconds.

When all doors are closed (all door switches OFF) and key is in key cylinder (key switch ON),

Power is supplied

- through key switch terminal 1
- to BCM terminal 62.

When key is removed from key switch (key switch OFF), power supply to BCM terminal 62 is terminated. BCM detects that key has been removed. It determines that spot lamp timer conditions are met, and turns the spot lamp ON for 30 seconds.

When driver door opens → closes, and the key is not inserted in the key switch (key switch OFF), BCM terminal 14 changes between 0V (door open) → 5V (door closed). The BCM determines that conditions for spot lamp operation are met and turns the interior lamp ON for 30 seconds.

Timer control is canceled under the following conditions.

- Driver door is locked (When locked key fob or power window main switch (doorlock and unlock switch, door key cylinder switch)
- Driver door is opened (driver door switch turns ON)
- Ignition switch ON.

INTERIOR ROOM LAMP

INTERIOR LAMP BATTERY SAVER CONTROL

If the room lamp remains illuminated by the door switch open signal, or if the room lamp switch is in the ON position for more than 30 minutes after the ignition switch is turned to the OFF position, the BCM will automatically turn off the spot lamp, step lamp, and/or personal lamp and vanity mirror lamp.


After lamps turn OFF by the battery saver system, the lamps illuminate again when:

- signal from key fob, or door lock and unlock switch, or key cylinder is locked or unlocked,
- door is opened or closed,
- key is removed from ignition key cylinder or inserted in ignition key cylinder.

Interior lamp battery saver control period can be changed by the function setting of CONSULT-II.

Component Parts and Harness Connector Location

AKS000W1

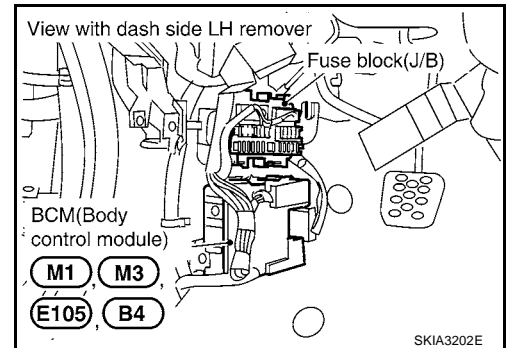

A

B

C

D

E

F

G

H

I

J

LT

L


M

INTERIOR ROOM LAMP

Schematic

AKS000W2

(VN) : With vanity mirror

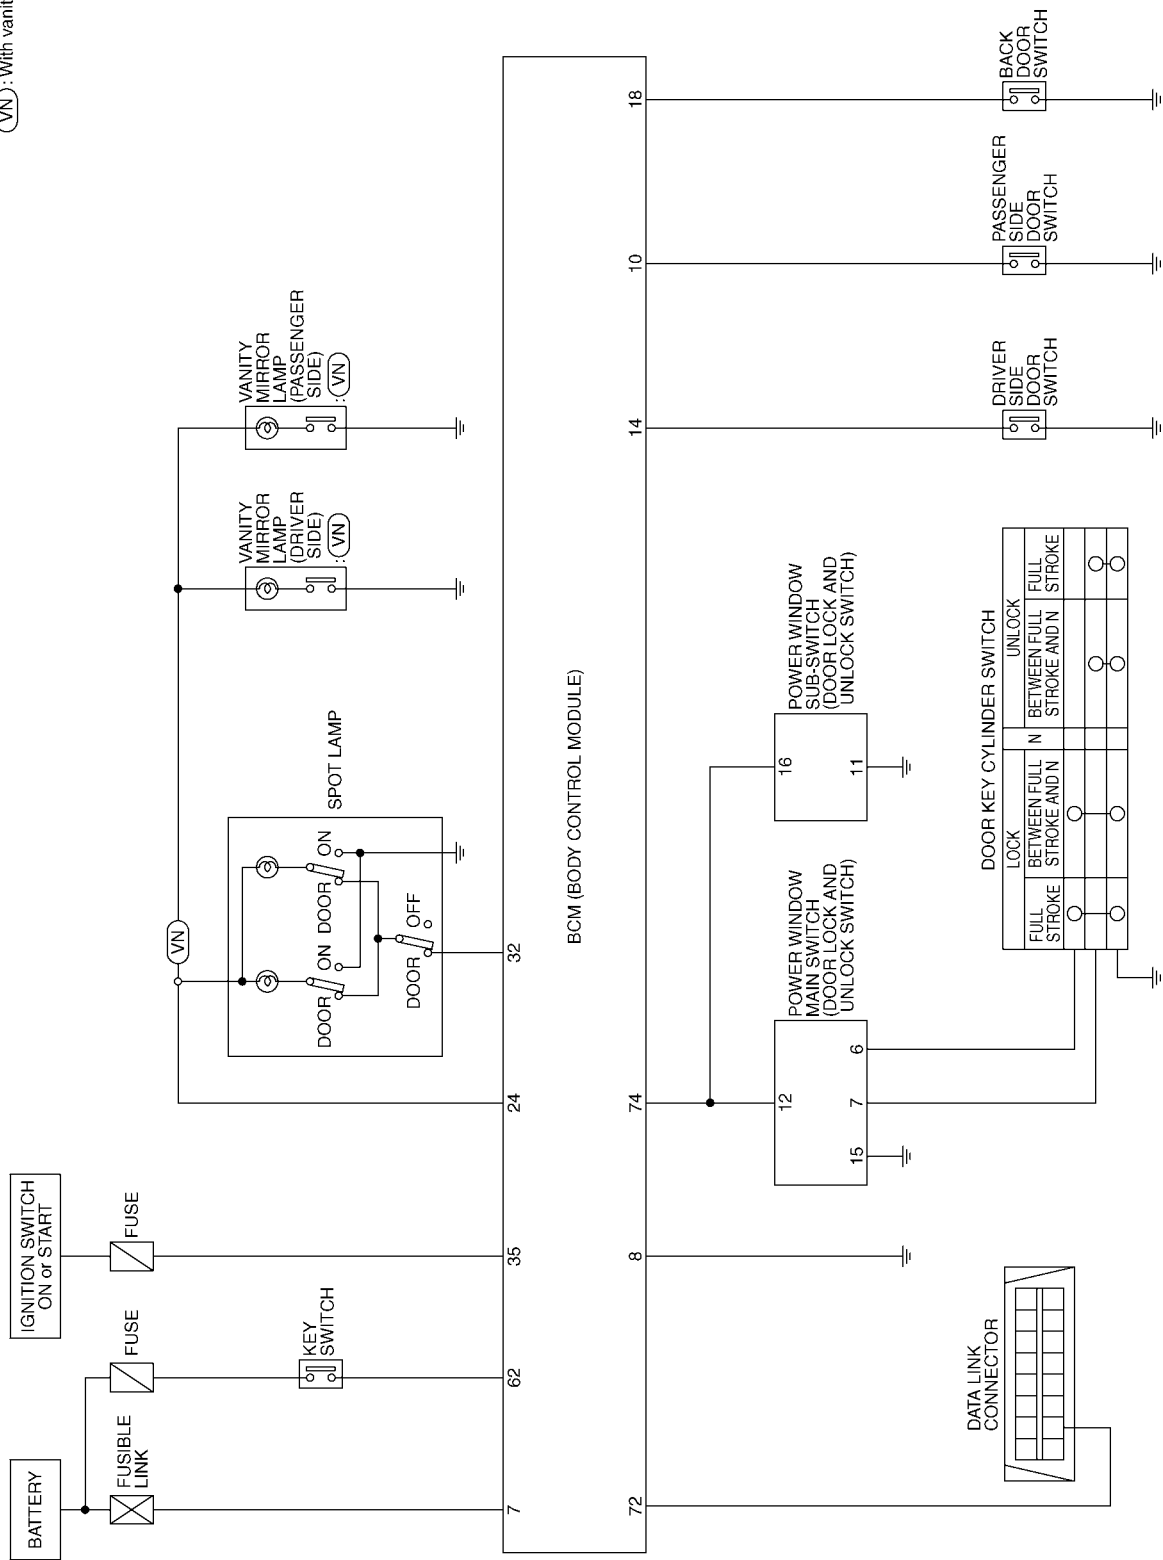


TKWT0462E

A
B
C
D
E
F
G
H
I
J
K
L
M

AKS000W3



LT

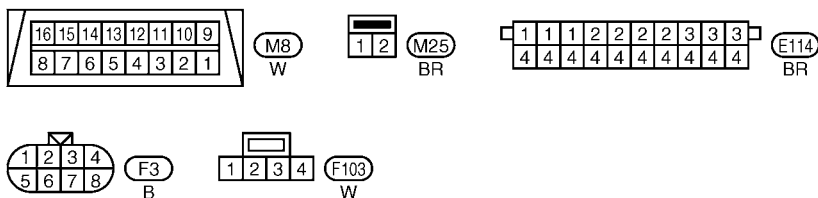

REFER TO THE FOLLOWING.

(M4), (M5) - FUSE BLOCK-JUNCTION BOX (J/B)



(M1), (M3), (E105)
- ELECTRICAL UNITS

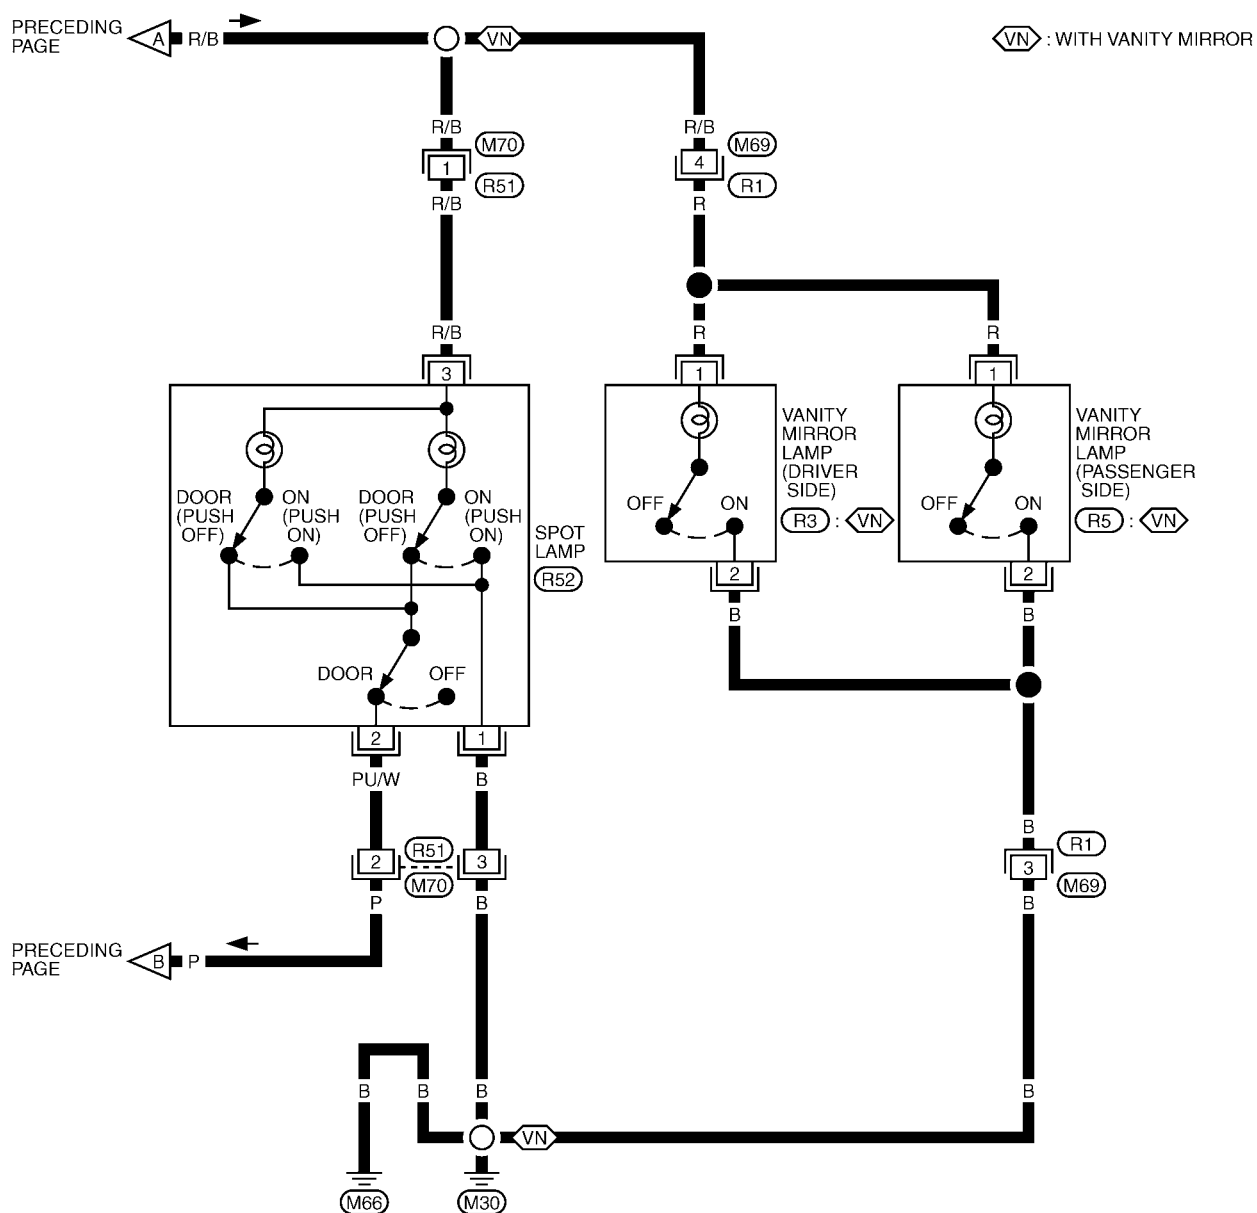

INTERIOR ROOM LAMP


LT-ROOM/L-03

A
B
C
D
E
F
G
H
I
J
LT
L
M

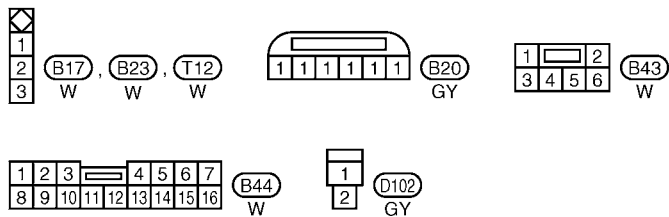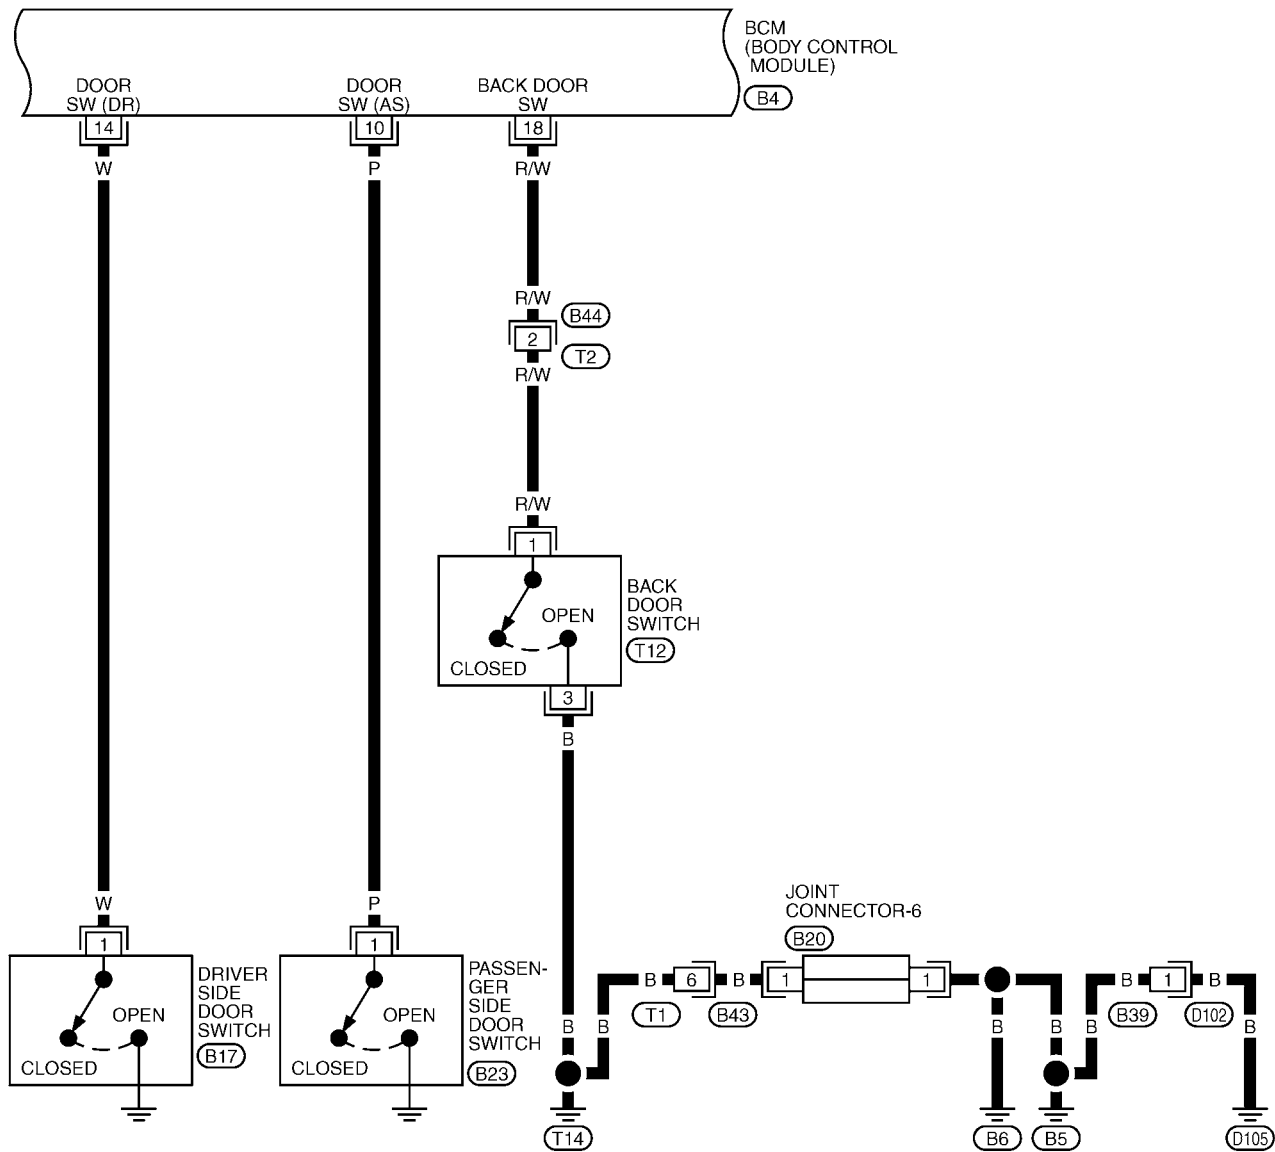

REFER TO THE FOLLOWING.
B4 -ELECTRICAL UNITS

LT-ROOM/L-04



REFER TO THE FOLLOWING.

(D1) , (D31) -SUPER MULTIPLE JUNCTION (SMJ)

(M3) -ELECTRICAL UNITS

INTERIOR ROOM LAMP

Terminals and Reference Value for BCM

AKS000W4

Terminal No.	Wire color	Signal name	Measuring condition				Reference value
			Igni- tion switch	Operation or condition			
7	R	Battery power supply	OFF	—			Battery voltage
8	B	Ground	ON	—			Approx. 0V
10	P	Front door switch AS signal	OFF	Front door switch AS	ON (open)	Approx. 0V	
					OFF (closed)	Approx. 5V	
14	W	Front door switch DR signal	OFF	Front door switch DR	ON (open)	Approx. 0V	
					OFF (closed)	Approx. 5V	
18	R/W	Back door switch signal	OFF	Back door switch	ON (open)	Approx. 0V	
					OFF (closed)	Battery voltage	
24	R/B	Battery saver output signal	OFF	30 minutes after ignition switch is turned to OFF			Approx. 0V
			ON	—			Battery voltage
32	P	Spot lamp output signal	ON	Spot lamp switch: DOOR position	Any door switch	ON (open)	Approx. 0V
					All door switch	OFF (closed)	Battery voltage
35	W/L	IGN power supply	ON	—			Battery voltage
62	B/R	Key detection switch signal	OFF	Vehicle key is removed.			Approx. 0V
				Vehicle key is inserted.			Battery voltage
74	Y	Power window switch serial link	—	—			<div><div>(V)</div><div>15</div><div>10</div><div>5</div><div>0</div><div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></</div></div></div>

How to Proceed With Trouble Diagnosis

AKS000W5

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-205, "System Description"](#).
3. Carry out the Preliminary Check. Refer to [LT-214, "Preliminary Check"](#).
4. Check symptom and repair or replace the cause of malfunction.
5. Does the interior room lamp operate normally? If YES: GO TO 6. If NO: GO TO 4.
6. Inspection end.

INTERIOR ROOM LAMP

Preliminary Check INSPECTION FOR POWER SUPPLY AND GROUND CIRCUIT

AKS000W6

1. CHECK FUSES

- Check for blown BCM fuses.

UNIT	POWER SOURCE	FUSE No.
BCM	Battery	F
	Ignition switch ON or START position	1

Refer to [LT-209, "Wiring Diagram — ROOM/L —"](#).

OK or NG

OK >> GO TO 2.

NG >> If fuse is blown, be sure to eliminate cause of malfunction before installing new fuse. Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#).

2. POWER SUPPLY CIRCUIT CHECK

- Disconnect BCM connector.
- Check voltage between BCM harness connector and ground.

Terminals		Ignition switch position	
(+) (–)		OFF	ON
Connector	Terminal (Wire color)		
E105	7 (R)	Battery voltage	Battery voltage
M1	35 (W/L)	0V	Battery voltage

OK or NG

OK >> GO TO 3.

NG >> Check harness for open or short between BCM and fuse.

3. GROUND CIRCUIT CHECK



Check continuity between BCM harness connector and ground.

Terminals			Continuity
(+)		(-)	
Connector	Terminal (wire color)		
E105	8 (B)	Ground	Yes

OK or NG

OK >> INSPECTION END.

NG >> Check harness ground circuit.

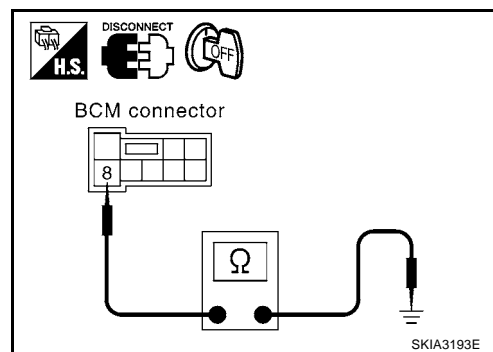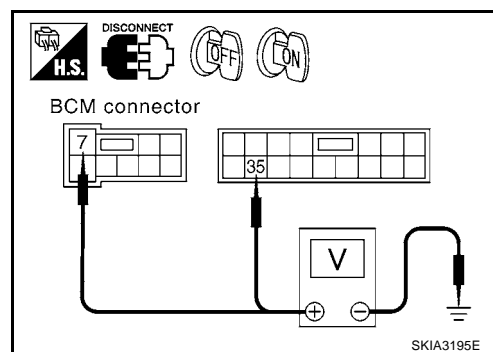

INTERIOR ROOM LAMP

CONSULT-II Function

AKS000W7

CONSULT-II has a display function for work support, self-diagnosis, data monitor, and active test for each part by combining data receiving and sending via the communication line from BCM.


BCM diagnosis part	Check item, diagnosis mode	Description
INTERIOR LAMP	Work support	Changes the setting for each function.
	Data monitor	Displays BCM input data in real time.
	Active test	Operation of electrical loads can be checked by sending driving signal to them.

CONSULT-II BASIC OPERATION


CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carry out CAN communication.


1. With the ignition switch OFF, connect CONSULT-II and CONSULT-II CONVERTER to the data link connector, then turn ignition switch ON.

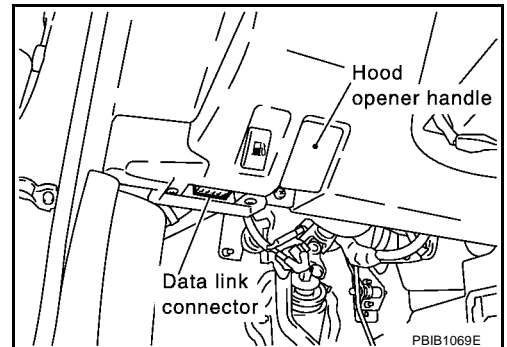

2. Touch "START(NISSAN BASED VHCL)".

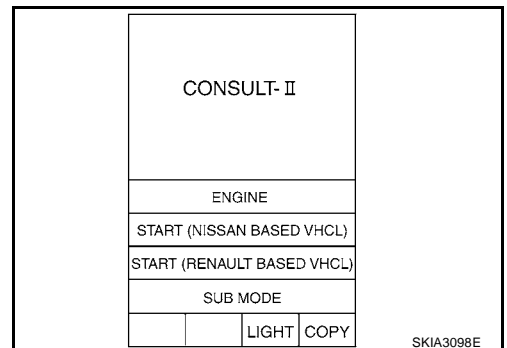


3. Touch "BCM" on "SELECT SYSTEM" screen.
If "BCM" is not indicated, go to [GI-40, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#) .

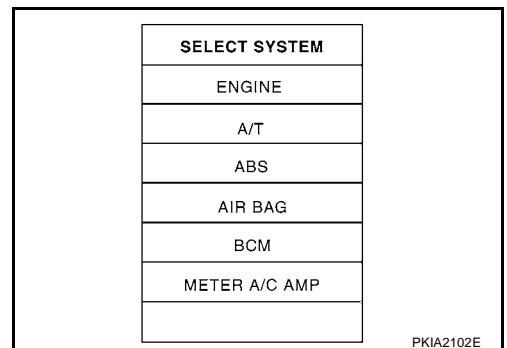

INTERIOR ROOM LAMP

4. Touch "INT LAMP" on "SELECT TEST ITEM" screen.

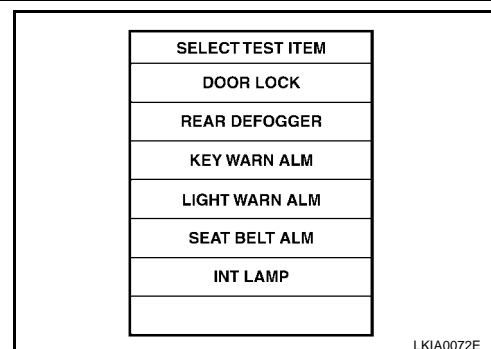

WORK SUPPORT

Operation Procedure

1. Touch "INT LAMP" on "SELECT TEST ITEM" screen.
2. Touch "WORK SUPPORT" on "SELECT DIAG MODE" screen.
3. Touch "ROOM LAMP TIMER SET" on "SELECT WORK ITEM" screen.
4. Touch "START".
5. Touch "CHANGE SET".
6. The setting will be changed and "CUSTOMIZING COMPLETED" will be displayed.
7. Touch "END".

Display Item List

Item	Description	CONSULT-II	Factory setting
ROOM LAMP TIMER SET	Spot lamp ON/OFF can be selected for when driver door lock is released (unlocked).	ON	○
		OFF	—

DATA MONITOR

Operation Procedure

1. Touch "INT LAMP" on "SELECT TEST ITEM" screen.
2. Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.
3. Touch either "ALL SIGNALS" or "SELECTION FROM MENU" on "DATA MONITOR" screen.

All signals	Monitors all the signals.
Selection from menu	Selects and monitors the individual signal.

4. Touch "START".
5. When "SELECTION FROM MENU" is selected, touch items to be monitored. When "ALL SIGNALS" is selected, all the items will be monitored.
6. Touch "RECORD" while monitoring, then the status of the monitored item can be recorded. To stop recording, touch "STOP".

Display Item List

Monitor item name "operation or unit"		Contents
IGN ON SW	"ON/OFF"	Displays "IGN position (ON)/OFF, ACC position (OFF)" judged from the ignition switch signal.
KEY ON SW	"ON/OFF"	Displays "Key inserted (ON)/key removed (OFF)" status judged from the key switch signal.
DOOR SW - DR	"ON/OFF"	Displays status of the driver door as judged from the driver door switch signal. (Door is open: ON/Door is closed: OFF)
DOOR SW - AS	"ON/OFF"	Displays "Door open (ON)/Door closed (OFF)" status, determined from passenger door switch signal.
LOCK SW DR/AS	"ON/OFF"	Displays "Door locked (ON)" status, determined from locking detection switch in driver door and passenger door.

INTERIOR ROOM LAMP

Monitor item name "operation or unit"	Contents
UNLK SW DR/AS "ON/OFF"	Displays "Door unlocked (OFF)" status, determined from locking detection switch in driver door and passenger door.
KEY CYL LK SW "ON/OFF"	Displays "Door locked (ON)" status, determined from key cylinder lock switch in driver door.
KEY CYL UN SW "ON/OFF"	Displays "Door unlocked (OFF)" status, determined from key cylinder lock switch in driver door.
LK BUTTON/SIG "ON/OFF"	Displays "Locked (ON)/Other (OFF)" status, determined from lock signal.
UN BUTTON/SIG "ON/OFF"	Displays "Unlocked (ON)/Other (OFF)" status, determined from unlock signal.
DOOR SW - RR ^{Note} "OFF"	—

NOTE:

This item is displayed, but cannot monitor it.

ACTIVE TEST

Operation Procedure

1. Touch "INT LAMP" on "SELECT TEST ITEM" screen.
2. Touch "ACTIVE TEST" on "SELECT DIAG MODE" screen.
3. Touch item to be tested and check operation of the selected item.
4. During the operation check, touching "BACK" deactivates the operation.

Display Item List

Test item	Description
INT LAMP	Spot lamp can be operated by any ON-OFF operations.
IGN ILLUM ^{Note}	—

NOTE:

This item is displayed, but cannot test it.

Spot Lamp Control Does Not Operate

AKS000W8

1. INSPECTION BETWEEN EACH SWITCH AND BCM

Select BCM on CONSULT-II. Use "INT LAMP" data monitor to check that switches listed in display item list turn ON-OFF linked with switch operation. Refer to [LT-217, "Display Item List"](#) for switches and their functions.

OK or NG

- OK >> GO TO 2.
NG >> Inspect malfunctioning switch system.

DATA MONITOR	
MONITOR	
IGN ON SW	ON
KEY ON SW	ON
DOOR SW-DR	ON
DOOR SW-AS	OFF
LOCK SW DR/AS	OFF
UNLK SW DR/AS	OFF
KEY CYL LK SW	OFF
KEY CYL UN SW	OFF
LK BUTTON/SIG	OFF

LKIA0085E

2. INSPECTION 1 BETWEEN BCM AND SPOT LAMP

1. Select "BCM" on CONSULT-II. Select "INT LAMP" active test.
2. When spot lamp switch is in DOOR position, use active test to verify that room lamp operates.

OK or NG

- OK >> Replace BCM.
NG >> GO TO 3.

ACTIVE TEST	
INT LAMP	ON
	OFF

LKIA0092E

INTERIOR ROOM LAMP


3. INSPECTION 2 BETWEEN BCM AND SPOT LAMP

Check voltage between spot lamp harness connector R52 terminal 3(R/B) and ground.

Battery voltage should exist

OK or NG

- OK >> GO TO 4.
NG >> GO TO 6.

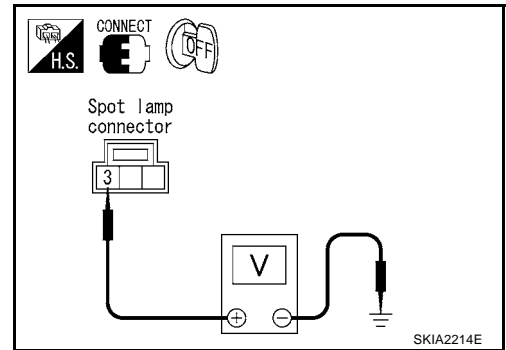


4. SPOT LAMP CHECK

1. Disconnect spot lamp connector.
2. Check continuity between spot lamp connectors.

Terminal	Condition	Continuity
3	Spot lamp DOOR switch is ON	Yes
	Spot lamp DOOR switch is OFF	No

OK or NG

- OK >> GO TO 5
NG >> Replace stop lamp

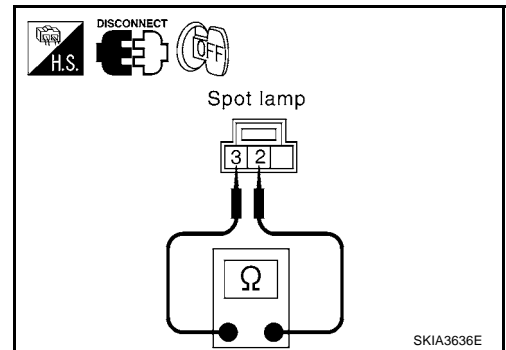


5. SPOT LAMP CIRCUIT CHECK

1. Disconnect BCM connector.
2. Check continuity between BCM harness connector M1 terminal 32(P) and spot lamp harness connector R52 terminal 2(PU/W).

Continuity should exist

OK or NO

- OK >> Replace BECAME.
NG >> Repair harness or connector.

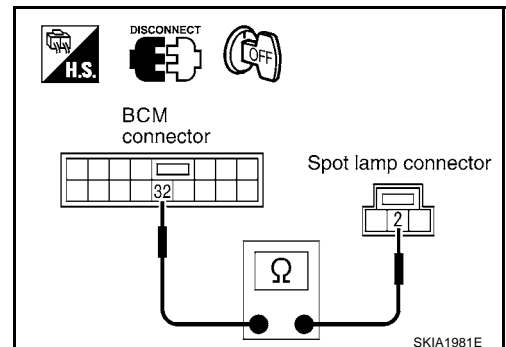


6. SPOT LAMP CIRCUIT CHECK

1. Disconnect BCM connector and spot lamp connector.
2. Check continuity between BCM harness connector M1 terminal 24(R/B) and spot lamp harness connector R52 terminal 3(R/B).

Continuity should exist

OK or NG

- OK >> GO TO 7.
NG >> Repair harness or connector.

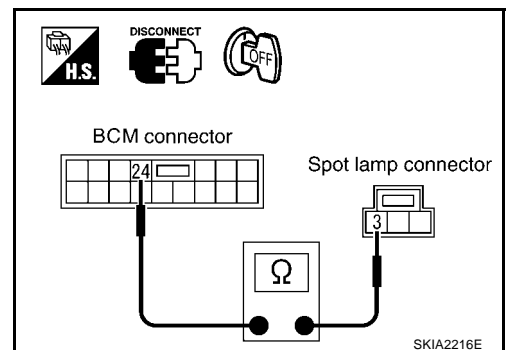

INTERIOR ROOM LAMP


7. SHORT CIRCUIT CHECK

Check continuity between spot lamp harness connector R52 terminal 3(R/B) and ground.

Continuity not should exist

OK or NG

- OK >> Replace BCM.
- NG >> After repairing harness, be sure to disconnect battery negative cable, and then reconnect it.

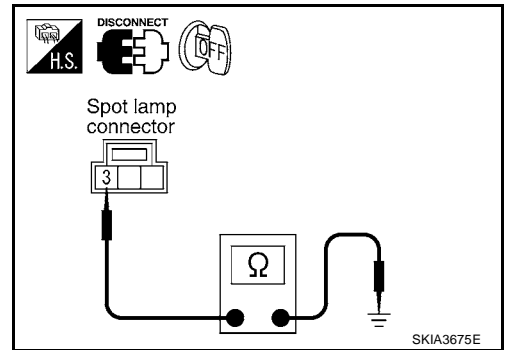

Bulb Replacement

1. Open the driver and front passenger window, and then disconnect the battery negative cable.


CAUTION:

After the battery cables are disconnected, do not open/close the driver and/or front passenger door with the window in the full up position. The automatic window adjusting function will not work and the side roof panel may be damaged.

2. Remove the lens using clip driver or suitable tool.
3. Remove the bulb.

Spot lamp :12V - 8 W


4. Install in the reverse order of removal.

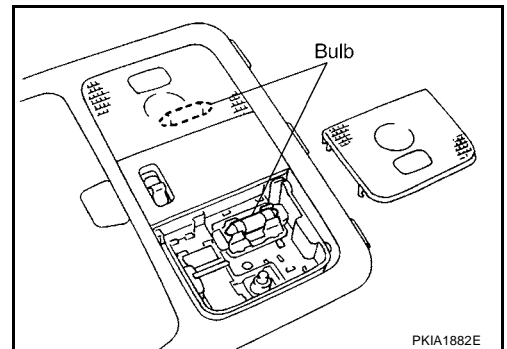

Removal and Installation

REMOVAL

1. Insert a clip driver or suitable tool and disengage the pawl fittings of the spot lamp.
2. Disconnect spot lamp connector and remove spot lamp.

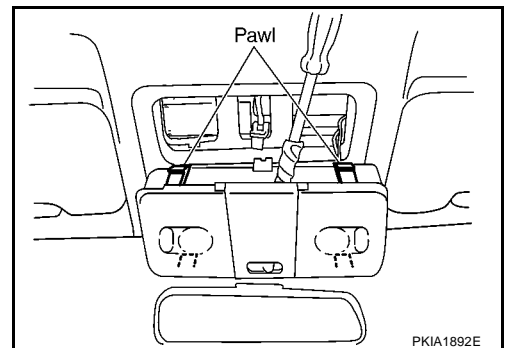

INSTALLATION

Install in the reverse order of removal.

ILLUMINATION

PFP:27545

System Description

AKS000WC

Control of the illumination lamps operation is dependent upon the position of the lighting switch (combination switch). When the lighting switch is placed in the 1ST or 2ND position, the BCM receives input signal requesting the illumination lamps to illuminate. This input signal is communicated to the IPDM E/R (intelligent power distribution module engine room) across the CAN communication lines. The central processing unit of the IPDM E/R controls the tail lamp relay coil. This relay, when energized, directs power to the illumination lamps, which then illuminate.

Power is supplied at all times

- to tail lamp relay, located in the IPDM E/R (intelligent power distribution module engine room)
- through 10A fuse [No. 75, located in the IPDM E/R (intelligent power distribution module engine room)].

Power is also supplied at all times

- to BCM (body control module) terminal 7
- through 40A fusible link (letter F, located in the fuse and fusible link box).

With the ignition switch in the ON or START position, power is supplied

- to BCM (body control module) terminal 35
- through 10A fuse [No. 1, located in the fuse block (J/B)].

With the ignition switch in the ACC or ON position, power is supplied

- to BCM (body control module) terminal 36
- through 10A fuse [No. 6, located in the fuse block (J/B)].

Ground is supplied

- to BCM (body control module) terminal 8
- through grounds E17, E43 and F152.

ILLUMINATION OPERATION BY LIGHTING SWITCH

With the lighting switch in the 1ST or 2ND position, the BCM (body control module) receives input signal requesting the illumination lamps to illuminate. This input signal is communicated to the IPDM E/R (intelligent power distribution module engine room) across the CAN communication lines. The central processing unit of the IPDM E/R controls the tail lamp relay coil, which, when energized, directs power

- through terminal 37 of the IPDM E/R
- to AV and NAVI control unit terminal 9,
- to AV and NAVI switch terminal 2,
- to VDC off switch terminal 3,
- to A/T illumination terminal 3,
- to hazard switch terminal 3,
- to ashtray terminal 1,
- to heated seat switch driver side terminal 5,
- to heated seat switch passenger side terminal 5,
- to luggage floor box lamp terminal 1,
- to audio unit terminal 8.

Ground is supplied at all times

- to luggage floor box lamp terminal 2,
- through grounds D105, B5, B6, and T14.
- to ashtray illumination terminal 2,
- through grounds M30 and M66.

With power and ground supplied, illumination lamps illuminate.

EXTERIOR LAMP BATTERY SAVER CONTROL

When the combination switch (lighting switch) is in the 1ST or 2ND position, and the ignition switch is turned from ON or ACC to OFF, the battery saver control function is activated.

Under this condition, the illumination lamps remain illuminated for 5 minutes, then the illumination lamps are turned off.

ILLUMINATION

When the lighting switch is turned from OFF to 1ST or 2ND position after illumination lamps are turned off by the battery saver control, and illumination lamps illuminate again.
Exterior lamp battery saver control mode can be changed by the function setting of CONSULT-II.

CAN Communication System Description

AKS003NH

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

CAN Communication Unit

AKS003NI


Body type	Coupe						
Axle	2WD						
Engine	VQ35DE						
Transmission	A/T	M/T					
Brake control	TCS	ABS		TCS		VDC	
Low tire pressure warning system	Not Applicable	Not Applicable	Applicable	Not Applicable	Applicable	Not Applicable	Applicable
CAN communication unit							
ECM	×	×	×	×	×	×	×
TCM	×						
Data link connector	×	×	×	×	×	×	×
Unified meter and A/C amp.	×	×	×	×	×	×	×
BCM	×	×	×	×	×	×	×
Low tire pressure warning control unit			×		×		×
Steering angle sensor						×	×
ABS actuator and electric unit (control unit)	×	×	×	×	×		
VDC/TCS/ABS control unit						×	×
IPDM E/R	×	×	×	×	×	×	×
CAN communication type	LAN-7, "TYPE 1"	LAN-8, "TYPE 2/TYPE3"		LAN-10, "TYPE 4/TYPE5"		LAN-12, "TYPE 6/TYPE7"	

×: Applicable

TYPE 1

System diagram

- Type1

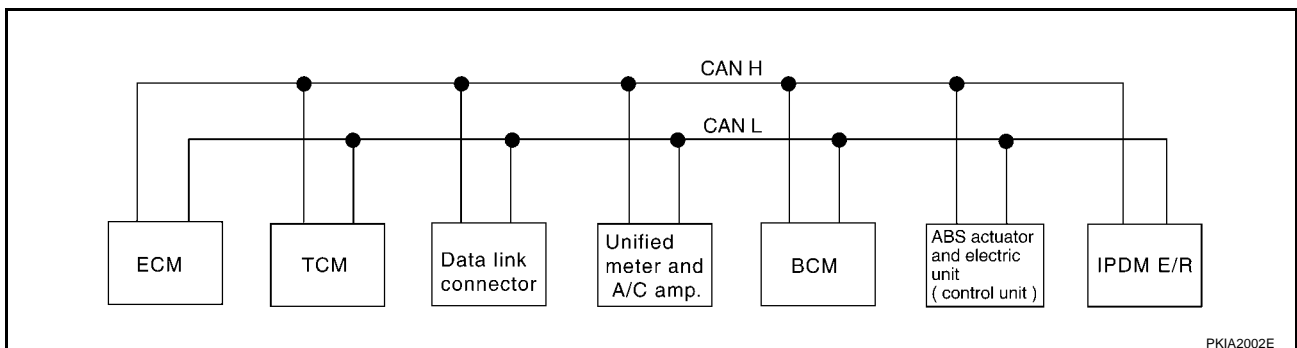

PKIA2002E

ILLUMINATION

Input/output signal chart

T: Transmit R: Receive

Signals	ECM	TCM	Unified meter and A/C amp.	BCM	ABS actuator and electric unit (control unit)	IPDM E/R
Engine speed signal	T	R	R		R	
Engine torque signal	T	R				
Engine coolant temperature signal	T	R	R			
Accelerator pedal position signal	T	R			R	
Closed throttle position signal	T	R				
Wide open throttle position signal	T	R				
Battery voltage signal	T	R				
Stop lamp switch signal		R	T			
Fuel consumption monitor signal	T		R			
A/T self-diagnosis signal	R	T				
A/T CHECK indicator lamp signal		T	R			
A/T position indicator signal		T	R		R	
ABS operation signal		R			T	
A/T shift schedule change demand signal		R			T	
Air conditioner switch signal	R			T		
A/C compressor request signal	T					R
A/C compressor feedback signal	T		R			
Blower fan motor switch signal	R			T		
Cooling fan speed request signal	T					R
Position lights request signal			R	T		R
Low beam request signal				T		R
Low beam status signal	R					T
High beam request signal			R	T		R
High beam status signal	R					T
Vehicle speed signal			R		T	
	R	R	T	R		
Sleep request 1 signal			R	T		
Sleep request 2 signal				T		R
Wake up request 1 signal			R	T		
Door switch signal			R	T		R
Turn indicator signal			R	T		
Seat belt buckle switch signal			T	R		
Buzzer output signal			R	T		
Fuel level sensor signal	R		T			
Malfunction indicator lamp signal	T		R			
ASCD SET lamp signal	T		R			
ASCD operation signal	T	R				
ASCD CRUISE lamp signal	T		R			
Overdrive cancel signal	T	R				
Output shaft revolution signal	R	T				


ILLUMINATION

Signals	ECM	TCM	Unified meter and A/C amp.	BCM	ABS actuator and electric unit (control unit)	IPDM E/R
Turbine revolution signal	R	T				
Front wiper request signal				T		R
Front wiper stop position signal				R		T
Rear window defogger switch signal				T		R
Rear window defogger control signal	R					T
Manual mode signal		R	T			
Not manual mode signal		R	T			
Manual mode shift up signal		R	T			
Manual mode shift down signal		R	T			
Manual mode indicator signal		T	R			
Hood switch signal				R		T
Theft warning horn request signal				T		R
Horn chirp signal				T		R
ABS warning lamp signal			R		T	
TCS OFF indicator lamp signal			R		T	
SLIP indicator lamp signal			R		T	
Brake (EBD) warning lamp signal			R		T	


TYPE 2/TYPE3

System diagram

- Type2

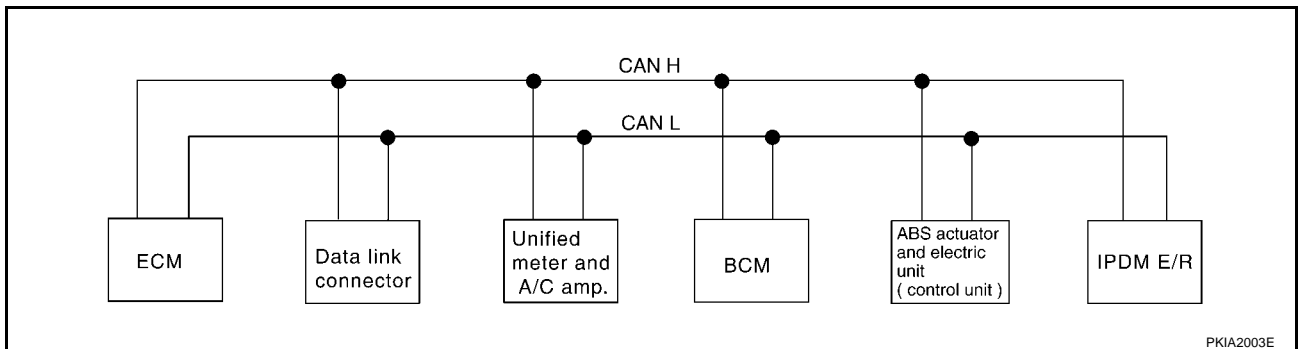

- Type3

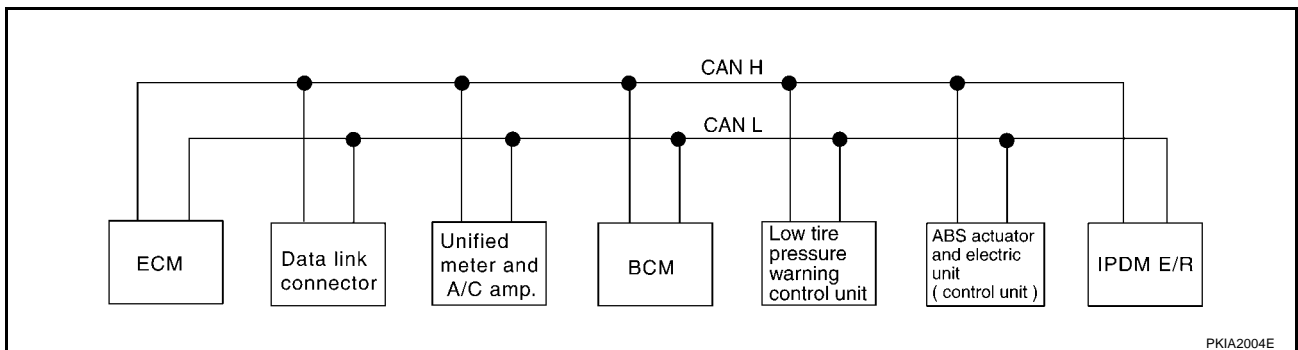

ILLUMINATION

Input/output signal chart

T: Transmit R: Receive


Signals	ECM	Unified meter and A/C amp.	BCM	Low tire pressure warning control unit	ABS actuator and electric unit (control unit)	IPDM E/R
Engine speed signal	T	R			R	
Engine coolant temperature signal	T	R				
Accelerator pedal position signal	T				R	
Fuel consumption monitor signal	T	R				
Air conditioner switch signal	R		T			
A/C compressor request signal	T					R
A/C compressor feedback signal	T	R				
Blower fan motor switch signal	R		T			
Cooling fan speed request signal	T					R
Position lights request signal			R	T		R
Low beam request signal			T			R
Low beam status signal	R					T
High beam request signal		R	T			R
High beam status signal	R					T
Vehicle speed signal		R			T	
	R	T	R	R		
Sleep request 1 signal		R	T			
Sleep request 2 signal			T			R
Wake up request 1 signal		R	T			
Door switch signal		R	T			R
Turn indicator signal		R	T			
Seat belt buckle switch signal		T	R			
Buzzer output signal		R	T			
Fuel level sensor signal	R	T				
Malfunction indicator lamp signal	T	R				
ASCD SET lamp signal	T	R				
ASCD CRUISE lamp signal	T	R				
Front wiper request signal			T			R
Front wiper stop position signal			R			T
Rear window defogger switch signal			T			R
Rear window defogger control signal	R					T
Hood switch signal			R			T
Theft warning horn request signal			T			R
Horn chirp signal			T			R
Tire pressure signal		R		T		
ABS warning lamp signal		R			T	
Brake (EBD) warning lamp signal		R			T	

ILLUMINATION


TYPE 4/TYPER5

System diagram

- Type4

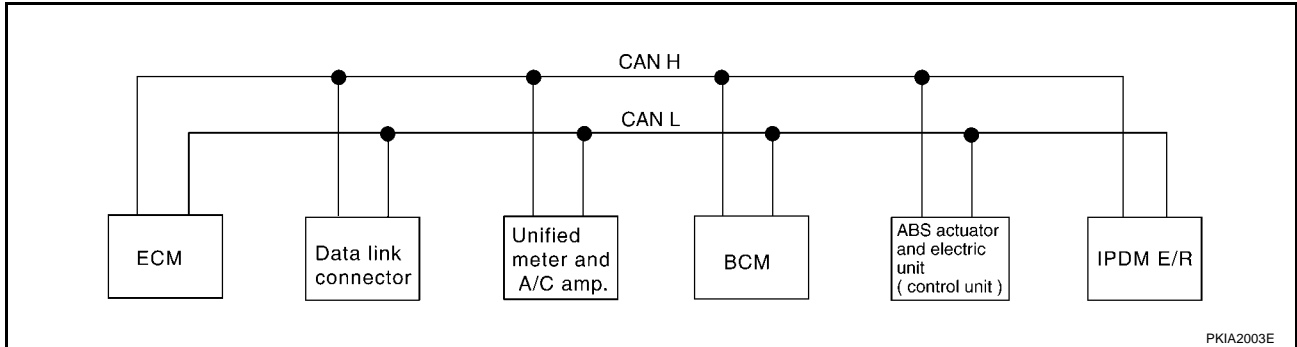

- Type5

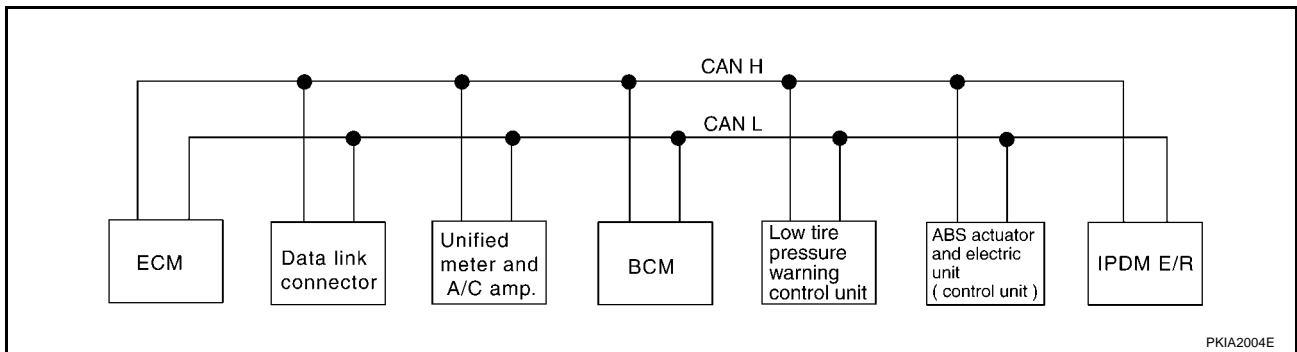

Input/output signal chart

T: Transmit R: Receive

Signals	ECM	Unified meter and A/C amp.	BCM	Low tire pressure warning control unit	ABS actuator and electric unit (control unit)	IPDM E/R
Engine speed signal	T	R			R	
Engine coolant temperature signal	T	R				
Accelerator pedal position signal	T				R	
Fuel consumption monitor signal	T	R				
Air conditioner switch signal	R		T			
A/C compressor request signal	T					R
A/C compressor feedback signal	T	R				
Blower fan motor switch signal	R		T			
Cooling fan speed request signal	T					R
Position lights request signal		R	T			R
Low beam request signal			T			R
Low beam status signal	R					T
High beam request signal		R	T			R
High beam status signal	R					T
Vehicle speed signal		R			T	
	R	T	R	R		
Sleep request 1 signal		R	T			
Sleep request 2 signal			T			R
Wake up request 1 signal		R	T			


ILLUMINATION

Signals	ECM	Unified meter and A/C amp.	BCM	Low tire pressure warning control unit	ABS actuator and electric unit (control unit)	IPDM E/R
Door switch signal		R	T			R
Turn indicator signal		R	T			
Seat belt buckle switch signal		T	R			
Buzzer output signal		R	T			
Fuel level sensor signal	R	T				
Malfunction indicator lamp signal	T	R				
ASCD SET lamp signal	T	R				
ASCD CRUISE lamp signal	T	R				
Front wiper request signal			T			R
Front wiper stop position signal			R			T
Rear window defogger switch signal			T			R
Rear window defogger control signal	R					T
Hood switch signal			R			T
Theft warning horn request signal			T			R
Horn chirp signal			T			R
Tire pressure signal		R		T		
ABS warning lamp signal		R			T	
TCS OFF indicator lamp signal		R			T	
SLIP indicator lamp signal		R			T	
Brake (EBD) warning lamp signal		R			T	


TYPE 6/TYPE7

System diagram

- Type6

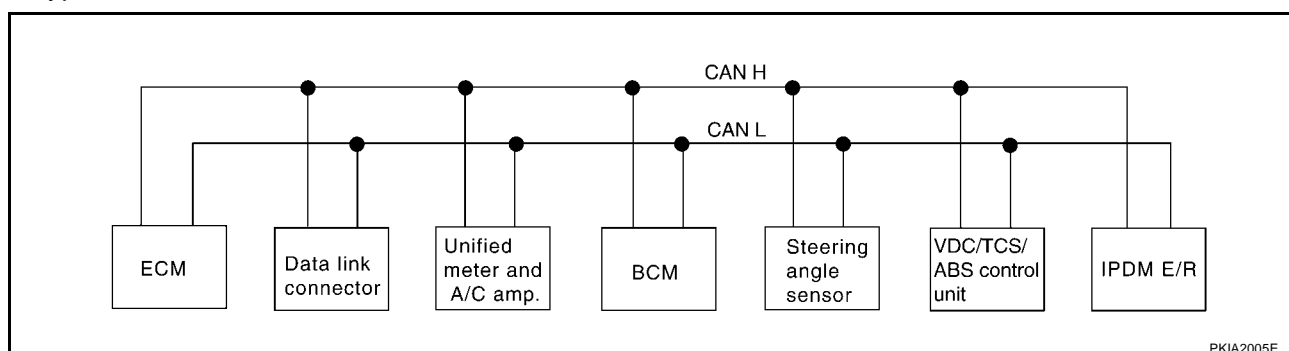

- Type7

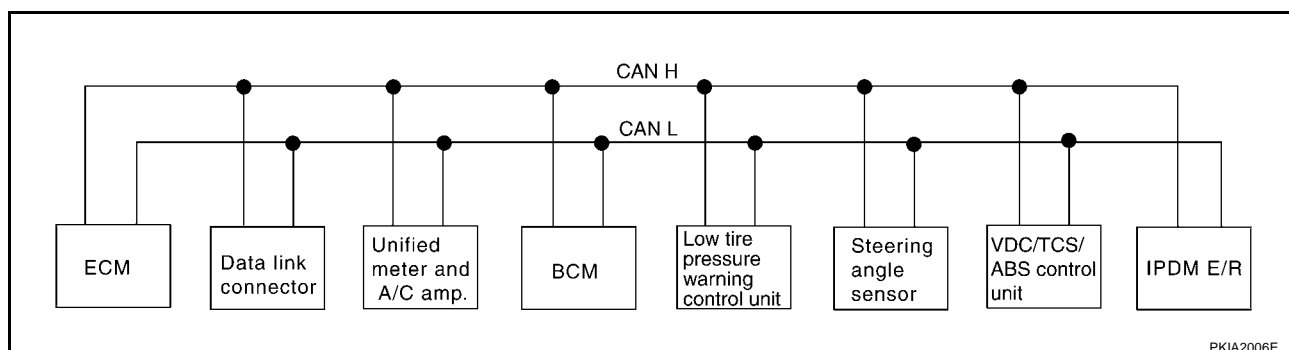

ILLUMINATION

Input/output signal chart


T: Transmit R: Receive

Signals	ECM	Unified meter and A/C amp.	BCM	Low tire pressure warning control unit	Steering angle sensor	VDC/TCS/ABS control unit	IPDM E/R
Engine speed signal	T	R				R	
Engine coolant temperature signal	T	R					
Accelerator pedal position signal	T					R	
Fuel consumption monitor signal	T	R					
Air conditioner switch signal	R		T				
A/C compressor request signal	T						R
A/C compressor feedback signal	T	R					
Blower fan motor switch signal	R		T				
Cooling fan speed request signal	T						R
Position lights request signal		R	T				R
Low beam request signal			T				R
Low beam status signal	R						T
High beam request signal		R	T				R
High beam status signal	R						T
Vehicle speed signal		R				T	
	R	T	R	R			
Sleep request 1 signal		R	T				
Sleep request 2 signal			T				R
Wake up request 1 signal		R	T				
Door switch signal		R	T				R
Turn indicator signal		R	T				
Seat belt buckle switch signal		T	R				
Buzzer output signal		R	T				
Fuel level sensor signal	R	T					
Malfunction indicator signal	T	R					
ASCD SET lamp signal	T	R					
ASCD CRUISE lamp signal	T	R					
Front wiper request signal			T				R
Front wiper stop position signal			R				T
Rear window defogger switch signal			T				R
Rear window defogger control signal	R						T
Hood switch signal			R				T
Theft warning horn request signal			T				R
Horn chirp signal			T				R
Steering angle sensor signal					T	R	
Tire pressure signal		R		T			
ABS warning lamp signal		R				T	
VDC OFF indicator lamp signal		R				T	
SLIP indicator lamp signal		R				T	
Brake (EBD) warning lamp signal		R				T	

ILLUMINATION

Schematic



AKS000WF

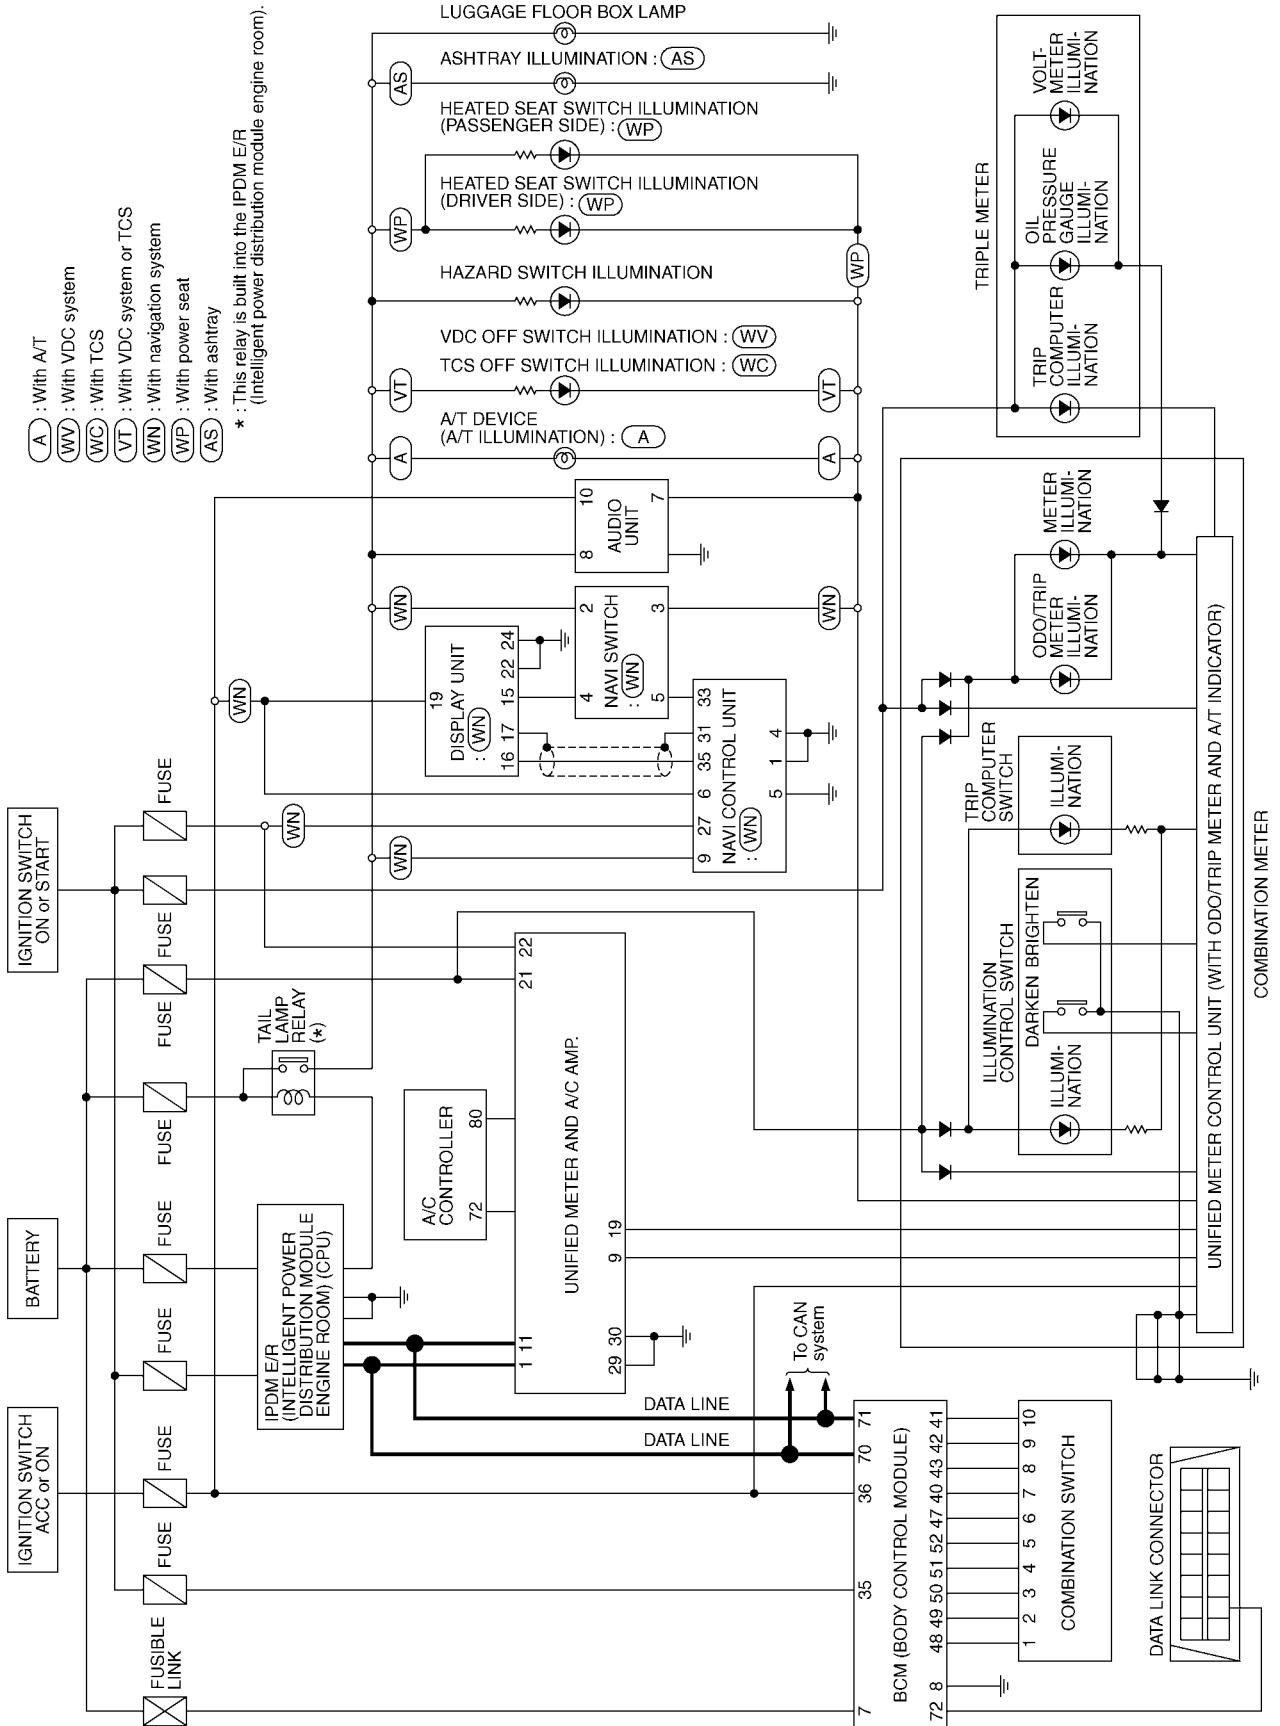

TKWT0467E

A
B
C
D
E
F
G
H
I
J
K
L
M



AKS000WG

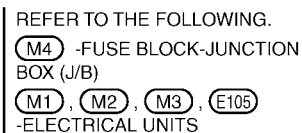L
M
T

ILLUMINATION

LT-ILL-02

DATA LINE

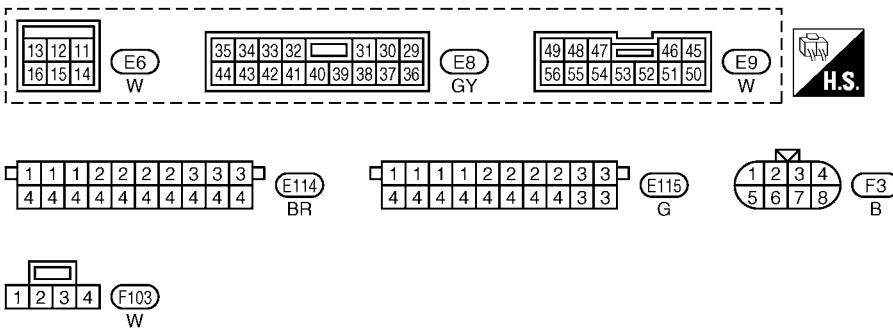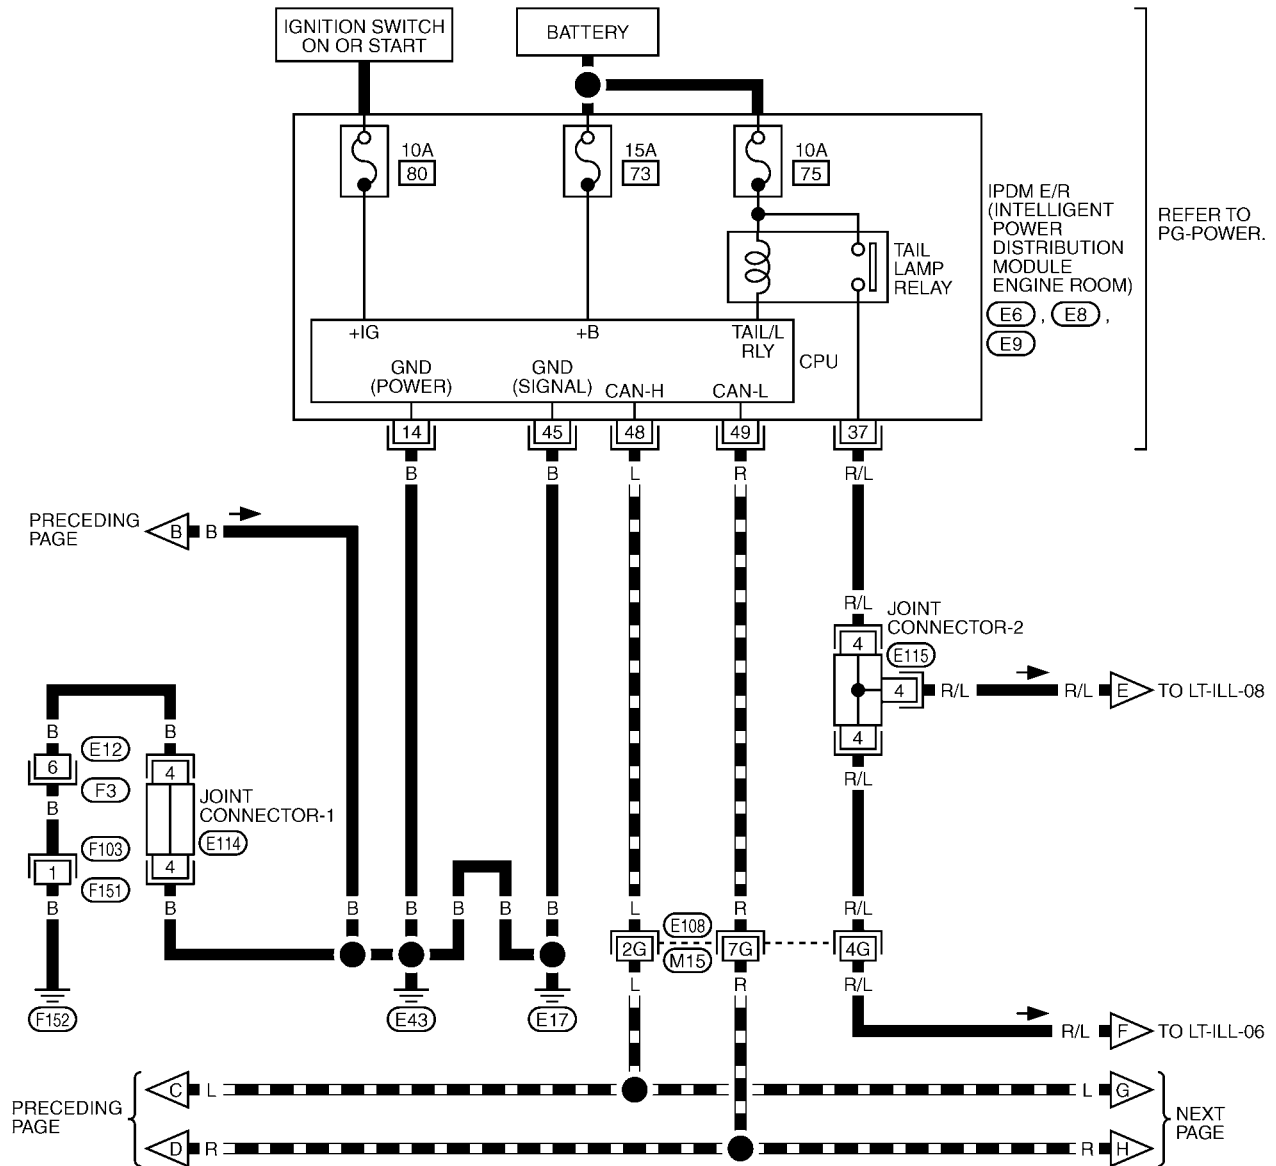



REFER TO THE FOLLOWING.

(E108) -SUPER MULTIPLE JUNCTION (SMJ)

TKWT0469E

ILLUMINATION


LT-ILL-03

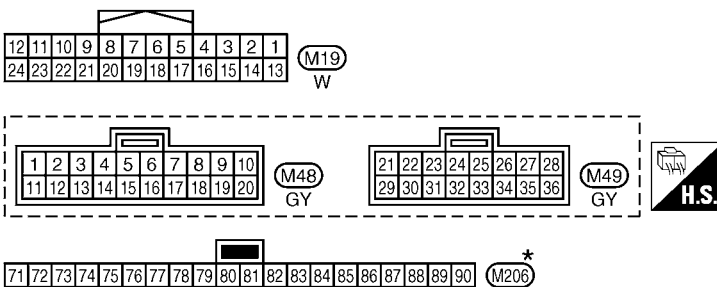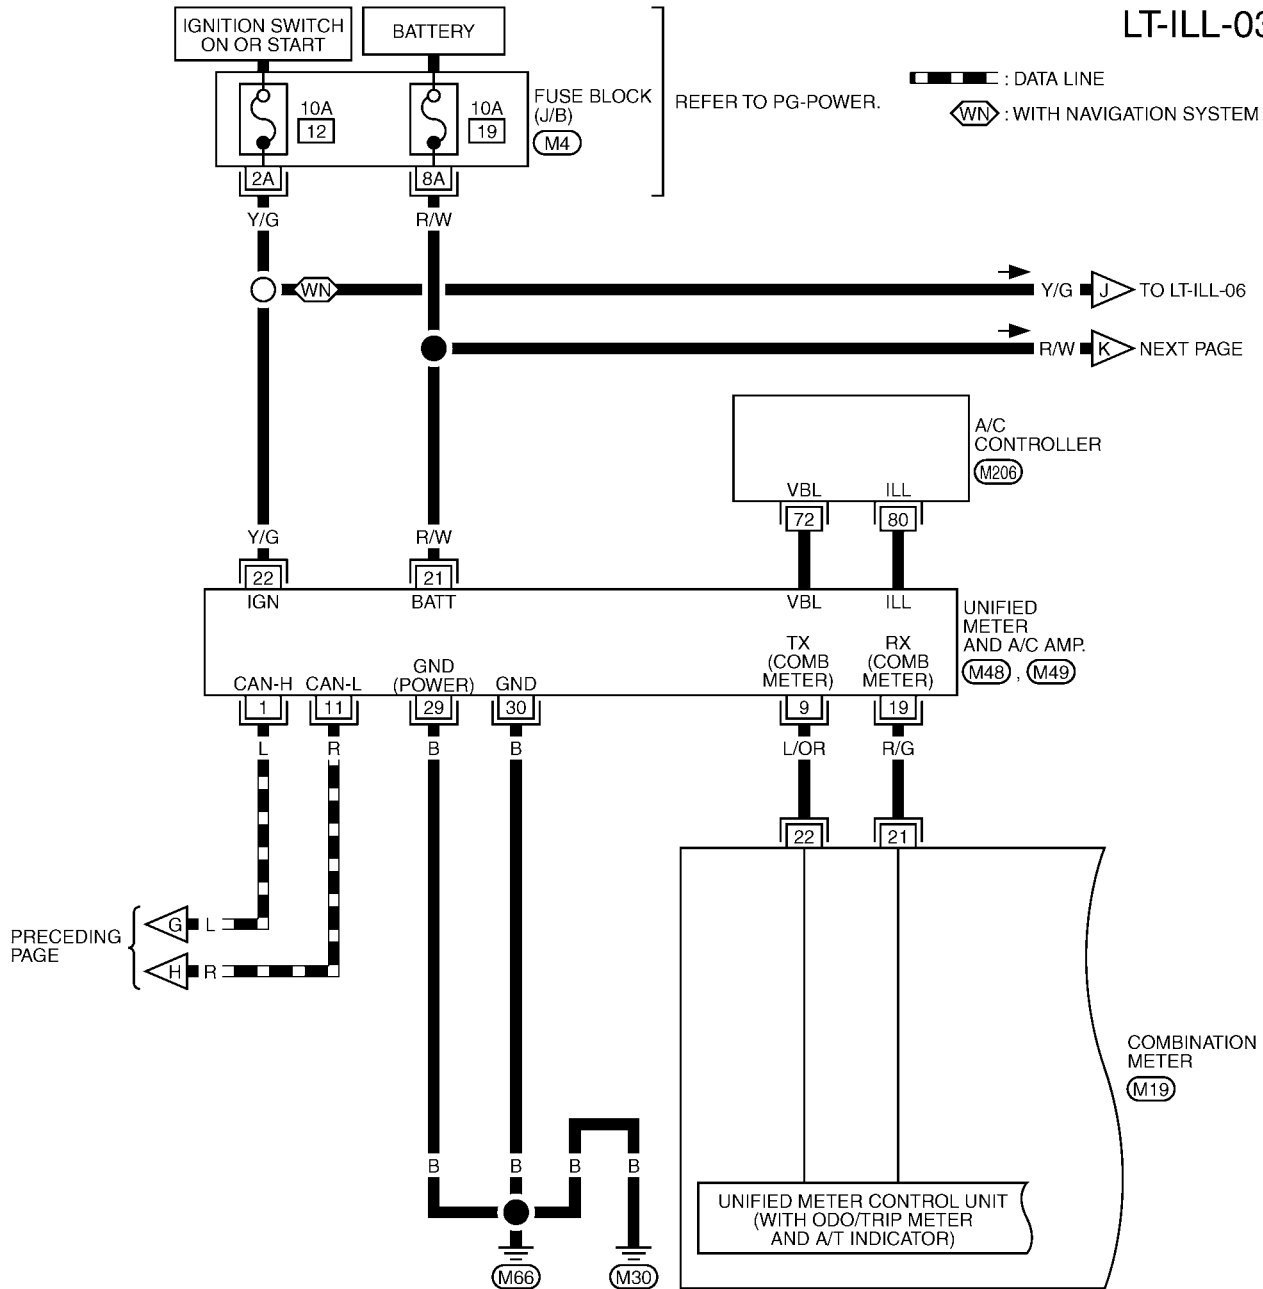

*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT", PG SECTION.

REFER TO THE FOLLOWING.
(M4) -FUSE BLOCK-JUNCTION BOX (J/B)

TKWT0470E

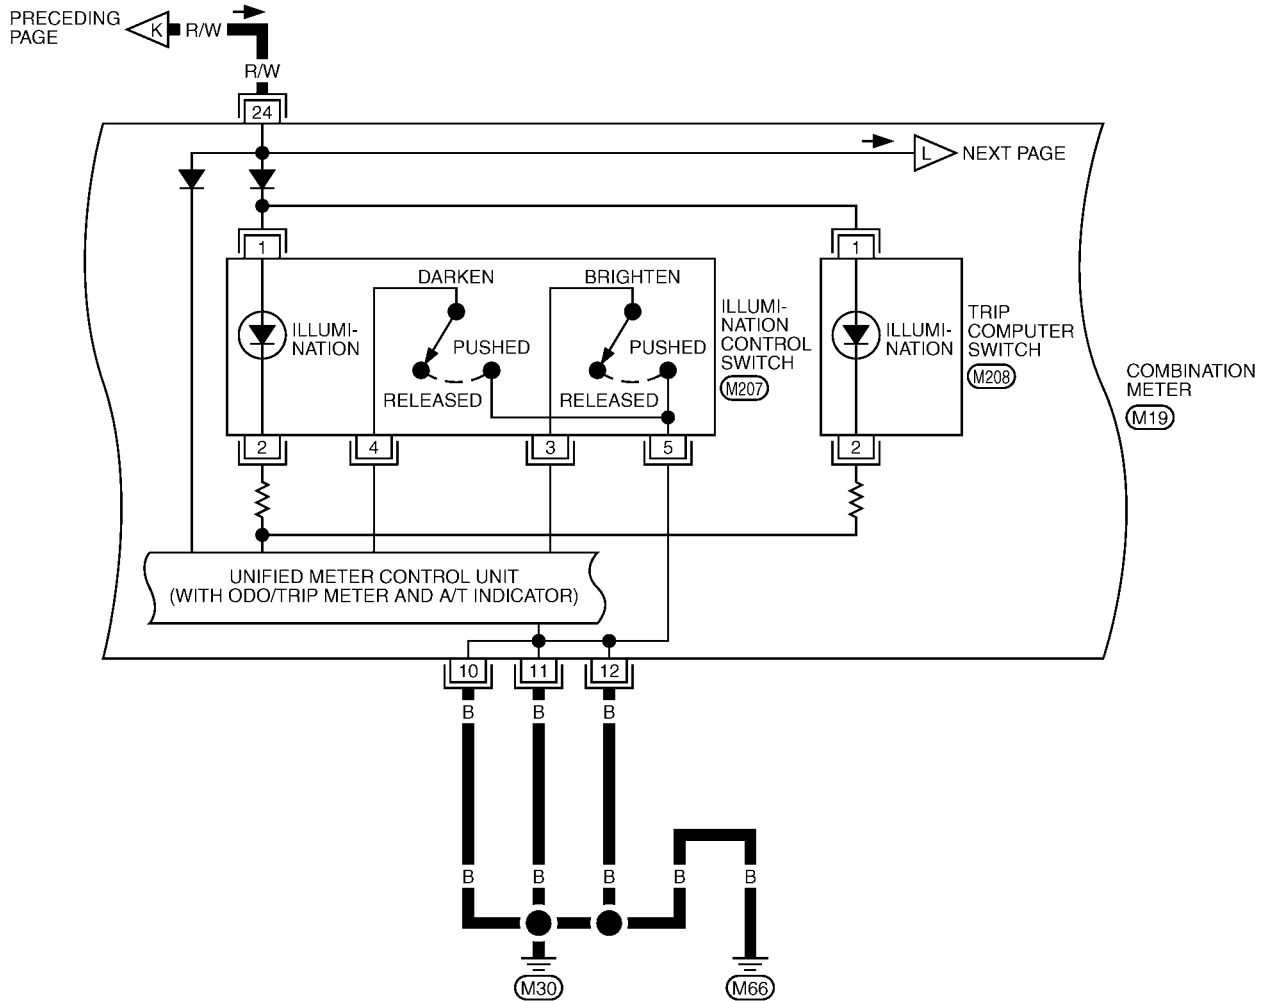

12	11	10	9	8	7	6	5	4	3	2	1
24	23	22	21	20	19	18	17	16	15	14	13

(M19)
W


1	2	3	4	5
---	---	---	---	---

(M207)*, (M208)*

★: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT", PG SECTION.

ILLUMINATION

LT-ILL-05

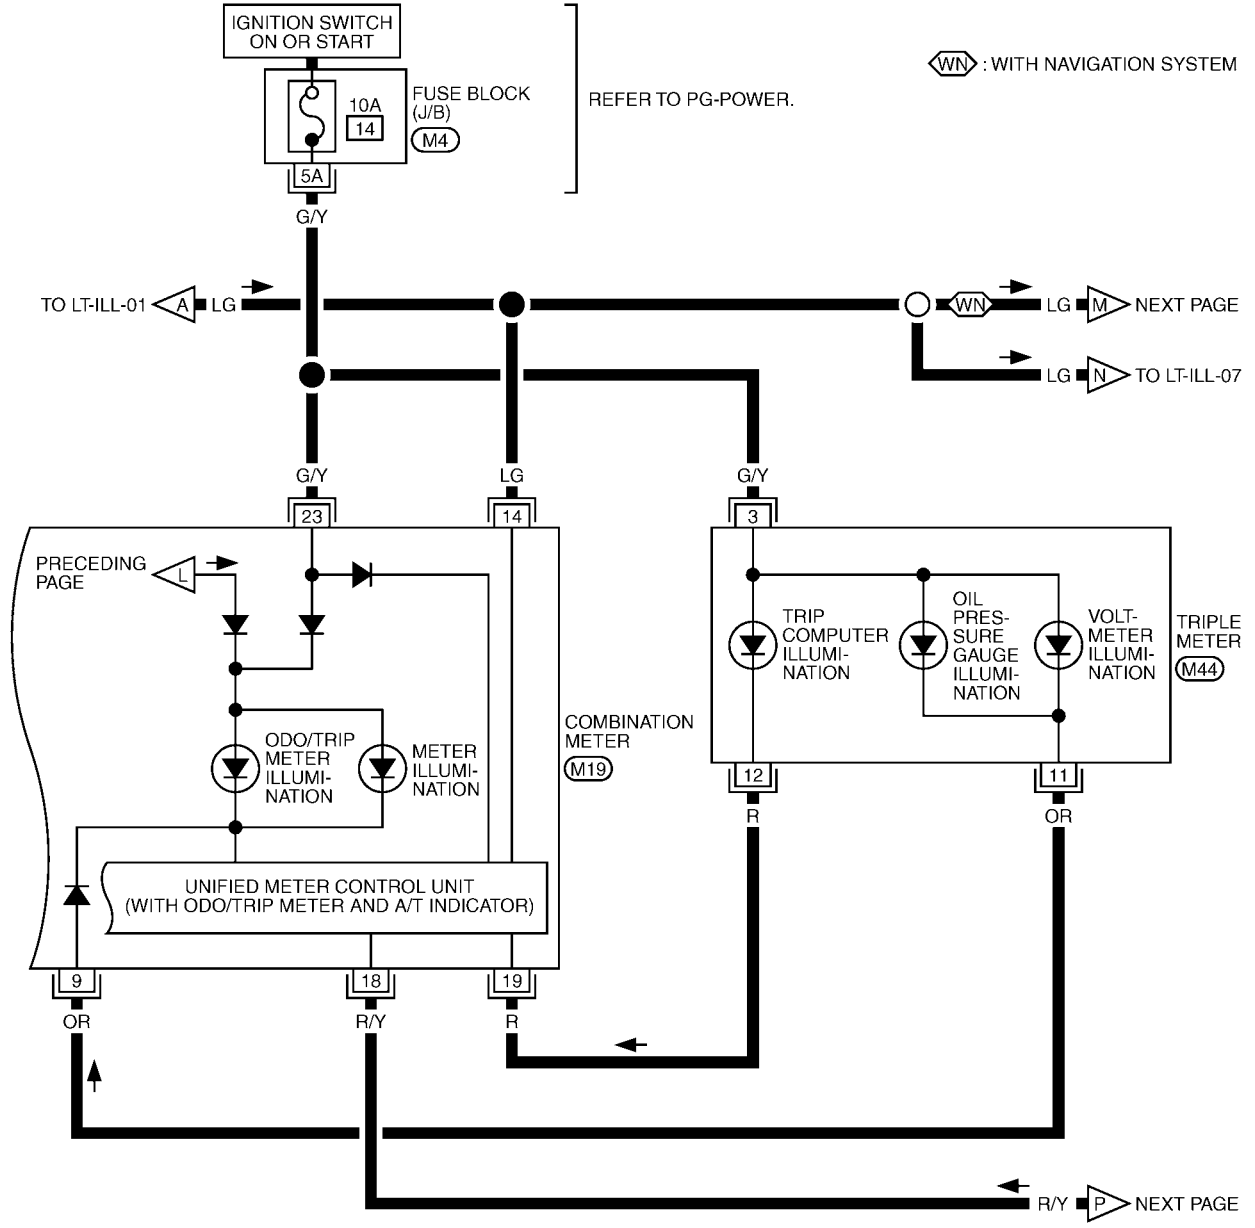

12	11	10	9	8	7	6	5	4	3	2	1
24	23	22	21	20	19	18	17	16	15	14	13

(M19)
W


6	5	4	3	2	1
12	11	10	9	8	7

(M44)
W

REFER TO THE FOLLOWING.
(M4) -FUSE BLOCK-JUNCTION BOX (J/B)

TKWT0472E

ILLUMINATION

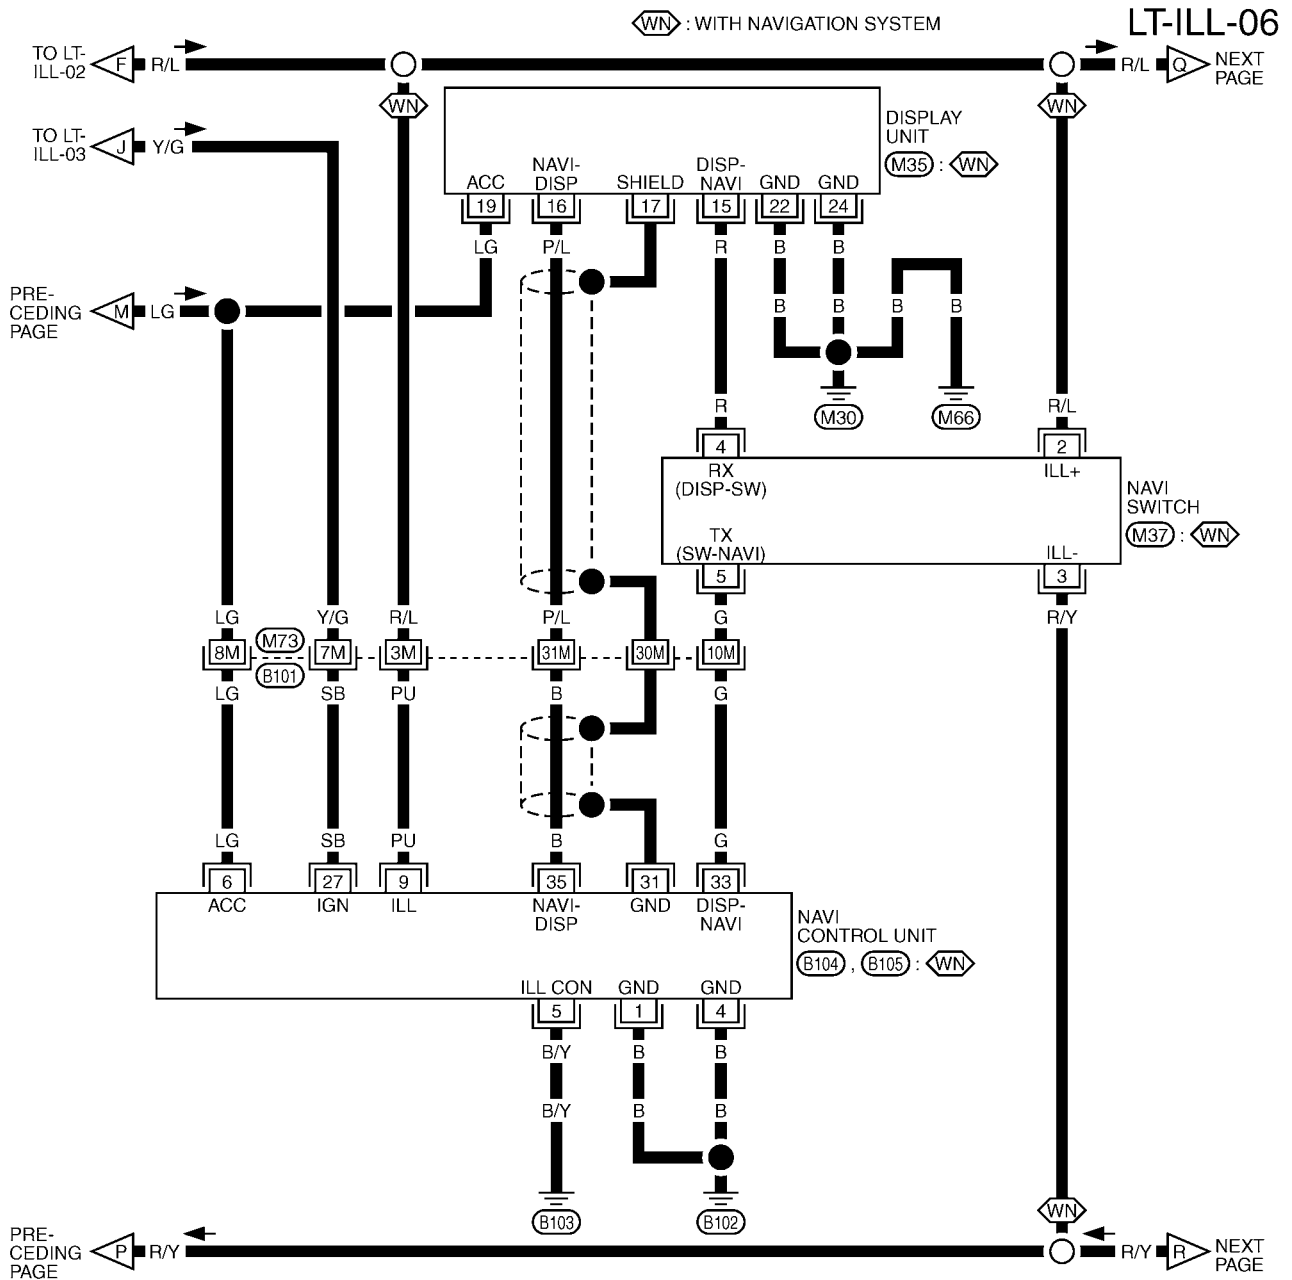

24	22	20	18	16	14	12	10	8	6	4	2
23	21	19	17	15	13	11	9	7	5	3	1

(M35)
GY

3	2	1
8	7	6

(M37)
W

24	21	18	15	13	11	9	6	3	48	45	42	39	37	35	33	30	27
23	20	17	14	12	10	8	5	2	47	44	41	38	36	34	32	29	26
22	19	16				7	4	1	46	43	40				31	28	25

(B104)
W


(B105)
GY

REFER TO THE FOLLOWING.

(B101) -SUPER MULTIPLE
JUNCTION (SMJ)

ILLUMINATION

LT-ILL-07

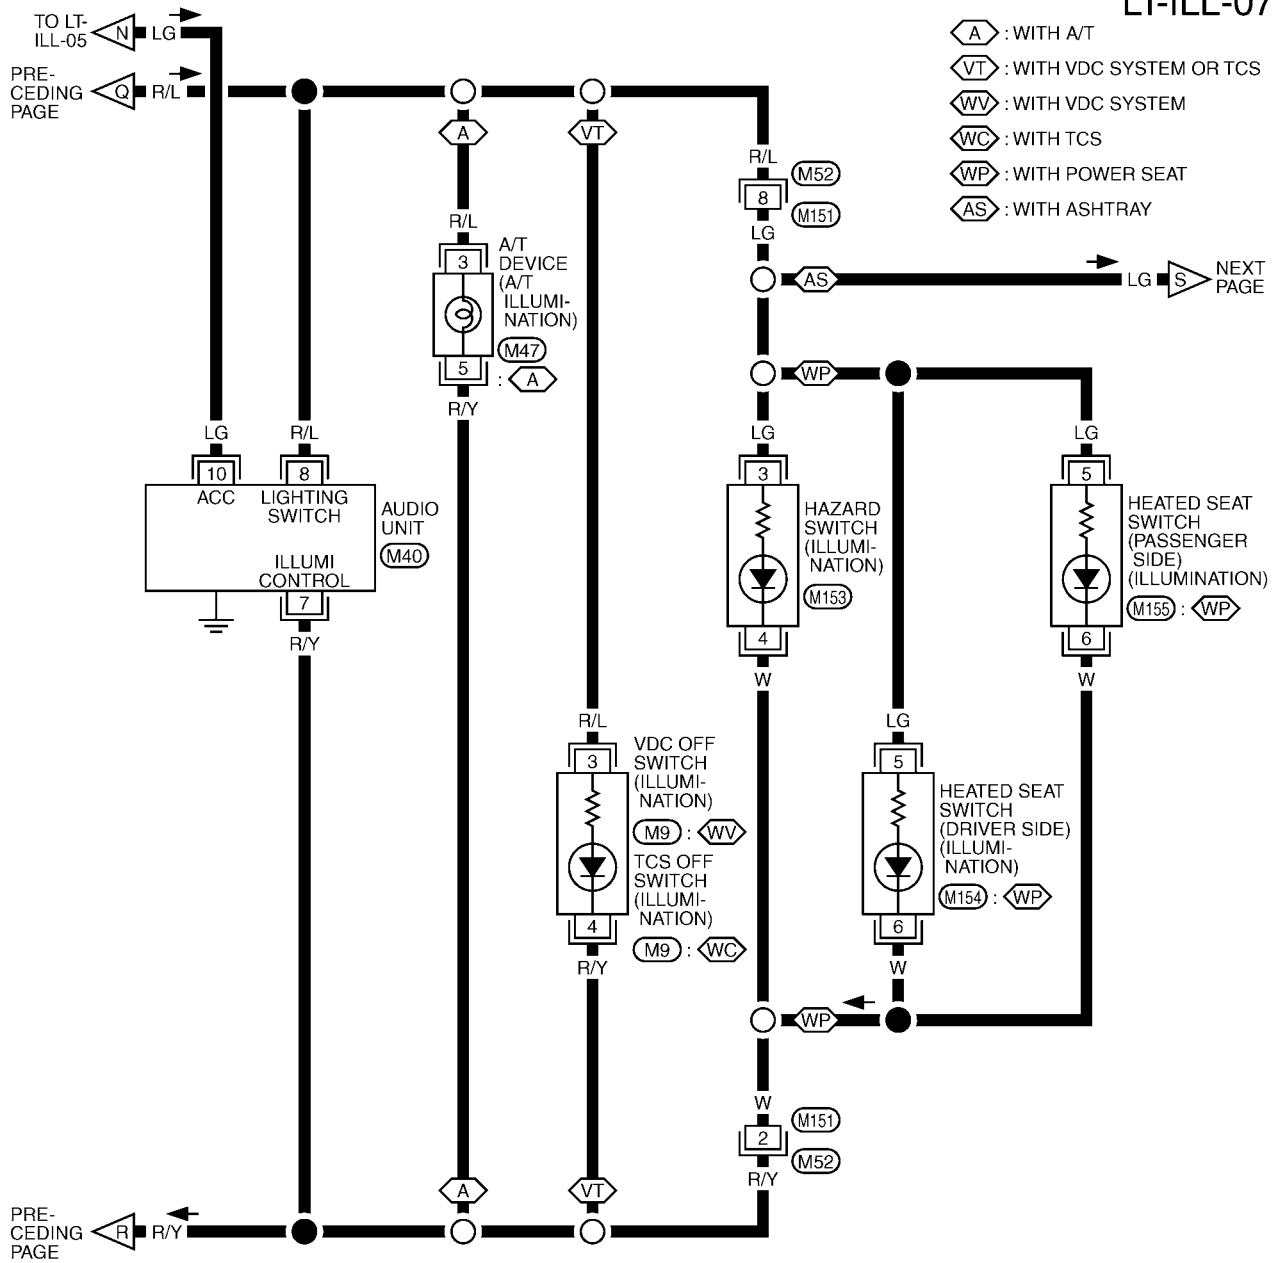

A

B

C

D

E

F

G

H

I

J

LT

L

M

TKWT0474E

AS : WITH ASHTRAY

LT-236

BULB SPECIFICATIONS

BULB SPECIFICATIONS

PFP:26297

Headlamp

AKS000WI

Item	Wattage (W)
Low (Halogen type)	55 (H7)
Low (Xenon type)	35 (D2R)
High (Halogen type)	55 (H1)
High (Xenon type)	55 (H7)

Exterior Lamp

AKS000WJ

Item	Wattage (W)
Front combination lamp	Front Turn signal lamp
	21 (amber)
	Parking lamp
	5
	Front side marker lamp
	5
Rear combination lamp	Stop/Tail lamp
	21/5
	Rear Turn signal lamp
	21
	Back-up lamp
	21
	Rear side marker lamp
	5
License plate lamp	5
High-mounted stop lamp (back door mount)	LED

Interior Lamp/Illumination

AKS000WK

Item	Wattage (W)
Rear floor box lamp	1.4
Ashtray illumination lamp	1.4
Spot lamp	8
Luggage room lamp	5
Vanity mirror lamp	1.32

BULB SPECIFICATIONS
