

Installation Instructions

Perma Shine Polished Stainless Tube Steps with Step Pads

Part No. 108 For SIDE BAR 07-09 CHEVY TAHOE/GMC YUKON

PARTS LIST

- (2) SIDE TUBES WITH STEPS
- (2) FRONT MOUNT BRACKETS
- (2) REAR MOUNT BRACKETS
- (4) 1/2" x 2" HEX HEAD BOLTS

- (8) 1/2" FLAT WASHERS
- (8) 1/2" SPLIT LOCK WASHERS
- (4) M12 1.75 x 120mm HEX HEAD BOLTS

PROCEDURE

- 1. Begin installation by working on driver side of the vehicle (see illustration).
- 2. From underneath truck, loosen and remove body mount bolts that run upward through mounts into floorboard. Attach and secure Front Mount Bracket to underside of vehicles front body mount, re-using isolator and puck, but replacing factory bolt with (1) M12 1.75 x 120mm bolt, (1) ½" split lock washer, and (1) ½" flat washer. Hand Tighten.


Note: Use caution when removing bolts as the rubber isolators and metal pucks may fall.

- 3. Attach and secure Rear Mount Bracket to underside of vehicles rear body mount in same manner as the front.
- 4. Attach Side Tube to Front and Rear Brackets using (1) ½" x 2" bolt, (1) ½" split lock washer, and (1) ½" flat washer for each bracket, and hand tighten. Torque M12 bolts first to 65 ft-lbs and then the ½" bolts that secure the Side Bar to 65 ft-lbs, to complete the driver-side assembly.

Note: Step Pad closer to the end of the tube goes to the rear.

5. Repeat process for passenger side of vehicle to complete installation.

Tel: (951) 277-4949 ~ Fax: (951) 277-2295 e-mail: info@rampageproducts.net Web: www.rampageproducts.net

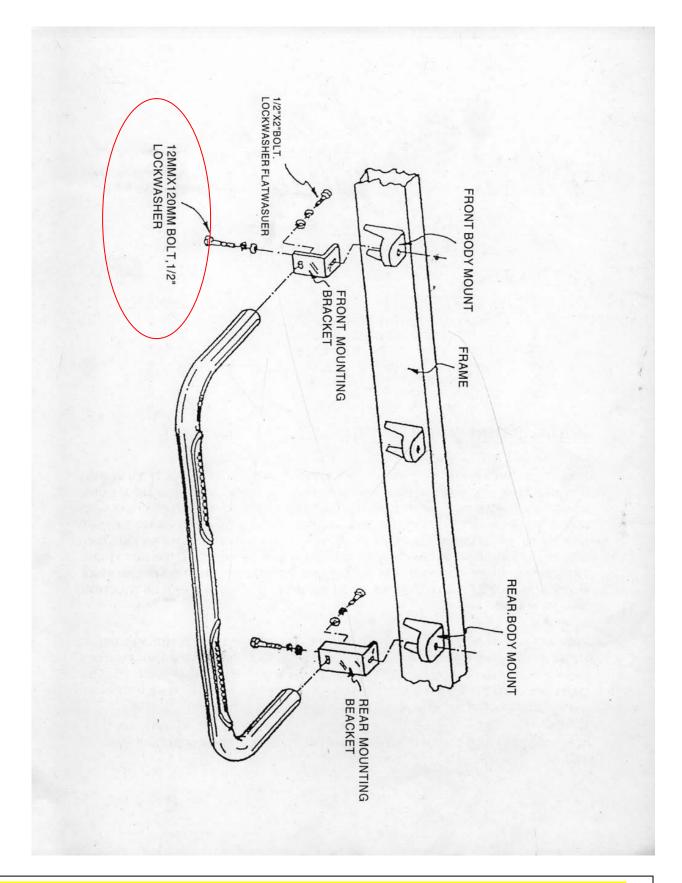

Web: www.rampageproducts.net