

NEUSPEED®

P-FLO AIR INTAKE KIT – PART #65.10.92

Fits 2008.5-up Audi A3 2.0 TFSI, 2008.5-up VW EOS, GTI, Jetta V/VI & Passat with 2.0 TSI – CARS EQUIPPED WITH AIRPUMP

PARTS LIST:

1 – INTAKE PIPE	1 – STAINLESS STEEL P-FLO BRACKET	1 – NEUSPEED FILTER	1 – MINI AIR PUMP FILTER
1 – SILICONE HOSE	1 – #48 HOSE CLAMP	1 – #52 HOSE CLAMP	1 – RUBBER ISOLATOR
1 – ACORD NUT	3 – M6 x 12mm CAP BOLTS	3 – M6 LOCK NUTS	1 – RUBBER GROMMET
1 – BILLET AIR PUMP FITTING	1 – PLASTIC HOSE SUPPORT CLIP		

TOOLS REQUIRED:

1 – PHILIPS SCREWDRIVER	1 – 5mm HEX KEY WRENCH	1 – 8mm NUT DRIVER
1 – 7/16 WRENCH	1 – SPRING CLAMP PLIERS	1 – T25 TORX



1. Disconnect Mass Air Flow (MAF) sensor electrical connector.



2. Disconnect air intake hose from MAF using spring clamp pliers.



3. Squeeze collar and disconnect air pump hose from air filter box lid.



4. Unscrew all Philips screws around air filter box lid and remove.



5. Remove cover at intake duct.



6. Using a 5mm hex key wrench, unbolt lower air filter box, located on back side.



7. Lift off lower air filter box from rubber grommet mounts, then lift out left side first and rotate intake duct around small coolant hose to remove.



8. Remove air intake duct at radiator support (2) T25 Torx – one on each side.



9. Remove MAF sensor from air box lid using a Philips screwdriver.



10. Reinstall MAF sensor onto air intake hose.



11. Install larger end of supplied silicone hose onto MAF sensor using #52 hose clamp and tighten. Then loosely install #48 hose clamp as shown.



12. Install and tighten rubber isolator into threaded stand-off just in front of battery.



13. First install *NEUSPEED* intake pipe into silicone hose, then attach *P-Flo* bracket onto rubber grommet mount and rubber isolator.



14. Install and tighten acorn nut.



15. Tighten #48 hose clamp.



16. Re-attach MAF electrical connector.




17. Rotate air pump fitting 90-degrees counter-clockwise.




18. Attach mini filter to billet fitting and tighten. Then connect to air pump fitting.



19. Attach black plastic hose support clip from radiator coolant vent hose to air pump hose.

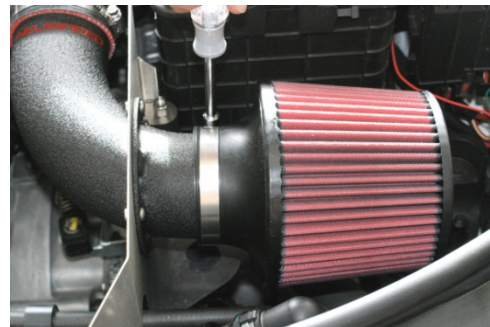

20. Attach and tighten *NEUSPEED* air filter.

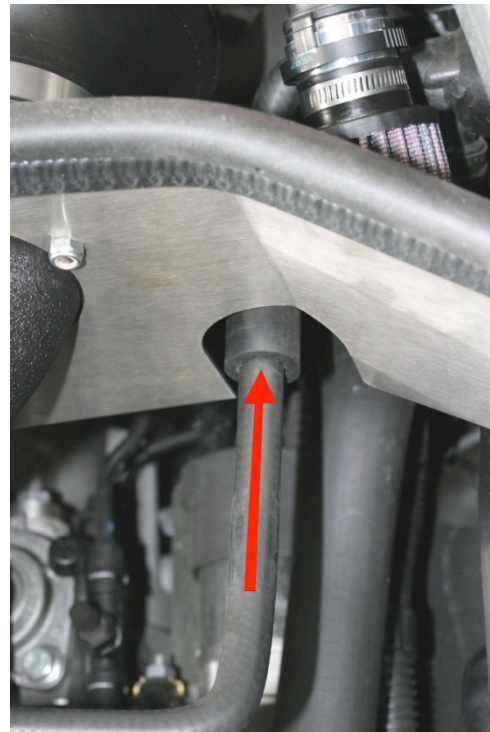

21. For extra protection, slide coolant hose protector sleeve just under *P-Flo* bracket.



22. Install rubber strip on top-edge of *P-Flo* bracket.



23. Double-check complete installation.

Copyright 2009, *NEUSPEED*®. All rights reserved.
Reproduction in whole or in part prohibited.
DOC.65.10.92 Rev. 01.29.09