

NEUSPEED®

RACE SERIES REAR ANTI-ROLL BAR SUPPORT BRACKETS FITS 2006-up AUDI A3(8P) FWD, 2008-09 AUDI TT(8J) FWD 2005-up VOLKSWAGEN GTI MKV/VI, Jetta V/VI, 2006-up Passat(B6) FWD, 2007-up EOS, 2007-09 Rabbit 2009-up CC FWD, 2010-up Golf VI

PART # 45.10.91
INSTALLATION INSTRUCTIONS


PARTS LIST:

1 - M6 Nutsert Tool	2 - M6 Nutsert
2 - M6 x 16mm Flange Bolt	2 - M10 Lock Nuts
2 - M10 x 25mm Flange Bolt	1 - Left Support Bracket
1 - Right Support Bracket	


TOOLS REQUIRED:

1 - Ratchet Wrench	1 - 9/16" Wrench
1 - 10MM Socket	1 - 13MM Wrench
1 - M10 Triple Square (12 Point) or 8MM Hex Key Wrench	1 - 17MM Wrench

1. Park car on a flat, level surface capable of supporting the vehicle's weight on jack and jack stands. Using the manufacturer's recommended lifting point(s), raise rear of vehicle and support with jack stands. **NEVER WORK ON A VEHICLE SUPPORTED ONLY WITH A JACK!**

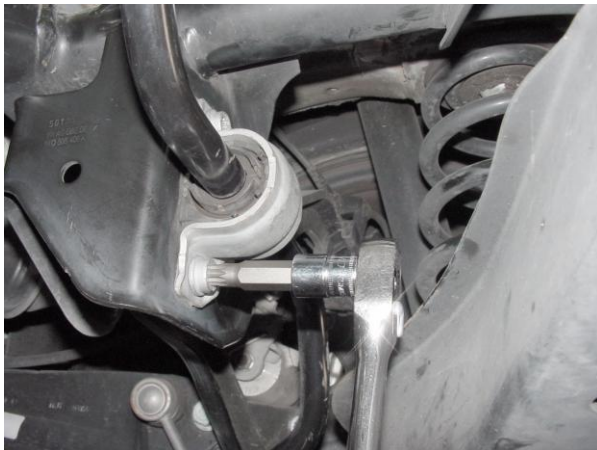

2. Remove the (4) anti-roll bar bushing clamp mounting bolts using a M10 Triple Square or 8mm hex key wrench.

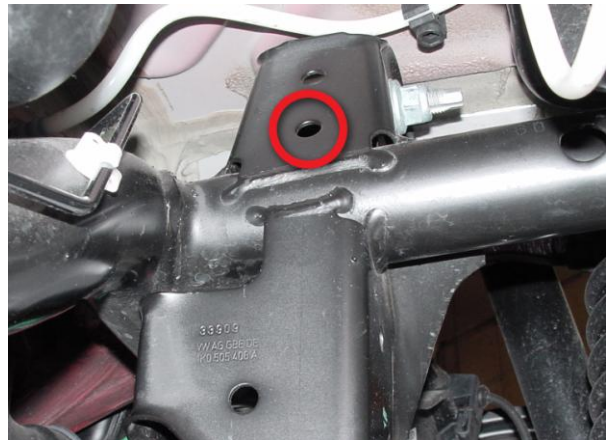

3. Install Nutsert into this hole (see separate instructions for Nutserts).



4. Installing Nutsert, hold tool body with 9/16" wrench from turning and push down on Ratchet while crimping Nutsert into hole.



5. Loosely mount Left and Right Support Brackets, do not tighten at this time. Now follow *NEUSPEED* Anti-Roll Bar installation instructions. **NOTE:** Evenly tighten Anti-Roll Bar bushing clamp bolts and Support Bracket bolts.

6. Double check complete installation and tightness of all nuts and bolts!