


RECON

LED 3rd Brake Lamp with Cargo Lights (Hard Wiring Instructions)

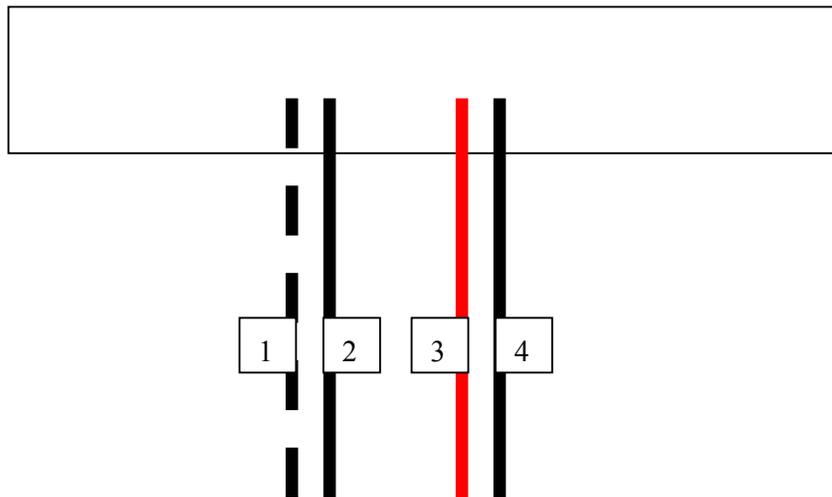

1. Please reference the table below to determine where the wires coming out of the back of your new **RECON LED 3rd Brake Lamp** are to be connected on your truck:

Wire #	Color	Connection Point
1	White & Black Wire	Connect to positive 12V for cargo light
2	Solid Black Wire	Connect to ground for cargo light
3	Solid Red Wire	Connect to positive 12V for brake light
4	Solid Black Wire	Connect to ground for brake light

2. There are two options to properly connect the **RECON LED 3rd Brake Lamp** to your O.E. wires if you do not want to simply plug the **RECON LED 3rd Brake Lamp** into your O.E. plug or if after plugging it in the RECON LED 3rd brake light doesn't work properly:

Option 1: Cut off your O.E. connector plug, and connect the wires of your new **RECON LED 3rd Brake Lamp** to your O.E. wires as depicted in the chart above.

Option 2: If you want to retain your O.E. connector plug, you must splice the wires a few inches before the O.E. connector plug by peeling back the O.E. wire covering/insulation.

4. If your vehicle has only 3 wires going into your O.E. connector plug, then please connect the No.2 and No.4 wires coming out of the back of your new **RECON LED 3rd Brake Lamp** together with your common O.E. ground.

Vehicle Specific Wiring Instructions are on the Next Page

RECON

ATTN: 1994-1998 CHEVY & GMC OWNERS

Quick Wire Cross Reference for 1994-1998 Installation

#1 RECON Wire Connects to GM Blue & White

#2 RECON & #4 RECON Wires Connect to GM Black

#3 RECON Wire Connects to GM White opposite GM Blue & White

****Leave the GM White opposite GM Black not connected****

**Basically this is the wire configuration you must perform to get the
light to work properly:**

88-98 "Old" Style Chevy/GMC Wire Cross Reference

RECON Plug Wire Configuration

black & brown wires are grounds (splice these together)

white wire is cargo light positive

red wire is 3rd brake light positive

GM Plug Wire Configuration

black wire is ground

white wire is hot all the time (leave this wire disconnected)

blue wire is positive cargo light

yellow or white wire is positive third brake light

ATTN: FORD 1997-2003 F150 OWNERS

Quick Wire Cross Reference for 1997-2003 Installation

#1 RECON Wire Connects to Ford Black & Blue

#2 & #4 RECON Wire Connects to Ford Black

#3 RECON Wire Connects to Ford Green