




26628 Slimline 2" Sidebar with Step Jeep JK 4 door, 2007-

Hardware:

M12x100mm hex bolt---4
 35mm OD, 12mm Id washer---4
 M6x35mm Hex bolt---4
 15mm OD, 6mm Id washer---8
 M6 hex nut---4
 M6 Lock washer---6

Installation:

- 1) Review components and instructions. Set out the driver side and passenger side bars. Split hardware between the two sides.
- 2) Remove the factory body mounting bolts at the front and middle of the driver side.
- 3) Have a helper hold the side bar onto the side of the vehicle and attach the middle mount using the included 10mm bolt/washer. leave bolt lightly tightened for now. Now attach the front mount the same way.
- 4) Attach the rear mount using the hardware and "U" Channel stiffener as shown in Fig. A.
- 5) Tighten all fasteners and then repeat procedure for other side.

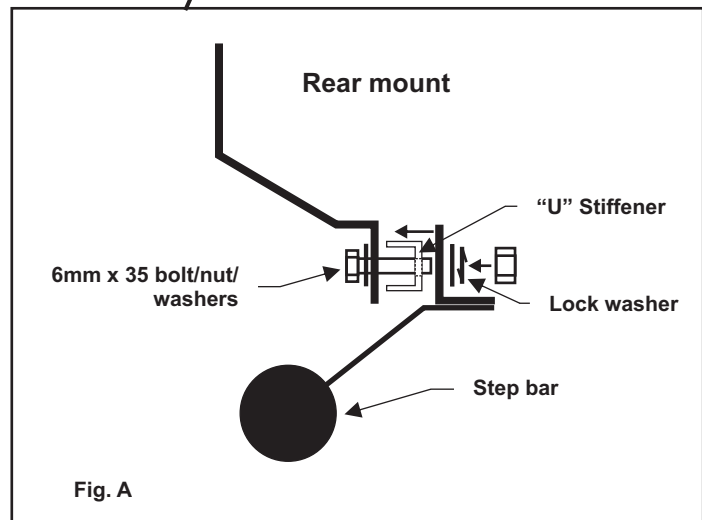

Warranty Information

Rampage products, Inc. warrants to the original purchaser of any step product it manufactures, that the product will be free of defects in material or workmanship for a period of 1 year from date of purchase. Such obligations under this warranty shall be limited to the repair or replacement, at Rampage products discretion, of any assembly or parts which, upon examination by Rampage products, Inc. proves to be defective. All defective items must be returned with proof of purchase to Rampage products, Inc., freight prepaid. This warranty does not cover damage resulting from abuse, misuse, alteration, accident or damage in transit. Rampage products obligations under this warranty are limited to the aforementioned repair or replacement of warranty defects for which the return authorization has been received during the warranty period, and Rampage products, Inc. shall not be liable for any incidental or consequential damages arising from breach of this or any implied warranty.

**Rampage Products 22420 Temescal Canyon Rd. Ste "C", Corona, CA 92883 Phone: (951) 277-4949 Fax: (951) 277-2295
www.rampageproducts.net**