

INSTALLATION INSTRUCTIONS


**Installation recommendation: JBA recommends in most cases that the vehicle be taken to a reputable exhaust shop.

40-2627 stainless steel

50-2627 aluminized

05-06 Mustang GT 4.6L 3v

RECOMMENDED TOOLS:
 pry bar
 ratchet
 15mm deep socket
 9/16 deep socket
 channel lock pliers
 anti-seize
 spray lubricant or penetrating oil

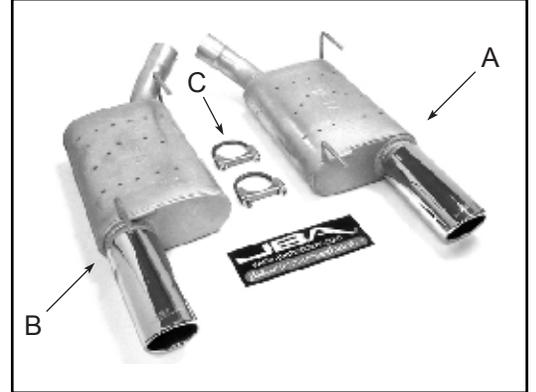

Parts List:

- A. P/S Muffler/Tip Assembly 1
- B. D/S Muffler/Tip Assembly 1
- C. 2-1/2" Clamp 2

Start:

1. Remove and inventory the JBA Exhaust System.
2. Disconnect the negative battery cable and allow the exhaust system to completely cool.
3. Loosen the clamps attaching the exhaust to the H-pipe. Slide the clamps back to separate the two.



4. Loosen the clamps attaching the muffler assemblies to the intermediate pipes.



5. Wiggle the intermediate pipes out of the muffler pipes.



6. Slide the mufflers forward, out of the hangers. Remove from car.



7. Slide the JBA muffler/tip assembly (A) and (B) hangers in to the factory rubber isolators.



8. Slip the new JBA muffler/tip assemblies (A) and (B) on to the factory intermediate pipes. Make sure to align the key way on the intermediate pipe with the new JBA muffler assembly.



9. Install the supplied 2.5" clamps (C) over the muffler and intermediate pipe slip connection



10. Fit the h-pipe and intermediate pipes together and tighten the factory clamp.



11. Check for proper alignment and adequate clearance around the new JBA tips. Tight all clamps



12. Using a soft cloth, wipe the new JBA tips clean.

13. Reconnect the battery and start the vehicle to check for leaks.

JBA also offers long tube headers, shorty headers, and h-pipes for the 05-06 Mustang. For more information about these and other quality performance products from JBA visit www.jbaheaders.com



JBA Long Tube Headers
Part No. 6675S



JBA Off-road H-pipe
Part No. 6675SH



2005 Mustang GT JBA Project Vehicle
See more pictures of this car at www.jbaheaders.com