




advanced FLOW engineering™
P.O. Box 1719
Corona, CA 92878
Support: 951-493-7100
aFePower.com

BladeRunner™ Charged Air Manifold Installation Instructions: 1994-1998 Dodge Ram Cummins L6-5.9L (td) 12-Valve

Part Number: 46-10051	Tools Required: 7/16" deep socket 10mm socket 6mm socket 5/16" allen key 3/16" allen key 6mm hexagonal bit (provided) Gasket remover (scraper) Torque wrench Ratchet w/ extension	Parts list: 1 Manifold, Charged Air 2 Screws, socket cap M8 x 1.25 x 160 2 Screws, socket cap M8 x 1.25 x 100 1 Screw, socket cap M8 x 1.25 x 16 1 Screw, hex flange head M8 x 1.25 x 25 2 Gaskets, manifold	4 Washers, flat M8 2 Plugs, 3/8" NPT 2 Plugs, 1/8" NPT 1 Tool 6mm, hexagonal bit 1 Threadlocker, blue
---------------------------------	---	---	---



Complete Kit w/ Parts

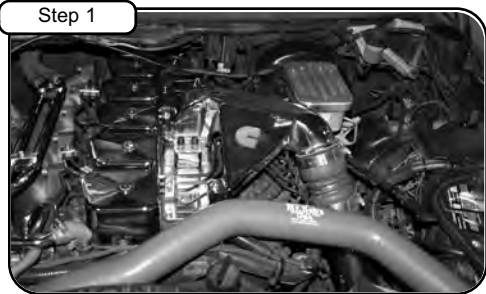

Stock Intake Manifold.



Use 7/16" deep socket with ratchet to loosen the intercooler coupler hose clamp. Remove the screw holding engine oil dipstick.



With 10mm socket and extension, remove the 5 screws holding the stock manifold.



Carefully remove stock manifold out of vehicle. (Place a clean shop rag over air grid heater to prevent anything from entering)



Apply threadlocker to 1/8" NPT plugs. Install to aFe manifold using 3/16" allen key.



Insert the 2 shorter M8 socket cap screws through aFe manifold. Hold washer against inside mounting flange of aFe manifold and feed screw completely through. Insert the two longer M8 screws w/ washers through the outside mounting bosses.



Remove both top and bottom stock gaskets away from air grid heater. Replace with new gaskets provided. (May require a scraper or scotch brite to clean sealing surfaces.)



Apply threadlocker to the four mounting screws.



Carefully install aFe manifold into vehicle. Guide screws through gaskets and air grid heater.




Insert aFe manifold into intercooler coupler hose.



With 6mm hexagonal bit provided and 6mm socket, install the four mounting bolts. Do not tighten completely! Use hex flange head screw provided and install on intake plate. Torque screw to 18 ft. lbs..



Torque coupler hose clamp with 7/16" deep socket to 71 in. lbs.. Torque the four mounting screws from Step 11 to 18 ft. lbs..

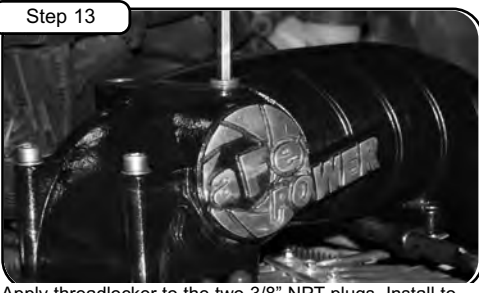

Apply threadlocker to the two 3/8" NPT plugs. Install to top of aFe manifold. Tighten using 5/16" allen key. Torque to 18 ft. lbs..



Re-install the engine oil dipstick with socket cap screw provided.



Your installation is now complete. Please check all screws periodically. Re-tighten if necessary. Thank you for choosing aFe!

Notes: 1) Use provided Threadlocker (P/N 03-50162) on all screws. 2) DO NOT over-tighten bolts. Please tighten to correct torque spec(s). advanced FLOW engineering™ is not responsible for improper install.