



Installation Instructions

Diamond Brite Taillight Kit

Part # 5307


Step # 1

Remove taillight lens, 4 screws
remove Bulbs, (note there are two
different bulbs) and Center Divider;
it is not necessary to remove the
housing from the vehicle.



Step # 2

Insert new reflector,
line up tabs on both
sides of housing,
reflector may be snug,
but will slide in tightly.

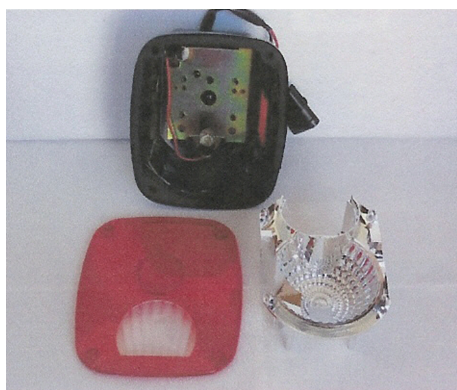

Step # 3

Install bulbs and the new lens
You're done, Enjoy your
new look.

