



PART#: 536-5366 Installation Instructions

Rampage 05-11 Toyota Tacoma Double Cab

PARTS LIST:

1	Driver/Left Sidebar	1	Driver/Left Rear Mounting Bracket
1	Passenger/Right Sidebar	1	Passenger/Right Rear Mounting Bracket
1	Driver/Left Front Mounting Bracket	24	8-1.25mm x 30mm Hex Head Bolts
1	Passenger/Right Front Mounting Bracket	24	8mm ID x 24mm OD x 2mm Flat Washers
1	Driver/Left Middle Mounting Bracket	24	8mm Lock Washers
1	Passenger/Right Middle Mounting Bracket		



PROCEDURE:

- 1. REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY.**
- Starting on the driver side front of the vehicle, use a flat screw driver to remove the plastic plugs. Partially attach driver side front Mounting Bracket to vehicle using the included (2) 8mm x 30mm Hex Head Bolts, (2) 8mm Lock Washers, and (2) 8mm Flat Washers. Repeat this step for center and rear Mounting Brackets.
- Align holes on the Side Bar with holes on the Mounting Brackets. Attach Side Bar to Mounting Brackets with the included (6) 8-1.25mm x 30mm Hex Head Bolts, (6) 8mm Flat Washers and (6) 8mm Lock Washers. Do not tighten at this time.
- Level and adjust Sidebar properly and tighten all hardware.
- Repeat Steps 2-4 for passenger Sidebar.
- Do periodic inspections to the installation to make sure that all hardware is secure and tight.

To protect your investment, wax this product after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish.


For stainless steel: Aluminum polish may be used to polish small scratches and scuffs on the finish. Mild soap may be used also to clean the Sidebar.

For gloss black finishes: Mild soap may be used to clean the Sidebar.

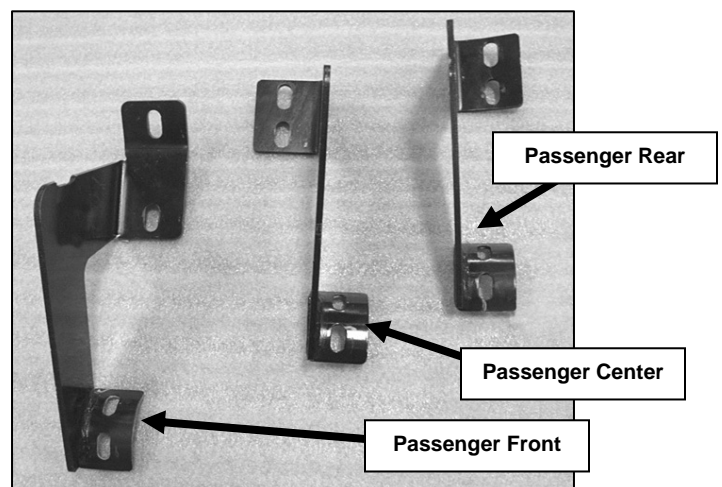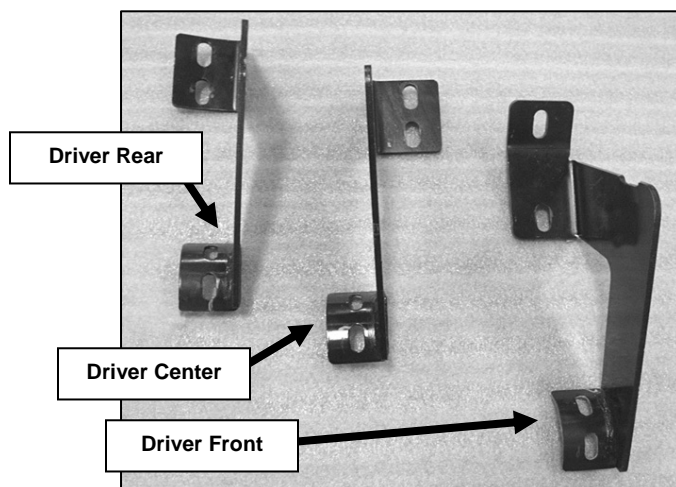


Driver Side Installation Pictured

Driver Side Front Bracket

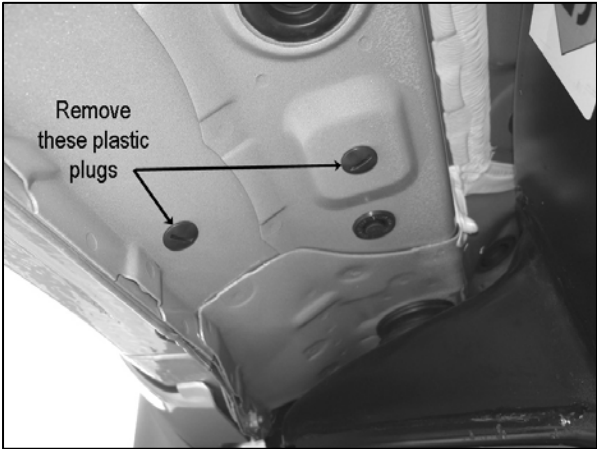

Driver Side Center Bracket Pictured

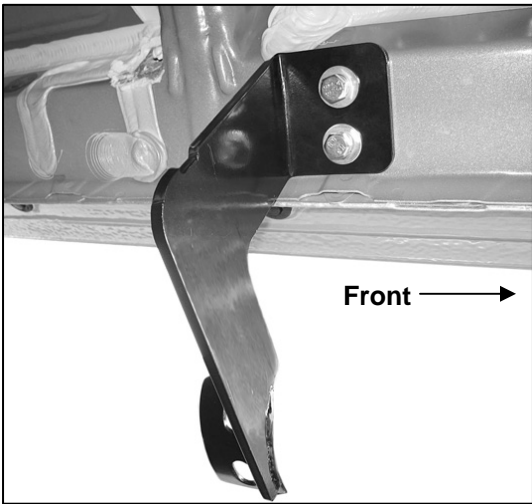

Driver Side Rear Bracket Pictured

