

### 97-01 FORD F-150 with FENDER FLARES FRONT MUD GUARDS INSTALLATION INSTRUCTIONS

*Please read instructions thoroughly before installation.*

#### **Tools Required:**

- 1/8" drill bit / Drill
- Short Phillips screwdriver or drill attachment
- Marking utensil (fine tip marker, grease pencil, etc.)

#### **Package Contents**

- Driver & passenger side mud guard
- #10 screw (qty. 8)
- U-clip (qty. 4)
- Instruction sheet

**NOTE:** Turn the front wheels all the way to the left or right for mud guard installation. However, it may be necessary to remove the wheels depending on the tools being used for installation.

1. Clean and degrease the mud guard location area on the fender before installation.
2. Remove factory fastener from location A (Figure 1).
3. Attach mud guard to front fender with the factory fastener at location A, check fit and alignment. Adjust accordingly before tightening.
4. Using the mud guard as a template, mark and drill 1/8" hole at locations B & C into fender flare and D & E into the fender liner.
5. Install a #10 screw at locations C & D.
6. Install a #10 screw through location B and into a U-clip on the backside of the fender flare (Figure 2).
7. Install a #10 screw through location E and into a U-clip on the backside of the liner (Figure 3).

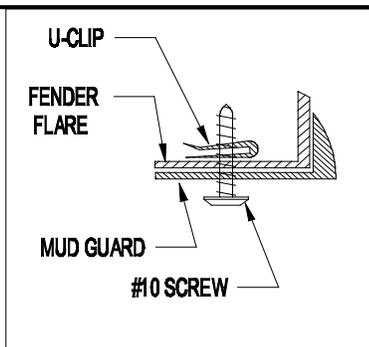


Figure 2

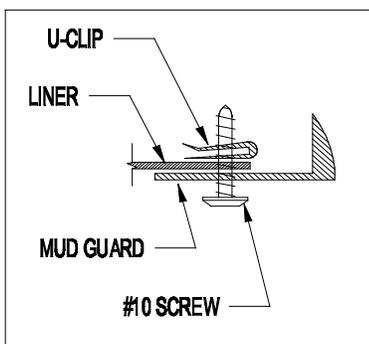


Figure 3

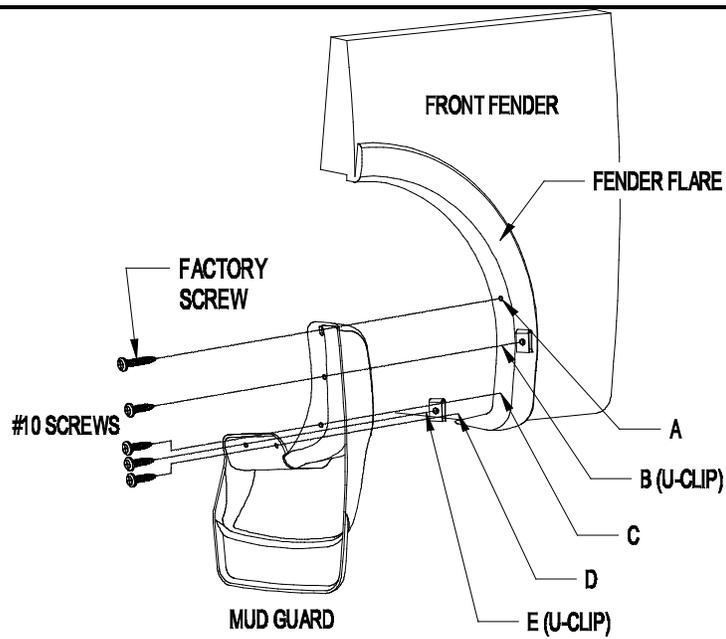


Figure 1

#### **PAINTING INSTRUCTIONS**

1. Clean mud guard with a soap and water solution to remove dirt and other contaminants.
2. Sand painting surface with 320 grit sand paper.
3. Apply a coating of flexible primer-adhesion promoter.
4. Apply a flexible paint as directed by the paint manufacturer