

**HUMMER H2  
REAR MUD GUARDS  
INSTALLATION INSTRUCTIONS**

*Please read instructions thoroughly before installation.*

**Tools Required**


- Short Phillips screwdriver
- Center punch / Hammer
- Drill / 1/8" drill bit

**Package Contents**

- Driver (LH) & passenger (RH) side front mud guard
- #10 screw (qty. 6)
- Washer (qty. 4)
- U-Clips (qty. 4)
- Instruction sheet

**NOTE:** It may be necessary to remove the wheels depending on the tools being used for installation.

1. Clean and degrease the mud guard location area on the fender before installation.
2. Remove factory fasteners from locations A and B (Figure 1).
3. Place mud guard against fender and install #10 screws and washers at locations A and B, through mud guard, through existing fender holes and into u-clips. NOTE: The u-clips are to be used as a nut and not to be clipped over fender. Check fit and level before tightening.
4. Using mud guard as a template, drill an 1/8" hole at location C and install a #10 screw.

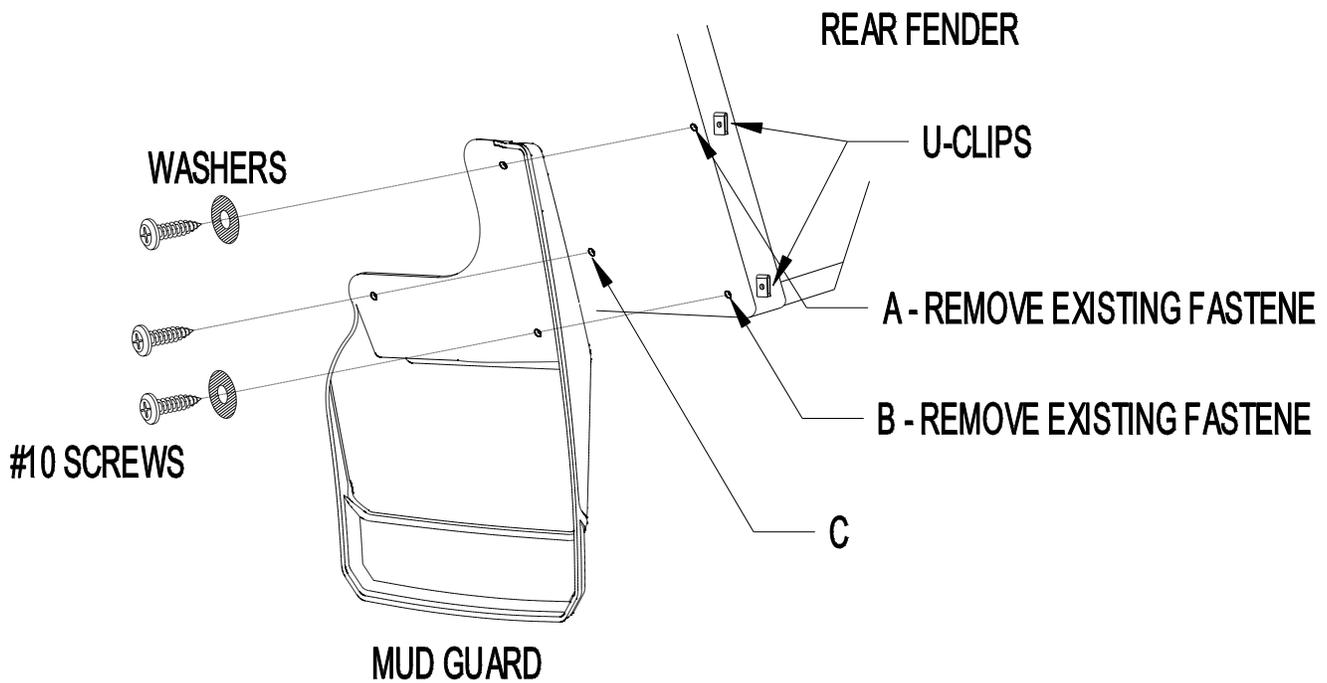

**Figure 1**

**PAINTING INSTRUCTIONS**

1. Clean mud guard with a soap and water solution to remove dirt and other contaminants.
2. Sand painting surface with 320 grit sand paper.
3. Apply a coating of flexible primer-adhesion promoter.
4. Apply a flexible paint as directed by the paint manufacturer.