

THANK YOU FOR SELECTING A HUSKY FLOOR LINER FROM WINFIELD CONSUMER PRODUCTS


CARE AND USE INSTRUCTIONS

Your new floor liner is custom molded to fit your particular vehicle. The liner is made to take the place of your factory floor mats. For correct fit, it is necessary to remove the factory floor mat before installing your new floor liner. *However, do not remove the factory-installed carpeting.*

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liner slick.


INSTALLATION INSTRUCTIONS FOR YOUR HONDA CR-V SECOND SEAT FLOOR LINER

FRONT OF VEHICLE

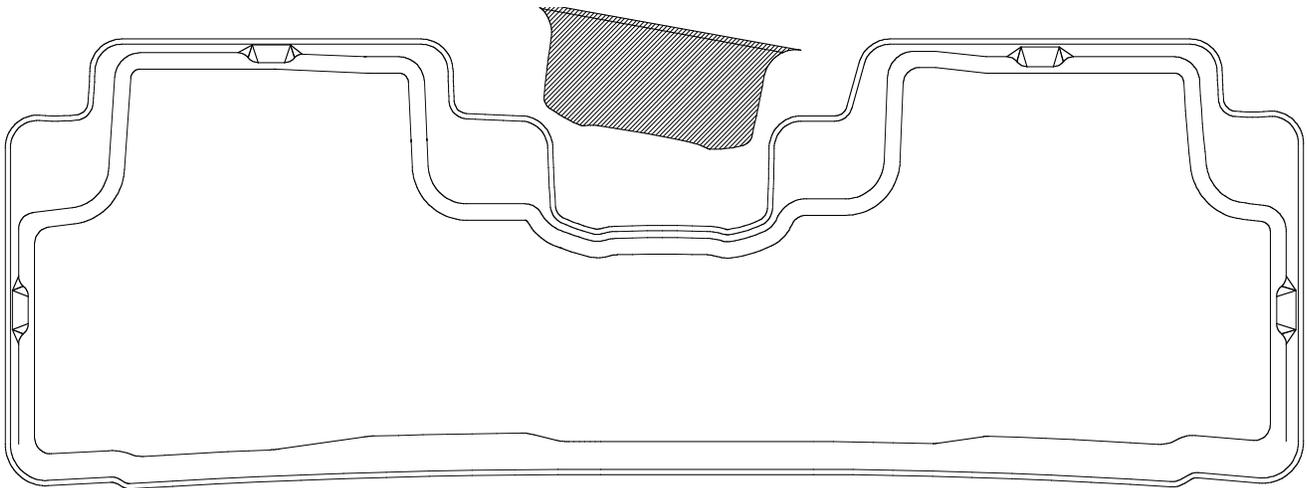

TO EASE INSTALLATION OF YOUR HONDA CR-V SECOND SEAT LINER, FIRST MOVE BOTH OF THE FRONT SEATS TO THEIR MOST FORWARD POSITION. NEXT, POSITION THE LINER IN YOUR VEHICLE AS SHOWN DEPICTED ABOVE. ONCE LINER IS INSTALLED, REPOSITION FRONT SEATS AS DESIRED. IF YOUR CR-V IS EQUIPPED WITH A FACTORY CONSOLE BETWEEN THE FRONT BUCKET SEATS, YOU WILL NEED TO TRIM YOUR LINER TO ACCOMMODATE THIS OPTION. TO TRIM, SIMPLY FOLLOW THE EDGE OF THE MOLDED STEP (REMOVING THE TREAD PLATED AREA) AS SHOWN ABOVE. PICTURES OF THE TRIMMED PART ARE SHOWN ON THE BACK OF THIS PAGE. A UTILITY KNIFE OR HEAVY SHEARS WORK WELL FOR TRIMMING.

PART #6465 SHOWN UNTRIMMED. USE EDGE OF
RAISED BAND AS A TRIMMING GUIDE.

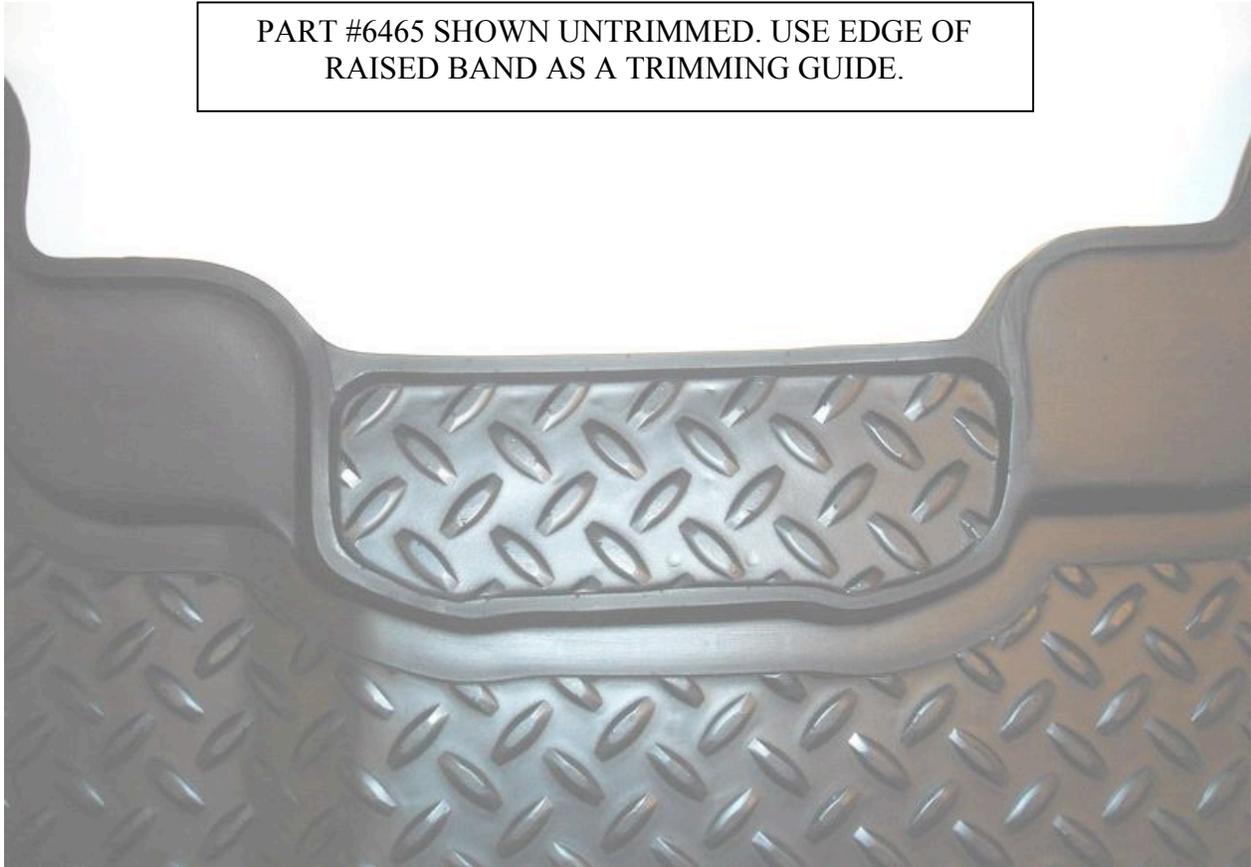

PART #6465 SHOWN TRIMMED FOR USE IN VEHICLES
WITH FACTORY CENTER CONSOLE.

