

671211X
2015 GMC Sierra
2500/3500 HD



671211X
2015 GMC Sierra
2500/3500 HD

2015 GMC Sierra 2500/ 3500 HD **X-Metal Grille Insert**

TOOLS REQUIRED:


Flat Head Screwdriver
Phillips Screwdriver
Cutting Wheel
10mm Socket
Ratchet & Extensions
3/6" Drill Bit
Drill

PARTS LIST

8- #8 screw 3/4"
8- #8 flat nuts
2- 1"x1/4" fender washer
2- flange speed nut
1- small X-Metal logo
2- 6-32 flange nuts

NOTE:

- We recommend painting all areas exposed behind grille black prior to installing for best results.

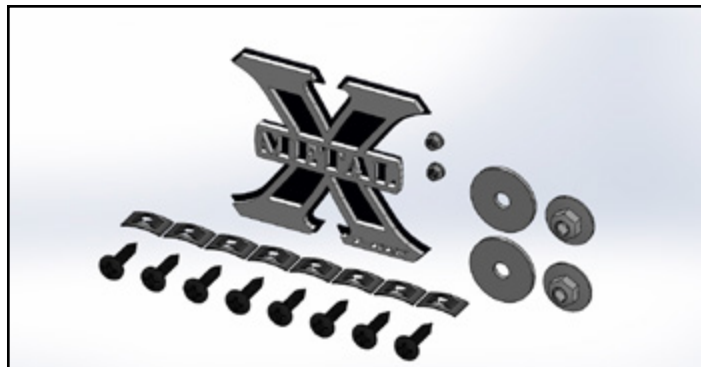

PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE INSTALLATION. Auto makers offer varied models to each vehicle and occasionally manufacture more than one body style of the same model. To assure your part is correct; our tech department can be contacted at tech@trexbillet.com to verify fitment or assist with tech questions. All other inquiries can be directed to info@trexbillet.com. In the event you do not have internet access please call 1-800-287-5900.


Step 1

Open hood and remove the 12 plastic push clips securing the plastic radiator shroud to the radiator core. Carefully use a flat head screwdriver to release the clip up, you can now remove the clips. Once all clips have been removed the plastic radiator shroud can be removed. (Fig 1)



Step 2

Using your 10mm socket and ratchet remove the four (4) 10mm bolts securing the upper grille assembly to the radiator support. (Fig 2)

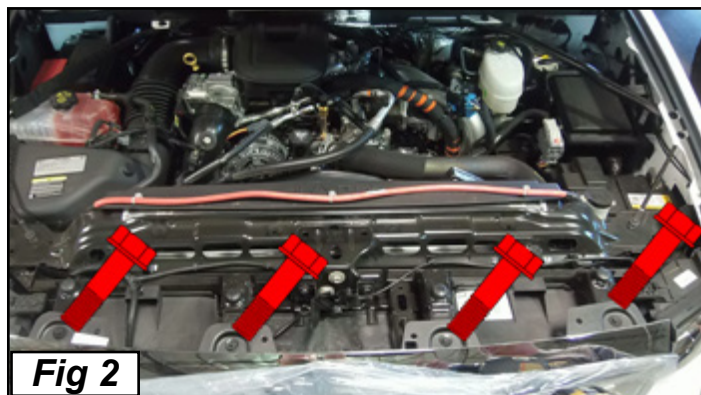

671211X

2015 GMC Sierra
2500/3500 HD



671211X

2015 GMC Sierra
2500/3500 HD


Step 3

Gently lift the top of grille assembly up while pulling back at the same time. Depress the four (4) release tabs located on the inside of the factory grille assembly with your flat head screwdriver. Firmly grasp the grille pulling away from the vehicle to remove it. (Fig 3)




Step 4

Using a cutting wheel carefully cut away the center section of the grille assembly. Afterwards use a file or sandpaper to clean up any sharp or jagged edges. (Fig 4)

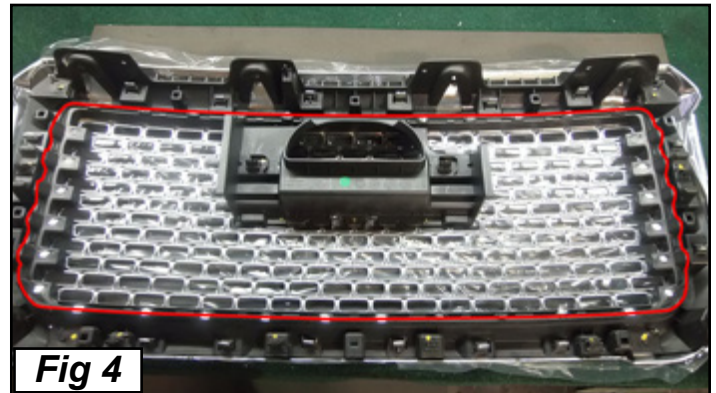

Step 5

Flip grille face down and place billet grille into grille opening. Align the tabs to the inner grille shell. Carefully drill a 3/16" hole, use the pre drilled holes on the grille tabs as guides . (Fig 5)

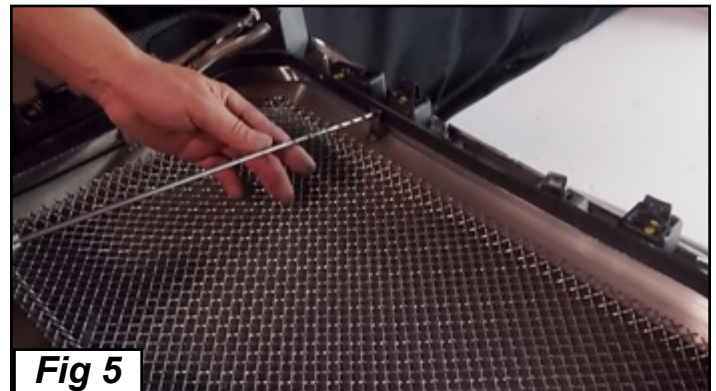

671211X
2015 GMC Sierra
2500/3500 HD



671211X
2015 GMC Sierra
2500/3500 HD

Step 6

Secure the grille assembly with the screws and U nuts.
(Fig 6)



Fig 6

Step 7

Your installation is now complete. Reattach the grille assembly back to the vehicle in reverse order of removal. Make sure you reattach all clips and screws.
(Fig 7)



Fig 7

671211X
2015 GMC Sierra
2500/3500 HD



671211X
2015 GMC Sierra
2500/3500 HD

2015 GMC Sierra 2500/3500 HD **OEM Emblem Installation Kit**

TOOLS REQUIRED:

10mm Wrench
Locking Pliers

NOTE: Factory Emblem is not supplied with grille kit.

Step 1

Remove the OE emblem from the factory grille by depressing the tabs securing the emblem to the grille. (Fig 1)



Step 2

Break off all mounting tabs from the back of the emblem, leave just the two exposed plastic studs. (Fig 2)



Step 3

Position emblem in center of grille and secure with washers and nuts.(Fig 3)



Step 4

Your Installation is now complete. (Fig 4)

