

6729380  
6729381  
12-13 TOYOTA  
TACOMA



6729380  
6729381  
12-13 TOYOTA  
TACOMA

## 12-13 TOYOTA TACOMA

### X-Metal Bumper Grille

Install time: 20 Mins.

**TOOLS REQUIRED:**

Socket Wrench

**PARTS LIST:**

- (1) X-Metal Grille
- (4) 2" J-Hooks
- (4) 6/32 Nylon Lock Nuts

PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE ATTEMPTING INSTALLATION.

**IF YOUR HANDS REACH FROM BEHIND THE BUMPER SKIP TO FIG. 2**

- Remove 2 Bolts and 1 Clip along the top of the Factory Grille. (Fig.1)
- Unclip 8 Clips along the Bottom of the Factory Grille to Remove.
- Bend the Top Threaded Studs on the Mesh Grille a bit. (Fig. 2)
- Place Bumper Grille onto the Factory Bumper Opening. (Fig. 3)
- From behind the Bumper Opening, Place a J-hook on the Threaded Stud to Latch onto the Factory Bumper Grille, Tighten with provided Nylon Lock Nuts. (Fig. 4)

### Installation Complete

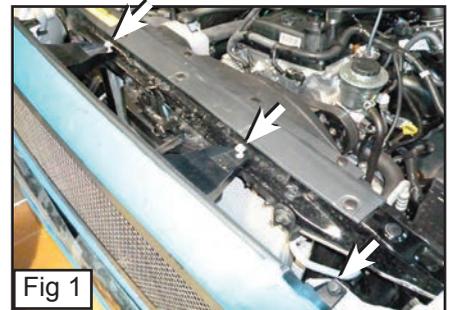


Fig 1



Fig 2



Fig. 3

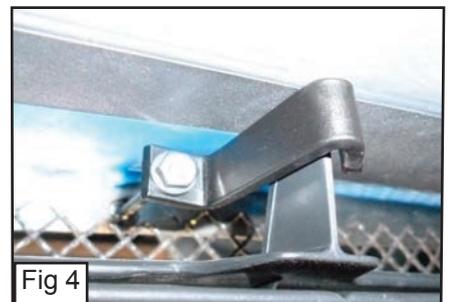


Fig 4