

# THANK YOU FOR SELECTING A HUSKY FLOOR LINER FROM WINFIELD CONSUMER PRODUCTS


## CARE AND USE INSTRUCTIONS

---

Your new floor liner is custom molded to fit your particular vehicle. The liner is made to take the place of your factory floor mats. For correct fit, it is necessary to remove the factory floor mat before installing your new floor liner. *However, do not remove the factory-installed carpeting.*

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409<sup>®</sup> or Glass Plus<sup>®</sup> work well. Use of Armor All<sup>®</sup>, Son-of-a-Gun<sup>®</sup> or similar items is discouraged as these products make the liner slick.

### INSTALLATION INSTRUCTIONS FOR YOUR BUICK ENCLAVE/CHEVROLET TRAVERSE/GMC ACADIA/SATURN OUTLOOK 3<sup>RD</sup> SEAT FLOOR LINER—FITS VEHICLES WITH 2<sup>ND</sup> ROW BUCKETS SEATS (USE

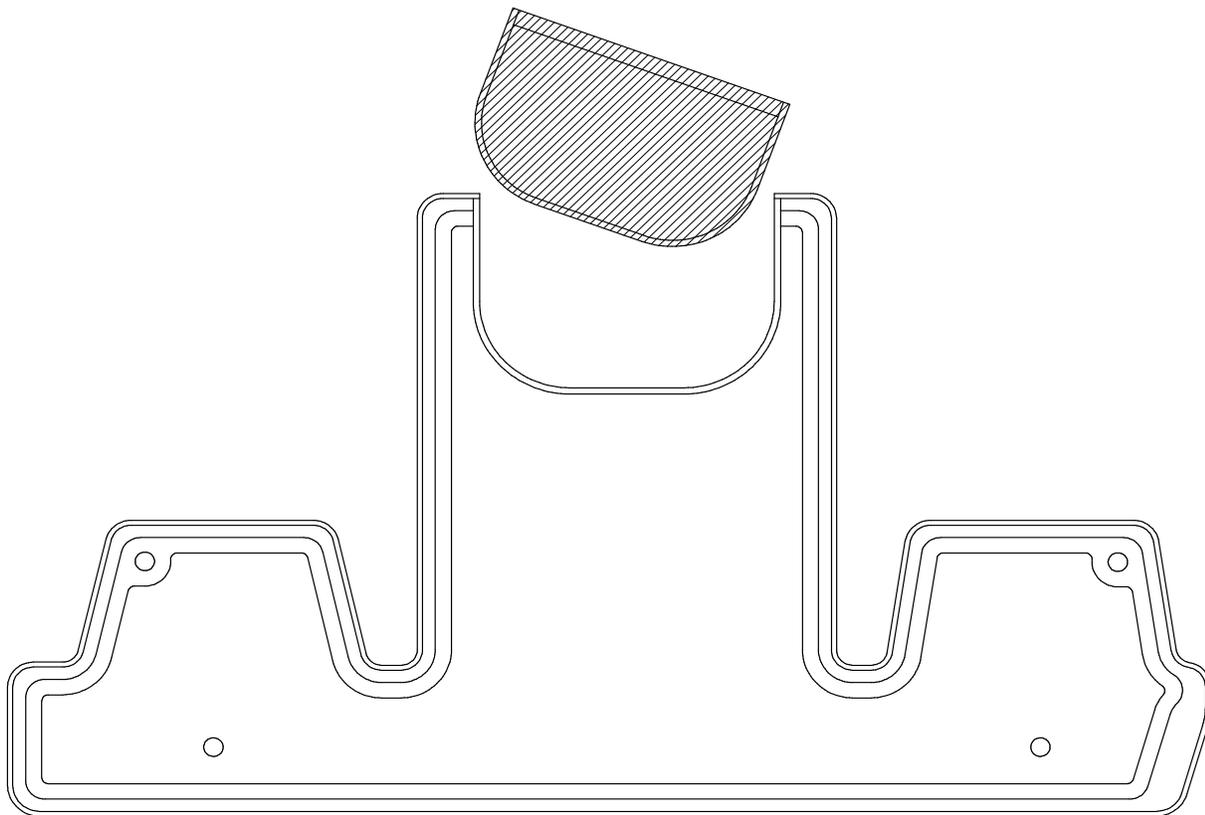

TO EASE INSTALLATION OF YOUR 3<sup>RD</sup> SEAT LINER MOVE BOTH OF THE 2<sup>ND</sup> ROW BUCKET SEATS TO THEIR MOST FORWARD POSITION (THE SELF STORING POSITION OFFERS THE MOST ROOM FOR INSTALLATION). IF YOU HAVE THE 2<sup>ND</sup> ROW LINER INSTALLED, YOU WILL WANT TO REMOVE IT FIRST. WITH THE 2<sup>ND</sup> ROW SEATS OUT OF THE WAY, INSTALL THE LINER AS DEPICTED IN THE DRAWING ABOVE. NOTE THAT IF YOUR VEHICLE HAS A CONSOLE BETWEEN THE SECOND ROW SEATS, YOU WILL NEED TO TRIM YOUR LINER BEFORE INSTALLING. TO TRIM, USE A UTILITY KNIFE OR HEAVY SHEARS AND FOLLOWING THE STEP IN THE RAISED MOAT, REMOVE THE “U” SHAPED PORTION OF THE LINER AS SHOWN ABOVE. LASTLY, REPOSITION THE SECOND ROW SEATS TO AS NEEDED.