

PART NO. 84690 & 84695

Instruction Sheet

HONDA CASTER SPACERS

85690 = 1/8° approx. change



85695 = 1/4° approx. change

This part should only be installed by personnel who have the necessary skill, training and tools to do the job correctly and safely. Incorrect installation can result in personal injury, vehicle damage and / or loss of vehicle control.

1. Before beginning any alignment, always check for loose or worn parts, tire pressure, and odd tire wear patterns. Determine change needed. Remove the nut at the front of the strut rod.
2. Remove two bolts and nuts attaching strut rod to lower control arm.
3. Slide the strut rod back out of the bushing assembly. Remove the large washer from the strut rod and install correct spacers for the amount of negative caster change needed. Remove spacers to make a positive caster change (see illustrations).
4. Re-install the strut rod. Torque nuts and bolts to manufacturer's specifications.

Always check for proper clearance between suspension components and other components of the vehicle.

5. Re-sweep caster and check readings. Complete alignment and road test vehicle.

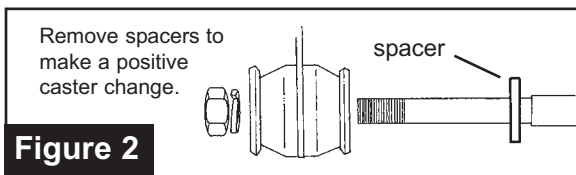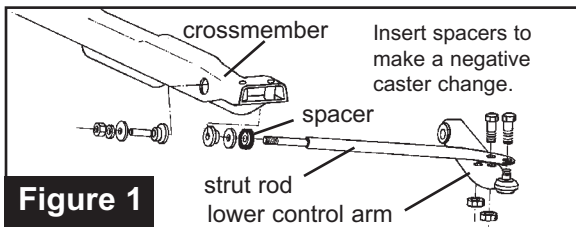

**Specialty
Products
Company®**

P.O. Box 923 • Longmont, CO 80502 • (303) 772-2103

www.specprod.com • www.spcperformance.com

Email: info@specprod.com

Printed in U.S.A.

Toll Free Technical Hot Line: 1-800-525-6505

©2007 Niwot Corp. dba Specialty Products Co®. • Form No. 94690 • Rev.3/07