



Toyota Prius Driver & Passenger Side Extender Guide

Installation Guide: Thank you for purchasing extendmyseat brackets. Please follow the directions carefully and within 30 minutes you will be loving your new seats.

Inventory in Box:

- 2- extendmyseat brackets
- 4- black 3/8 stainless bolts

What you will need for assembly:

- 1- socket wrench
- 1- Metric 14 socket

Step 1- Remove the 2 Black extendmyseat brackets from the packaging and locate the 4 black 3/8" provided bolts.

Step 2- Go to your vehicle with a socket wrench and a metric14 socket, eye protection and your keys. Remember to turn off your cabin lights.

Step 3- Locate the 4 factory bolts that hold your drivers seat to the vehicle. Take your socket wrench and loosen the 4 factory bolts. (2 in the front and 2 behind your seat, go to rear seat to locate) Remove the 2 plastic guards to locate the 2 rear factory bolts. Remove the 4 factory bolts and set them aside.



Step 4- Move your seat all the way back. Now lift the front of your seat up so you can slide the brackets under the seat (below is what it would look like if you removed your entire seat). "your seat will be doing a wheelie"




**This demo vehicle has the navigation package. You most likely will not have a box under your seat.*

Step 5- Grab your brackets and lay them out like below for the drivers side installation.



Step 6- Start by finger tightening the rear factory hole with the factory bolt (closest to the outside of the car) then finger tighten the 2 front factory locations using the factory bolts. The last location will be the rear inside. You will finger tighten all of the factory bolts into the factory hole locations. Don't tighten the factory bolts until later.

Step 7- Go to the front seat and line up the seat to the new extended hole locations (4" back from the factory holes). Finger tighten the 2 front seat "feet" into the new ExtendMySeat hole locations using the ExtendMySeat bolts.

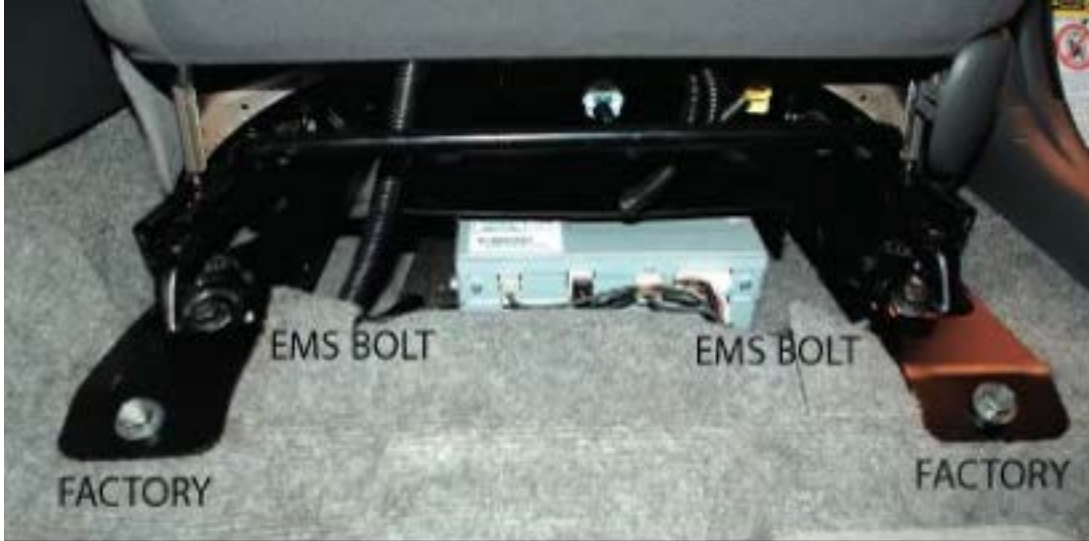

Step 8- Press seat lever and slide seat to the most up front position. Go to back seat and screw down the remaining 2 factory feet with the factory bolts.



Step 9- ONCE ALL 8 BOLTS ARE FINGER TIGHT; NOW COMPLETE THE INSTALLATION BY SECURING THE 8 BOLTS (4 factory and 4 EMS). CHECK TO MAKE SURE ALL 8 BOLTS ARE NOW TIGHT AND SECURE.

Step 10- Re-install 2 factory plastic guards

Step 11- TEST OUT THE SEAT BY SLIDING THE SEAT BACK AND FORTH. YOU ARE COMPLETE.

To view a video on installation, please visit our YouTube.com channel searching for the channel "ExtendMySeat".

If you are installing the passenger side, repeat the above steps on the passenger side.