



Toyota Prius GEN 3 Driver and Passenger Side
Extender Guide

Installation Guide: Thank you for purchasing extendmyseat brackets. Please follow the directions carefully and within 30 minutes you will be loving your new seats.

Inventory in Box:

3 extendmyseat brackets

4- black 3/8 stainless bolts

Optional - small metal flat piece for passenger installation with JBL sound package.

What you will need for assembly:

1- socket wrench

1- Metric 14 socket

Step 1- Remove the Black extendmyseat brackets from the packaging and locate the 4 black 3/8" provided bolts.

Step 2- Go to your vehicle with a socket wrench and a 9/16 socket, eye protection and your keys. Remember to turn off your cabin lights.

Step 3- Locate the 4 factory bolts that hold your seat to the vehicle. Take your socket wrench and loosen the 4 factory bolts. (2 in the front and 2 behind your seat, go to rear seat to locate) Remove the 2 rear plastic guards to locate the 2 rear factory bolts. Remove the 4 factory bolts and set them aside



Step 4- Move your seat all the way back. Now lift the front of your seat up so you can slide the brackets under the seat (below is what it would look like if you removed your entire seat). "your seat will be doing a wheelie"



**This demo vehicle has the navigation package. You most likely will not have a box under your seat.*

Step 5- Grab your brackets and lay them out like below for the drivers side installation. Passenger side layout is flipped so the one long bracket is installed towards the outside of the car. The 2 smaller pieces always go towards the inside of the vehicle with the smaller tabbed piece in the front most bolt(like below). The rear angled small bracket goes into the rear inside location.





Step 6- Start by finger tightening the rear factory hole with the factory bolt (closest to the outside of the car) then finger tighten the 2 front factory locations using the factory bolts. The last location will be the rear inside. You will finger tighten all of the factory bolts into the factory hole locations. Don't tighten the factory bolts until later. (The above 2 piece design is just a guide to show you the direction of the brackets; the front of the car is to the left of the photo). (you may or may not have a small electrical box under your seat, depending on your model. *If you have a electrical box under your seat, please follow Step 6B.*)

Step 6B-


1-Remove the black cover.

2-Unscrew both of the two (BIG) bolts securing the electrical box bracket to the floor.



3. Move the electrical box (including bracket) over one bolt to the left and secure to the floor with just the one bolt .The main part of the elect. box bracket won't be bolted. This will leave only one big bolt to secure the electrical box (more than enough support and secure the elect. box).
4. Install the EMS front B (smaller non 90 degree angled) bracket.

Step 7- Go to the front seat and line up the seat to the new extended hole locations (4" back from the factory holes). Finger tighten the 2 front seat "feet" into the new ExtendMySeat hole locations using the ExtendMySeat bolts.

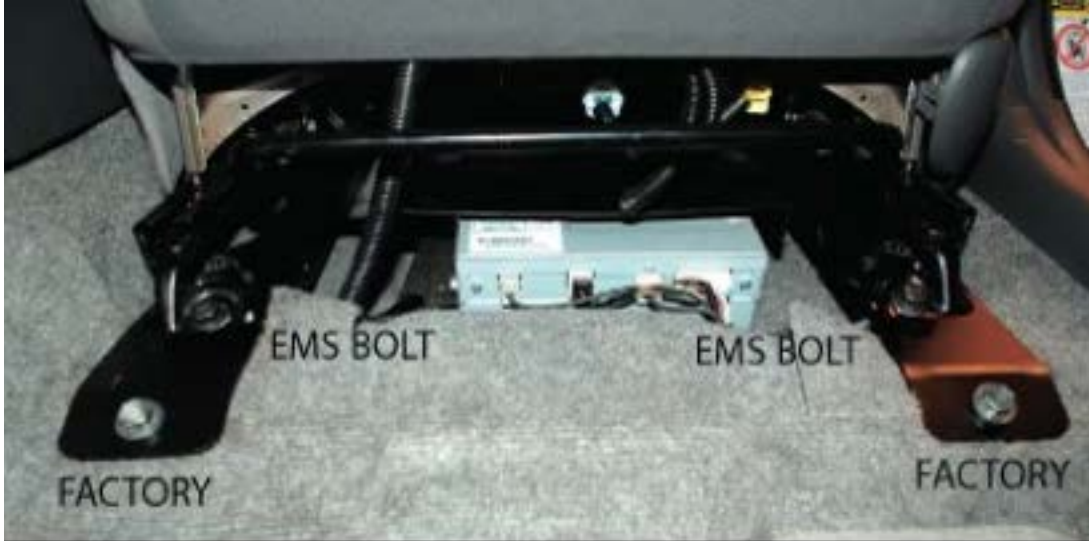

Step 8- Press seat lever and slide seat to the most up front position. Go to back seat and screw down the remaining 2 factory feet with the factory bolts.



Step 9- ONCE ALL 8 BOLTS ARE FINGER TIGHT; NOW COMPLETE THE INSTALLATION BY SECURING THE 8 BOLTS (4 factory and 4 EMS). CHECK TO MAKE SURE ALL 8 BOLTS ARE NOW TIGHT AND SECURE.

Step 10- Re-install 2 factory plastic guards

Step 11- TEST OUT THE SEAT BY SLIDING THE SEAT BACK AND FORTH. YOU ARE COMPLETE.

To view a video on installation, please visit our YouTube.com channel searching for the channel "ExtendMySeat".

If you are installing the passenger side, repeat the above steps on the passenger side.