



Toyota Prius C Extender Guide

Toyota Prius C (2012-Present) Extender Install Guide

Installation Guide: Thank you for purchasing The ExtendMySeat brackets. Please follow the directions carefully and within 30 minutes you will be enjoying your much needed legroom.

Inventory in Box:

- 4- ExtendMySeat black brackets
- 4- Black 3/8 X 3/4" High Strength grade 8 bolts

What you will need for assembly:

- 1- Socket wrench
- 1- Metric 9 socket or 12-point Metric 9 socket

Step 1- Remove the 4 Black ExtendMySeat brackets from the packaging and locate the 4 - #10 (12 pt) x 1.5mm X 20mm long provided ExtendMySeat bolts.

Step 2- Go to your vehicle with your metric mm9 socket and eye protection.

Step 3- Start by loosening and removing the 2 factory bolts in the front seat of the car and move to the rear. Slide your seat all the way forward.



Move to the backseat and remove the 2 plastic guards. Locate and remove the 2 rear factory bolts.

Step 4- Move your seat all the way back. Now lift the front of your seat up so you can slide the brackets under the seat.

Toyota Prius C (2012-Present) Extender Install Guide

Step 5- Lay down the 4 black brackets under the seat so the 4 factory holes lineup (you can choose to remove your seat but it is not necessary) Parts are etched with “O” for outer (towards the outside of the car) and “I” for inner (towards the center of the car). The arrows always should point towards the front of the vehicle



View of Front Outer

View of Rear Outer

Step 6- Start by finger tightening the rear outer factory hole with the factory bolt (closest to the outside of the car) then move to the rear inside and continue in a counter-clockwise pattern. You will finger tighten all of the factory bolts into the factory hole locations..




(View of the front of the seat)

Step 7 – Once you have all 4 of the factory holes finger tight; now finger bolt all of the ExtendMySeat bolts in a counterclockwise pattern

Toyota Prius C (2012-Present) Extender Install Guide

Step 8- Slide the factory seat all the way forward and go the backseat of the car to secure the rear bolts and then move to the front.

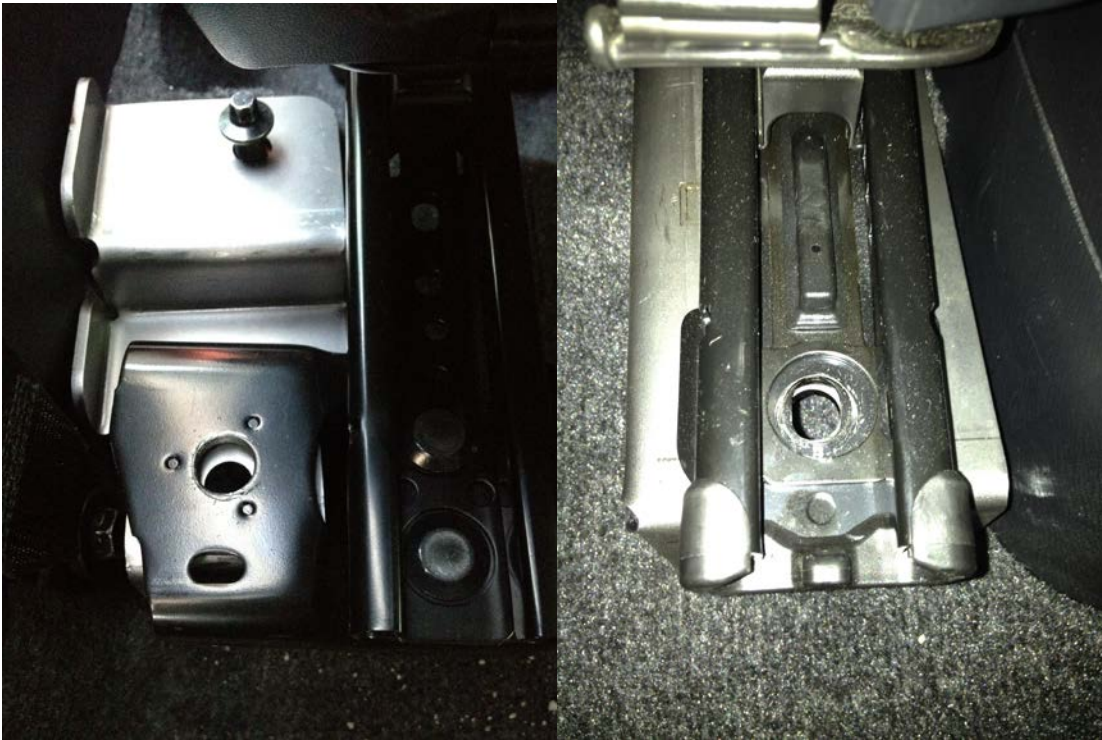

(View from backseat looking at the outer and inner bracket)

Step 9- ONCE ALL 8 BOLTS ARE FINGER TIGHT; NOW COMPLETE THE INSTALLATION BY SECURING THE 8 BOLTS TIGHT (4 Factory & 4 EMS). CHECK TO MAKE SURE ALL 8 BOLTS ARE NOW TIGHT AND SECURE.

Step 10 – Re-install 2 rear factory plastic guards.

Step 11- TEST OUT THE SEAT BY SLIDING THE SEAT BACK AND FORTH.

Step 12 - YOU ARE COMPLETE.

To view a video on installation, please visit our YouTube.com channel searching for the channel “ExtendMySeat”.

Enjoy

-Griffin