



Toyota RAV4 Driver Side
Extender Guide

Installation Guide: Thank you for purchasing extendmyseat (EMS) brackets. Please follow the directions carefully and within 30 minutes you will be loving your new seats.

Inventory in Box:

- 2 - extendmyseat brackets
- 2- black 3/8 stainless bolts
- 2 - stainless 3/8 bolts

What you will need for assembly:

- 1- socket wrench
- 1- Metric 14mm socket (Prius uses metric however a 9/16 works)

Step 1- Remove the Black extendmyseat brackets from the packaging and locate the clear bolt baggie.

Step 2- Go to your vehicle with a socket wrench and a metric 13 socket, eye protection and your keys. Remember to turn off your cabin lights.

Step 3- Locate the 4 factory bolts that hold your seat to the vehicle. Take your socket wrench and loosen the 4 factory bolts. (2 in the front and 2 behind your seat, go to rear seat to locate) Remove the 2 plastic guards to locate the 2 rear factory bolts. Remove the 4 factory bolts and set them aside





Step 4- (Optional Step. You do not have to unplug the cables) Unplug the 3 factory cables plugged into your car seat under the front portion of the seat. No tools required. Remember to plug these back in after you have completed the install.

(YOU MAY ALSO CHOOSE TO NOT UNPLUG THE CABLES AND LAY THE SEAT ON THE REAR SEAT OF THE VEHICLE, SKIP TO STEP 7)

Step 5- Remove your car seat carefully. (approximate weight is 25 pounds)

Step 6- Place your driver's seat on a bench or on the ground on a clean sheet, towel etc...(don't want to get it dirty)



Step 7- Grab the 2 extendmyseat brackets




Step 8- Lay down the 2 black brackets inside your vehicle and line up the 4 hole locations. The parts look similar however the 90 degree bends on the brackets need to be facing the out. (see photo)

Start with the front 2 holes. Finger tighten the 2 factory bolts into the 2 front EMS bracket holes. Now line up the 2 rear holes and finger tighten the 2 remaining factory bolts. Finger tighten all 4 holes with seat still out.



Step 9- Place the seat back into the vehicle. Line up seat front holes with EMS front holes. Finger tighten front 2 feet with provided black EMS bolts.

Press seat lever and slide seat to the most up front position. Go to back seat and screw down the remaining 2 factory feet with the stainless EMS bolts.

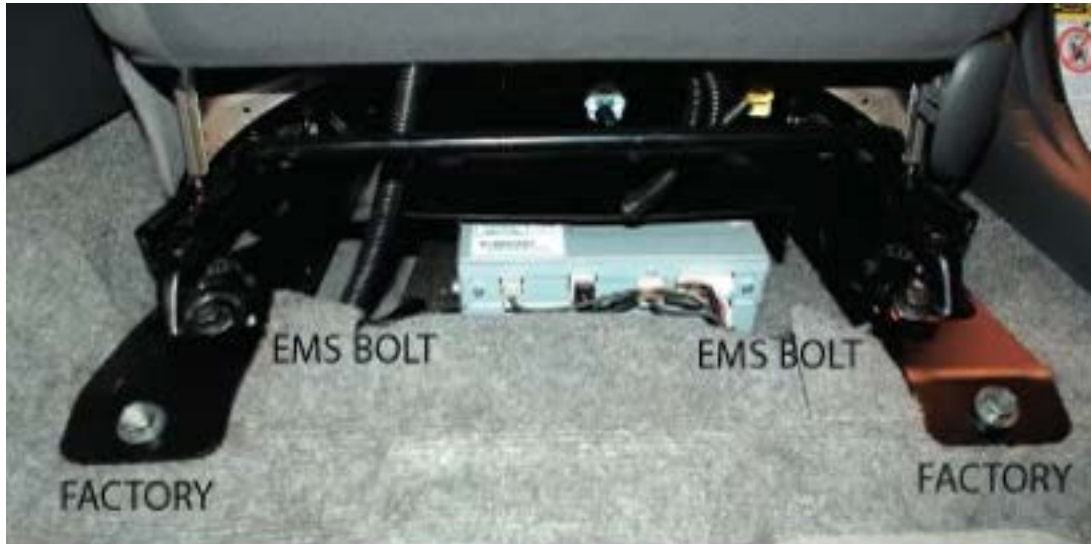

Step 10- Make sure all 8 bolts are tight.

Step 11- Test the seat by sliding the seat back and forth.

Step 13- Last step is to make sure you have reconnected the 3-airbag and seat sensors. Enjoy!