



TOOLS REQUIRED: 5/16" DRILL • 1/2" HEX SOCKET • 1/2" WRENCH • 5/16" NUT DRIVER • 3/8" NUT DRIVER
YOUR BRACKET MOUNT HOLES WILL NEED TO BE DRILLED INTO THE BODY

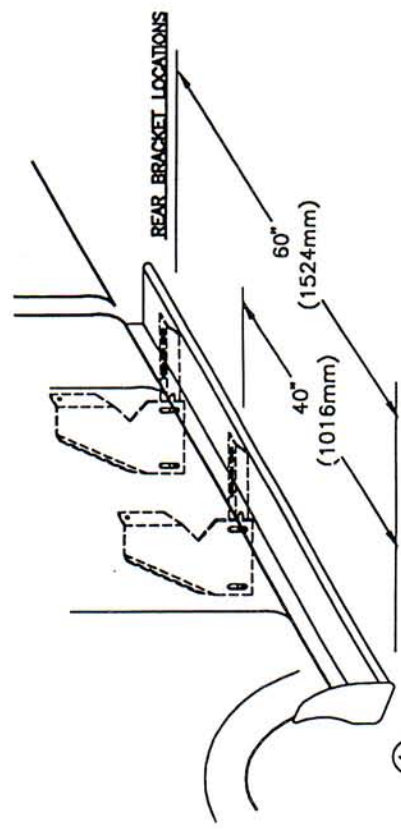


MEASURE FROM FRONT WHEEL WELL TO BRACKET LOCATIONS. MARK THIS DIMENSION ON THE PINCH WELD (DRIVERS SIDE SHOWN)

2 BRACKET ASSEMBLY ASSEMBLE WITH 5/16" BOLTS

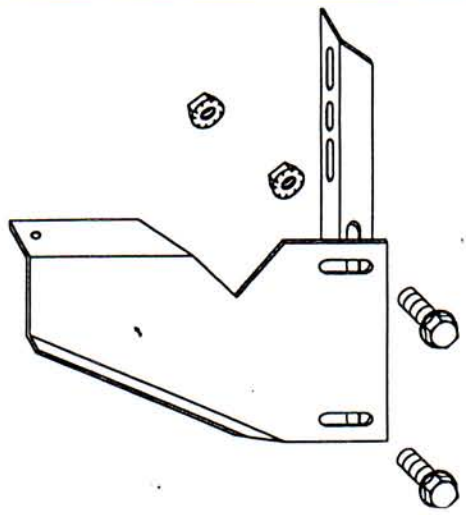


3 BRACKET ASSEMBLY MOUNT TO BODY ASSEMBLE WITH 5/16" BOLTS AND #14 SELF DRILLING TEK SCREW

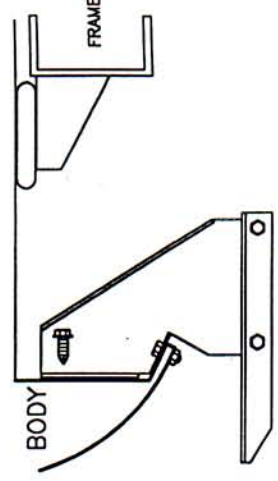


MOUNT AT LOCATION SHOWN AT 1

4 BEND STONE GUARD BY HAND AND KNEE TO FIT THE WHEEL WELL BEFORE INSTALLING TO RUNNING BOARD

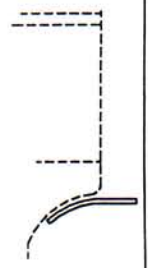


7 INSTALL END CAP TO BOARD WITH 3/8" SELF TAPPING BOLT

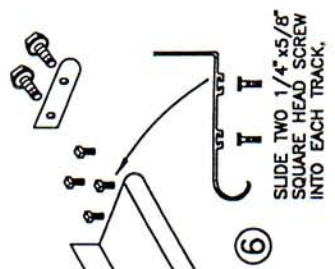

6 SLIDE TWO 1/4"x5/8" SQUARE HEAD SCREW INTO EACH TRACK.


5 FASTEN FRONT STONE GUARD TO BOARDS WITH 3/8" SELF TAPPING BOLT. BEND STONE GUARD BY HAND AND KNEE TO FIT THE WHEEL WELL

7 HOLD BOARD IN PLACE, WITH THE REAR RESTING ON THE BACK BRACKET

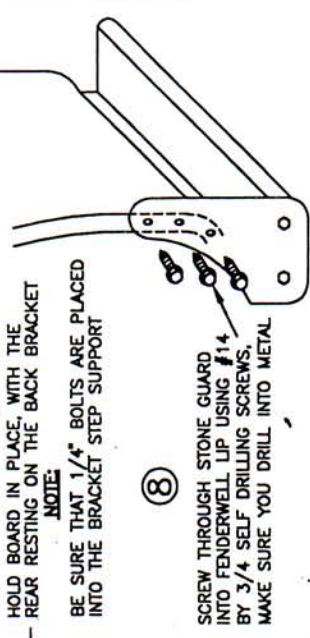

NOTE: BE SURE THAT 1/4" BOLTS ARE PLACED INTO THE BRACKET STEP SUPPORT

8 SCREW THROUGH STONE GUARD INTO FENDERWELL UP USING #14 BY 3/4 SELF DRILLING SCREWS, MAKE SURE YOU DRILL INTO METAL

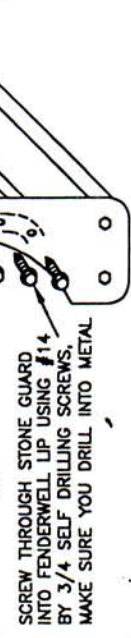

3 PLACES AT EACH STONE GUARD

10 WITH BOARD LEVEL TIGHTEN ALL LOOSE BOLTS

11 REPEAT FOR OTHER SIDE

INSTALLATION PARTS LIST:	QTY.	DESCRIPTION	QTY.	DESCRIPTION
1	1	RUNNING BOARD 1 DRIVER & 1 PASSENGER	1	END CAP 1 LEFT & 1 RIGHT
1	1	STONE GUARD 1 LEFT & 1 RIGHT	16	5/16" x 3/4" WASHER HEAD BOLT
8	8	3/8" x 1 SELF TAPPING SCREW	16	5/16-18 HEX WASHER HEAD NUT
10	10	#14 x 3/4" TEK SCREW	4	FLAT BRACKET, FLOT
8	8	1/4 x 5/8" SQUARE HEAD SCREW	4	HORIZONTAL BRACKET, SUPPORT, 3124F
8	8	1/4-20 HEX NUT		

IN17 05/15/02