


94-CURRENT DODGE STANDARD CAB


IN-18 02/07/01

TOOLS REQUIRED: 5/16" DRILL • 1/2" HEX SOCKET • 1/2" WRENCH • 5/16" NUT DRIVER • 3/8" NUT DRIVER
YOUR BRACKET MOUNT HOLES WILL NEED TO BE DRILLED INTO THE BODY

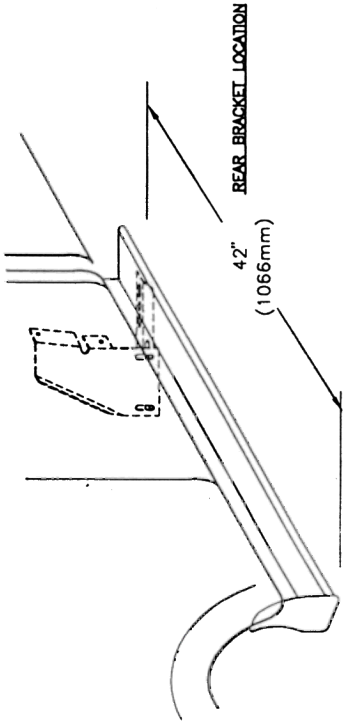


① MEASURE FROM FRONT WHEEL WELL TO BRACKET LOCATION
MARK THIS DIMENSION ON THE PINCH WELD
(DRIVERS SIDE SHOWN)

② BRACKET ASSEMBLY
ASSEMBLE WITH 5/16" BOLTS

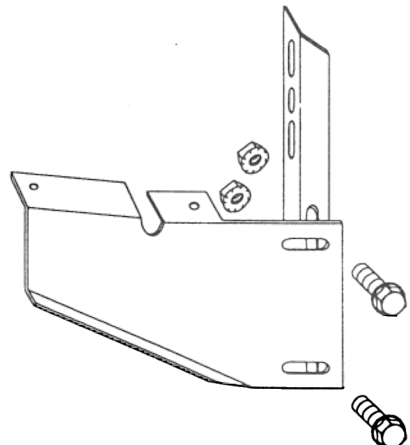

③ BRACKET ASSEMBLY MOUNT TO BODY
ASSEMBLE WITH 5/16" BOLTS AND
#14 SELF DRILLING TEK SCREW

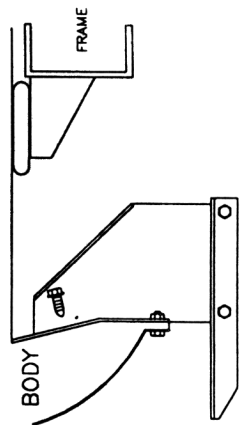

MOUNT AT LOCATION SHOWN AT ①

④

BEND STONE GUARD BY HAND AND
KNEE TO FIT THE WHEEL WELL
BEFORE INSTALLING TO RUNNING BOARD



⑤


FASTEN FRONT STONE GUARD
TO BOARDS WITH 3/8" SELF
TAPPING BOLT. BEND STONE
GUARD BY HAND AND KNEE
TO FIT THE WHEEL WELL

⑦

HOLD BOARD IN PLACE, WITH THE
REAR RESTING ON THE BACK BRACKET
NOTE:
BE SURE THAT 1/4" BOLTS ARE PLACED
INTO THE BRACKET STEP SUPPORT

⑧

SCREW THROUGH STONE GUARD
INTO FENDERWELL UP USING #14
BY 3/4 SELF DRILLING SCREWS.
MAKE SURE YOU DRILL INTO METAL

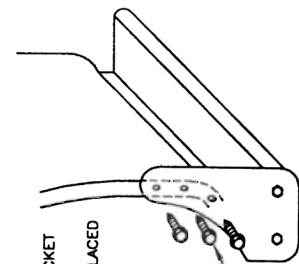

3 PLACES AT EACH STONE GUARD

⑩

WITH BOARD LEVEL TIGHTEN
ALL LOOSE BOLTS

⑪

REPEAT FOR OTHER SIDE


⑦

INSTALL END CAP TO BOARD
WITH 3/8" SELF TAPPING BOLT



⑥

SLIDE ONE 1/4"x5/8"
SQUARE HEAD SCREW
INTO EACH TRACK.

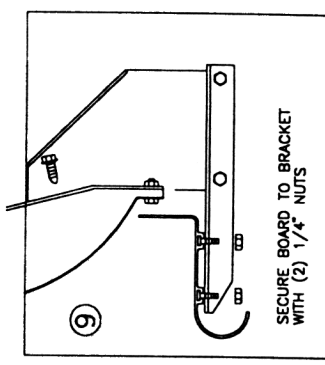

SECURE BOARD TO BRACKET
WITH (2) 1/4" NUTS

INSTALLATION
PARTS LIST:

QTY. DESCRIPTION

- | | | |
|---|----------------------------|------------------------|
| 1 | RUNNING BOARD | 1 DRIVER & 1 PASSENGER |
| 1 | STONE GUARD | 1 LEFT & 1 RIGHT |
| 8 | 3/8"x1 SELF TAPPING SCREW | |
| 8 | #14x3/4" TEK SCREW | |
| 4 | 1/4x5/8" SQUARE HEAD SCREW | |
| 4 | 1/4-20 HEX NUT | |

QTY. DESCRIPTION

- | | | |
|---|------------------------------------|------------------|
| 1 | END CAP | 1 LEFT & 1 RIGHT |
| 6 | 5/16" x 3/4" WASHER HEAD BOLT | |
| 6 | 5/16-18 HEX WASHER HEAD NUT | |
| 2 | FLAT BRACKET | |
| 2 | HORIZONTAL BRACKET, SUPPORT, 3124F | |

IN-18
02/07/01