



TOOLS REQUIRED: 5/16" DRILL • 1/2" HEX SOCKET • 1/2" WRENCH • 5/16" NUT DRIVER • 5/16" NUT DRIVER • 3/8" NUT DRIVER
YOUR BRACKET MOUNT HOLES WILL NEED TO BE DRILLED INTO THE BODY

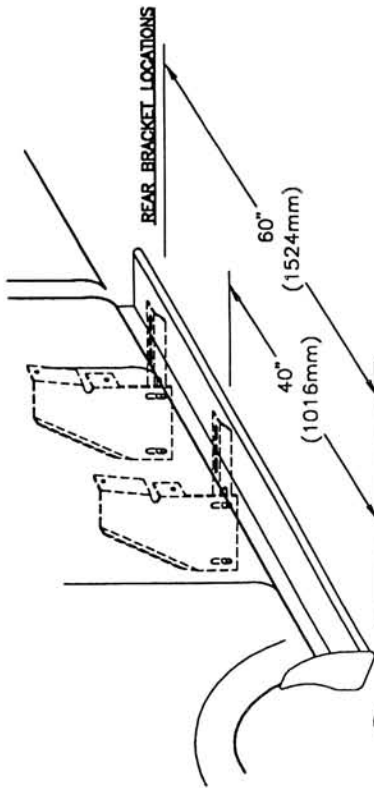


MEASURE FROM FRONT WHEEL WELL TO BRACKET LOCATIONS. MARK THIS DIMENSION ON THE PINCH WELD
(DRIVERS SIDE SHOWN)

2
BRACKET ASSEMBLY
ASSEMBLY WITH 5/16" BOLTS

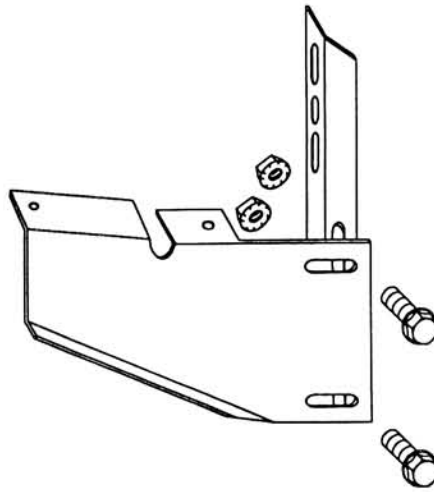

3
BRACKET ASSEMBLY MOUNT TO BODY
ASSEMBLY WITH 5/16" BOLTS AND
#14 SELF DRILLING TEK SCREW

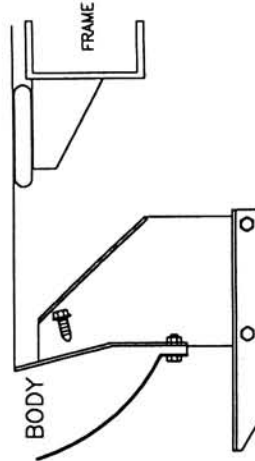


MOUNT AT LOCATION SHOWN AT 1

4
BEND STONE GUARD BY HAND AND
KNEE TO FIT THE WHEEL WELL
BEFORE INSTALLING TO RUNNING BOARD




5
FASTEN FRONT STONE GUARD
TO BOARDS WITH 3/8" SELF
TAPPING BOLT. BEND STONE
GUARD BY HAND AND KNEE
TO FIT THE WHEEL WELL

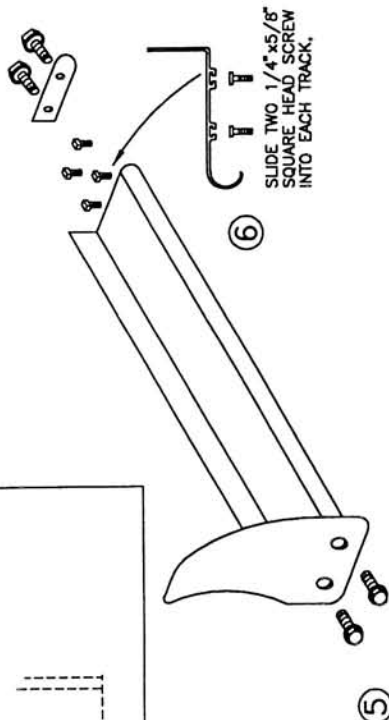


7
INSTALL END CAP TO BOARD
WITH 3/8" SELF TAPPING BOLT

6
SLIDE TWO 1/4"x5/8"
SQUARE HEAD SCREW
INTO EACH TRACK,

7
HOLD BOARD IN PLACE WITH THE
REAR RESTING ON THE BACK BRACKET
NOTE:
BE SURE THAT 1/4" BOLTS ARE PLACED
INTO THE BRACKET STEP SUPPORT

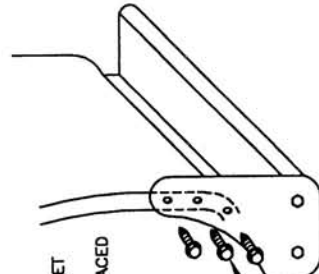

8
SCREW THROUGH STONE GUARD
INTO FENDERWELL UP USING #14
BY 3/4" SELF DRILLING SCREWS.
MAKE SURE YOU DRILL INTO METAL

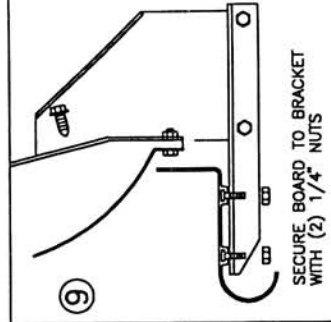

3 PLACES AT EACH STONE GUARD

10
WITH BOARD LEVEL TIGHTEN
ALL LOOSE BOLTS

11
REPEAT FOR OTHER SIDE

INSTALLATION PARTS LIST:	QTY.	DESCRIPTION	QTY.	DESCRIPTION
1	1	RUNNING BOARD 1 DRIVER & 1 PASSENGER	1	END CAP 1 LEFT & 1 RIGHT
1	1	STONE GUARD 1 LEFT & 1 RIGHT	16	5/16"x 3/4" WASHER HEAD BOLT
8	8	3/8"x1 SELF TAPPING SCREW	16	5/16-18 HEX WASHER HEAD NUT
10	10	#14x3/4" TEK SCREW	4	HORIZONTAL BRACKET, SUPPORT, 3124F
8	8	1/4x5/8" SQUARE HEAD SCREW	4	FLAT BRACKET, FLO9 2" RISER
8	8	1/4-20 HEX NUT		FLAT BRACKET, FL15 4" RISER

IN-19
02/07/01