

Installation Guide**Dodge Ram****Product No.****2002 to Current (New Body Style)****Standard Cab 67007****Quad/Crew Cab 67008**

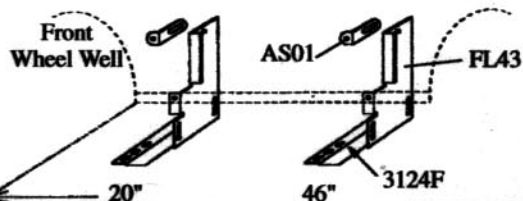
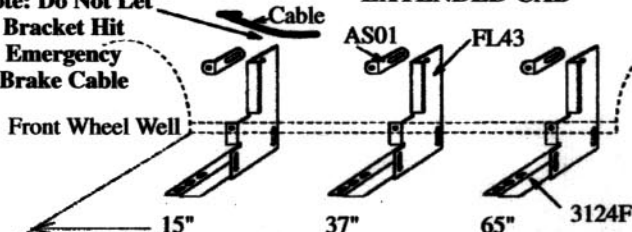
Note: Drilling into body is required.

Installation Parts List:	Std.	Quad	Description	Std.	Quad	Description		
	Qty.	Qty.		Qty.	Qty.			
<i>Note: Not all screws are required for these installations</i>	A	2	2	Running Boards	E	4	6	Step Supports #3124F
	B	2	2	Foam Tape Strips	F	16	24	5/16" x 3/4" Washer Head Bolts
	C	4	4	Step Pads	G	16	24	5/16" Washer Head Nuts
	D	4	6	Flat Plates #FL43	H	12	6	#14 x 3/4" Self-Drilling Screws
	E	4	6	Angled Straps #AS01				

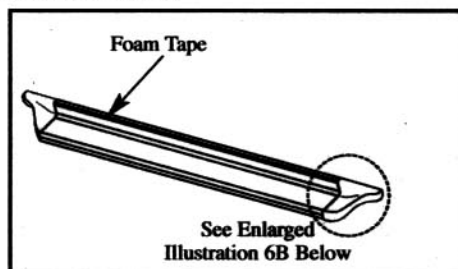
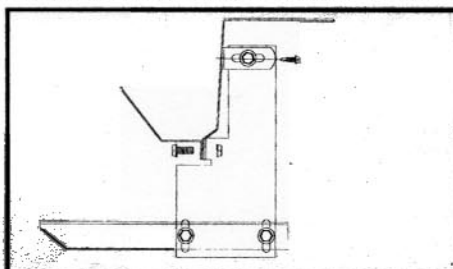
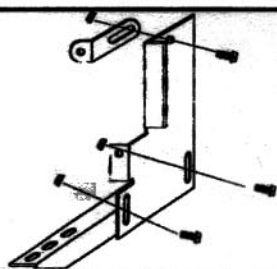
Tools Required:

5/16" Drill • 1/2" Hex Socket • 1/2" Wrench • 3/8" Nut Driver

- Prior to painting, fit your Owens' Premier running boards to the body.** A good fit is accomplished when mating surfaces fit with minimum light gaps. Note: Vehicle bodies have variations and a perfect fit may not be possible.
- Painting your Owens' Premier running boards.** To insure a proper paint finish, use a top quality auto paint system and follow the manufacturers instructions for painting ABS plastic.

STANDARD CABNote: Do Not Let
Bracket Hit
Emergency
Brake Cable**EXTENDED CAB**

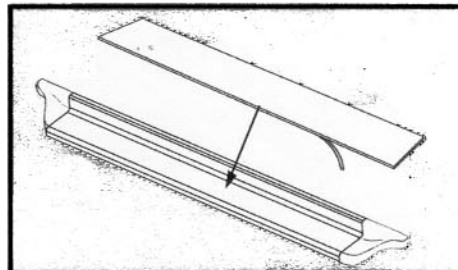
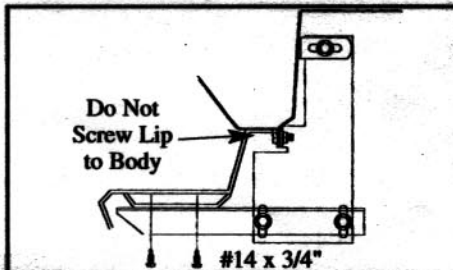
- Measure from front wheel well, back to dimensions shown above. Mark these bracket location centers.**



- Assemble bracket components with 5/16" nuts & bolts as shown. Do not tighten at this time.**

- Drill 5/16" diameter holes in pinch weld at marks. Bolt brackets FL43 to pinch weld using 5/16" bolts and nuts, then secure to inner rocker panel using #14 x 3/4" self-drilling screws through AS01.**

- Apply foam tape to top edge of running board. Remove protective strip from top edge of foam tape.**

Note: Tape May Show When Doors Are
Open Front And RearDo Not
Screw Lip
to Body

- Shown above is a detailed version of running board end.**

- Position running board on brackets and tight to truck body. Screw board to bracket using two #14 x 3/4" self-drilling screws per bracket. Tighten all bolts to 18 foot pounds.**

- Place step pad on running board. Peel off tape backing to secure. Don't forget the Owens label!**

IN-203 10/15/02