

## Installation Guide

## 2002-C KIA SEDONA



Product No.  
2167/2170

QTY.	DESCRIPTION	QTY.	DESCRIPTION
<b>INSTALLATION</b>	1 GlaStep (Drivers Side)	6	Step Supports #3124F
<b>PARTS LIST:</b>	1 GlaStep (Passenger Side)	18	5/16" x 3/4" Washer Head Bolts
	2 Step Pads	18	5/16" Washer Head Nuts
	2 Foam Tape Strips	30	#14 x 3/4" Self Drilling Screws (SHORT)
	6 Flat Plates #FL99	6	#12 x 1-1/4" Self Drilling Screws With Rubber Washers (LONG)
	6 Bent Tab AS01		



**TOOLS REQUIRED:** 5/16" DRILL \* 1/2" HEX SOCKET \* 1/2" WRENCH \* 5/16" NUT DRIVER \* 3/8" NUT DRIVER

SOME DRILLING INTO THE BODY IS REQUIRED

1. **Prior to painting, fit your GlaSteps to the body.** A good fit is accomplished when mating surfaces fit with minimum light gaps. Note: Vehicle bodies have variations and a perfect fit may not be possible.
2. **Painting your GlaSteps.** To insure a proper paint finish, use a top quality auto paint system and follow the manufacturers instructions. Your GlaSteps should be sanded and primed before painting.

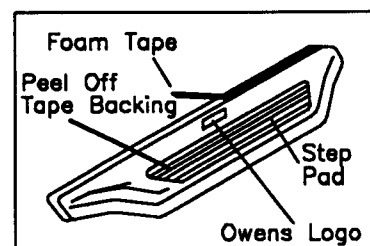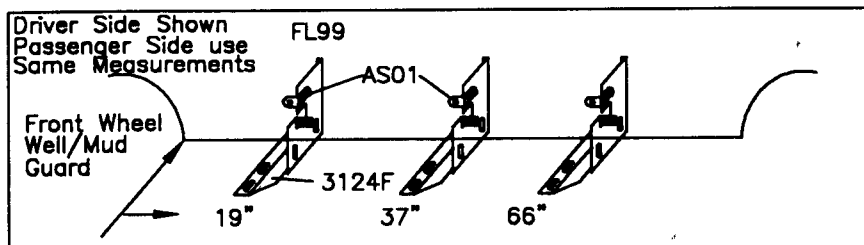

3. **Measure** from the wheel well, back to the dimensions shown above. Mark these bracket location centers. Note: Steel plates have been inserted under fiberglass to mount brackets. **Double check your marks to be sure they line up with the steel plates before drilling.**
5. **Clean surface** prior to attaching tape and step pads with denatured alcohol. Apply foam tape to top lip of board. Position step pad on stepping surface. Peel off tape backing starting with the rear strip. Keep pad in position, peel off backing then apply pressure to top of pad to stick tape to board. Continue above steps for all tape strips.

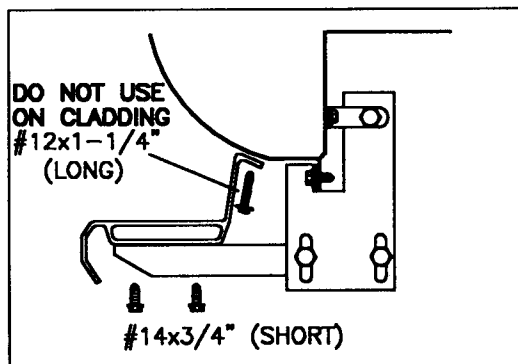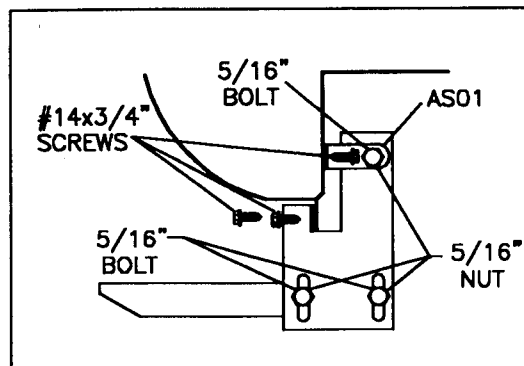

4. Bolt AS01 to FL99, just lightly tighten. Place flat bracket FL99 at the pinch weld locations shown above. Use 2 #14 x 3/4" self drilling screws to attach the flat bracket to the pinch weld. Use another self drilling screw to attach the AS01 bent tab to the rocker panel. Tighten the 5/16" nut and bolt holding the bent tab to the flat bracket.
6. Position step on brackets and tight to truck body. Screw step to truck with #12 x 1-1/4" self-drilling screws with rubber washers (LONG), three per side. Secure step support bracket to bottom of GlaStep) using two #14 x 3/4" self-drilling screws (SHORT) per bracket. Repeat for all Brackets. **DO NOT USE LONG SELF TAPPERS UNDER THE BOARD!**
7. Make sure your GlaSteps are level, tighten all bolts to 18 foot pounds. Do not overtighten the sheet metal screws, the sheet metal is thin. **Do not overtighten.**

IN271B 12/10/04