

## Installation Guide

## Honda Ridgeline

## Product No.

2006 to Current

2183

No drilling into body is required.


### Installation Parts List:

| Qty. | Description                      | Qty. | Description                             |
|------|----------------------------------|------|---|
| 1    | GlaStep #2183-D (Driver Side)    | 8    | #3124F Step Supports                    |
| 1    | GlaStep #2183-P (Passenger Side) | 16   | 5/16" x 3/4" Washer Head Bolts          |
| 2    | Step Pads                        | 16   | 5/16" Washer Head Nuts                  |
| 6    | FL117 Brackets                   | 16   | #14 x 3/4" Self-Drilling Screws (Short) |
| 1    | FL118P (Passenger)               | 18   | 8mm Bolts                               |
| 1    | FL118D (Driver)                  | 18   | Flat Washers                            |


### Tools Required:

5/16" Drill • 1/2" Hex Socket • 1/2" Wrench • 5/16" Nut Driver • 3/8" Nut Driver


- Prior to painting, fit your GlaSteps to the body.** A good fit is accomplished when mating surfaces fit with minimum light gaps. Note: Vehicle bodies have variations and a perfect fit may not be possible.
- Painting your GlaSteps.** To insure a proper paint finish, use a top quality auto paint system and follow the manufacturers instructions. Your GlaSteps should be sanded and primed before painting.

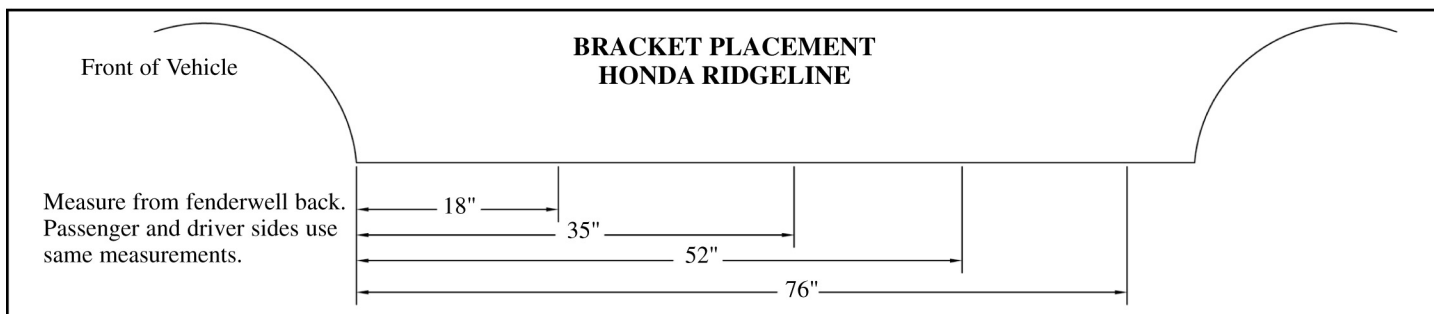


- At measured bracket locations, remove plastic plugs from factory holes in frame and underbody. This is where brackets will be bolted.

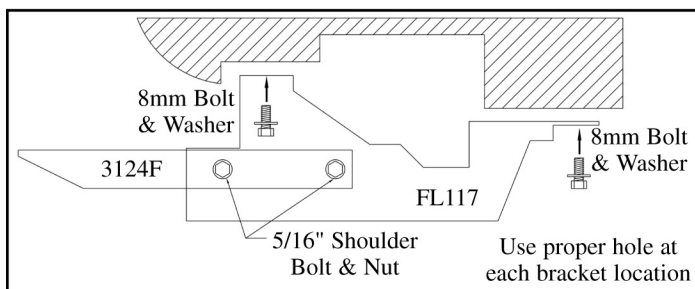


- Bolt FL117 bracket to the three forward bracket locations and tighten. Attach 3124F angle to FL117 but do not tighten at this time.

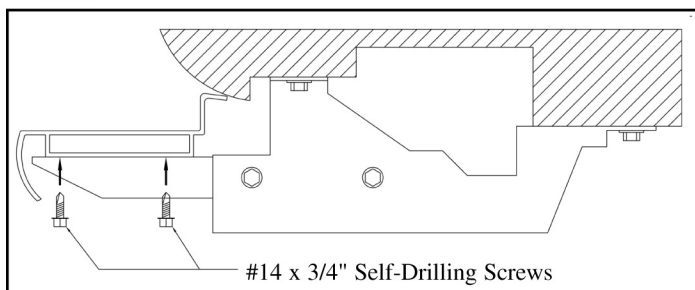

- Position board on brackets and attach with self-drilling screws. **Tighten all bolts** not previously tightened.

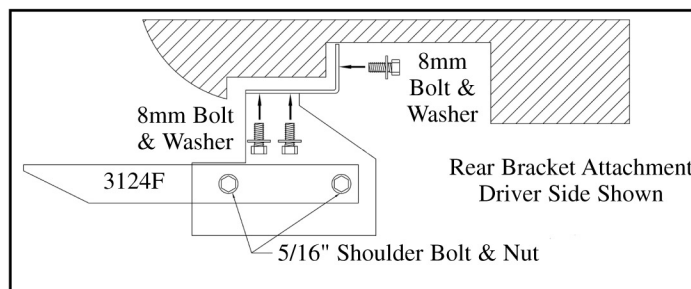

- Attach FL118D to driver side rear bracket location and tighten. Attach 3124F angle to FL118D, but do not tighten at this time.

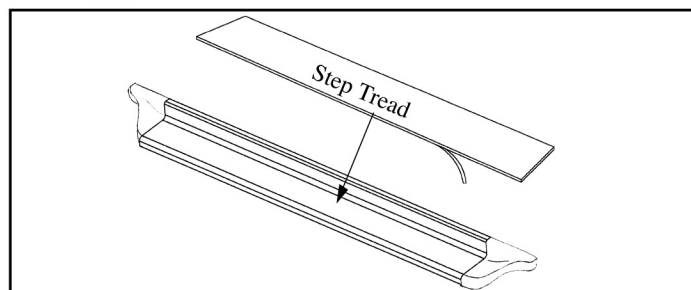

- Place step pad on running board. Peel off tape backing to secure. **Install the Owens logo.**
- Repeat for other side.