

Hardware included shown on right.


Tools required:

- 1/2" Standard socket
- 1/2" Wrench
- 5/16" nut driver
- Drill


-Painting your O.F.B. board is not necessary nor is it recommended as there is no step tread to protect the painted stepping area. The board is made with UV protected TPO plastic that will resist fading and cracking from the sun.



Insert clip nut as shown in factory holes at 12", 36" and 60" on underside of vehicle.

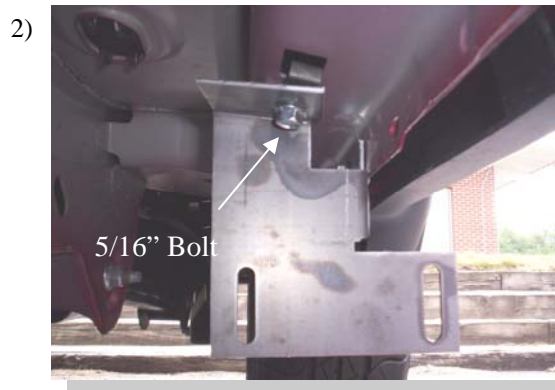

Attach FL122 using one 5/16" bolt into clip nut.

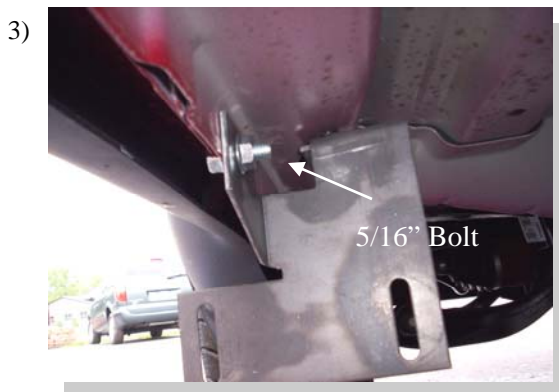

Use one 5/16" bolt and nut through FL122 and factory hole in pinch weld.



Attach angle support (3124F) to FL122 using 5/16" bolts and nuts. Snug but do not tighten at this time

5)



Place board on angle supports. Align board on vehicle and attach with two #14 X 3/4 self drilling screws at each bracket.

6)



Level board and tighten all bolts. Repeat steps for opposite side.

