

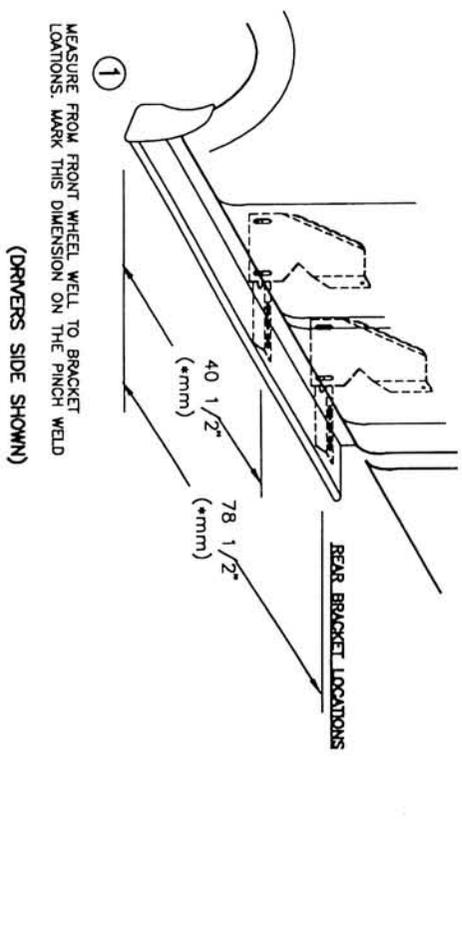

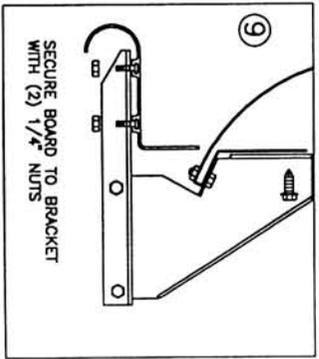
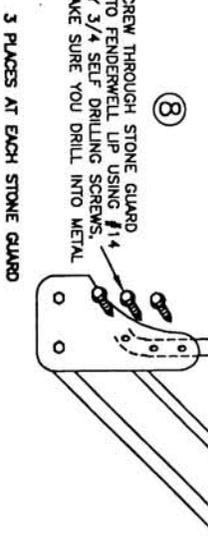
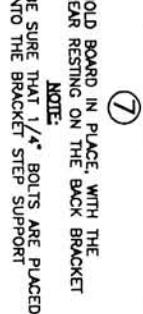
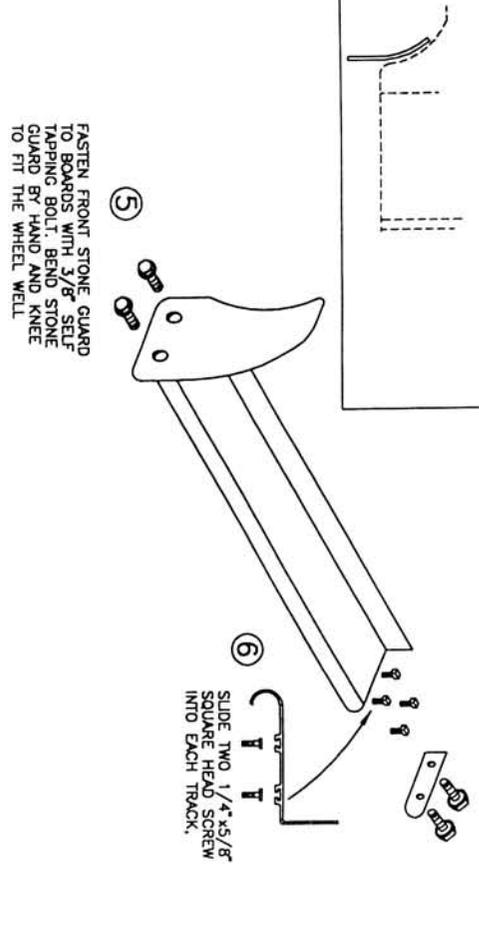


TOOLS REQUIRED: 5/16" DRILL • 1/2" HEX SOCKET • 1/2" WRENCH • 5/16" NUT DRIVER • 3/8" NUT DRIVER
YOUR BRACKET MOUNT HOLES WILL NEED TO BE DRILLED INTO THE BODY



MEASURE FROM FRONT WHEEL WELL TO BRACKET LOCATIONS. MARK THIS DIMENSION ON THE PINCH WELD

(DRIVERS SIDE SHOWN)

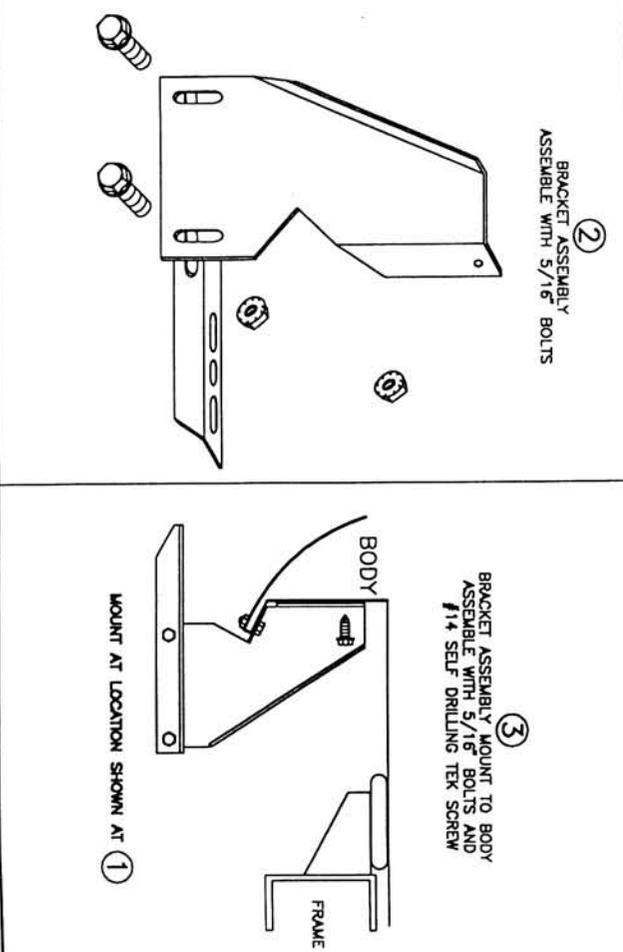

INSTALLATION PARTS LIST:	QTY.	DESCRIPTION	QTY.	DESCRIPTION
1	1	RUNNING BOARD 1 DRIVER & 1 PASSENGER	1	END CAP 1 LEFT & 1 RIGHT
1	1	STONE GUARD 1 LEFT & 1 RIGHT	16	5/16" x 3/4" WASHER HEAD BOLT
8	8	3/8" x 1" SELF TAPPING SCREW	16	5/16-18 HEX WASHER HEAD NUT
10	10	#14 x 3/4" TEK SCREW	4	FLAT BRACKET, FLD7
8	8	1/4 x 5/8" SQUARE HEAD SCREW	4	HORIZONTAL BRACKET, SUPPORT, 3124F
8	8	1/4-20 HEX NUT		