

Note: Drilling into body is required.


Hardware included shown on right.

Tools required:

- 3/8" Nut driver
- 12mm Metric socket
- 1/2" Standard socket
- Tape measure
- Drill
- 23/64" Drill bit

-Painting your Premier board is not necessary. The board is made with UV protected ABS plastic that will resist fading and cracking from the sun.

Please read all instructions prior to starting install.

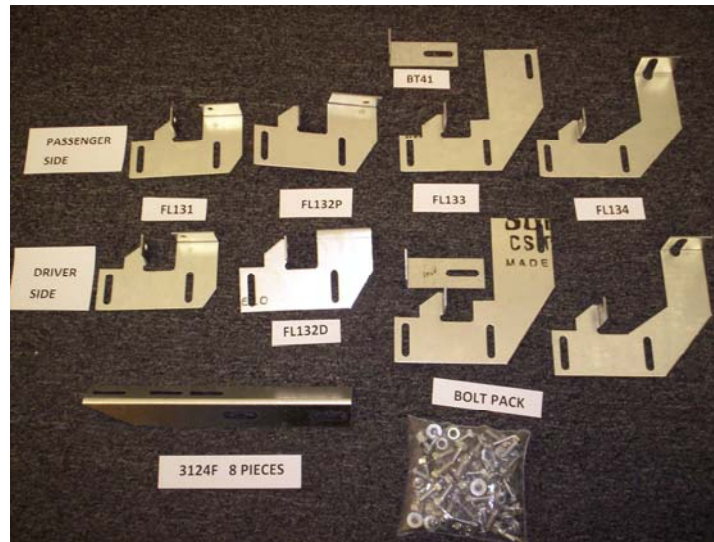

Drivers side shown in photos.



Measure from the front edge of the rear wheel well forward. At locations 9 1/2", 29", 38 1/2" and 67 1/2" is where the brackets will be attached. There are notches in the factory trim at these locations.



At the 9 1/2" location remove the factory bolt next to the slotted hole in the rear suspension bracket. Do not discard bolt.



Drill a 23/64" hole through the pinch weld at the 9 1/2" location.



Attach FL134 bracket using the previously removed bolt and a supplied 5/16" bolt and nut.

5)



Assemble FL133 and BT41 with 5/16" bolt and nut. Leave BT41 loose until step #6.

6)




At 29" location drill a 23/64" hole in pinch weld and attach with 5/16" bolt and nut. Use a 3/8" nut driver and fasten BT41 bracket with 3/4" long self drilling screws. Tighten all bolts.

7)



At 38 1/12" location drill 23/64" hole in pinch weld. Insert in-pull nut into factory slot in the underbody cross member. Fold metal tab flat to hold in place.

8)

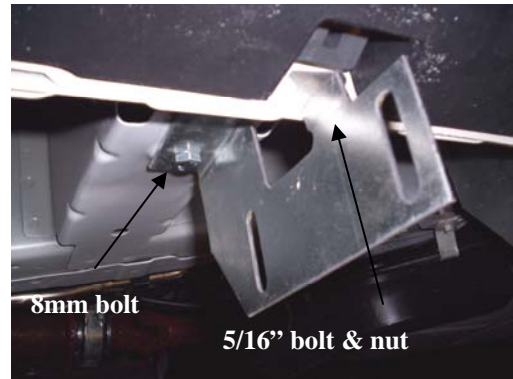

Attach FL132D (DRIVER) using a 5/16" bolt and nut to the pinch weld and supplied 8mm bolt into the in-pull nut.

9)



At 67 1/2" location drill a 23/64" hole through pinch weld. Attach FL131 using a 5/16" bolt and 3/4" long self drilling screw.

10)



Attach a 3124F angle bracket to each flat bracket with 5/16" bolts and nuts. Do not tighten at this time.

11)



Apply foam tape to rear lip of board and apply the step tread.

12)



Position board on brackets keeping the rear edge of the board flush with the rear wheel opening to allow for optional front mud flaps. Have another person help hold the board or hold in place with small jacks.

13)



Fasten board to brackets with 3/4" self drilling screws.

14)



Level board and tighten all bolts. Apply the Logo.

Repeat all steps for passenger side.