

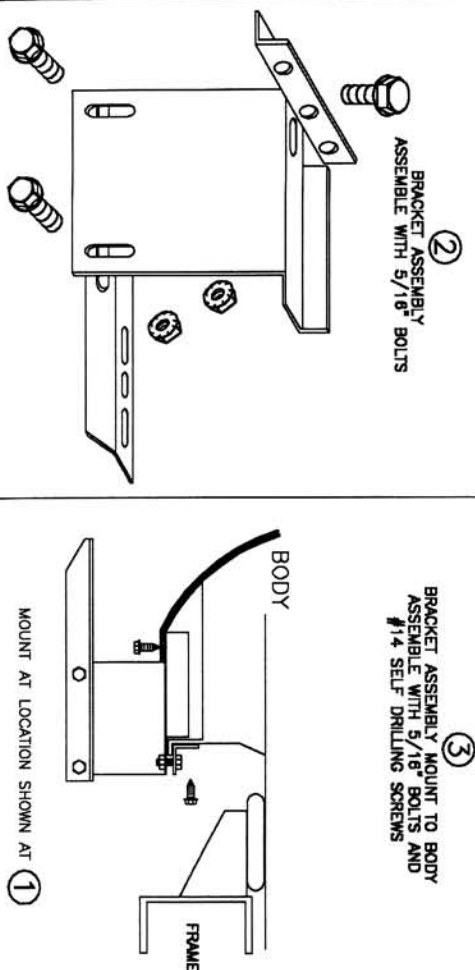


**TOOLS REQUIRED:** 5/16" DRILL • 1/2" HEX SOCKET • 1/2" WRENCH • 5/16" NUT DRIVER • 3/8" NUT DRIVER  
**YOUR BRACKETS INSTALL IN FACTORY HOLES**

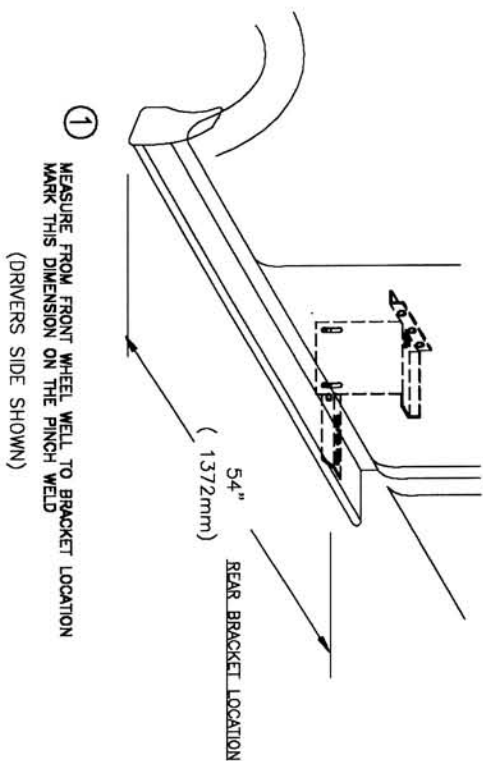

④ BEND STONE GUARD BY HAND AND KNEE TO FIT THE WHEEL WELL BEFORE INSTALLING TO RUNNING BOARD

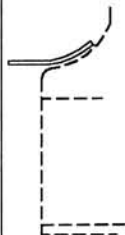


⑦

INSTALL END CAP TO BOARD WITH 3/8" SELF TAPPING BOLT


FASTEN FRONT STONE GUARD TO BOARDS WITH 3/8" SELF TAPPING BOLT. BEND STONE GUARD BY HAND AND KNEE TO FIT THE WHEEL WELL



⑥ SLIDE ONE 1/4"-5/8" SQUARE HEAD SCREW INTO EACH TRACK.

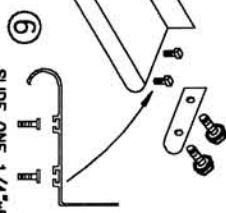

NOTE: BE SURE THAT 1/4" BOLTS ARE PLACED INTO THE BRACKET STEP SUPPORT

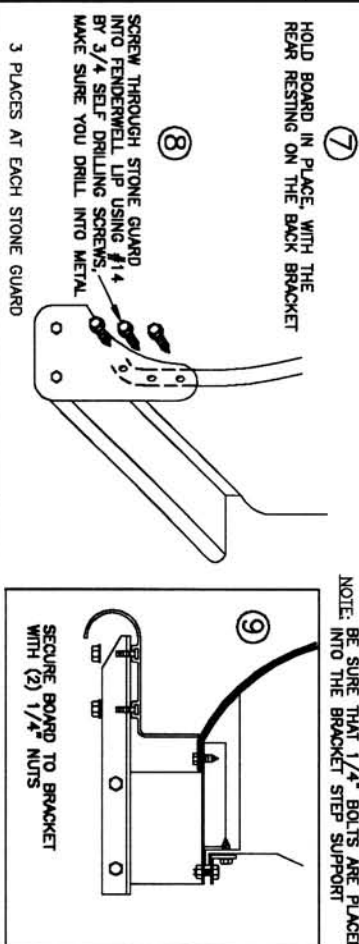

⑩ WITH BOARD LEVEL, TIGHTEN ALL LOOSE BOLTS

⑪ REPEAT FOR OTHER SIDE

#### INSTALLATION

##### PARTS LIST:

QTY.	DESCRIPTION
1	RUNNING BOARD 1 DRIVER & 1 PASSENGER
1	STONE GUARD 1 LEFT & 1 RIGHT
8	3/8"x1 SELF TAPPING SCREW
10	#14x3/4" TEK SCREW
4	1/4x5/8" SQUARE HEAD SCREW
4	1/4-20 HEX NUT

##### QTY. DESCRIPTION

1	END CAP 1 LEFT & 1 RIGHT
2	HORIZONTAL BRACKET, SUPPORT, 3124F
6	5/16" x 3/4" BOLT
5	5/16-18 HEX WASHER HEAD NUT
2	FLAT BRACKET, FL20-2" OR FL21-4"
2	6" HORIZONTAL BRACKET, BT07

IN-41  
03/14/01