




87-96 F-150 EXTENDED CAB

IN-42 03/19/01


TOOLS REQUIRED: 5/16" DRILL • 1/2" HEX SOCKET • 1/2" WRENCH • 5/16" NUT DRIVER • 3/8" NUT DRIVER
YOUR BRACKETS INSTALL IN FACTORY HOLES

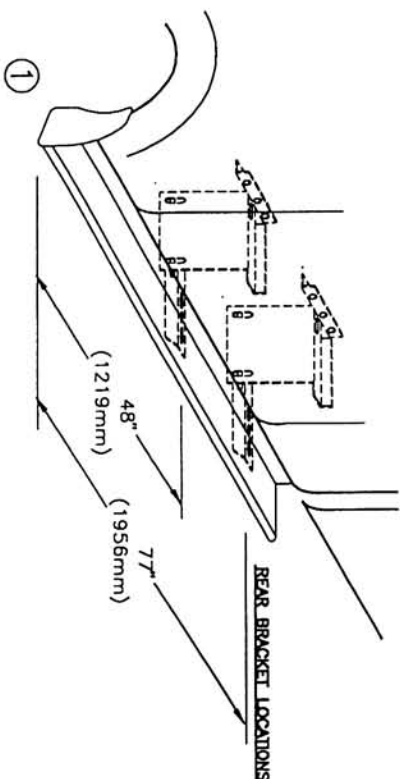

MEASURE FROM FRONT WHEEL WELL TO BRACKET LOCATIONS. MARK THIS DIMENSION ON THE PINCH WELD
 (DRIVERS SIDE SHOWN)

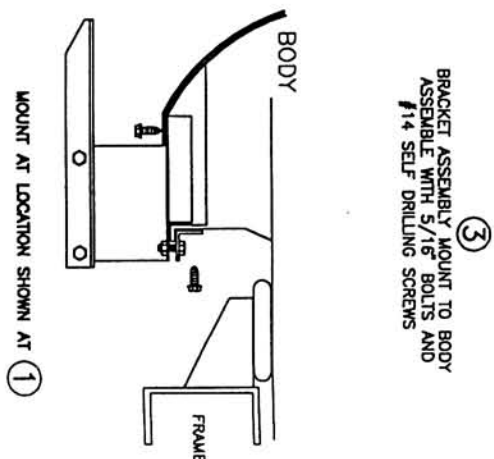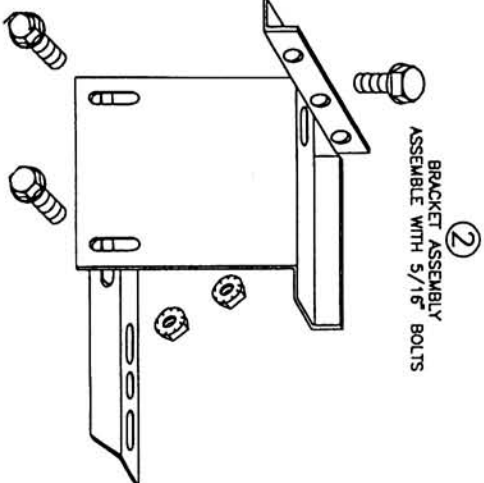


④ BEND STONE GUARD BY HAND AND KNEE TO FIT THE WHEEL WELL BEFORE INSTALLING TO RUNNING BOARD

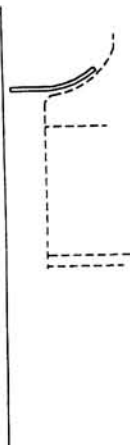

⑤ FASTEN FRONT STONE GUARD TO BOARDS WITH 3/8\"/>




⑦ INSTALL END CAP TO BOARD WITH 3/8\"/>

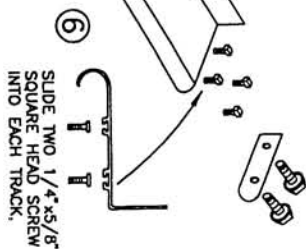

NOTE: BE SURE THAT 1/4\"/>

⑧ SCREW THROUGH STONE GUARD INTO FENDERWELL LIP USING #14 BY 3/4\"/>

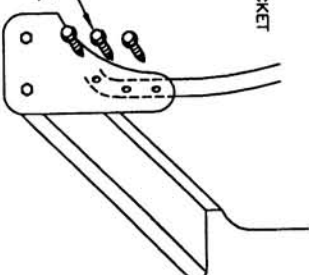


⑩ 3 PLACES AT EACH STONE GUARD

WITH BOARD LEVEL TIGHTEN ALL LOOSE BOLTS

⑩

REPEAT FOR OTHER SIDE

⑪

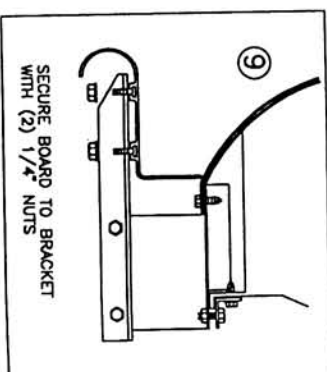

INSTALLATION PARTS LIST:

QTY.	DESCRIPTION	QTY.	DESCRIPTION
1	RUNNING BOARD 1 DRIVER & 1 PASSENGER	1	END CAP 1 LEFT & 1 RIGHT
1	STONE GUARD 1 LEFT & 1 RIGHT	4	HORIZONTAL BRACKET, SUPPORT, 3124F
8	3/8" x 1" SELF TAPPING SCREW	10	5/16" x 3/4" BOLT
14	#14 x 3/4" TEK SCREW	10	5/16-18 HEX WASHER HEAD NUT
8	1/4" x 5/8" SQUARE HEAD SCREW	4	FLAT BRACKET, FL20-2" OR FL21-4"
8	1/4-20 HEX NUT	2	6" HORIZONTAL BRACKET, B107

IN-42 03/19/01