


Hardware included shown on right.

**DRILLING INTO VEHICLE IS REQUIRED!**

Tools required:

- 1/2" socket
- Drill
- 5/16" Drill bit

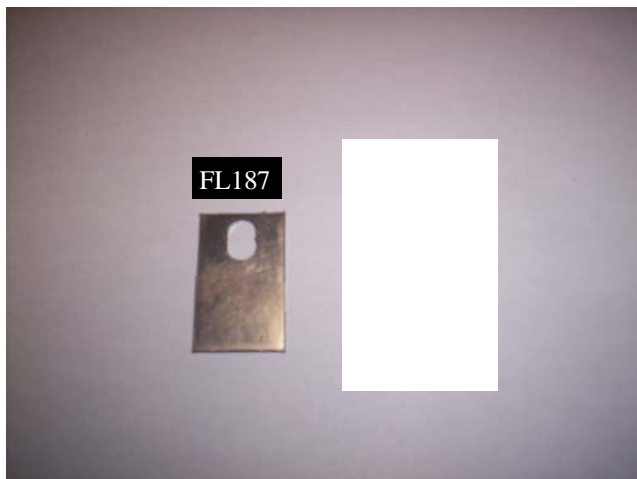

1)



Some vehicles the cross member where the bracket is mounted is not flat. If yours is notched like this, where you drill a hole and install a 5/16" nut and bolt add shim FL187 to fill the void between the bracket and cross member. You may not use all shims provided.