




02-CURRENT DODGE QUAD CAB

IN-56 01/08/02

TOOLS REQUIRED: 5/16" DRILL • 1/2" HEX SOCKET • 1/2" WRENCH • 5/16" NUT DRIVER • 3/8" NUT DRIVER
YOUR BRACKET MOUNT HOLES WILL NEED TO BE DRILLED INTO THE BODY

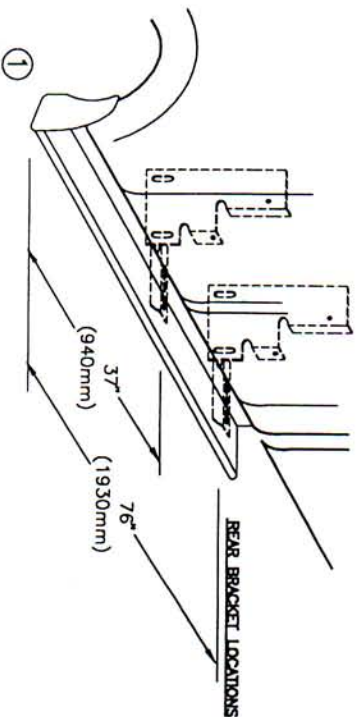


1 MEASURE FROM FRONT WHEEL WELL TO BRACKET LOCATIONS. MARK THIS DIMENSION ON THE PINCH WELD
(DRIVERS SIDE SHOWN)

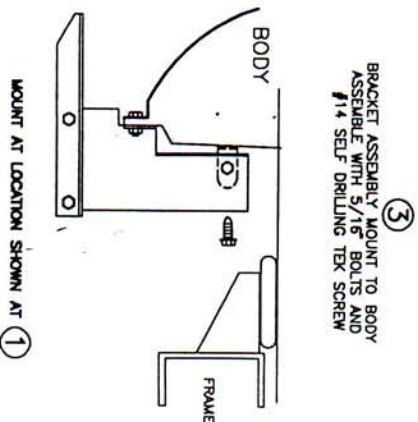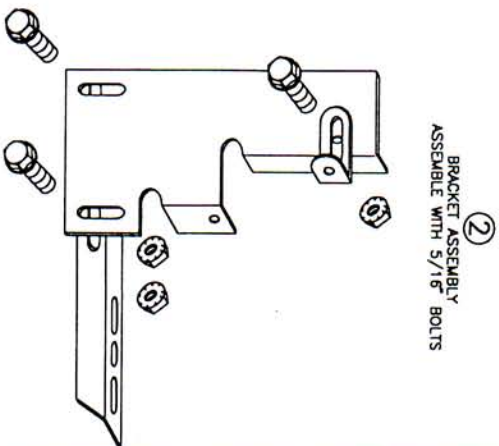

4 BEND STONE GUARD BY HAND AND KNEE TO FIT THE WHEEL WELL BEFORE INSTALLING TO RUNNING BOARD



7 INSTALL END CAP TO BOARD WITH 3/8\"/>

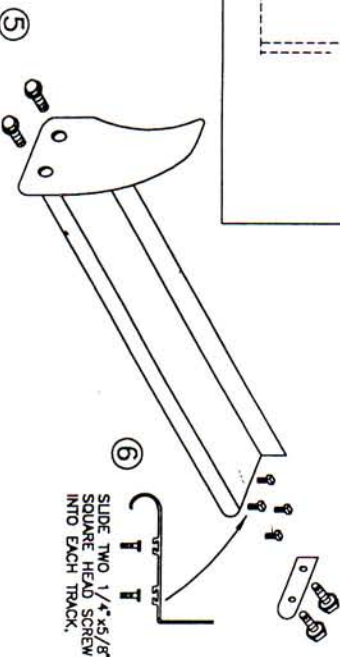


6 SLIDE TWO 1/4\"/>

7

HOLD BOARD IN PLACE, WITH THE REAR RESTING ON THE BACK BRACKET
NOTE: BE SURE THAT 1/4\"/>

8

SCREW THROUGH STONE GUARD INTO FENDERWELL, UP USING #14 BY 3/4\"/>

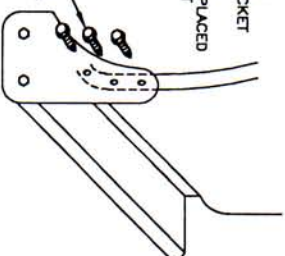


3 PLACES AT EACH STONE GUARD

10

WITH BOARD LEVEL, TIGHTEN ALL LOOSE BOLTS

11

REPEAT FOR OTHER SIDE

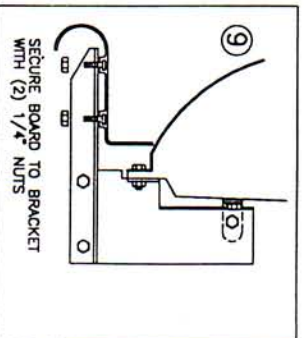

INSTALLATION

PARTS LIST:

QTY.	DESCRIPTION
1	RUNNING BOARD 1 DRIVER & 1 PASSENGER
1	STONE GUARD 1 LEFT & 1 RIGHT
8	3/8"x1 SELF TAPPING SCREW
10	#14x3/4" TEX SCREW
8	1/4"x5/8" SQUARE HEAD SCREW
8	1/4"-20 HEX NUT
4	ANGLE STRAP, ASOI

QTY. DESCRIPTION

1	END CAP 1 LEFT & 1 RIGHT
16	5/16" x 3/4" WASHER HEAD BOLT
16	5/16"-18 HEX WASHER HEAD NUT
4	HORIZONTAL BRACKET, SUPPORT, 3124F
4	FLAT BRACKET, FL43 4" RISER