



We have our video install guides on our website and on youtube.com also feel free to call or email us if you have any questions 604-628-7529 info@lovethedrive.com

Lexus IS 250 or 350

Love The Drive Wind Deflector

Install Guide

Your wind deflector attaches to the rear head rest posts and to the two holes on the side trim panels in the back seat.



Start by loosening the thumbscrews (by one turn) on the rear brackets and turning them so they are at a 45 degree angle like the picture below.



Next, extend one of the front barrel bolts to the out position and lock it. The bolt is locked when the handle faces down.



Standing beside the rear seat, lower the wind deflector into the backseat and insert the extended barrel bolt into the hole in the rear trim panel on the opposite side. The rear brackets will rest on the rear seat. Then extend the other barrel bolt into the hole closest to you.



The rear brackets are then turned to 90 degrees so they will lock into place with the rear seat head rests. See next photo.



The rear brackets will lock into place around the head rest seat posts. Turning the thumbscrew towards the drivers side will tighten the screws. Turning towards the passenger side will loosen them.



Once both the rear brackets are locked into place, reach under and tighten the thumbscrews on both of the rear brackets. Turn towards the drivers side.



Your wind deflector will store in your trunk with the top up or down. It fits in the area not used by the top.



To store the wind deflector, turn handle of the front barrel bolts to the front of the wind deflector and slide back. Then turn the handle down to lock it. Loosen the thumbscrews (towards passenger side) and close the rear brackets flat.



The barrel bolt should be put in first with the rear brackets facing up. The wind deflector should always be stored in its storage bag.



The holes for the barrel bolts may be covered. The holes are underneath the cover just above the rear speakers. If you do not have these covers, you can skip this step.

To remove this cover, take a flat head screw driver and gently pry the cover off. By prying up in several spots it will come out easily.




Under the cover you will see this hole. We have sent you four inserts, two black and two beige. Depending on the colour of your cars interior, install the matching inserts.



There is a letter "B" on each insert. The letter "B" will point towards the back seat. On the passenger side B will be right side up. On the driver side the "B" will be upside down. But will still be towards the back seat. Tap these in with the palm of your hand or lightly with a hammer. So they are flush to the rear trim panel. You only have to do this once.



Passenger side "B" is right side up, facing back.

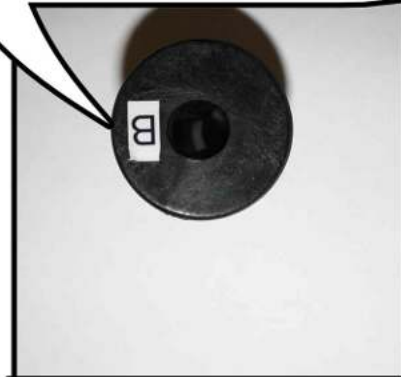

Driver side "B" upside down, facing back.

When the the inserts are installed correctly they will look like this and the "B" sticker can be removed.



Most cars will not have this piece but some cars may have a small plastic piece in the rear head rests that needs to be removed for the rear brackets to be easier install. This can just be pushed out from the back of the head rest.



LOVE THE DRIVE  .com

**If you have any questions or comments please
call 604-628-7529 or email info@lovethedrive.com
www.lovethedrive.com**