



PLEASE NOTE THAT WE HAVE A  
NUMBER OF INSTALL VIDEOS ON  
OUR WEBSITE, PLEASE LOOK  
THERE IF SOMETHING IS UNCLEAR.

## **MERCEDES 230 SL 250SL 280SL (1964 TO 1971) WIND DEFLECTOR INSTALL GUIDE**

START BY PUTTING YOUR TOP DOWN

YOUR WIND DEFLECTOR  
ATTACHES TO THE LID THAT  
COVERS YOUR CONVERTIBLE  
TOP



THE MB 113 WIND DEFLECTOR  
ATTACHES WITH THE TWO  
BRACKETS IN THE REAR AND TWO  
LATCHES IN THE FRONT







START BY  
LAYING YOUR  
WIND  
DEFLECTOR  
ON TOP OF  
THE LID THAT  
COVERS YOUR  
CONVERTIBLE  
TOP


MAKE SURE THAT THE REAR  
BRACKETS ARE ALL THE WAY  
BACK SO IT IS UNDERNEATH THE  
COVER



THE FRONT LATCHES ATTACH  
UNDERNEATH THE CHROME TRIM.  
UNLATCH THE LATCHES AND LET  
THEM HANG DOWN



START BY PLACING BOTH LATCHES  
UNDER THE CHROME TRIM ON  
BOTH SIDES

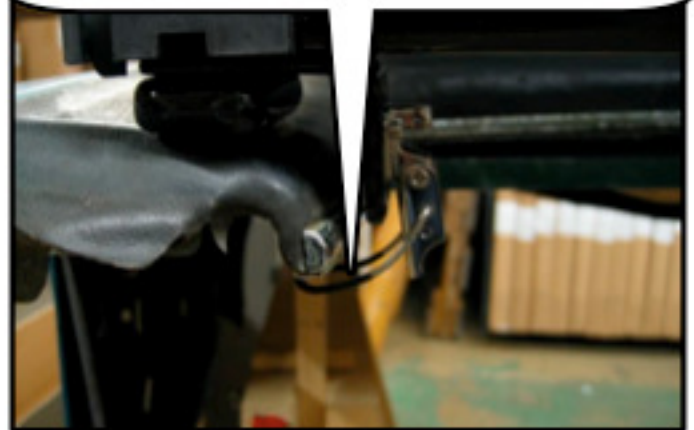

NEXT FLIP THE LATCHES UP ON  
EACH SIDE SO THEY LOCK THE WIND  
DEFLECTOR INTO PLACE.



NEXT FLIP UP THE TOP PANEL  
AND YOU'RE READY TO GO. YOUR  
WIND DEFLECTOR STORES IN A  
STORAGE BAG WHEN NOT IN  
USE

