



We have our video install guides on our website and on youtube.com also feel free to call or email us if you have any questions 604-628-7529 info@lovethedrive.com

Mustang

1991 to 1993

Love The Drive Wind Deflector

Install Guide

Start by loosening the thumb screws on the rear brackets and sliding the rear brackets out on both sides.




Lay the wind deflector in rear seat area. The front and rear brackets will rest on the rear trim panel.



The front brackets will sit on top of the trim panels, as shown in the photo below.



Slide the rear brackets back so that they lock into the trim panel. Tighten the thumb screws on both sides, from the under side of the wind deflector.

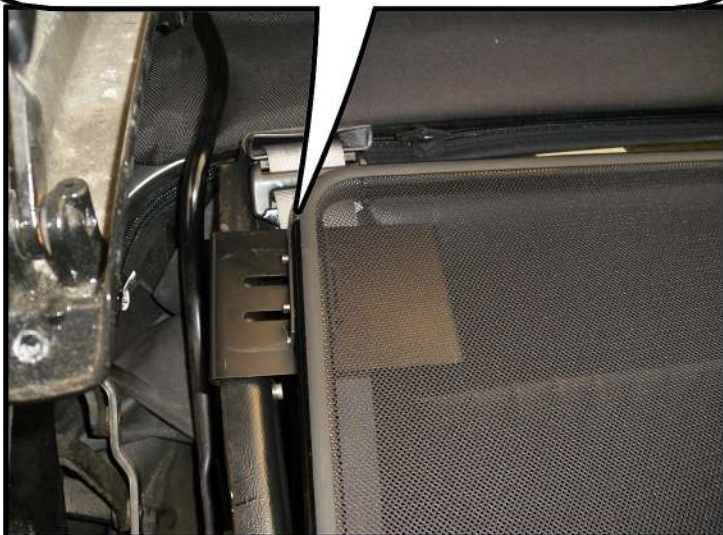

The straps attach to the bottom of the trim panel.



Pull the straps down to tighten on both sides.



You are now ready to...

LOVE THE DRIVE  .com

If you have any questions or comments please
call 604-628-7529 or email info@lovethedrive.com
www.lovethedrive.com