


We have our video install guides on our website and on youtube.com also feel free to call or email us if you have any questions 604-628-7529 [info@lovethedrive.com](mailto:info@lovethedrive.com)

# Mustang 2005 to 2012


## Love The Drive Wind Deflector

### Install Guide

**Start by putting your top down.** Have a friend help you install the wind deflector the first few times. After that, you will easily be able to install and remove on your own.

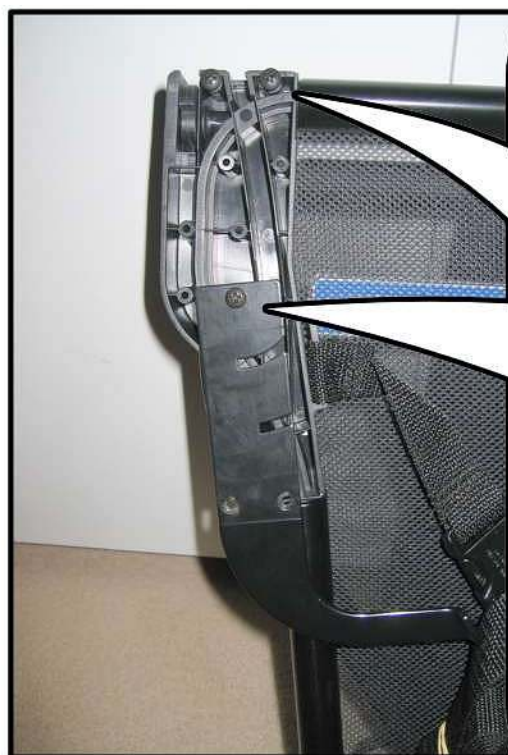

**Step 1:** When your wind deflector was shipped to you the front brackets had to be lowered to fit into the box. You need to remove the top two screws using a #2 philips (This is a very common screw driver and the end of the screw looks like an X) Do not remove the bottom screw.

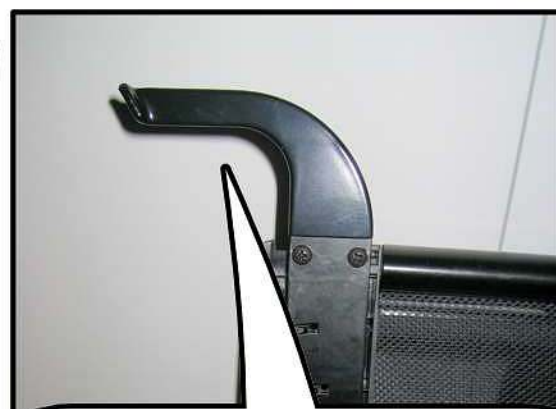

Swing the top bracket into the 'up' position and then replace the two screws. Now do this to the other side. This will only need to be done one time when you first receive your wind deflector.

**Step 2:** Remove the four straps attached to the wind deflector. There are two straps with black snap hooks and two with silver hooks.



**Step 3:** Stand on one side of your car so you are in line with the back seat. A friend can stand on the other side to help.




**Step 3 Cont:** Start by holding the wind deflector on each side, below the support rod. Lower the wind deflector so it is laying flat into the back seat.



**Step 3 Cont:** The front brackets fit into the space behind the hole where the seat belt comes out of. The brackets are designed not to interfere with the seat belt.



**Step 3 Cont:** Insert the front bracket on the opposite side from where you are standing first. Then place the bracket into the hole on your side. Remember to continue holding the back of the wind deflector.

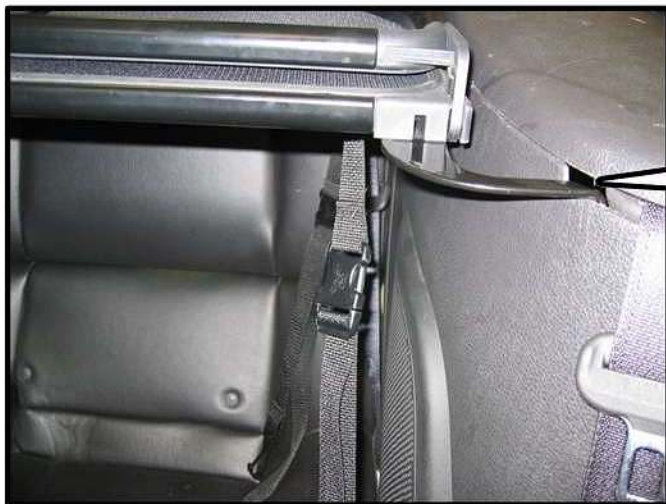

**Step 4:** The rear brackets rest on the side trim panels.



**Step 4 Cont:** The rear brackets may need to be adjusted so they fit tight against the trim panel. The adjustment is made by adjusting the two screws underneath the wind deflector.




**Step 5:** Now attach the two black snap hooks to the baby seat anchors. There are four of these anchors in the back seat. Attach the two snap hooks to the middle anchors by the seat belt buckles.



**Step 5 Cont:** The black snap hooks are inserted with the snap facing down. Slide the hook into the hole, press down and then pull back towards you to attach it to the anchor.



**Step 6:** The front silver hook straps attach to the bottom of the trim panel below the back seats. Attach the silver hooks on both sides.

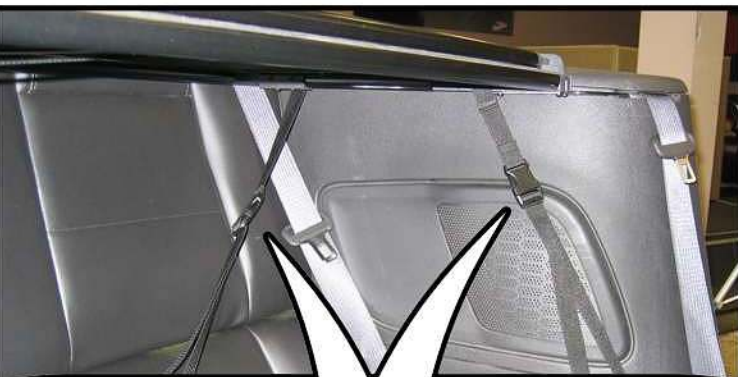

**Step 6 Cont:** Next attach the four straps. The two black snap hook straps attach near the back brackets and the two silver hook straps attach to the buckle under the front brackets.

**Step 6 Cont:** Once you have attached all four buckles, go back and pull down on each strap to tighten. From now on if you remove the wind deflector you can just undo the buckles and leave the straps in place.



**Step 7:** Your wind deflector is designed to fit in the trunk when not in use. Please make sure that you insert the wind deflector with the front brackets facing out.



**PLEASE NOTE:** If you try to put the wind deflector in your trunk with the front brackets facing the wrong way (frontwards) it will not fit properly. If you do manage to get it in, it will be very difficult to remove.



**Step 8:** We have shown the wind deflector in the trunk without the storage bag to highlight that you need to make sure the front brackets are facing the rear of your car. We recommend that you put your wind deflector inside of the storage bag when putting it in your trunk or storing it.

You are now ready to... **LOVE THE DRIVE**



If you have any questions or comments please  
call 604-628-7529 or email [info@lovethedrive.com](mailto:info@lovethedrive.com)  
[www.lovethedrive.com](http://www.lovethedrive.com)