


# RECON

## Install Notes for RECON Daytime Running Lights aka D.R.L.'s

*Instructions for Part # 264151BK & CL as well as 264152BK & CL*

- 1) Black wire is ground
- 2) White wire is positive
- 3) Yellow wire is a "kill" wire. - If this yellow wire is connected at the same time as the white "power" wire, then the LEDs will shut off when power is applied to the yellow "kill" wire. For instance, if you wanted the D.R.L.'s to turn off whenever your headlights are activated, then you simply connect the yellow wire to your positive parking light lead.

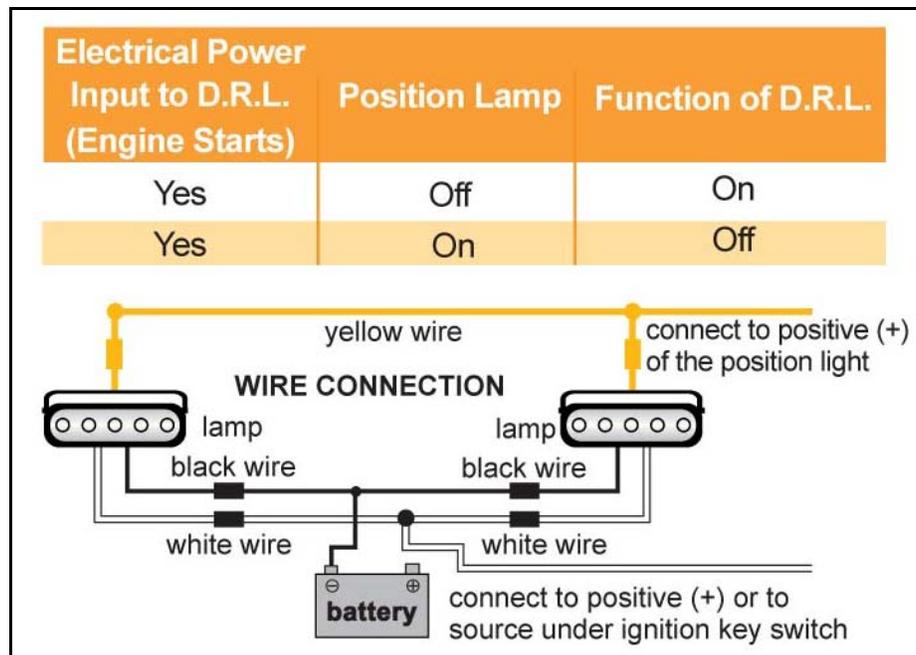

**If you have any questions, feel free to contact us:  
info@reconaccessories.com - www.GoRecon.com**