



Wind Deflector

Saab NG900 1994 to 1998 and Saab 1999 to 2003

Installation Guide

START BY PUTTING YOUR TOP DOWN AND LEAVING THE LID UP

OPEN BOTH BACK BRACKETS TO A HALF OPEN POSITION



PLACE THE WIND DEFLECTOR IN THE BACK SEAT OF YOUR CAR



LOVE THE DRIVE COPY RIGHT 2007

PRINTED IN CANADA

THE FRONT BRACKET SITS JUST BEHIND THE SEAT BELT COVER



THE BACK BRACKETS WILL REST ON THE BACK SEAT



TURN THE BACK BRACKETS SO IT LOCKS INTO THE HEADREST SUPPORTS -



MAKE SURE BOTH BRACKETS ARE LOCKED INTO PLACE ON THE SEATBELT POSTS




TURN THE LOCK NUT TOWARD THE DRIVERS SIDE TO TIGHTEN AND PASSENGER TO LOOSEN

THEN TIGHTEN LOCK NUT ON BOTH SIDES

THE FRONT STRAP CLIPS ATTACH STRAIGHT DOWN JUST BEHIND THE SEAT BELTS

PULL BOTH OF THE STRAP DOWN SNUGLY

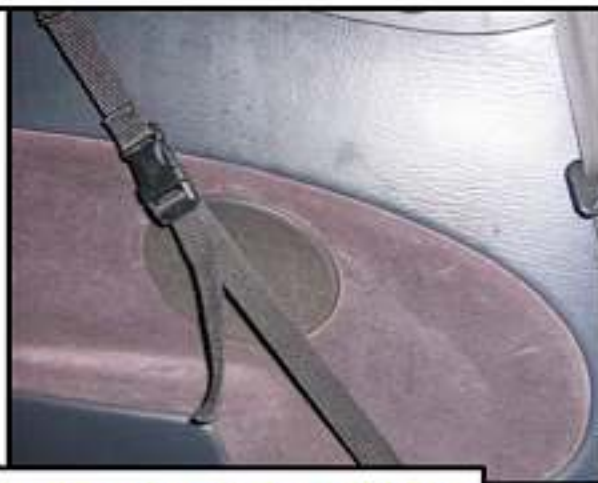

NOW YOU ARE READY TO LOVE THE DRIVE
WWW.LOVETHEDRIVE.COM